Internal Shield - Sliding Door

IN9330





IN9330 Internal Shield - Sliding Door





This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD. IN9330 A

Van Guard Accessories Ltd Fair Oak Close, Exeter Airport Business Park, Exeter, Devon, EX5 2UL www.van-guard.co.uk

IN9330 - PAGE 2 OF 5

VAN





Wear the appropriate protective equipment (safety glasses & gloves) while fitting this product.



Dispose of packaging materials responsibly - Do not dispose until you have checked all parts and fixings are present.

1. ACCESS THE DOOR LATCH

2. REMOVE THE DOOR LATCH

Remove the plastic panel to the rear edge of the side loading door. There are two clips to the forward edge, one to the top and one to the bottom. The rear edge is hooked over the metal.



Remove the three T30 Torx head screws from the rear edge of the door to loosen the door latch and withdraw from the door cavity. You may find it easier to temporarily unclip the remote central locking.



3. REMOVING THE FORD SHIELD

To enable the shield to locate, it will be necessary to discard the Ford shield covering the latch mechanism. With the latch removed from the door cavity, undo the two T30 Torx head screws, and remove the Ford shield.



4. INSTALLING THE SHIELD

Holding the shield into place, relocate the latch into position within the door cavity and secure using the three T30 x 20mm Torx head screws provided.

Once the latch is secured, reconnect the central locking plug and check the door and reopens smoothly.

With all doors closed, check the operation of the central locking. Note: If the horn sounds twice, check all doors are properly closed, the central locking plug is fully inserted and the latch mechanism is catching fully.

