

IN8192

Load Stops

 
**VAN
GUARD**

VGLS-1


ME0316 X2



MA6093 X2



FX4115 X2

 

MA6066 X2



MA6067 X2



MA6068 X1



VGLS-2

 
ME0316 X4



MA6093 X4



FX4115 X4



MA6066 X4



MA6067 X4



MA6068 X1



GB. Regularly inspect all fixings and parts. Any damaged or worn parts should be immediately removed from the vehicle and replaced.

It is important that the end user receives this document and that instructions are retained for future use.



FR. Inspecter régulièrement toutes les fixations et les pièces. Les pièces endommagées ou usées doivent être immédiatement retiré du véhicule et remplacé.

Il est important que l'utilisateur final reçoit ce document et que les instructions soient conservés pour une utilisation futur.



DE. Prüfen Sie regelmäßig alle Befestigungen und Teile. Alle verschlissenen oder beschädigten Teile sollten sofort aus dem Fahrzeug ausgebaut und erneuert.

Es ist wichtig, dass der Endbenutzer erhält dieses Dokument und die Anweisungen für eine zukünftige Verwendung aufbewahrt werden.



DK. Undersøg med jævne mellemrum alle løsdele og fæstninger. Beskadigede eller slidte dele bør straks fjernes fra køretøjet og repareres eller erstattet.


Det er vigtigt, at dette dokument overdrages til slutbruger af produktet og at vejledning er gemt til senere brug.




This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8192_D

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk


1 Insert the square retaining nut into the plastic rail plate body and then slide the rail plates into the roof bars you wish to use the adjustable load stops on.

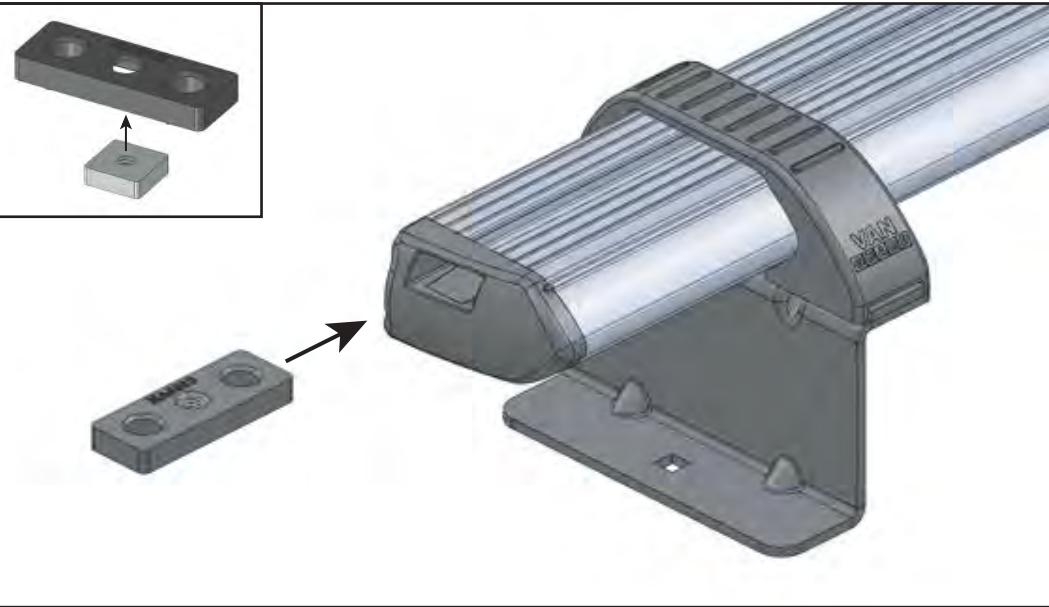

2 Place the adjustable load stops onto the roof bars and locate with the rail plates positioned in the t-track.

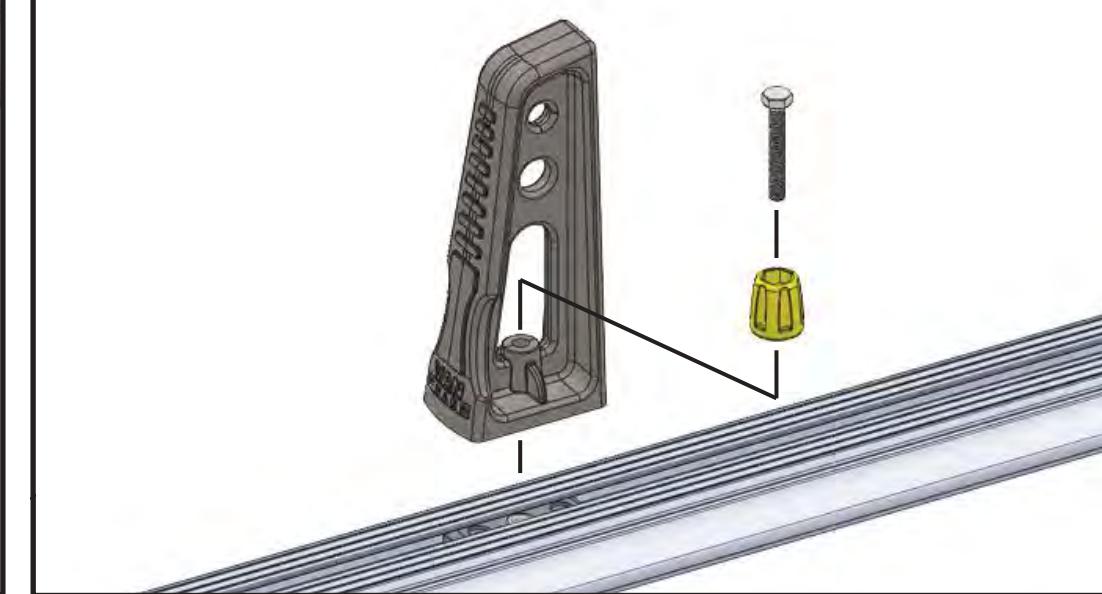

3 Slide the load stops to the required position on the roof bar and tighten by hand. Once the load stops have been tightened by hand the supplied tool (MA6068) can be used to tighten further.

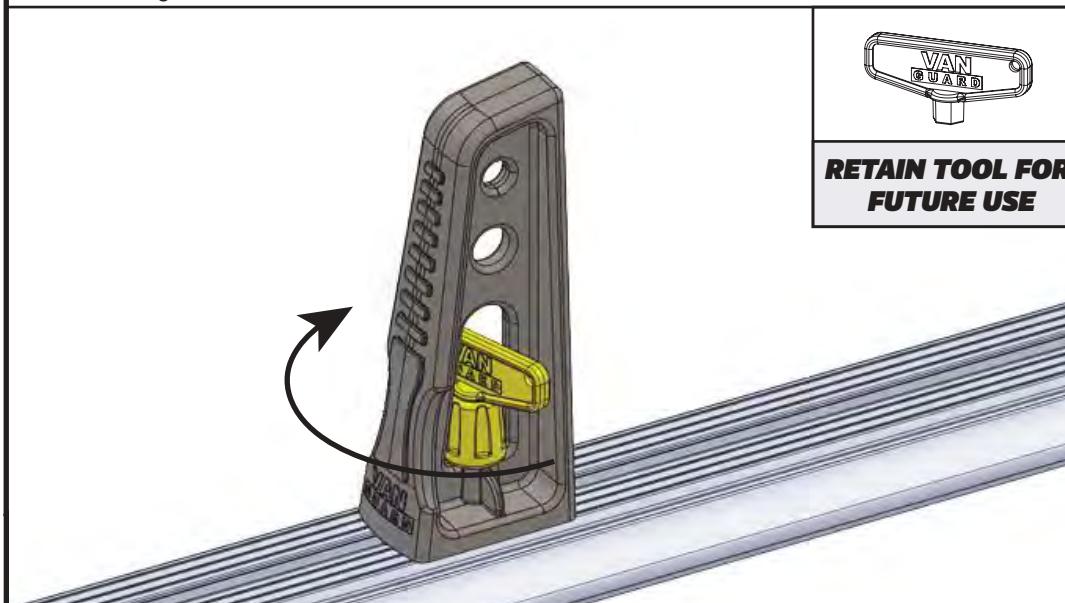

4 If the load stop is removed from the roof bar remember to also remove the rail plate. The rail plate must not be left inside the roof bar when it's not in use.

