

Fitting Instructions - Read instructions carefully before fitting and follow them for correct use

IN8006

ULTI Rack



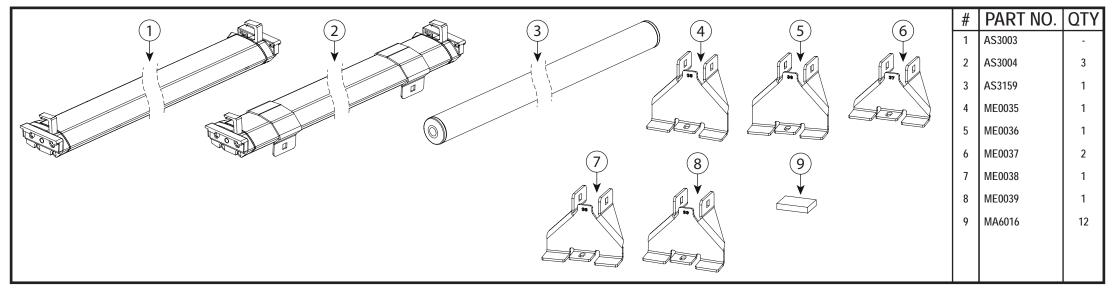

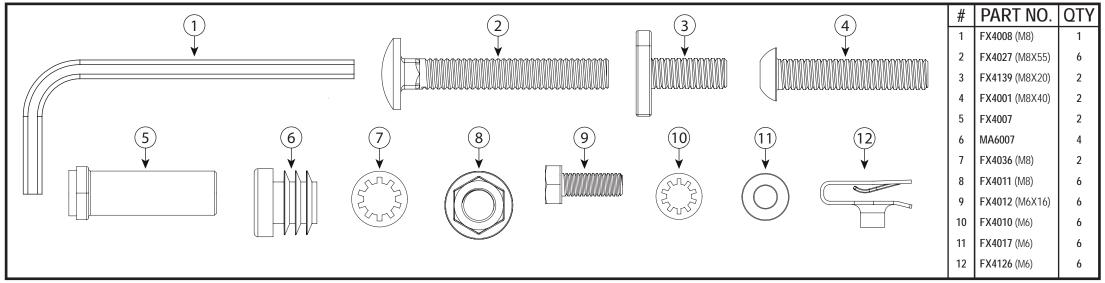

This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD. IN8006 D


Van Guard Accessories Ltd Fair Oak Close, Exeter Airport Business Park, Exeter, Devon, EX5 2UL www.van-guard.co.uk


VGUR-020

Vehicle:

Citroen Dispatch: 2007 on Peugeot Expert: 2007 on Fiat Scudo: 2007 on Toyota ProAce: 2013 on Wheel Base: SWB (L1) Roof Height: Low (H1)

Rear Doors: Twin

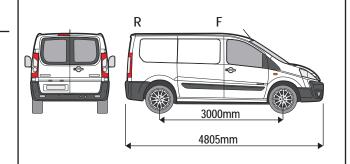


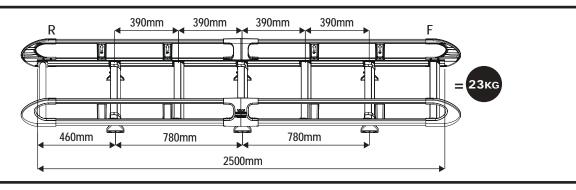


VGUR-021


Vehicle:


Citroen Dispatch: 2007 on Peugeot Expert: 2007 on Fiat Scudo: 2007 on Toyota ProAce: 2013 on Wheel Base: LWB (L2) Roof Height: Low (H1) Rear Doors: Twin

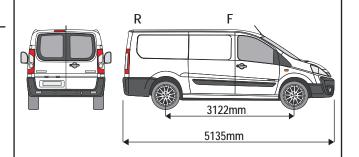


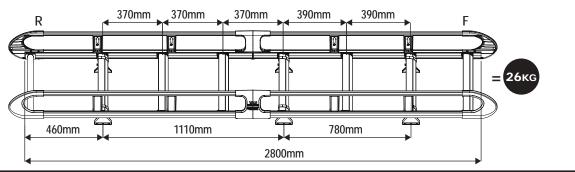





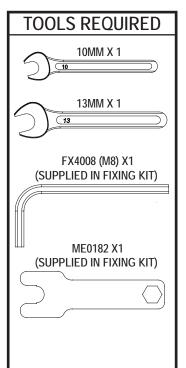


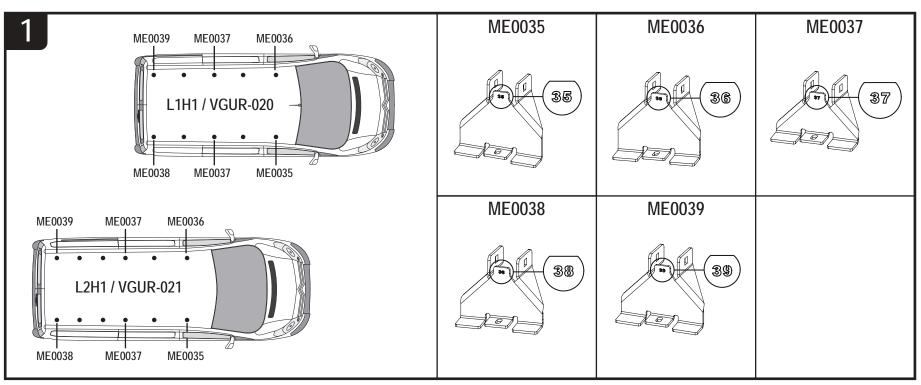


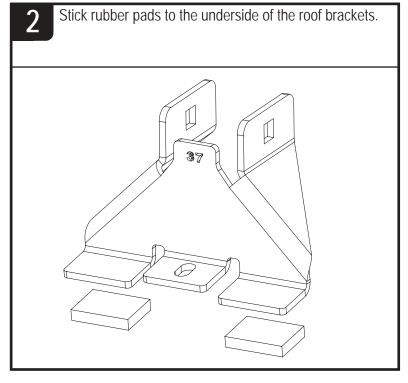


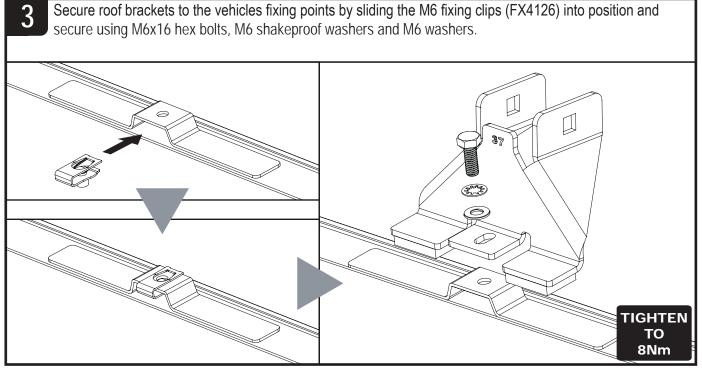

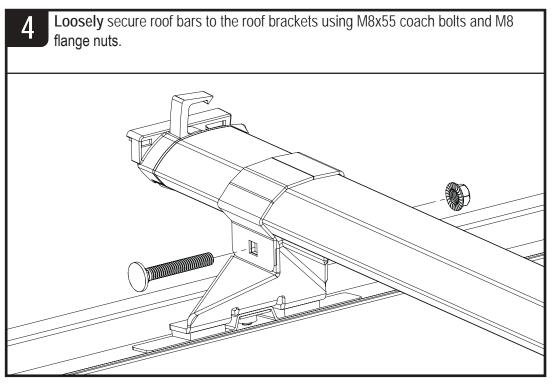


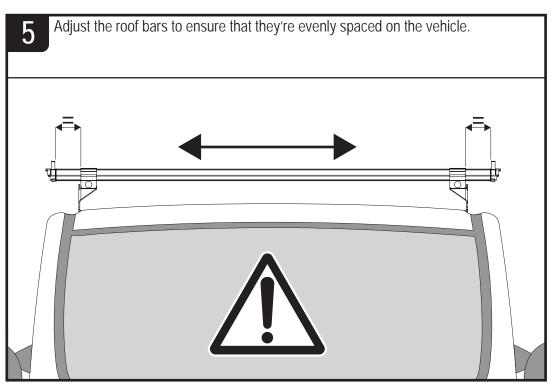


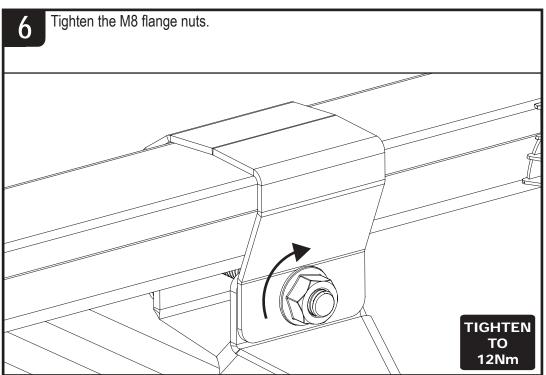


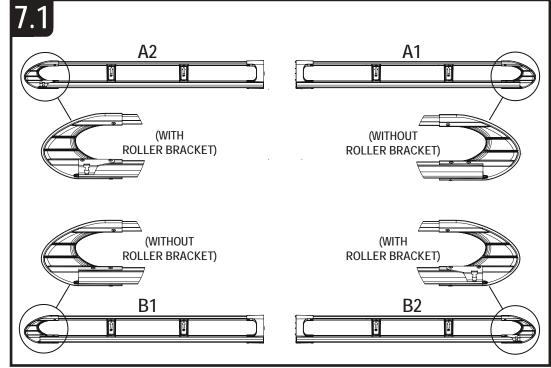



IN8006 - PAGE 4 OF 7

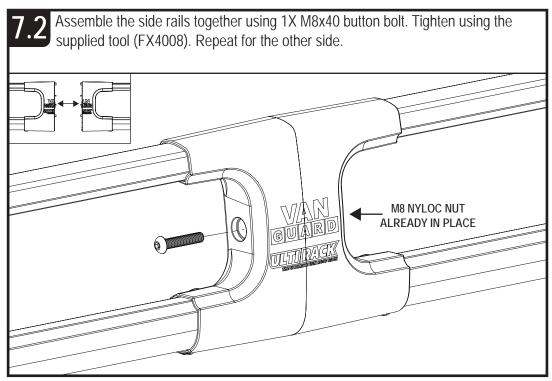


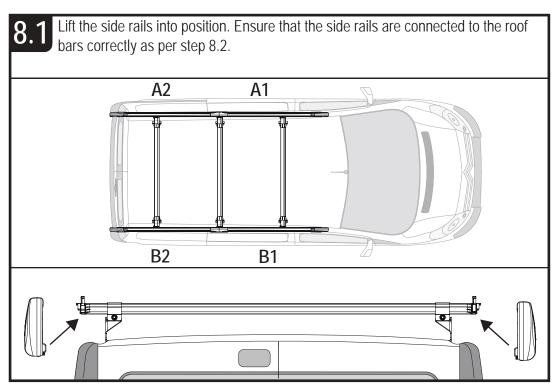

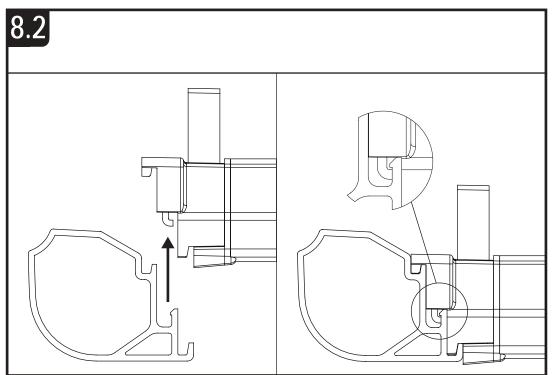


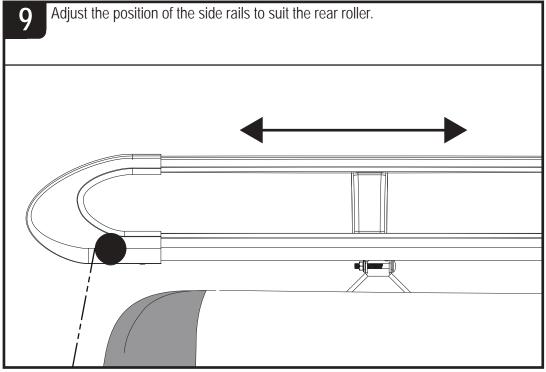

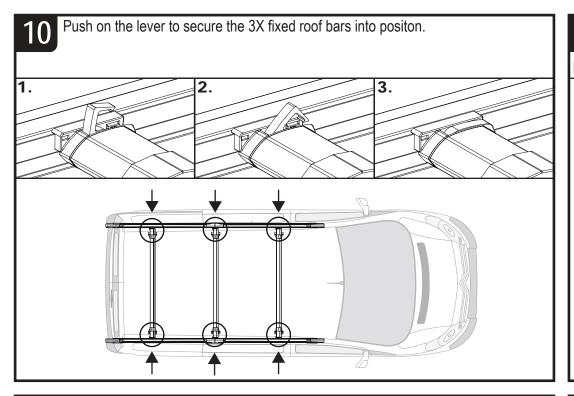


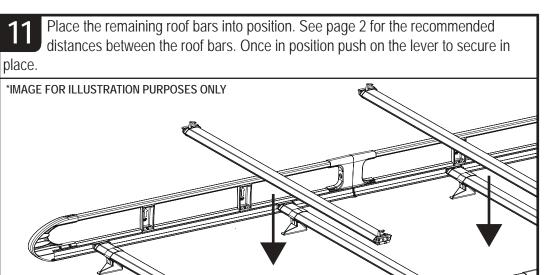



Secure the roller spigot to the **left hand roller bracket only** using a M8 t bolt (FX4139) and a M8 shakeproof washer. Ensure that the shakeproof is on the inside of the roller bracket and that the spigot sits flush / straight. Tighten using the supplied tool.

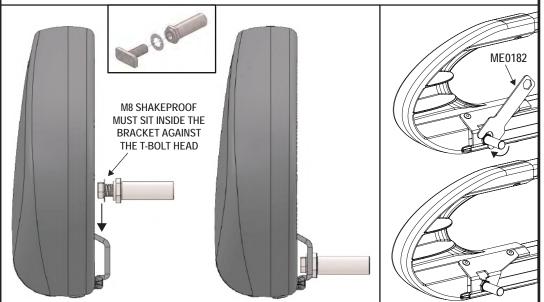

Assemble the roller spigot, M8 t bolt (FX4139) and M8 shakeproof washer together. Place the assembly into the roller. Slide the roller onto the spigot fitted in step 12, drop the other end into position and then tighten using the supplied tool (ME0182).

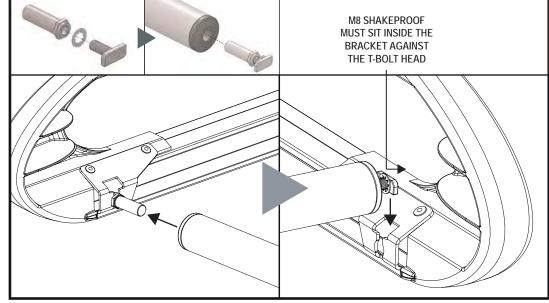

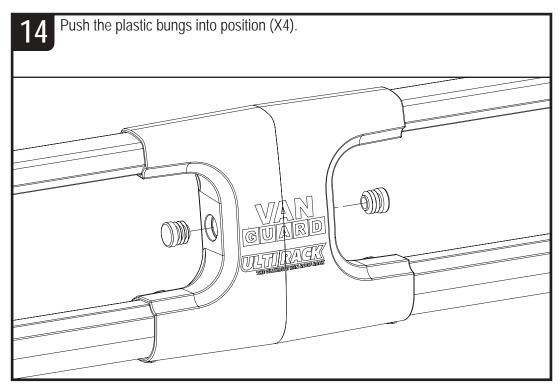

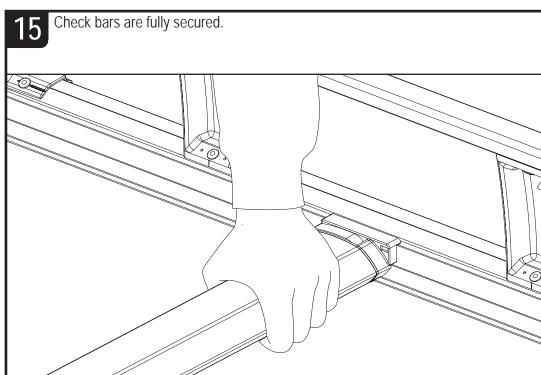

Once the product has been fitted check fixings and parts to ensure they have been fully secured and tightened. Check fixings and parts at regular intervals. Any damaged or worn parts must be immediately removed from the vehicle and replaced.



NOTES:

Maximum load capacity: 150KG (Including rack weight - please refer to page 2.) (Maximum load must be in accordance with the vehicle manufacturer's load bearing capacity. Please refer to the vehicles handbook.). Regularly check all fixings and parts.

Retain these instructions for future reference. It is important that the end user receives this document.