

## Fitting Instructions - Read instructions carefully before fitting and follow them for correct use

## IN8017 **ULTI Rack**

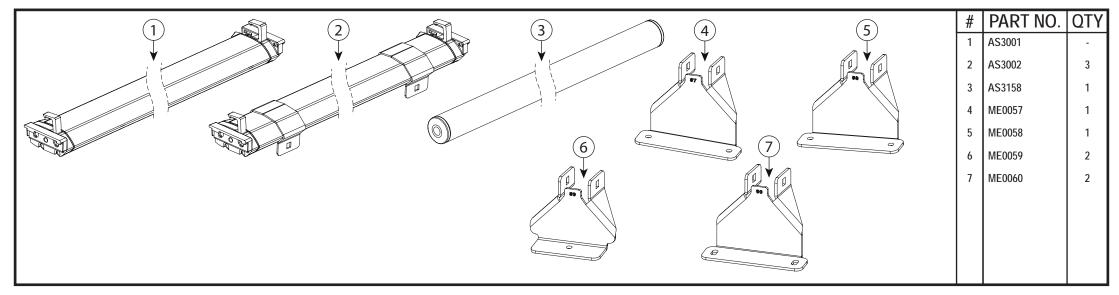

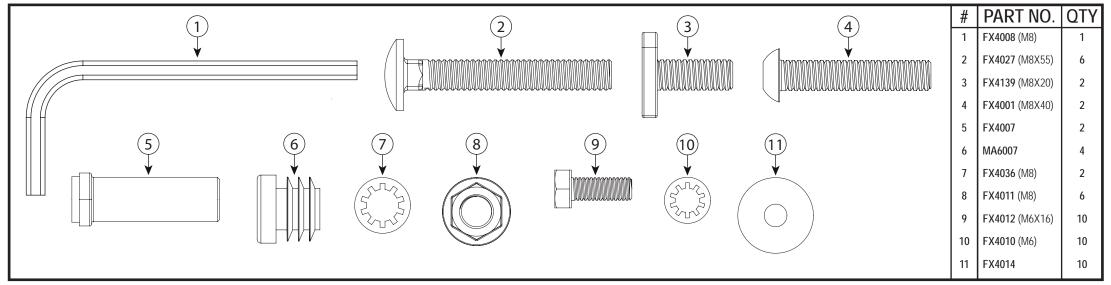






This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8017 C


Van Guard Accessories Ltd Fair Oak Close, Exeter Airport Business Park, Exeter, Devon, EX5 2UL www.van-guard.co.uk


## VGUR-042 282mm 282mm 432mm 433mm Vehicle: Fiat Doblo: 2010 on = 20KG Vauxhall Combo: 2012 on Wheel Base: SWB (L1) Roof Height: Low (H1) 2755mm Rear Doors: Twin 340mm 564mm 865mm 4390mm 2000mm VGUR-043 432mm 433mm 305mm 305mm Vehicle: Fiat Doblo: 2010 on = 21KG Vauxhall Combo: 2012 on Wheel Base: LWB (L2) Roof Height: Low (H1) 3105mm Rear Doors: Twin 340mm 915mm 865mm 4740mm 2400mm

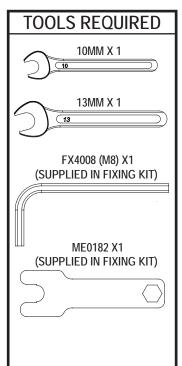


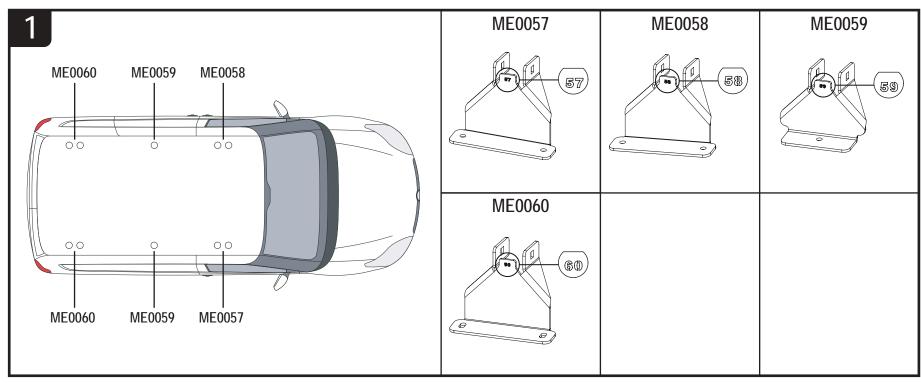


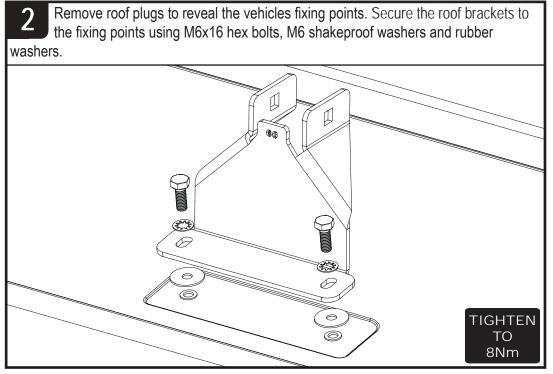


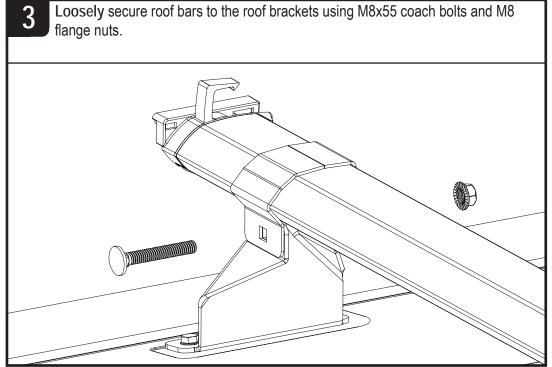


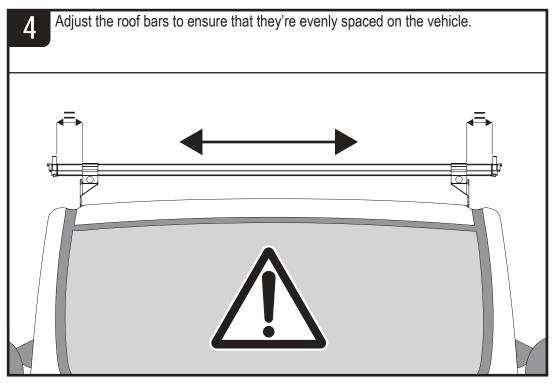


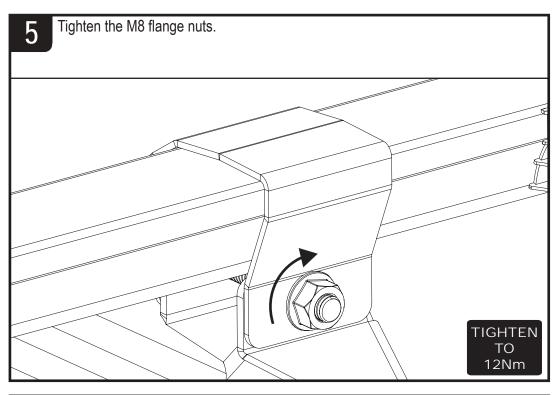


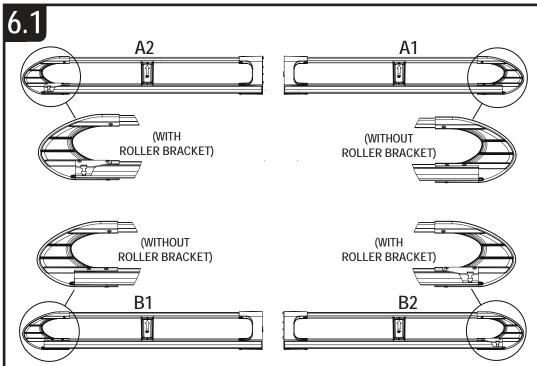


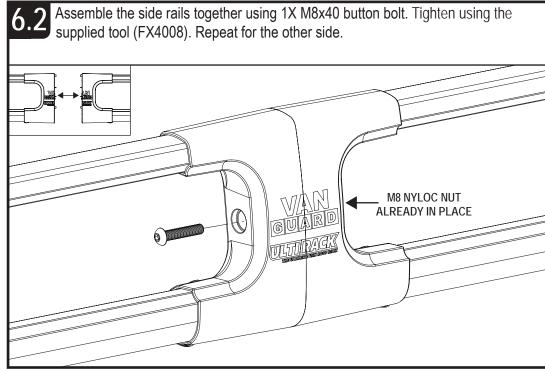

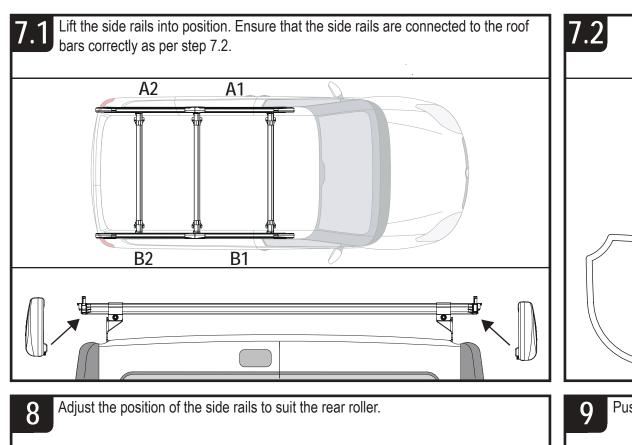


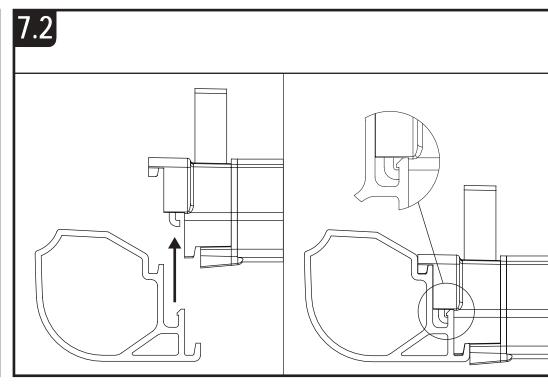

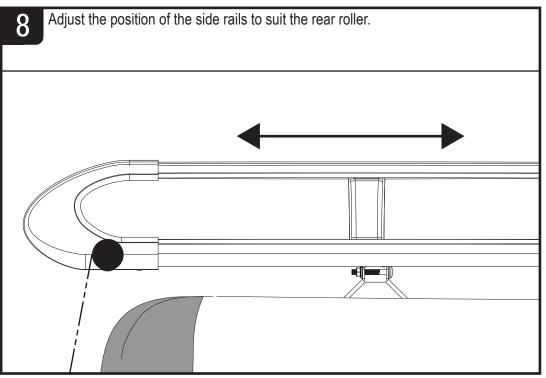


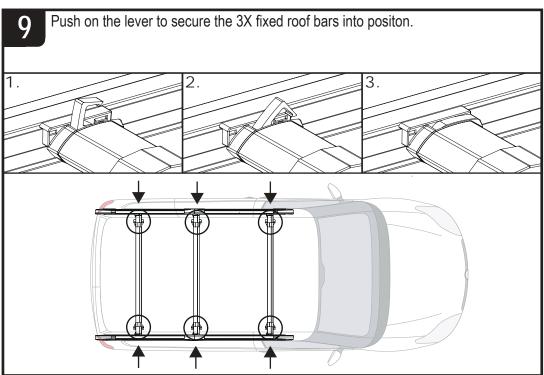


Place the remaining roof bars into position. See page 2 for the recommended distances between the roof bars. Once in position push on the lever to secure in place.

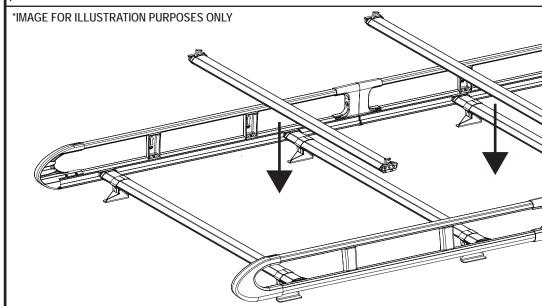


Secure the roller spigot to the left hand roller bracket only using a M8 t bolt (FX4139) and a M8 shakeproof washer. Ensure that the shakeproof is on the inside of the roller bracket and that the spigot sits flush / straight. Tighten using the supplied tool.

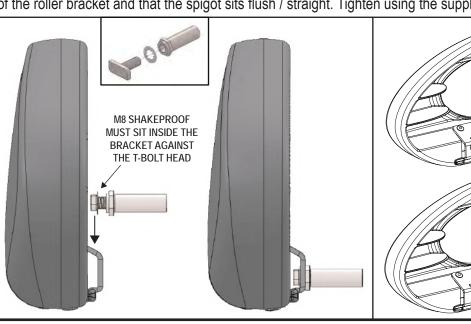


Assemble the roller spigot, M8 t bolt (FX4139) and M8 shakeproof washer together. Place the assembly into the roller. Slide the roller onto the spigot fitted in step 11, drop the other end into position and then tighten using the supplied tool (ME0182).

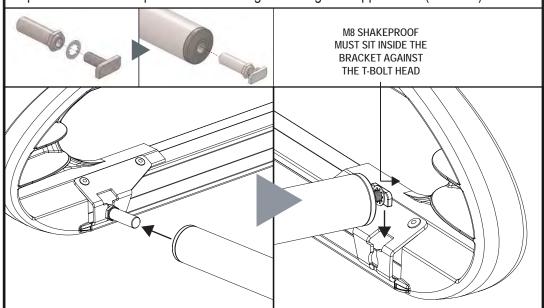

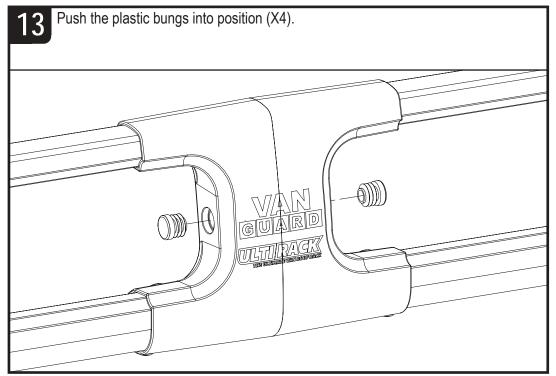

ME0182

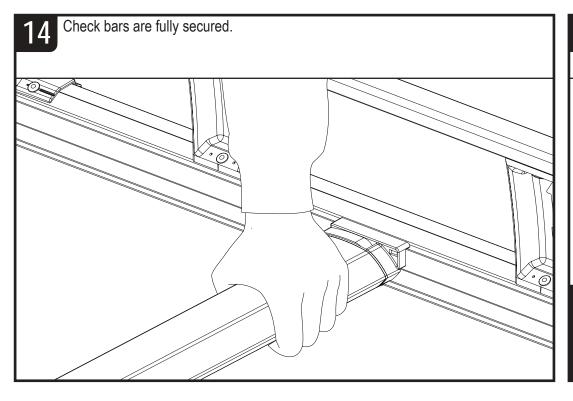

Once the product has been fitted check fixings and parts to ensure they have been fully secured and tightened. Check fixings and parts at regular intervals. Any damaged or worn parts must be immediately removed from the vehicle and replaced.



## NOTES

Maximum load capacity: 100KG (Including rack weight - please refer to page 2.) (Maximum load must be in accordance with the vehicle manufacturer's load bearing capacity. Please refer to the vehicles handbook.). Regularly check all fixings and parts.

Retain these instructions for future reference. It is important that the end user receives this document.