

IN8023 ULTI Rack



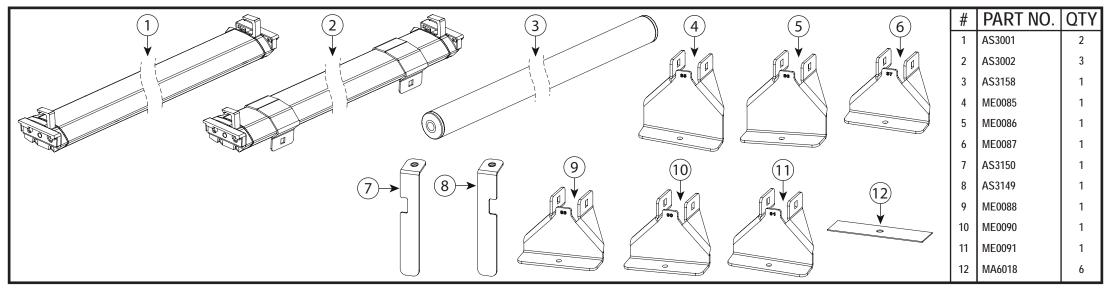

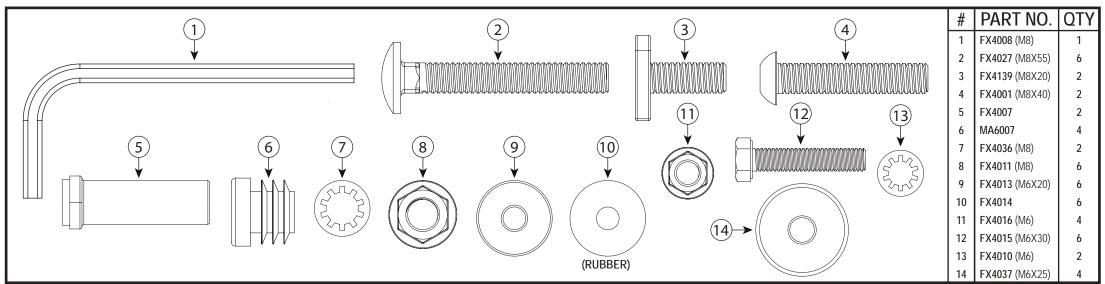



This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.


IN8023 C


Van Guard Accessories Ltd Fair Oak Close, Exeter Airport Business Park, Exeter, Devon, EX5 2UL www.van-guard.co.uk

VGUR-054 363mm 363mm 364mm Vehicle: Ford Transit Connect: 2014 on Wheel Base: SWB (L1) Roof Height: Standard (H1) Rear Doors: Twin = 20KG 2663mm 350mm 1090mm 503mm 4417mm 2100mm

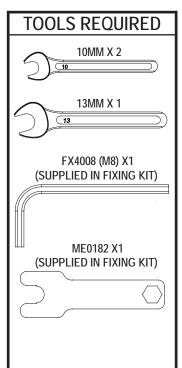

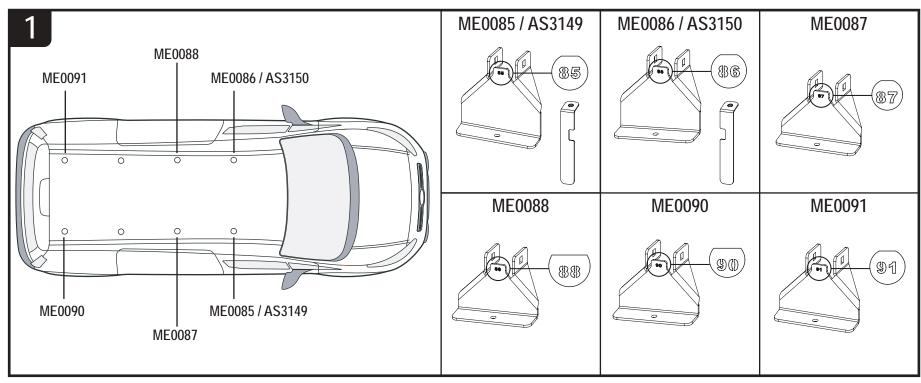

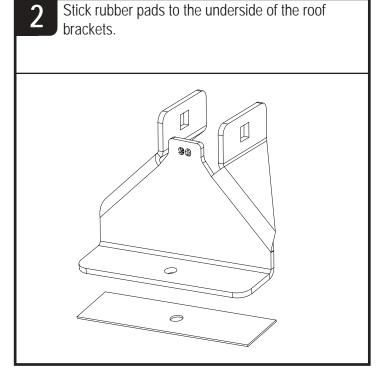


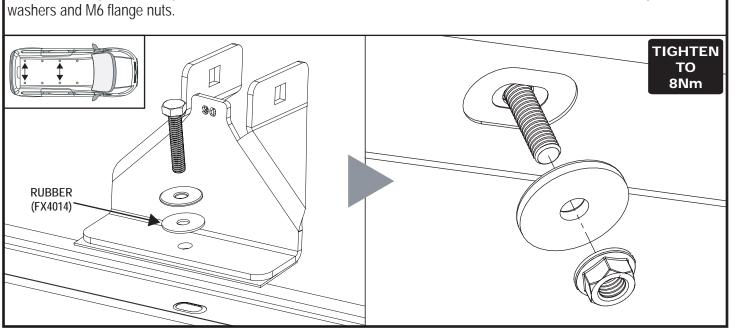



Remove roof plugs to reveal the vehicles fixing points. Secure the rear and middle roof brackets by bolting through


the fixing points using M6x30 hex bolts, M6x20 washers & rubber washers. Secure under the roof using M6x25


Secure the front roof brackets by loosening the edge of the roof liner enough to hold the front fixing point tool up to the fixing point. Once in position bolt down through the fixing point, into the bush using M6x30 hex bolts, M6 shakeproof washers, M6x20 washers, and rubber washers.

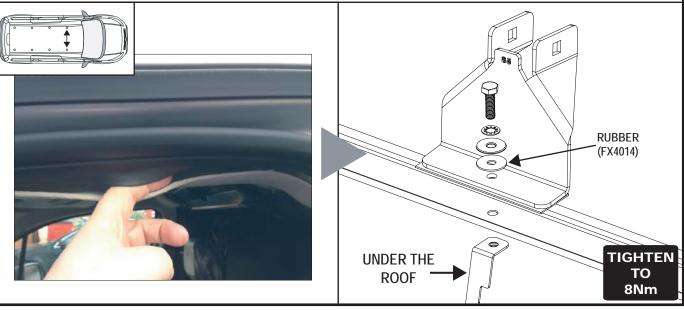


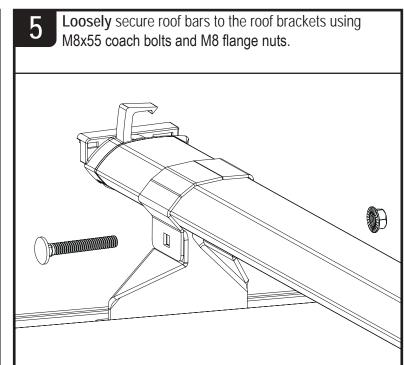


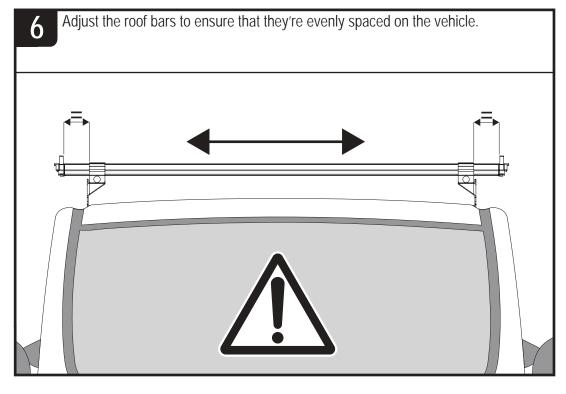


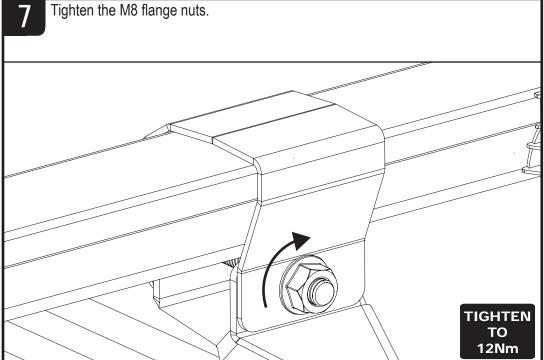


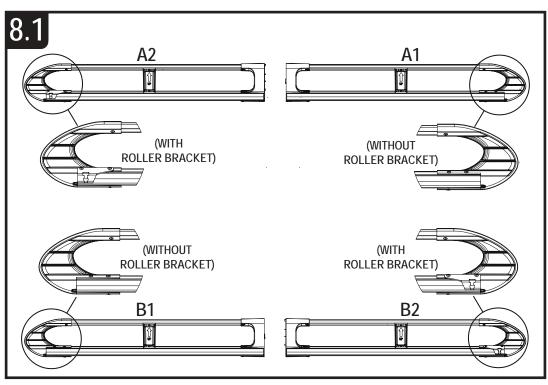


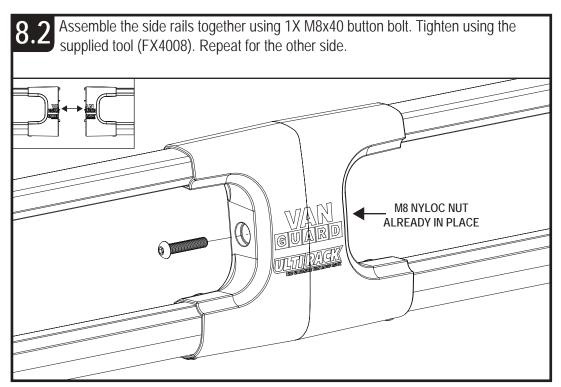

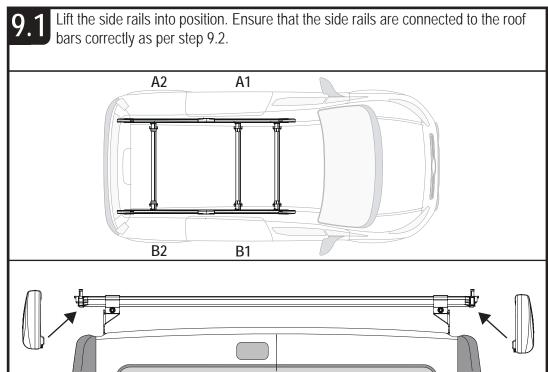


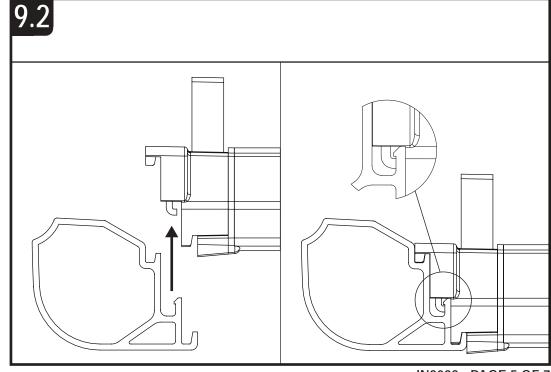

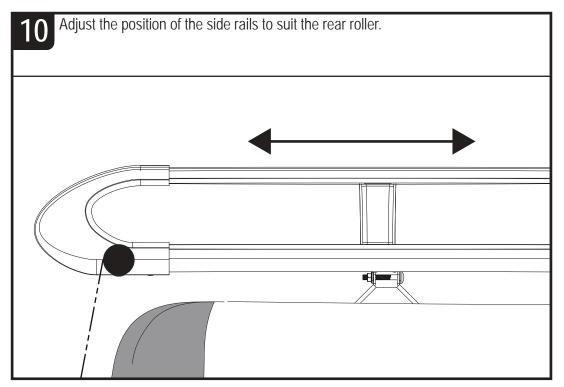


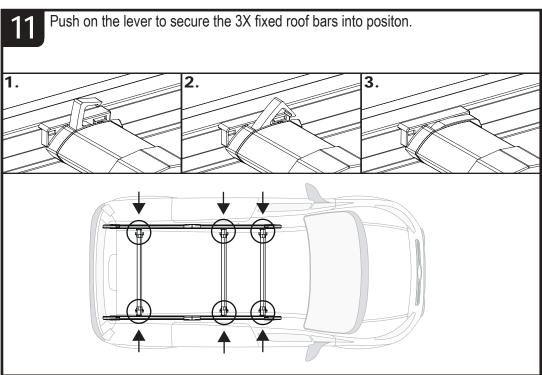


Place the remaining roof bars into position. See page 2 for the recommended distances between the roof bars. Once in position push on the lever to secure in place.

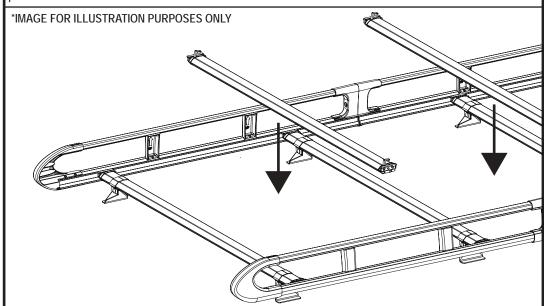



Secure the roller spigot to the **left hand roller bracket only** using a M8 t bolt (FX4139) and a M8 shakeproof washer. Ensure that the shakeproof is on the inside of the roller bracket and that the spigot sits flush / straight. Tighten using the supplied tool.

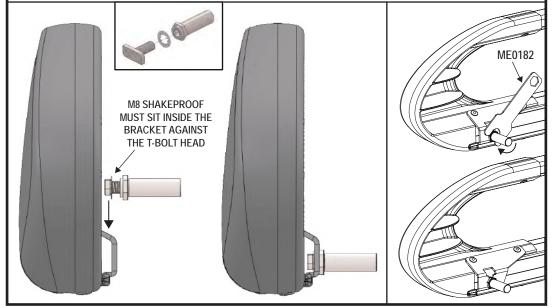

Assemble the roller spigot, M8 t bolt (FX4139) and M8 shakeproof washer together. Place the assembly into the roller. Slide the roller onto the spigot fitted in step 13, drop the other end into position and then tighten using the supplied tool (ME0182).

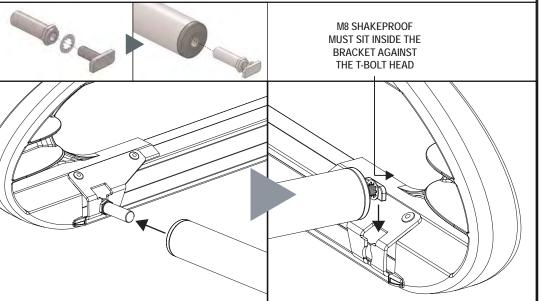

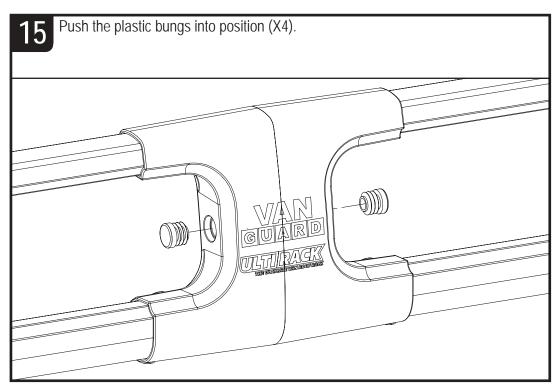

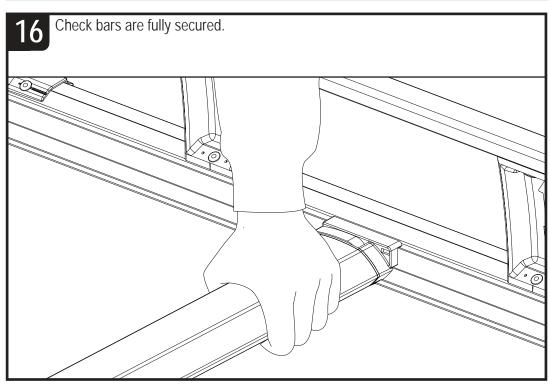

Once the product has been fitted check fixings and parts to ensure they have been fully secured and tightened. Check fixings and parts at regular intervals. Any damaged or worn parts must be immediately removed from the vehicle and replaced.



NOTES

Maximum load capacity: 100KG (Including rack weight - please refer to page 2.) (Maximum load must be in accordance with the vehicle manufacturer's load bearing capacity. Please refer to the vehicles handbook.). Regularly check all fixings and parts.

Retain these instructions for future reference. It is important that the end user receives this document.