
IN8152 ULTI Rack

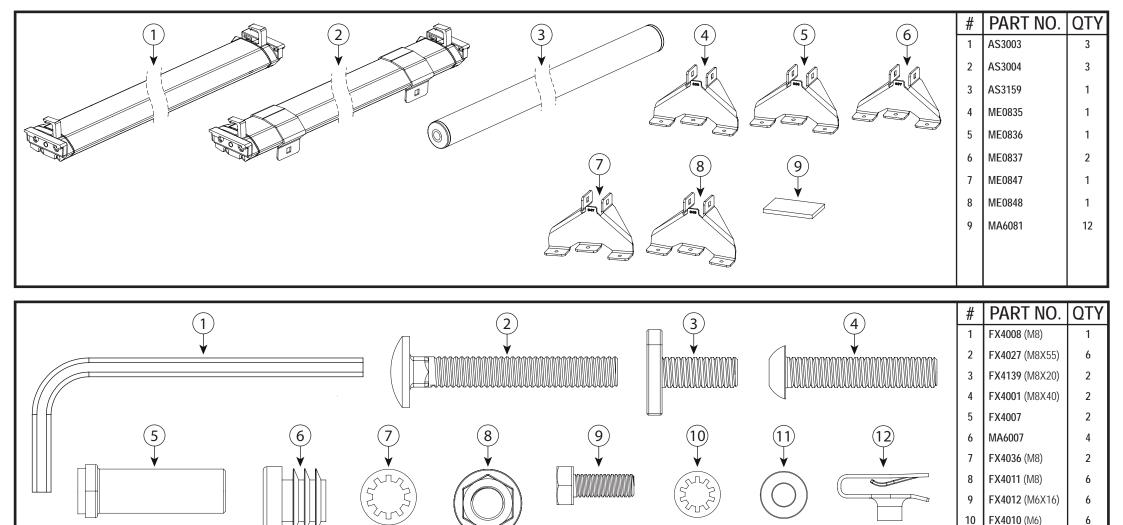



This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD. IN8152 E

Van Guard Accessories Ltd Fair Oak Close, Exeter Airport Business Park, Exeter, Devon, EX5 2UL www.van-guard.co.uk

11

12


FX4017 (M6)

FX4126 (M6)


IN8152 - PAGE 1 OF 7

6


6

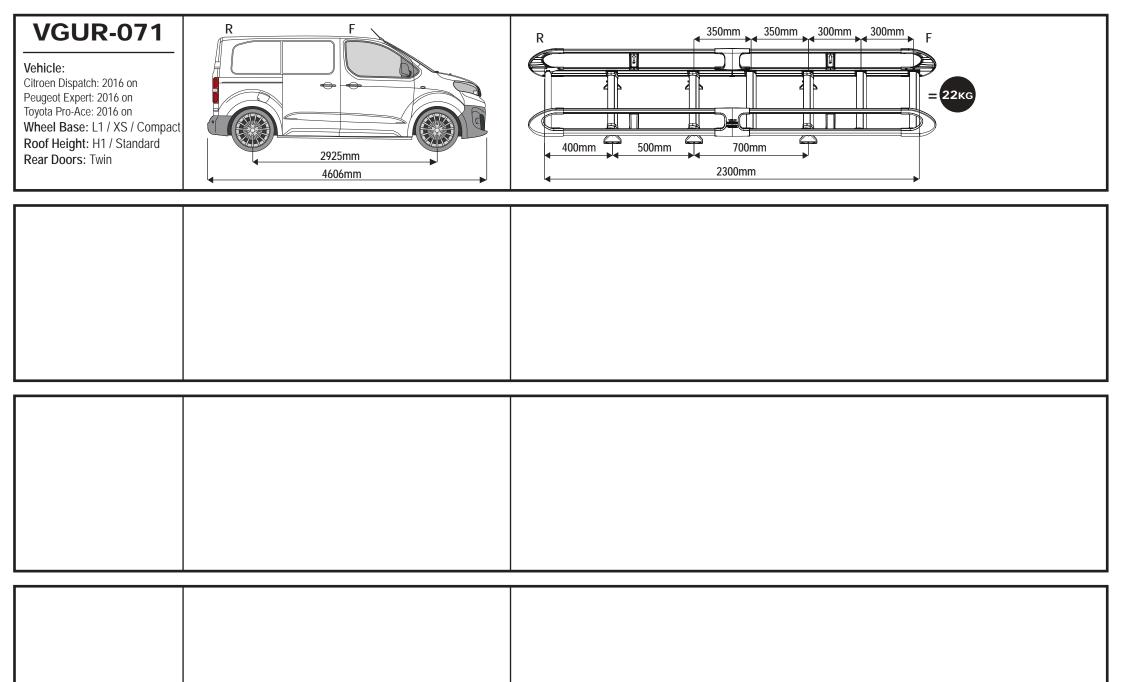


IN8152 - PAGE 2 OF 7

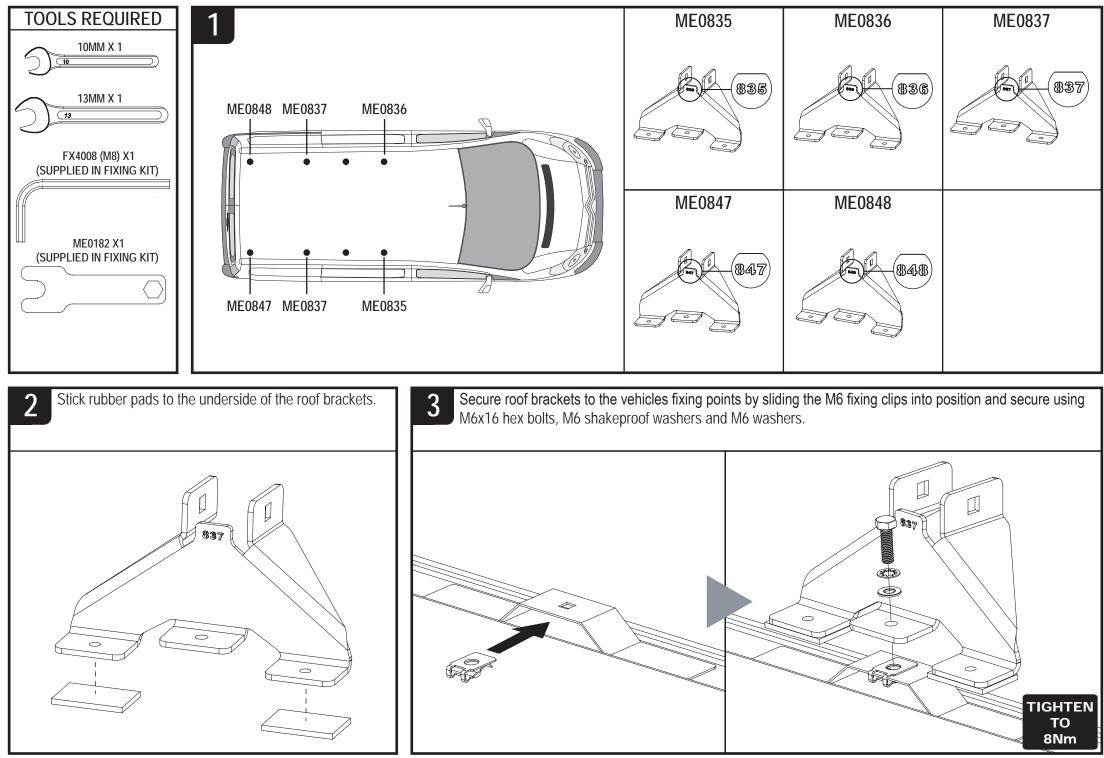


IN8152 - PAGE 3 OF 7

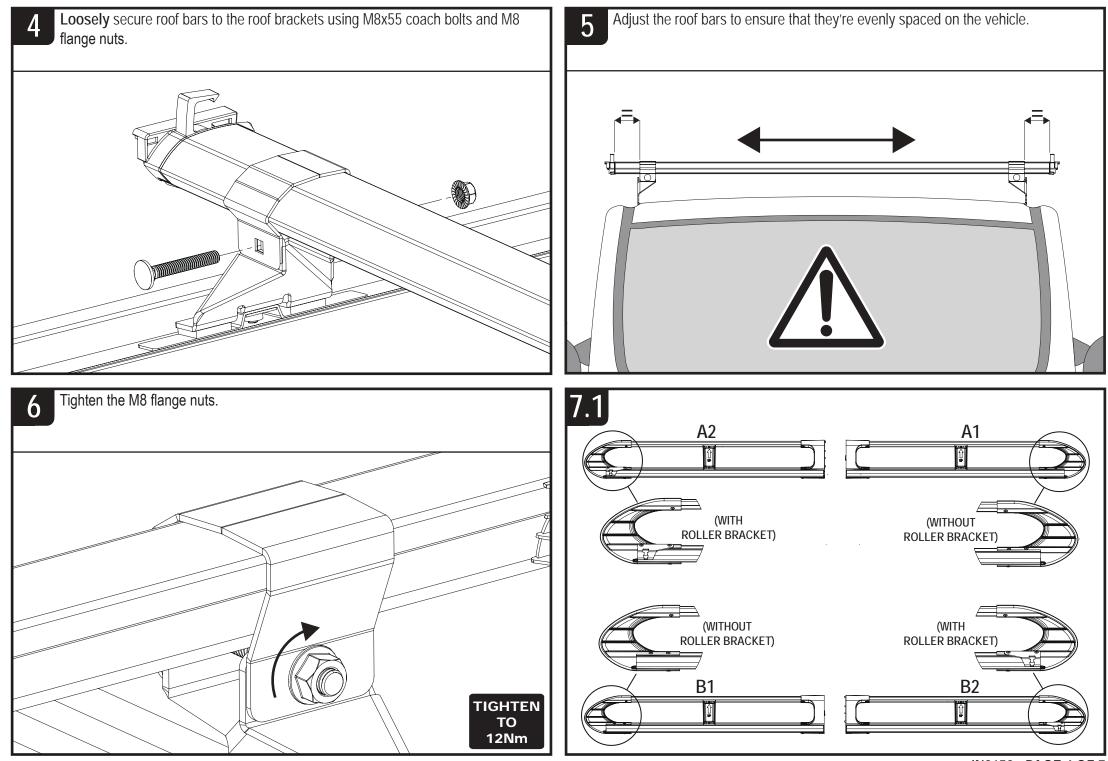


IN8152 - PAGE 4 OF 7

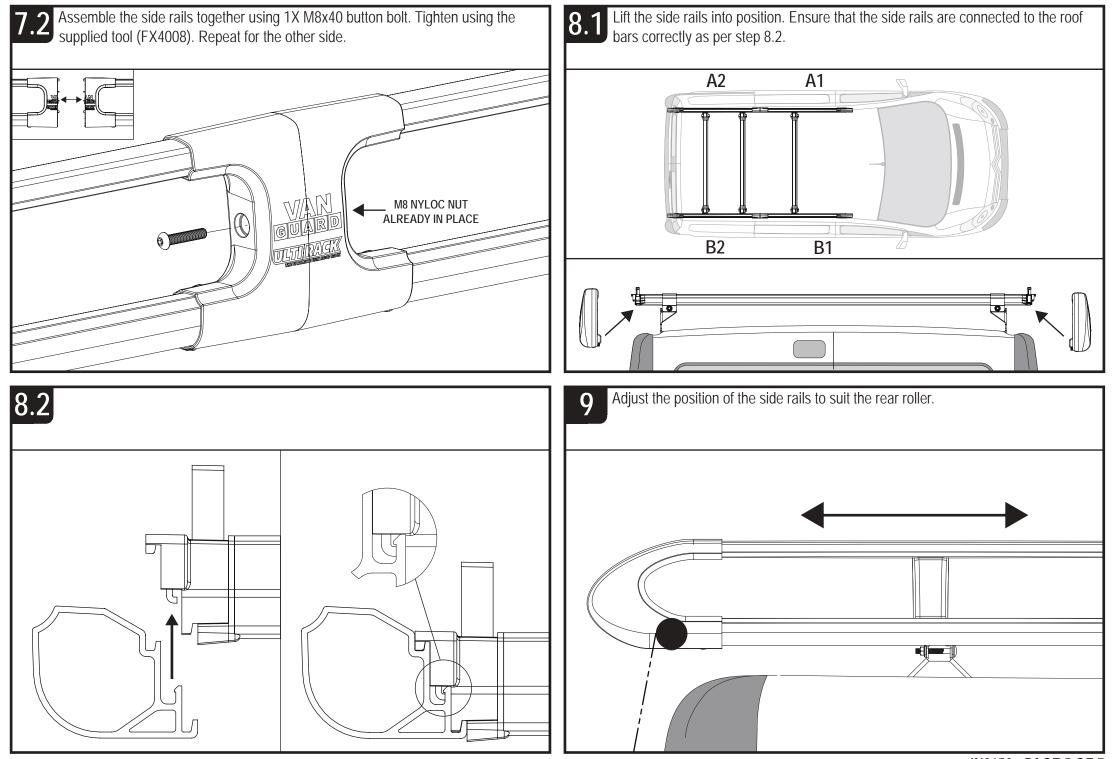

IN8152 - PAGE 5 OF 7

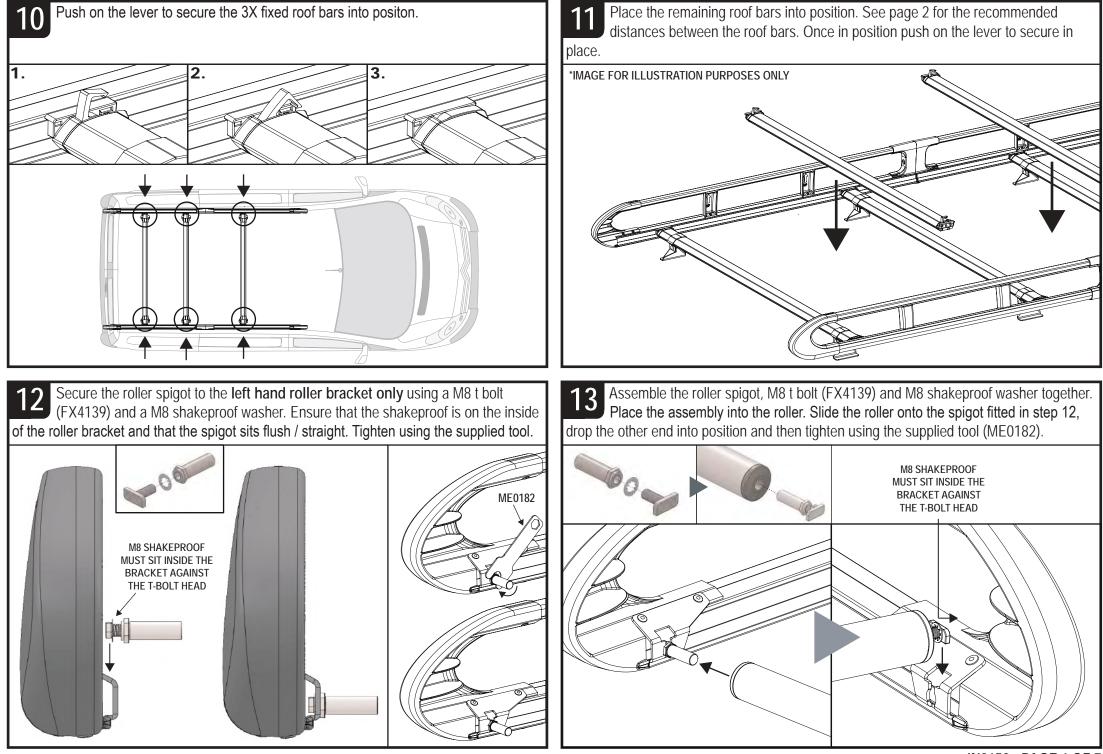

IN8152 - PAGE 6 OF 7

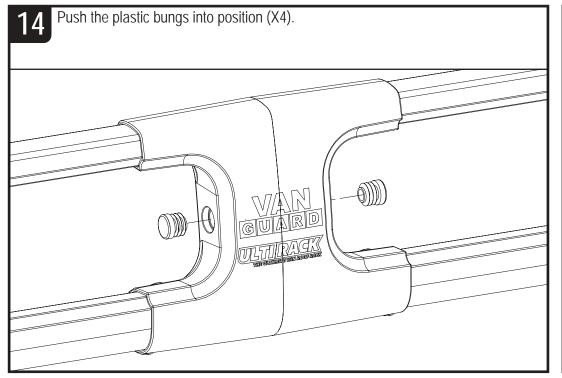

16 Once the product has been fitted check fixings and parts to ensure they have been fully secured and tightened. Check fixings and parts at regular intervals. Any damaged or worn parts must be immediately removed from the vehicle and replaced.



NOTES:

Maximum load capacity: 100KG (Including rack weight - please refer to page 2.) (Maximum load must be in accordance with the vehicle manufacturer's load bearing capacity. Please refer to the vehicles handbook.). Regularly check all fixings and parts.

Retain these instructions for future reference. It is important that the end user receives this document.

