


IN8400


ULTI Ladder

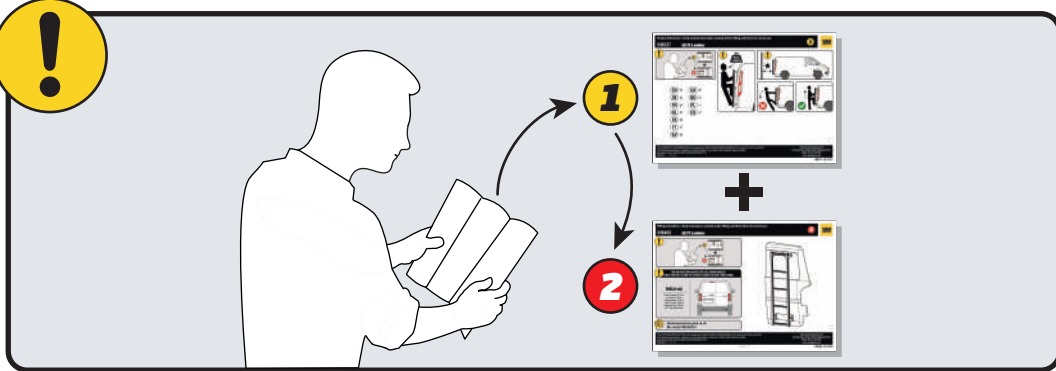


**THIS INSTRUCTION COVERS THE FOLLOWING MODELS
CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING**

VGL5-02

- Citroen Dispatch: 2016 on
 - Fiat Scudo: 2022 on
 - Peugeot Expert: 2016 on
 - Toyota Pro-Ace: 2016 on
 - Vauxhall Vivaro: 2019 on
- H1 - Twin Rear Doors**

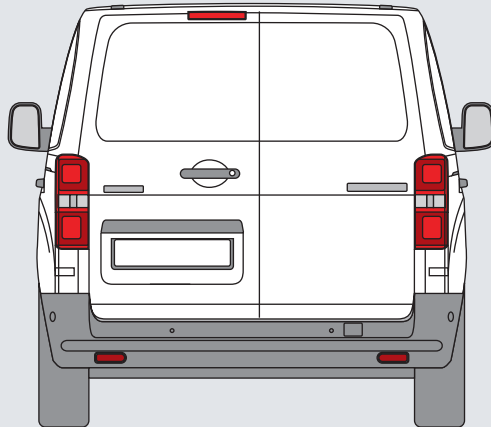


 **Customercare@van-guard.co.uk**
UK +44 (0) 1392 368 351

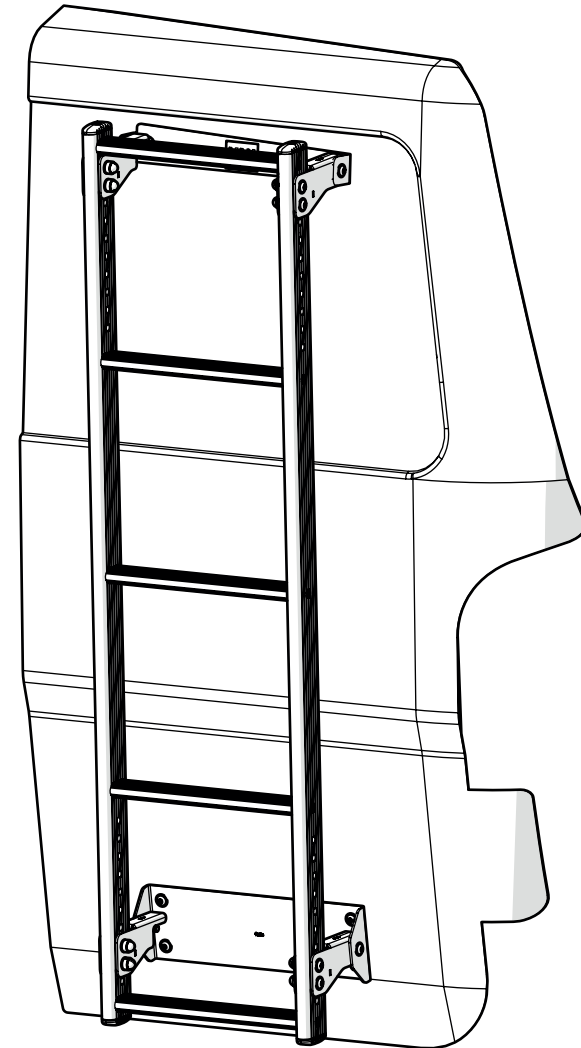


SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING

TOOLS REQUIRED


13MM X1

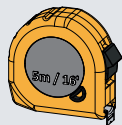

4MM X1

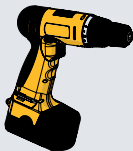

9MM X1

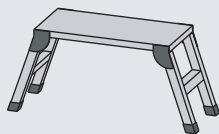


X1




FX4008 X1



AS3592 X1

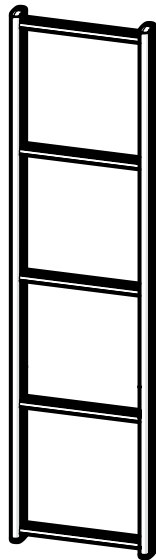


ME1905 X2

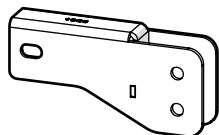

FX4249 X8

(M8X40)




FX4240 X18


(M8)



MA6200 X2




ME1906 X2

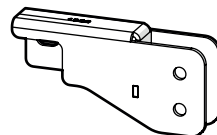

FX4250 X10


(M8X25)




FX4241 X8



MA6203 X1




FX4252 X2

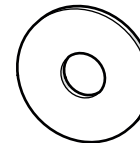


ME1947 X1




ME1920 X1

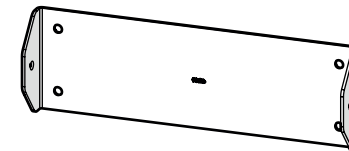


ME1923 X1




ME1924 X1

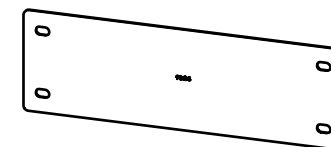


01

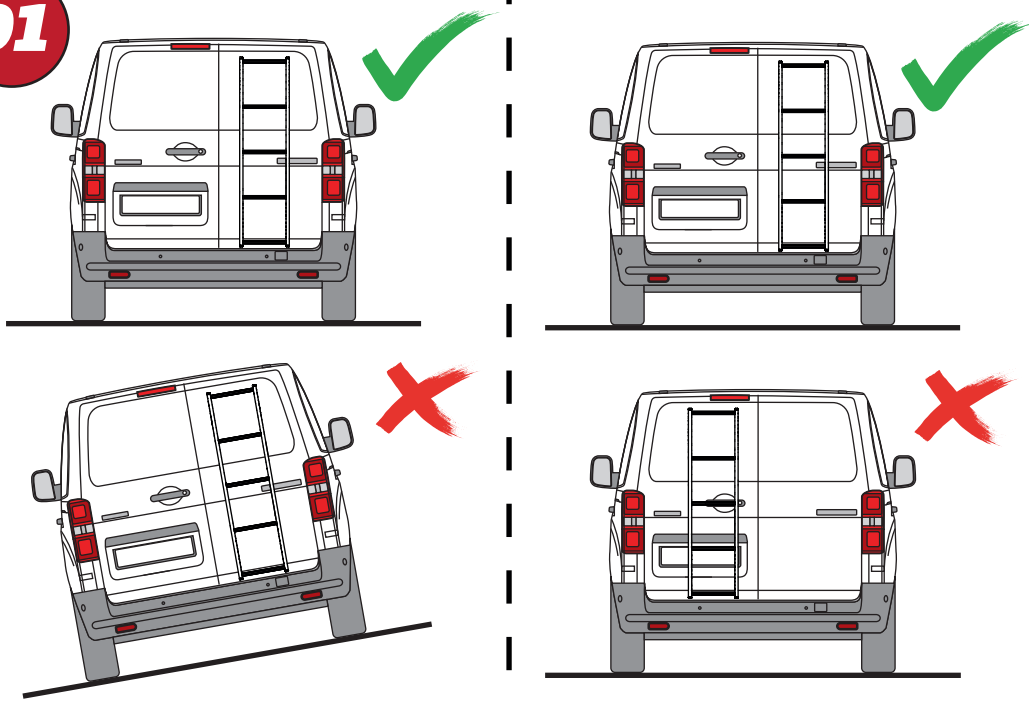


02

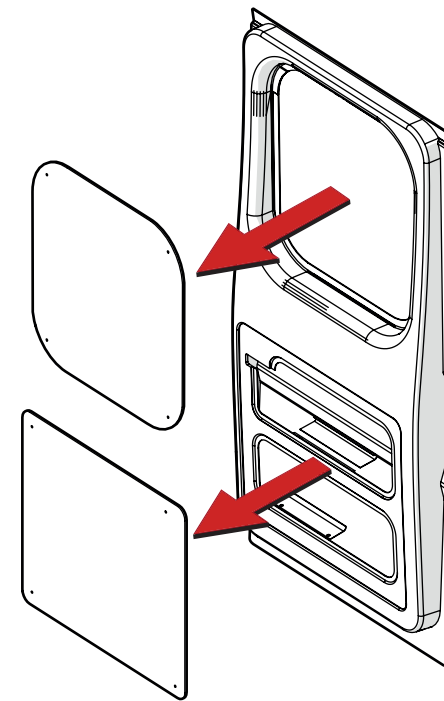

03

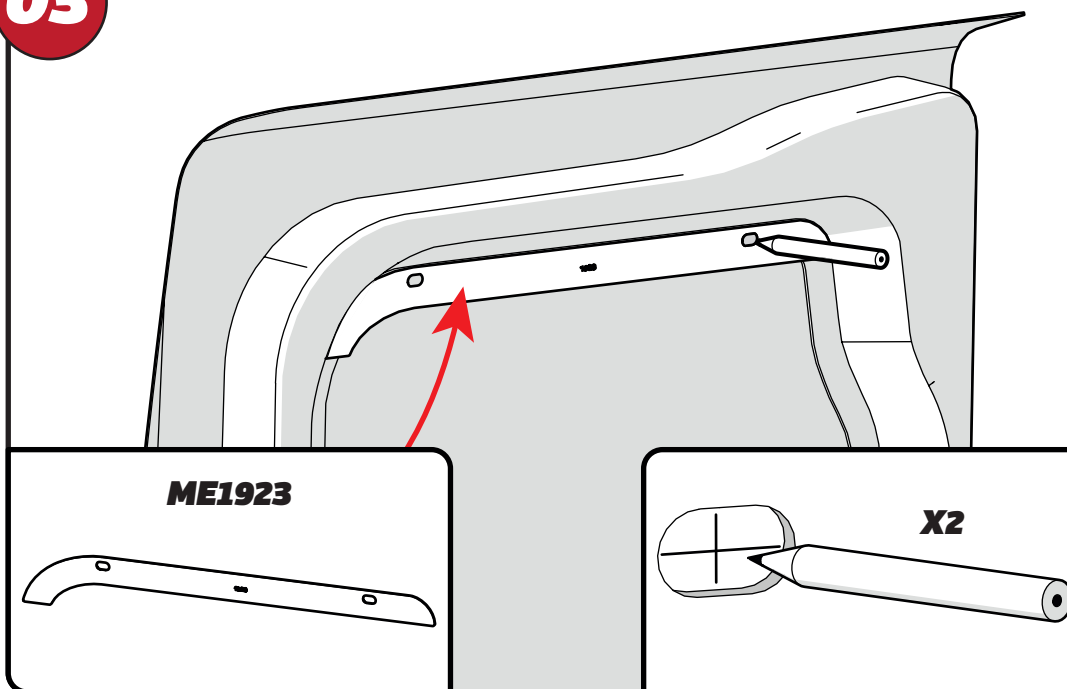


04

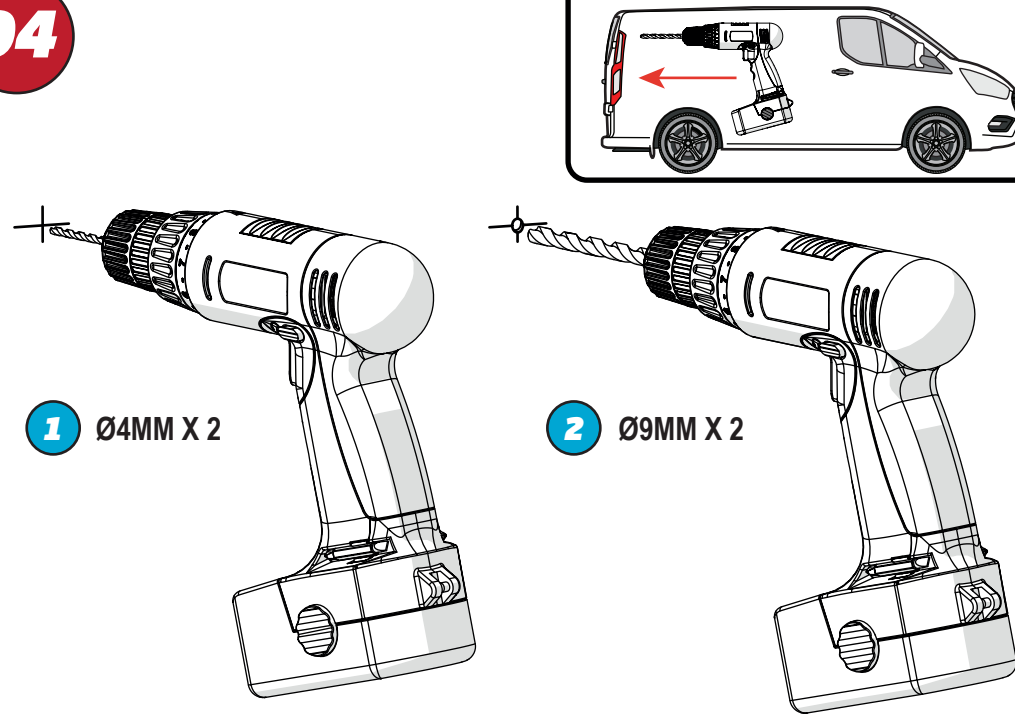


05



MA6203

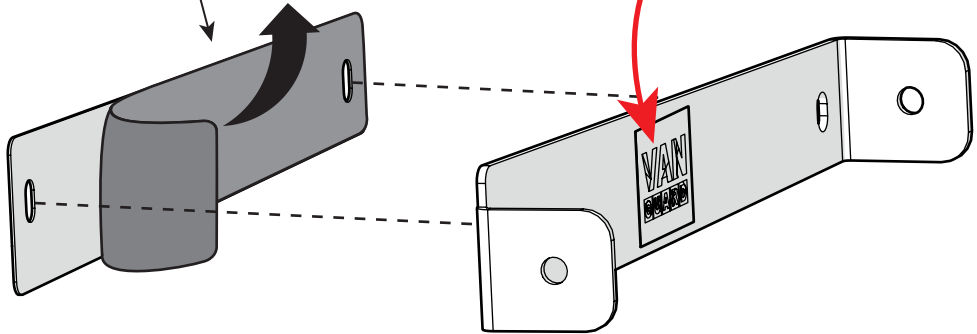

06


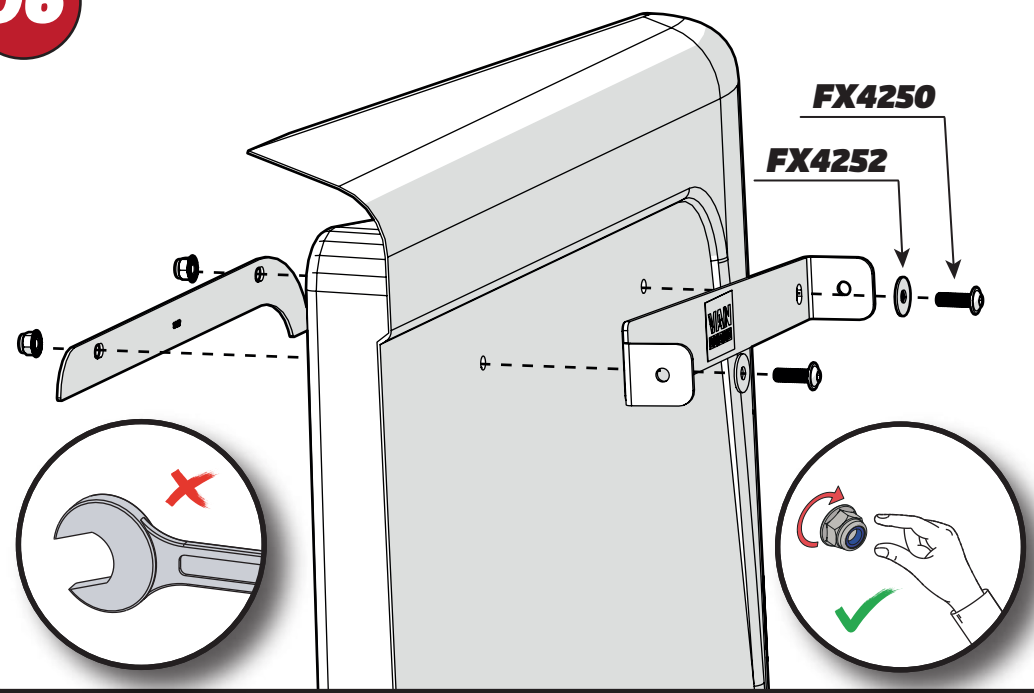


FX4250


FX4252

07

MA6200

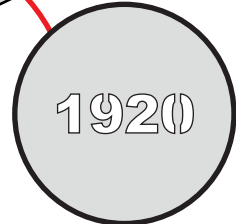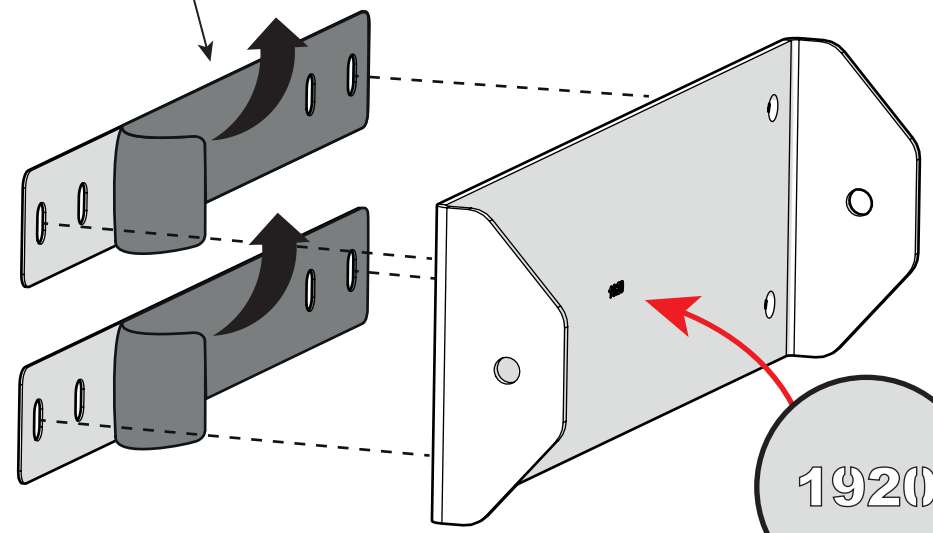

08

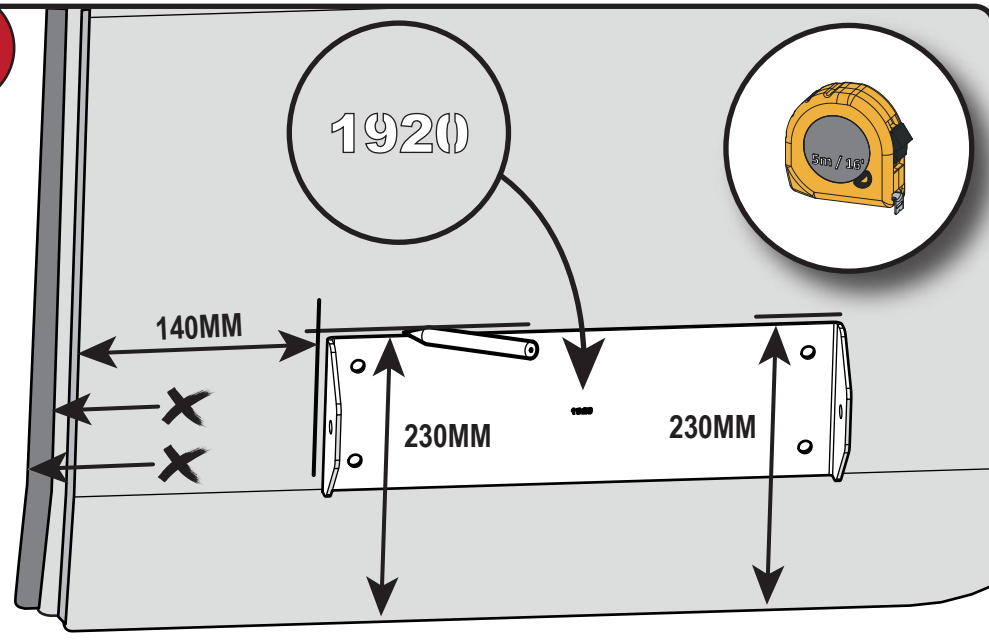


1920

140MM


230MM

230MM


09

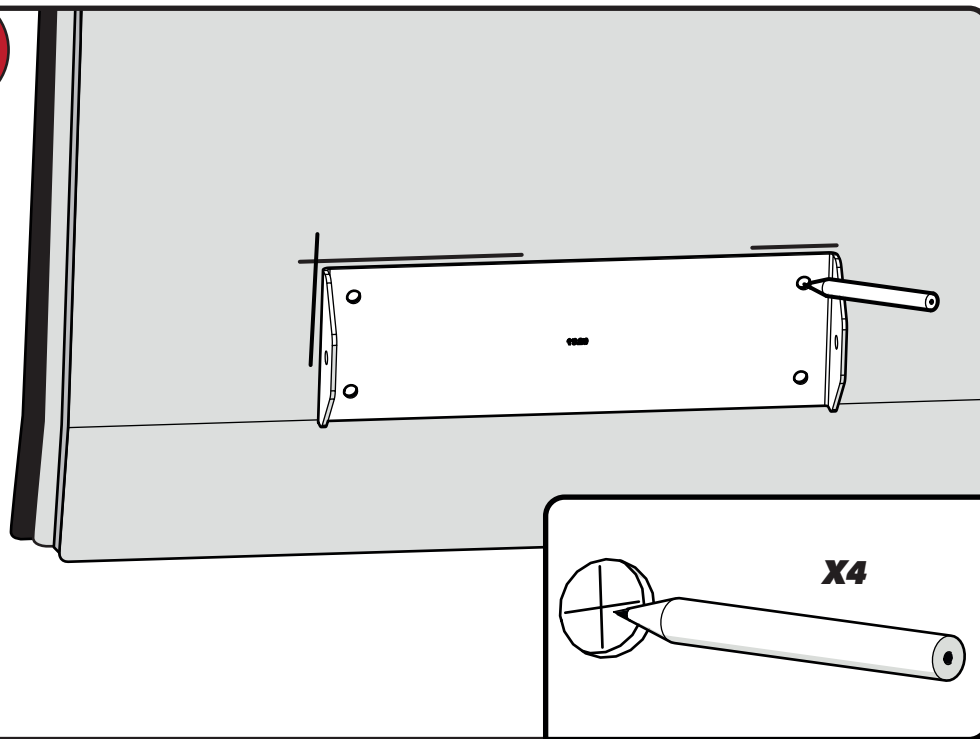


10

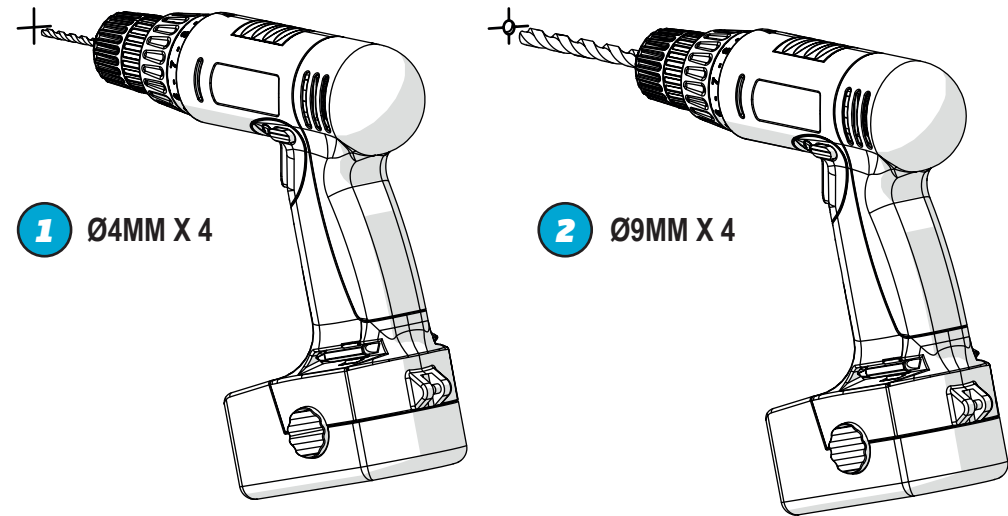


11

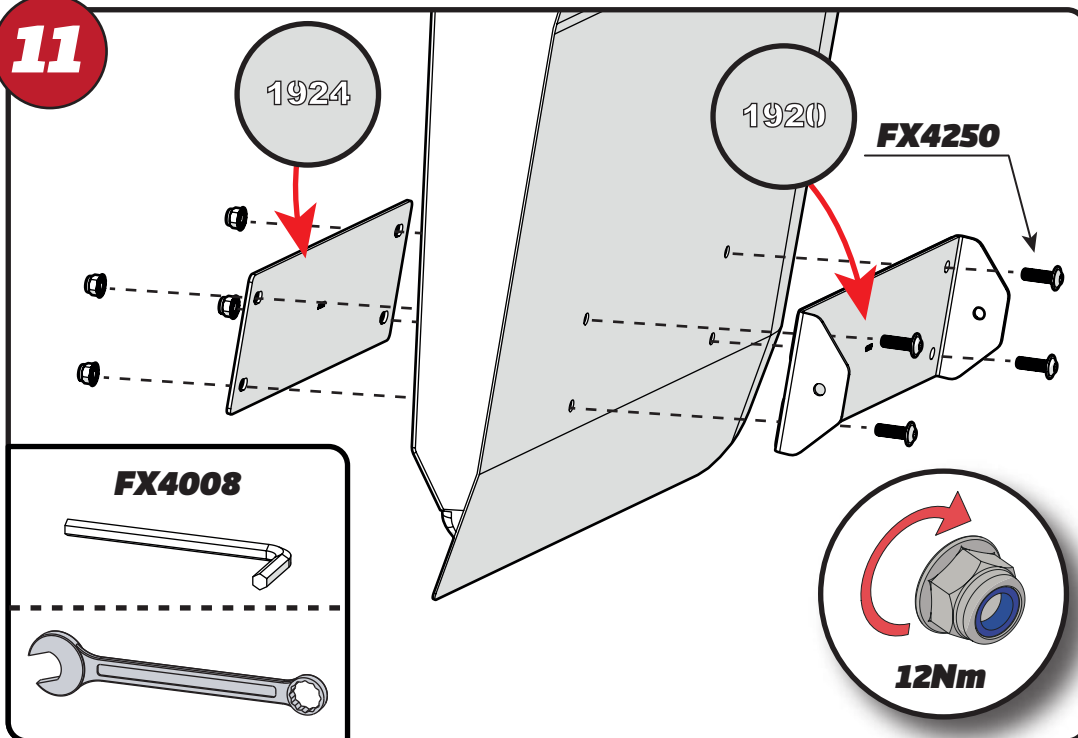


12

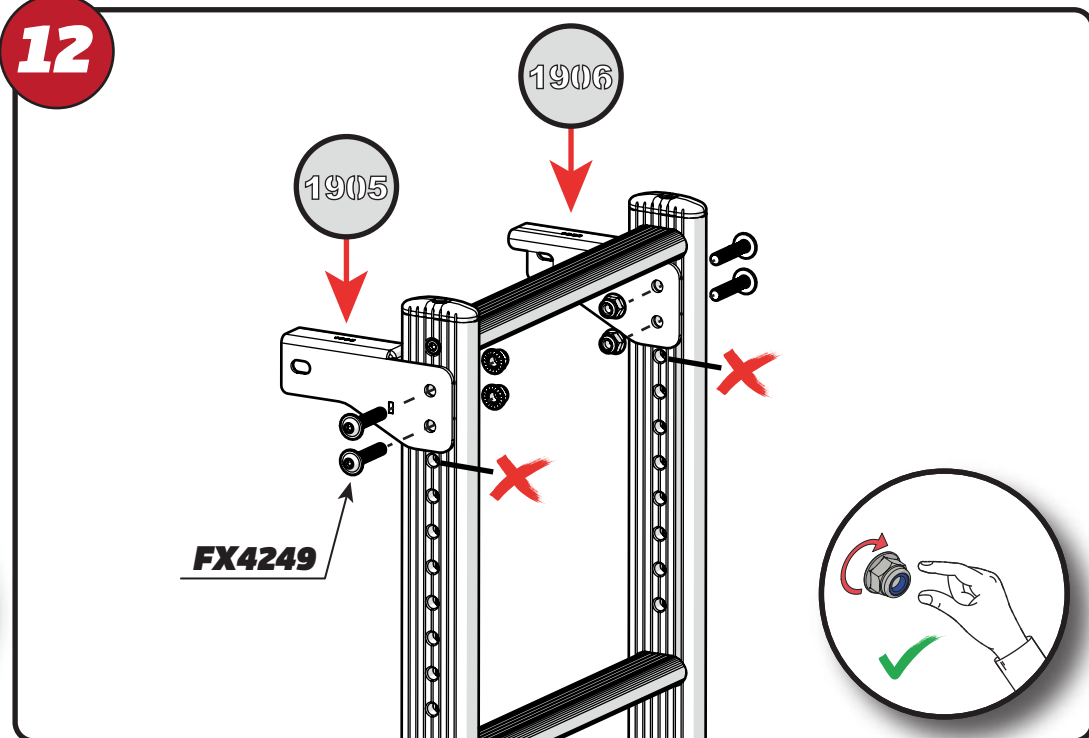


13

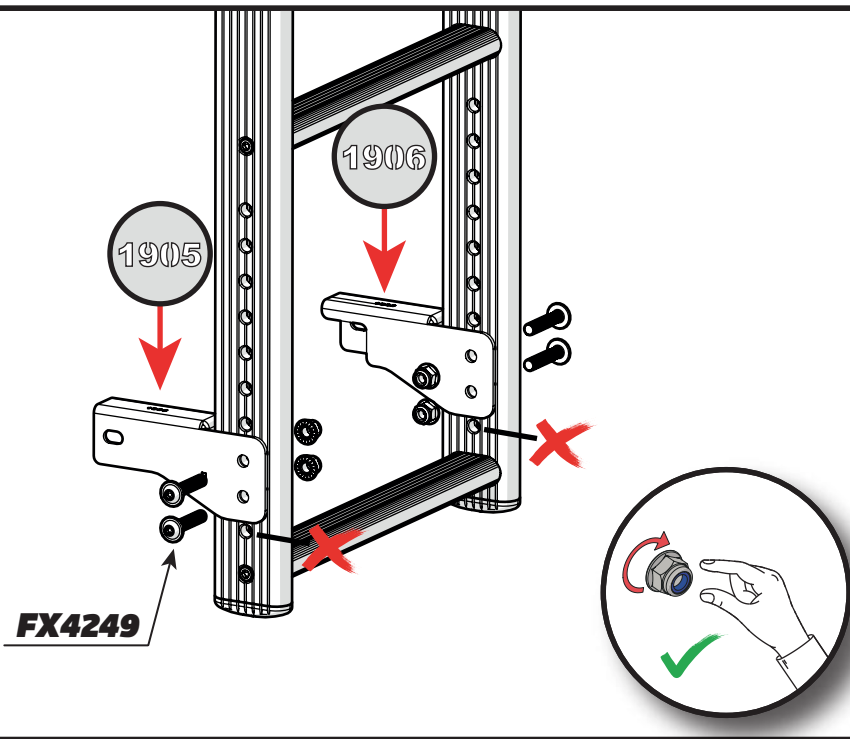


14

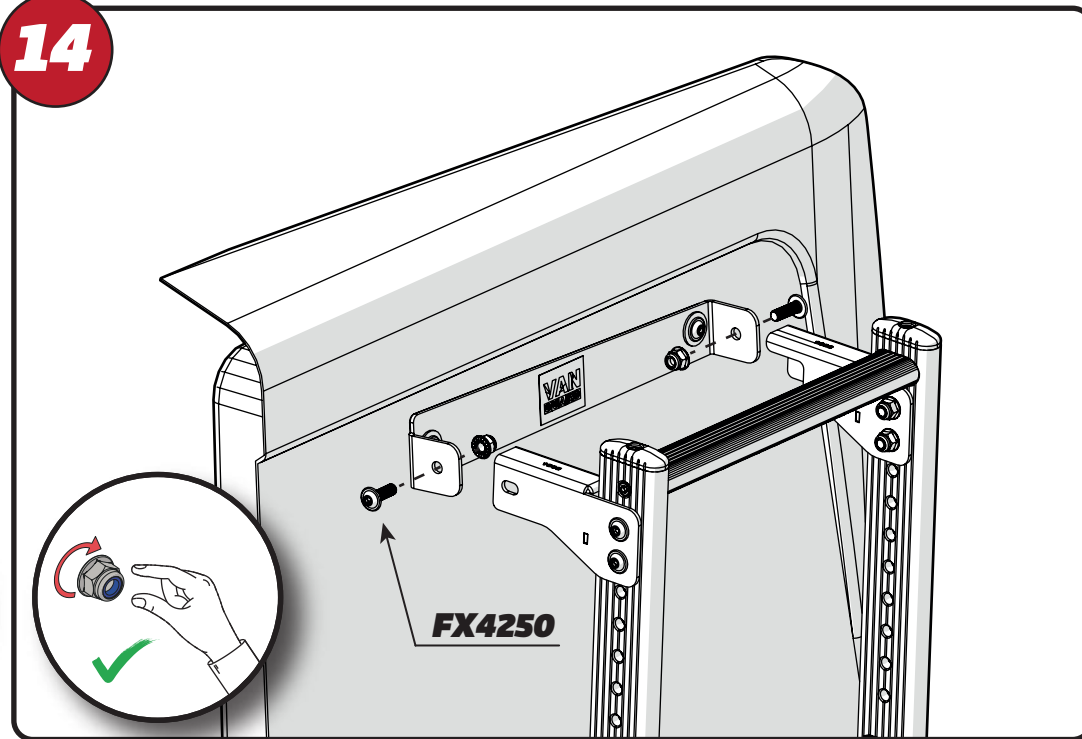


15

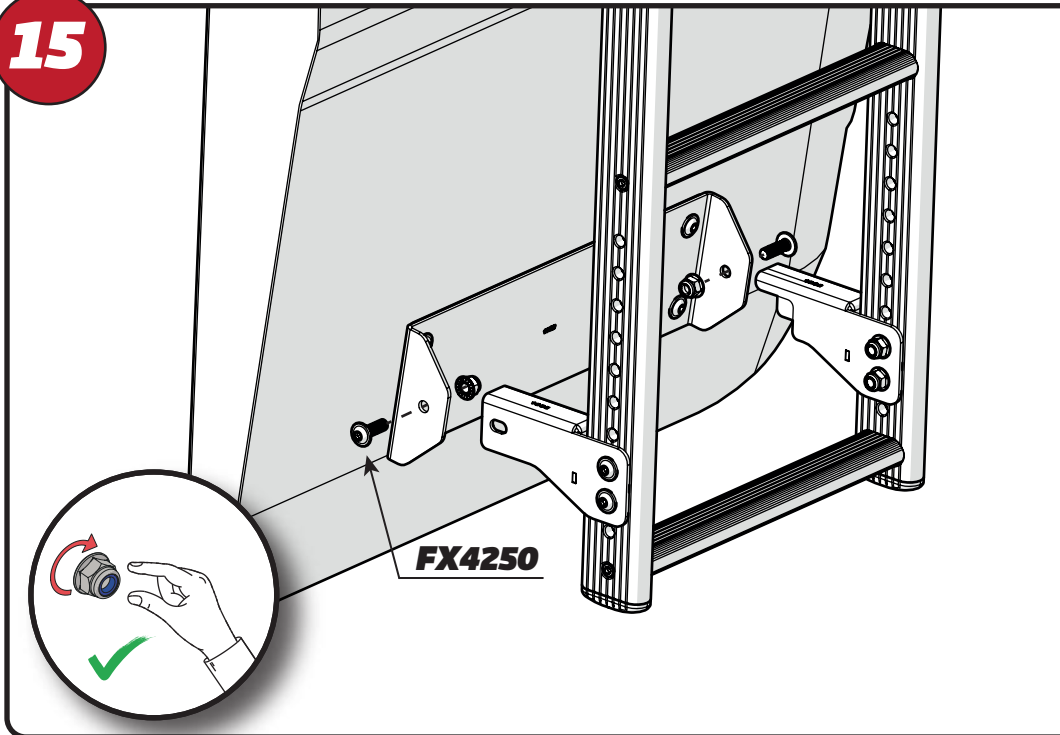



16

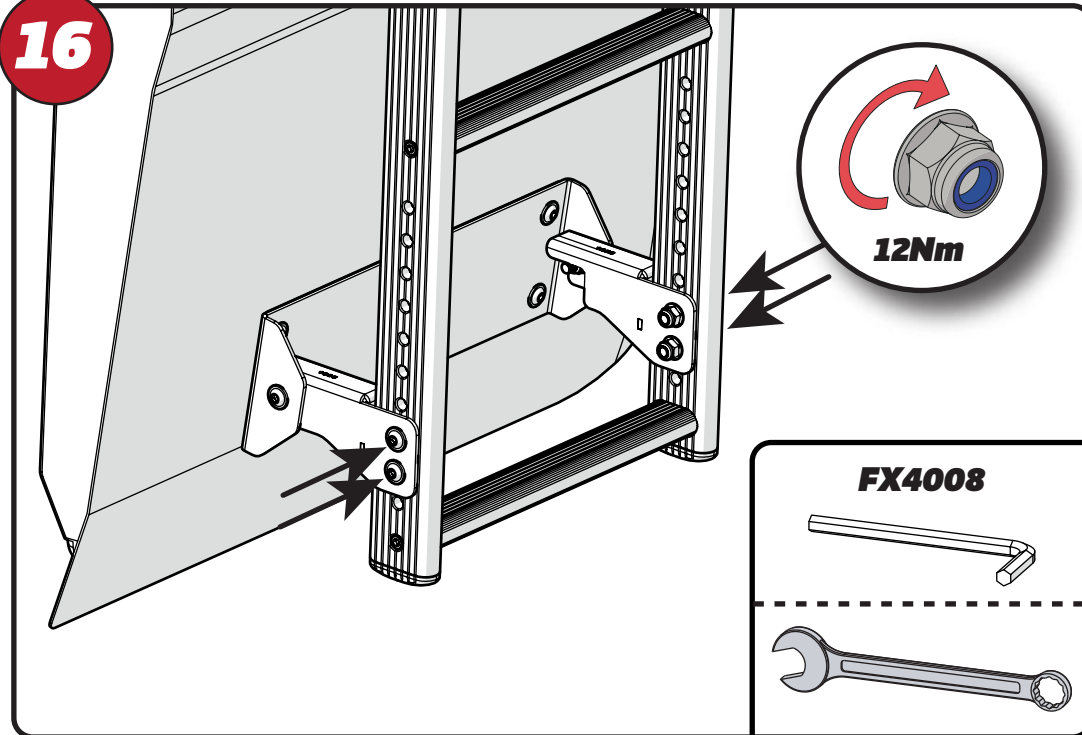


17

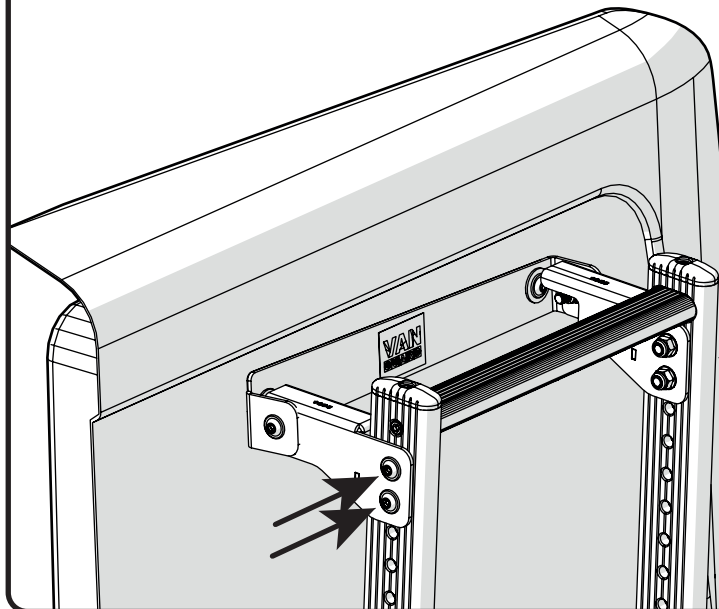


FX4008

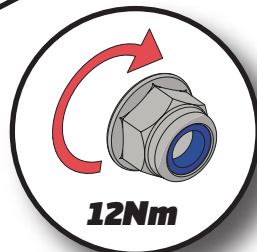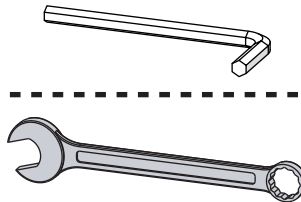


18

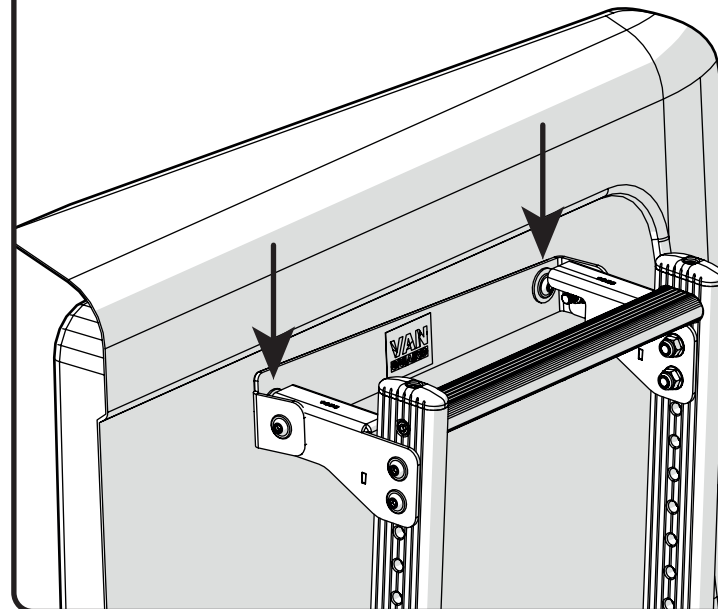


FX4008

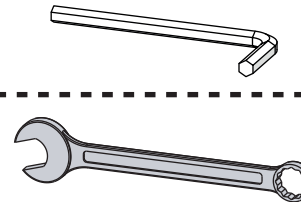


19

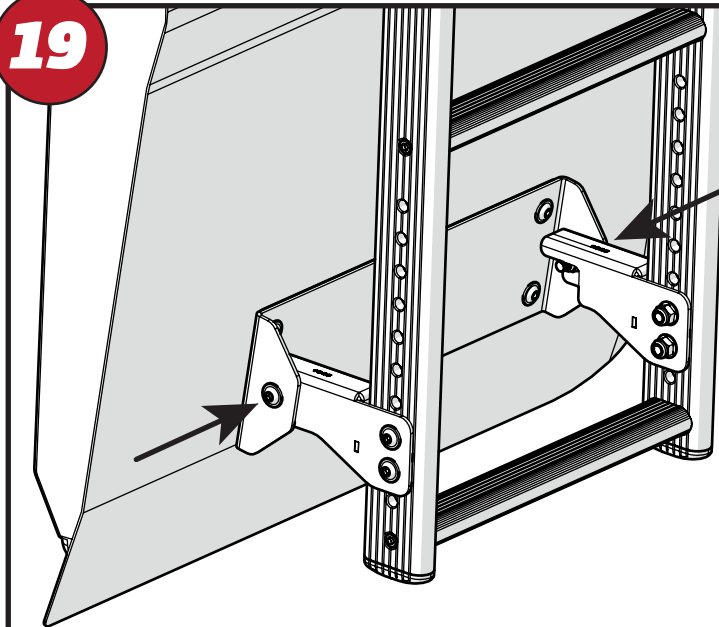


FX4008

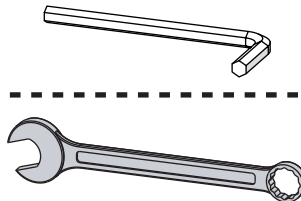


20

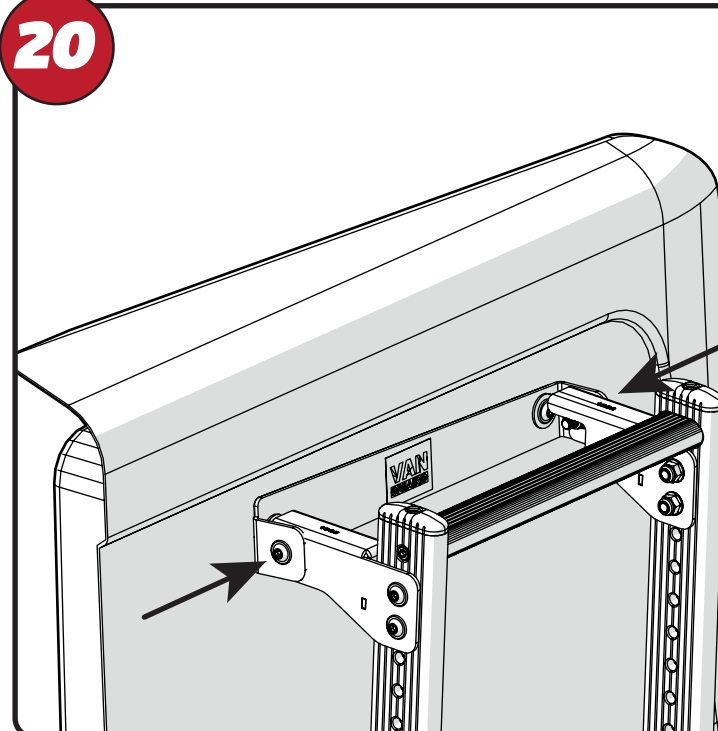


FX4008

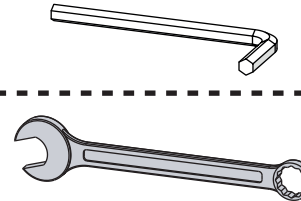

21

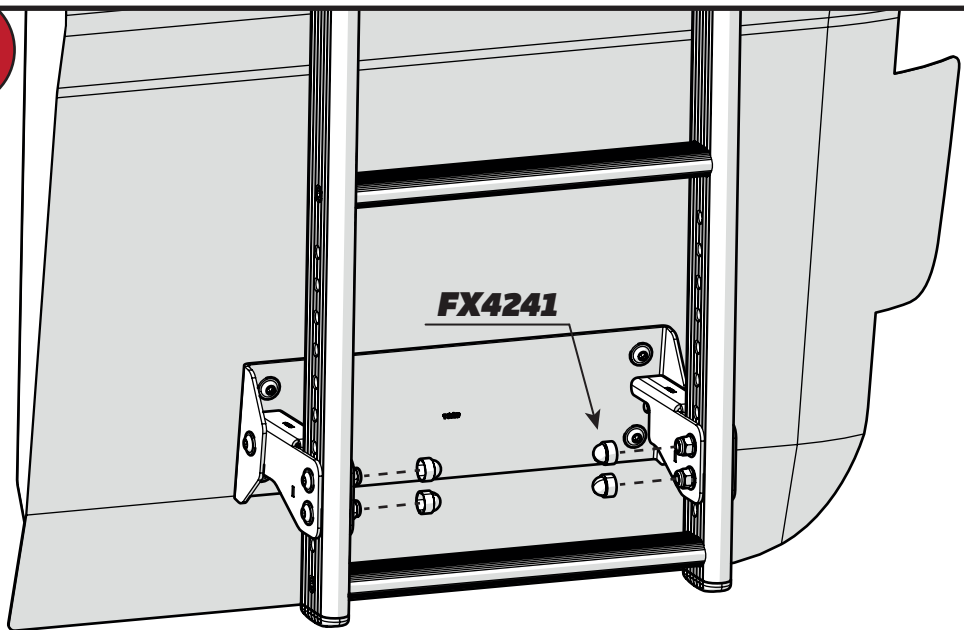

22

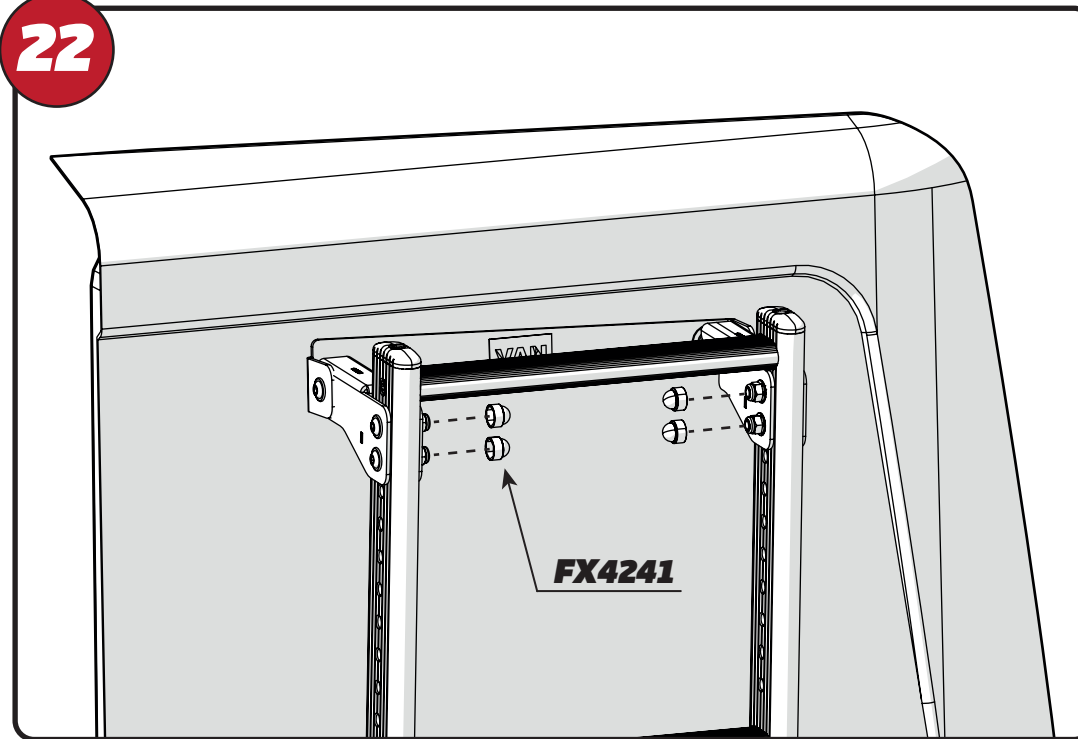

23

