


IN8403


ULTI Ladder

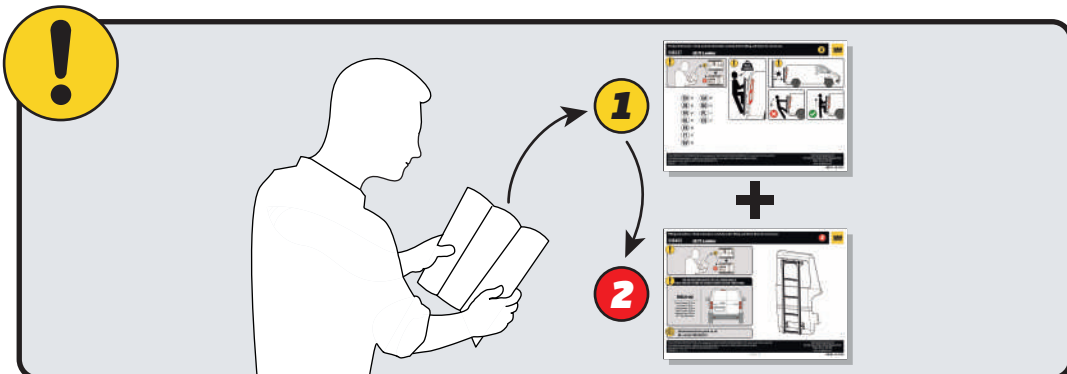


**THIS INSTRUCTION COVERS THE FOLLOWING MODELS
CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING**

VGL5-05

Ford Transit Custom: 2012 on
H1 - Twin Rear Doors

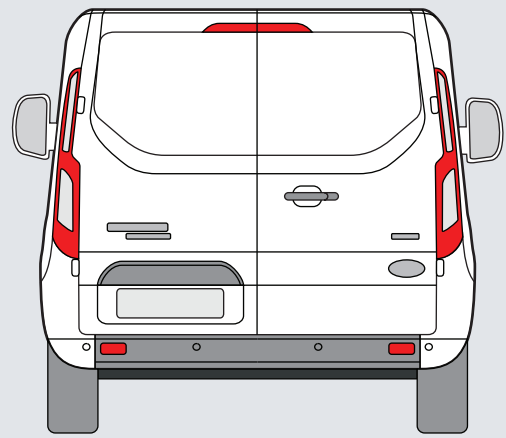


Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351

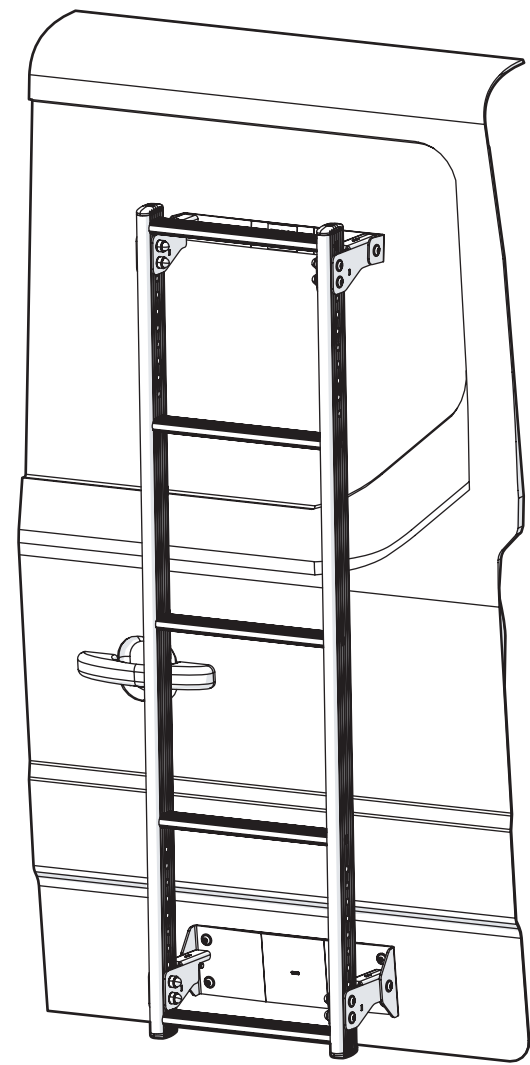


SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING

TOOLS REQUIRED


13MM X1

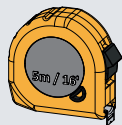

4MM X1

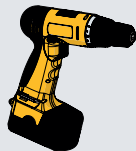


9MM X1

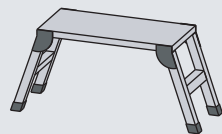

X1




AS3592 X1

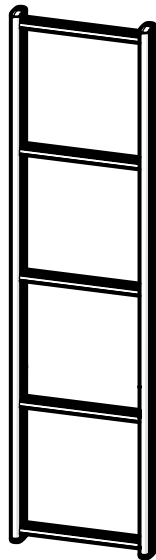


FX4249 X8

(M8X40)



FX4250 X10

(M8X25)




ME1911 X1




FX4240 X18


(M8)




FX4241 X8




ME1910 X1

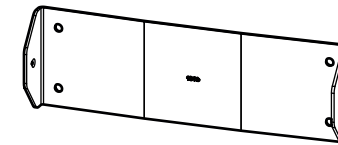


MA6200 X3



FX4252 X2

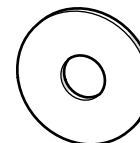


ME1918 X1

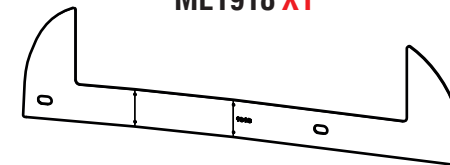


FX4008 X1




ME1906 X2

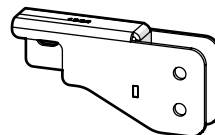


ME1905 X2

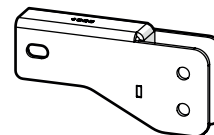


ME1917 X1

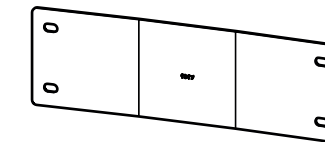


01

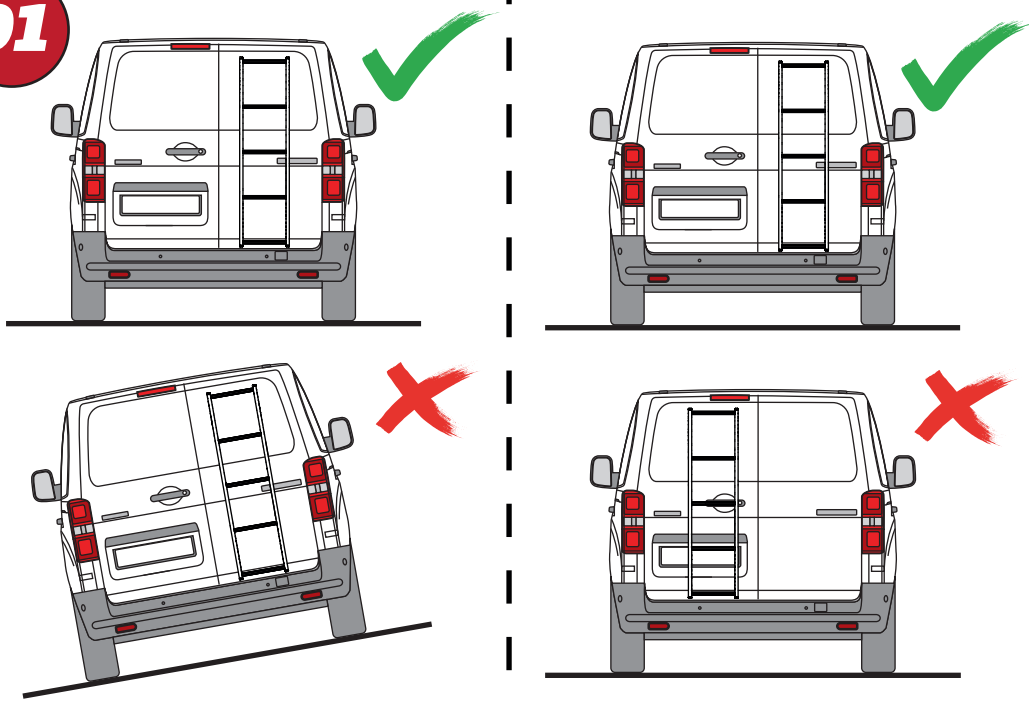


02

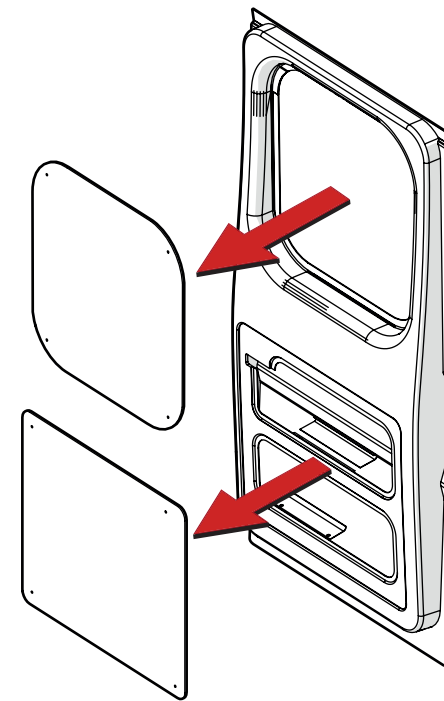

03

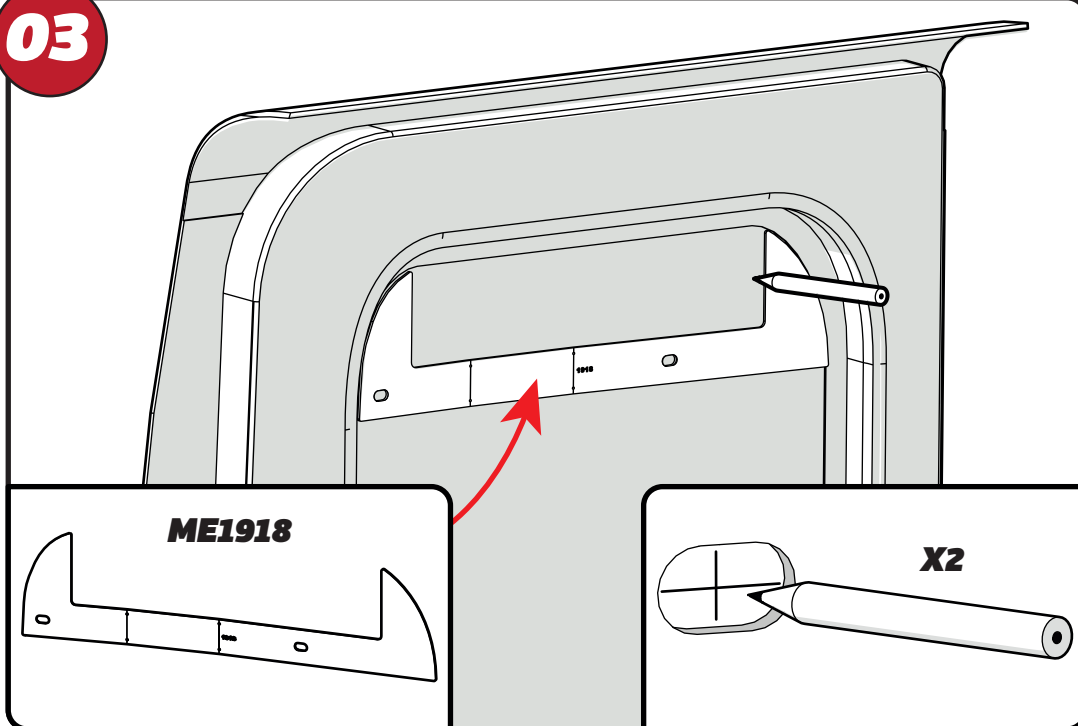


04

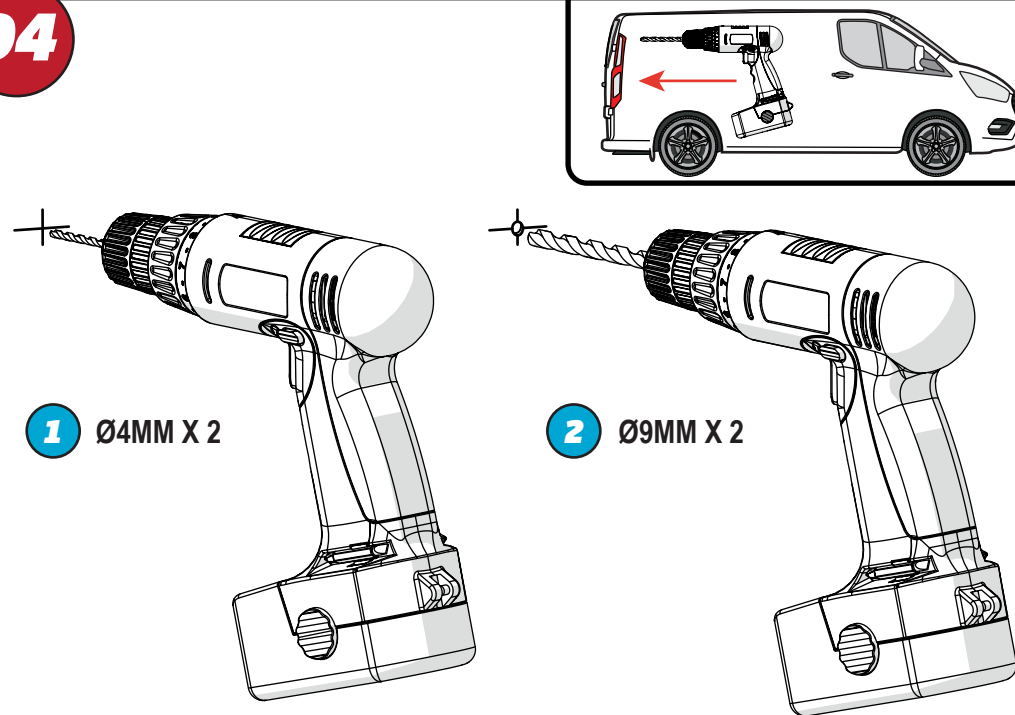

05


MA6200

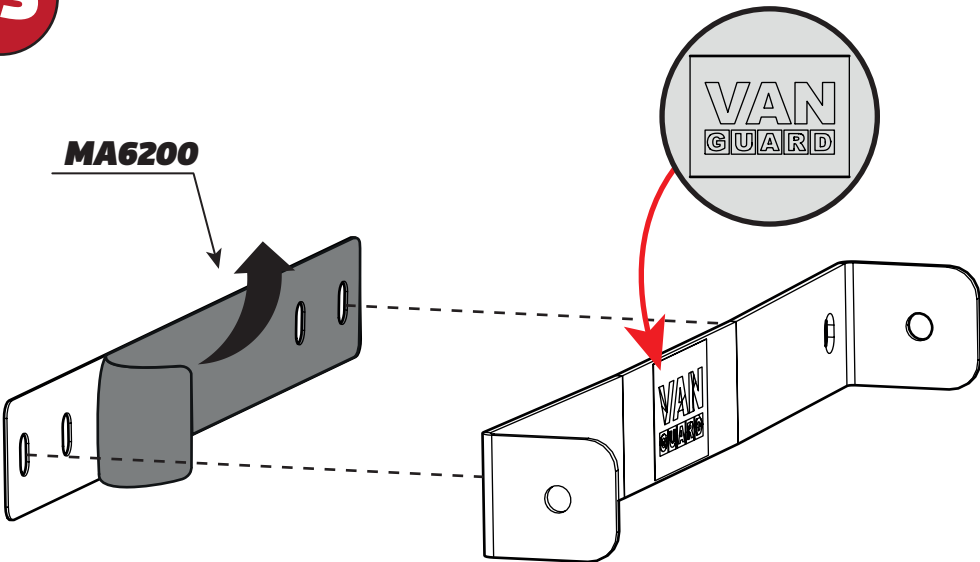

06


FX4250

FX4252

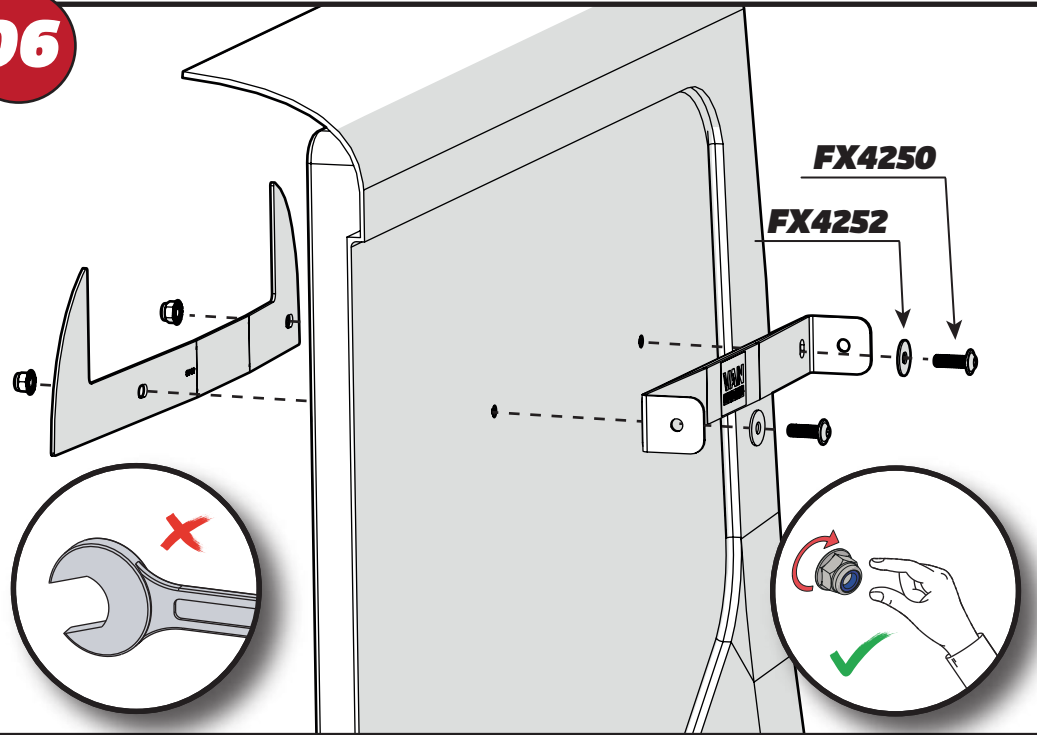


07

MA6200


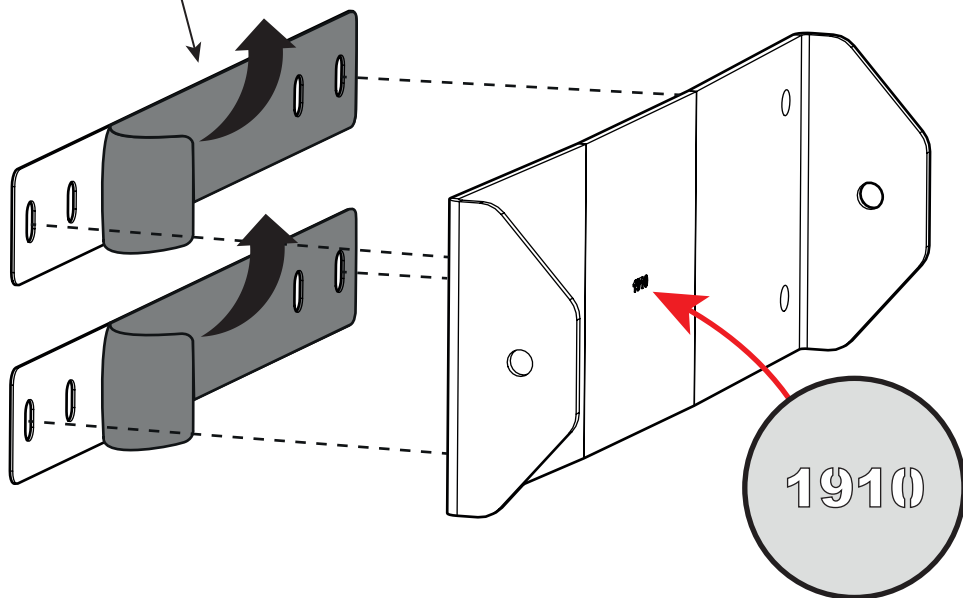


08




1910

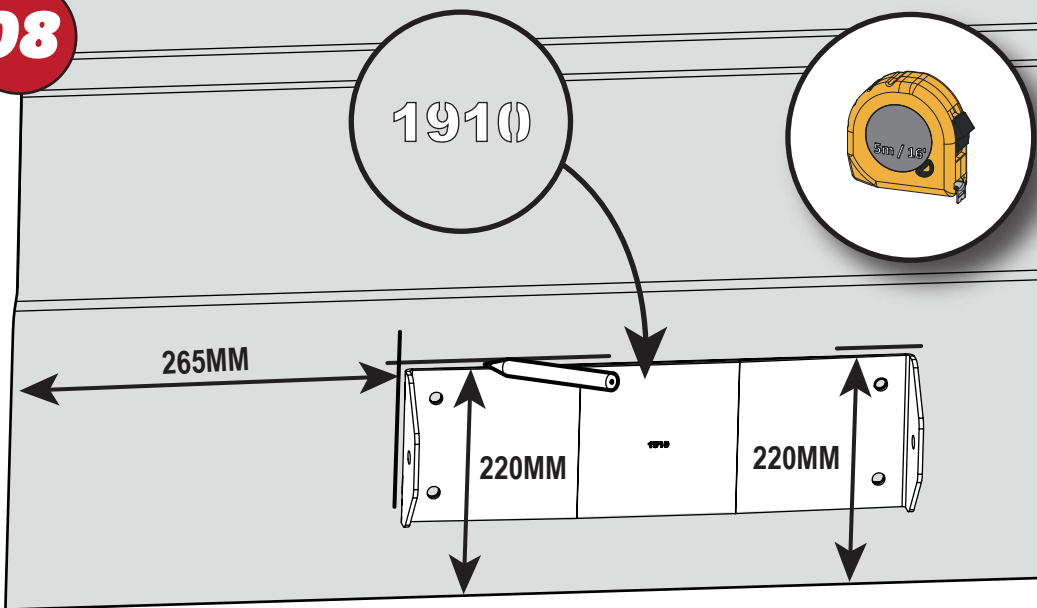



09

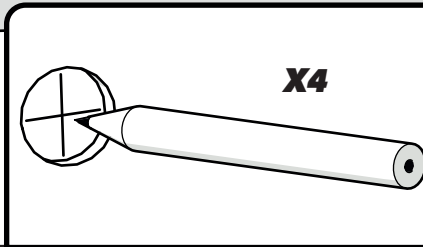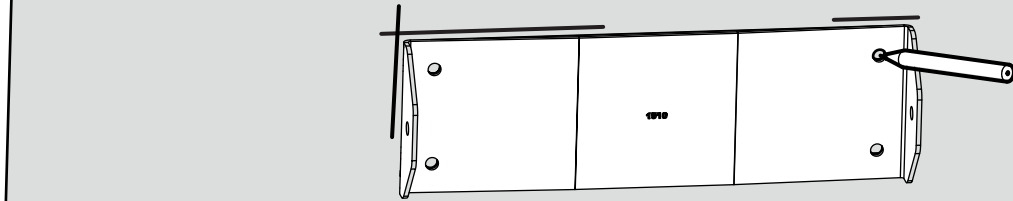


10

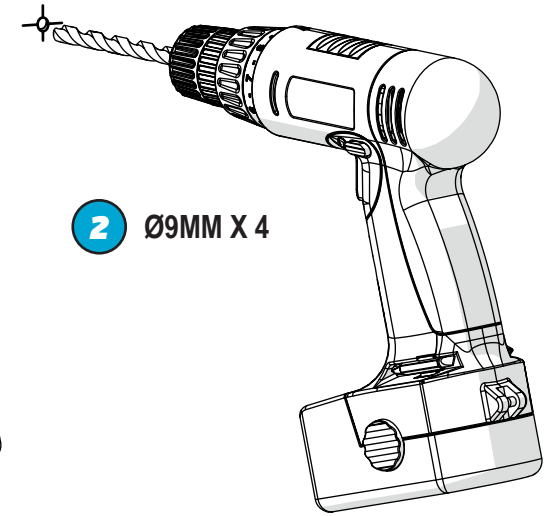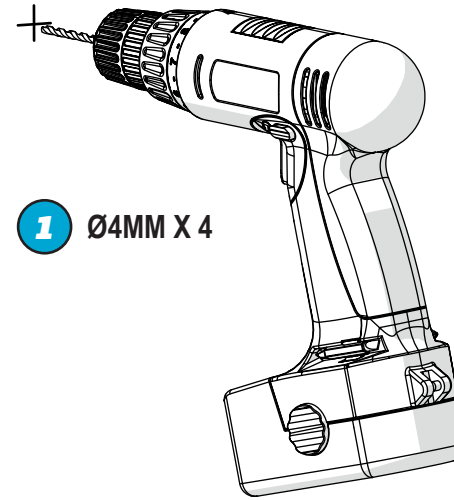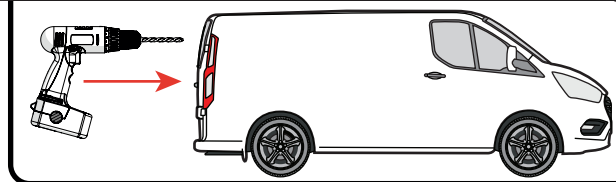


11

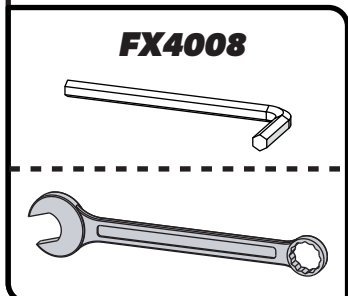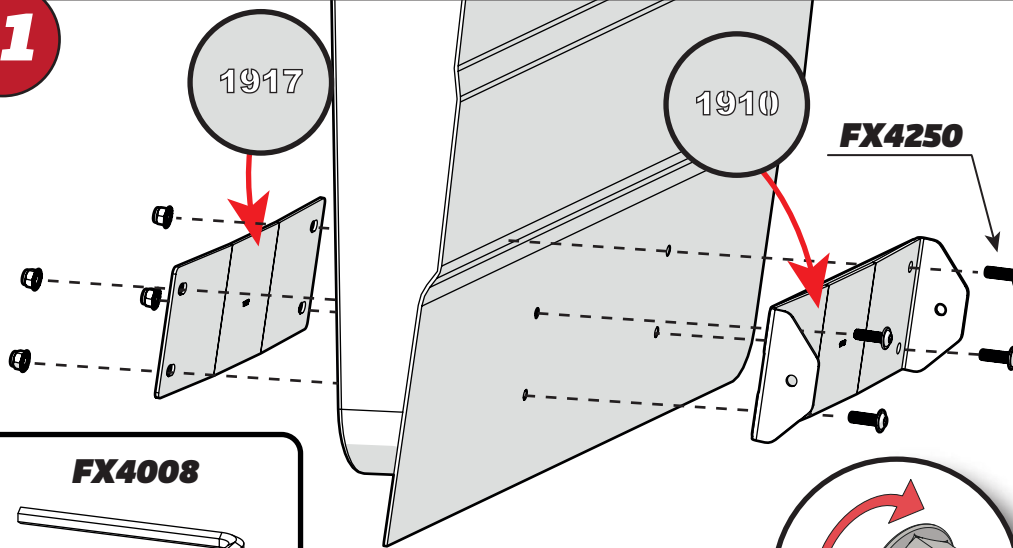


12

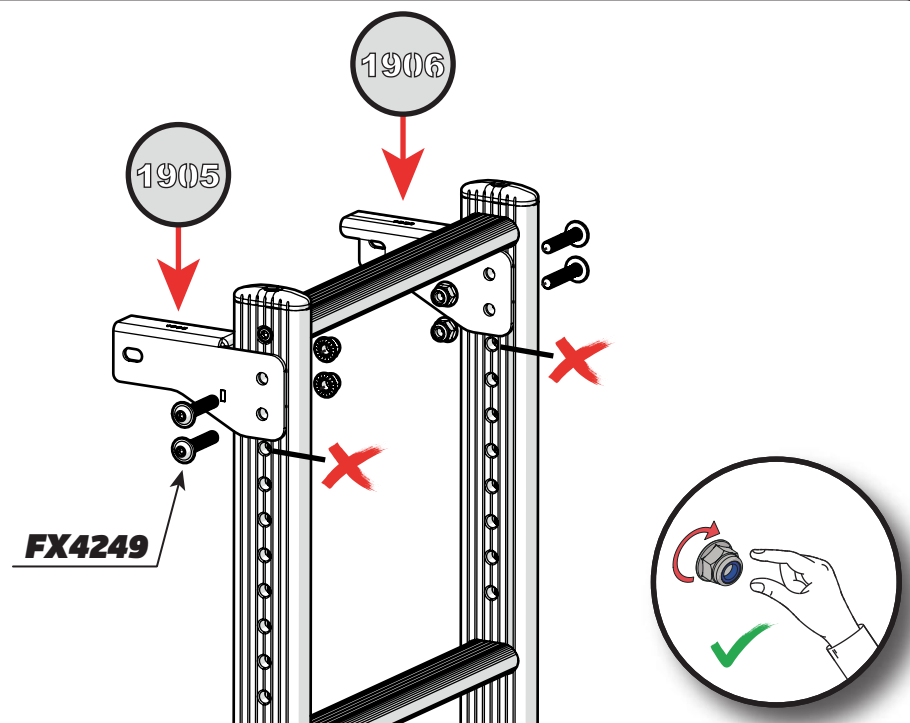


13

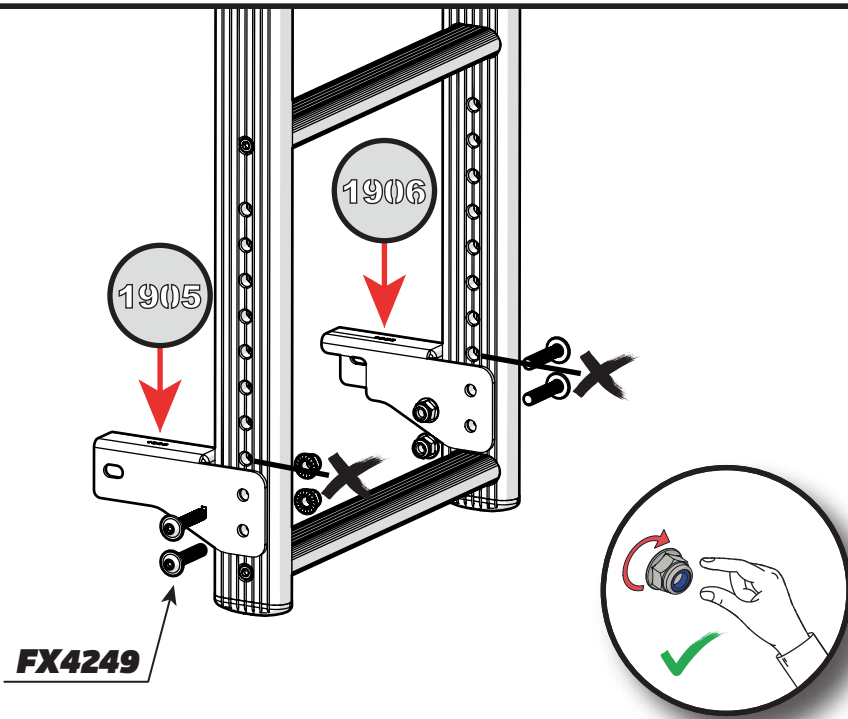


14

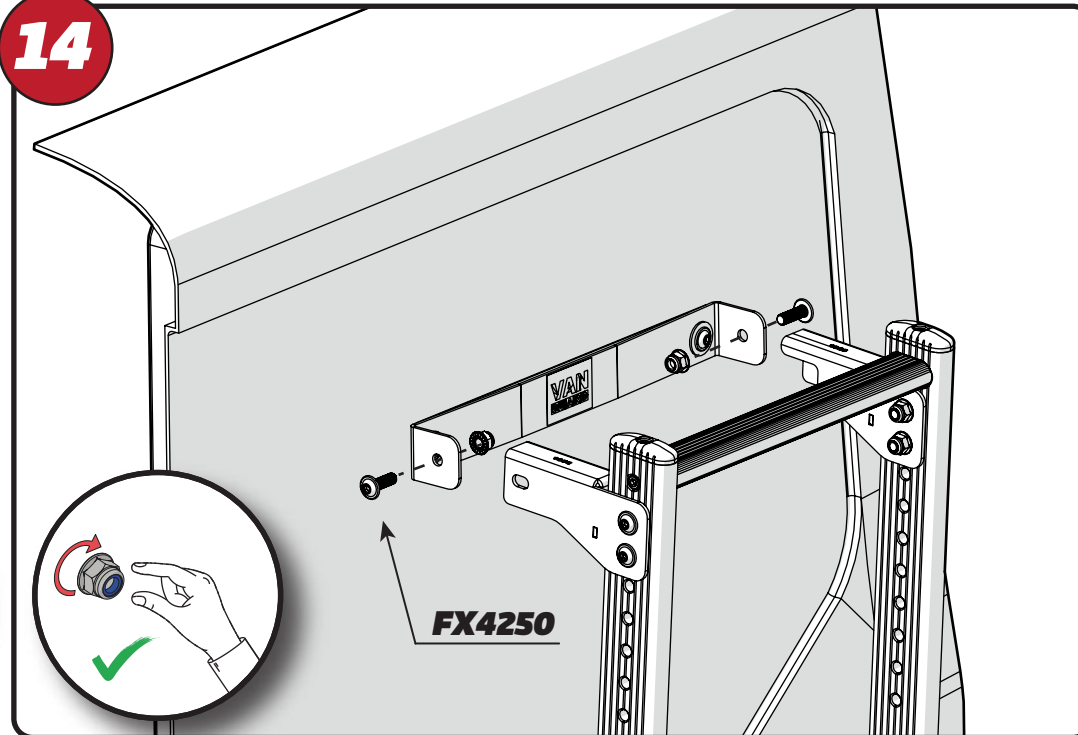


15

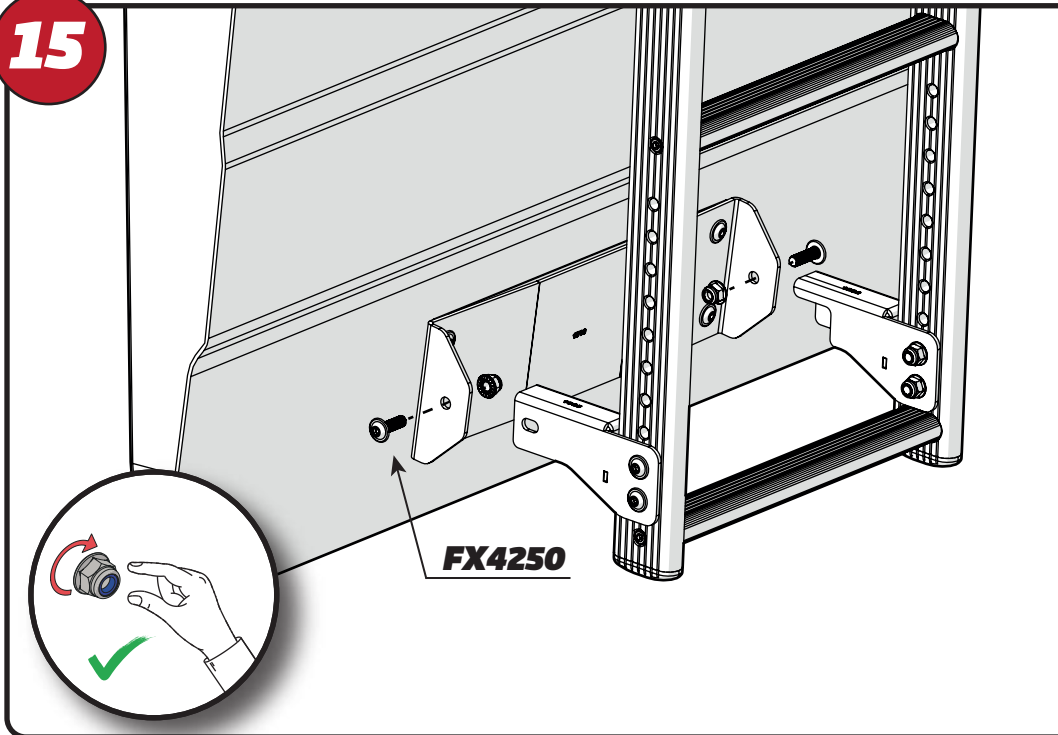


16

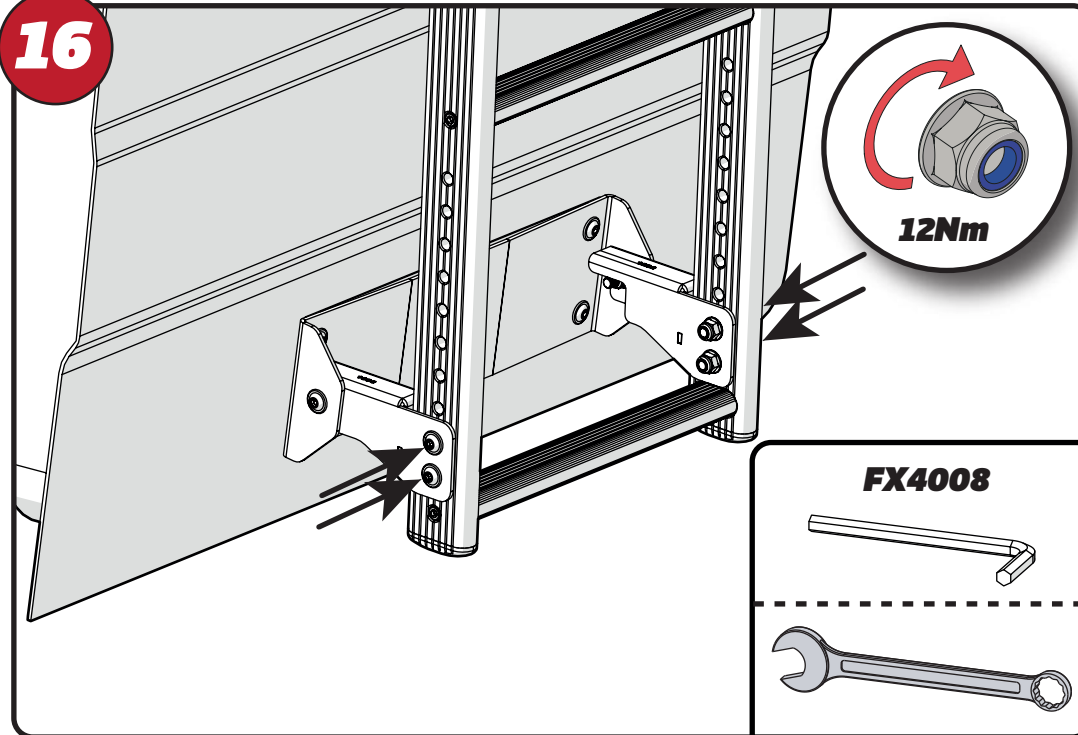


17

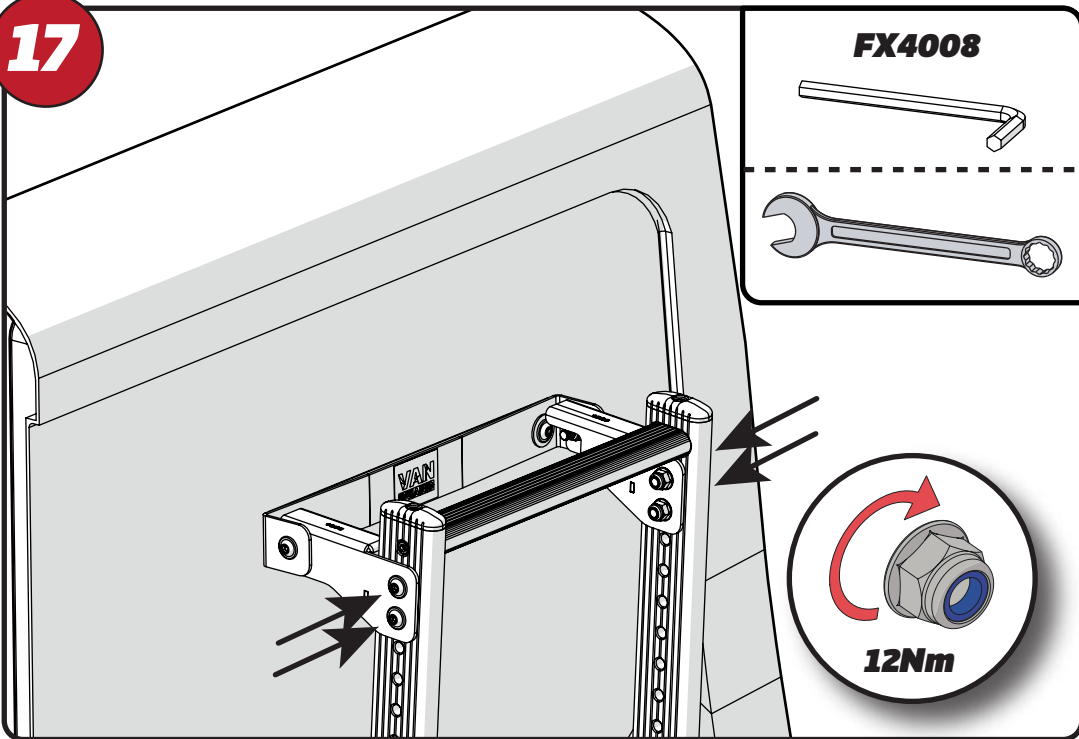


18

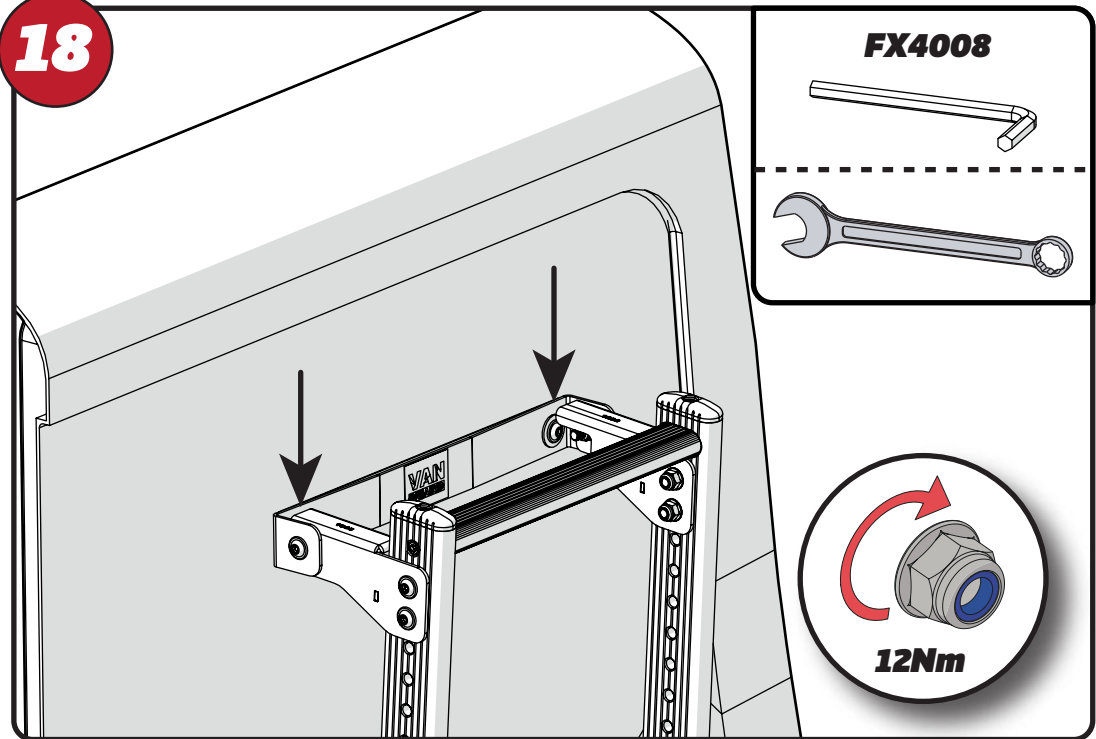


19

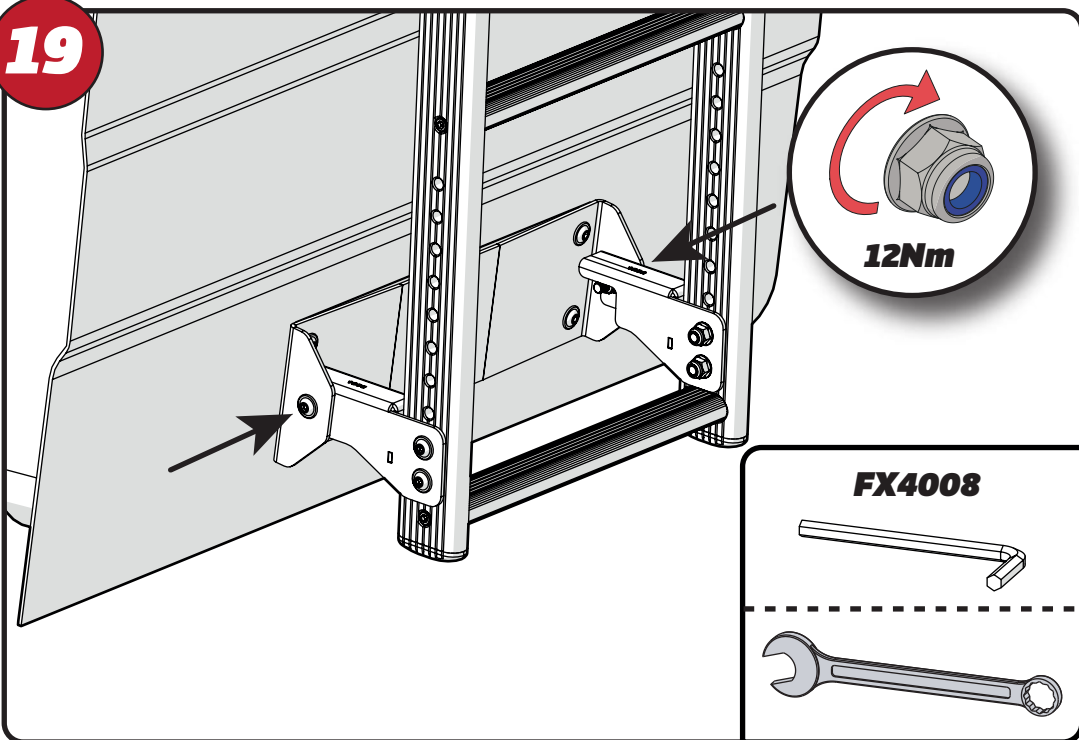


20

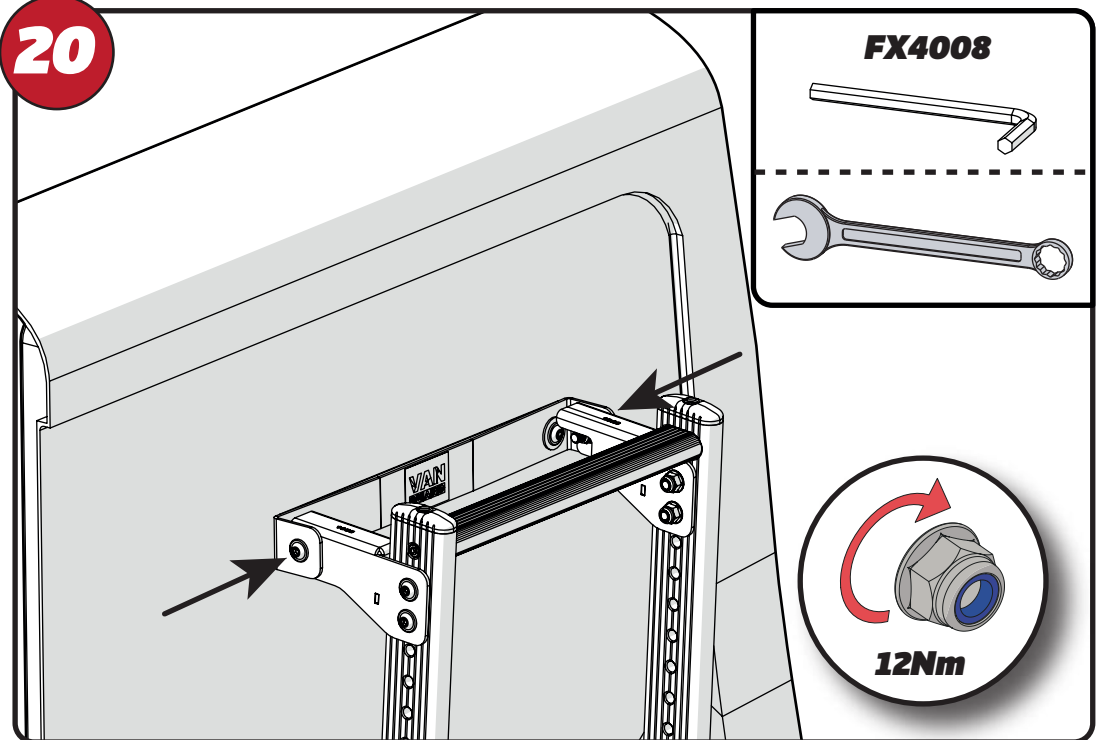

21

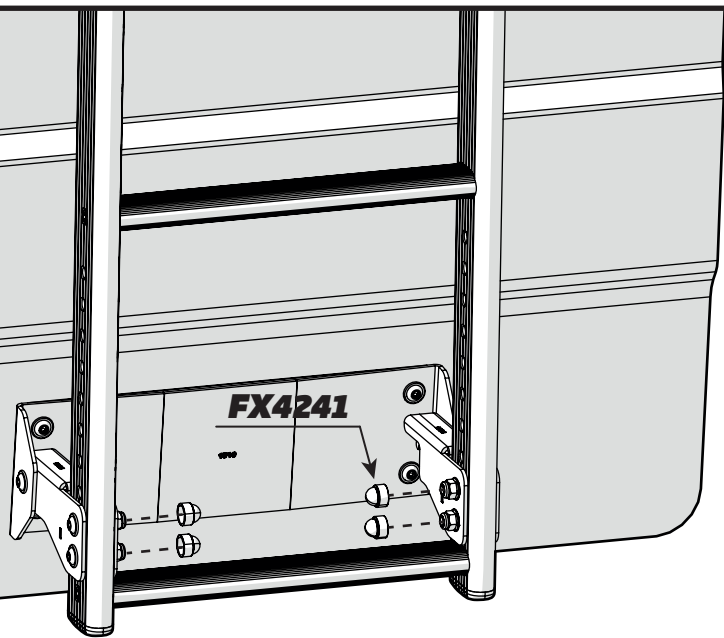

22

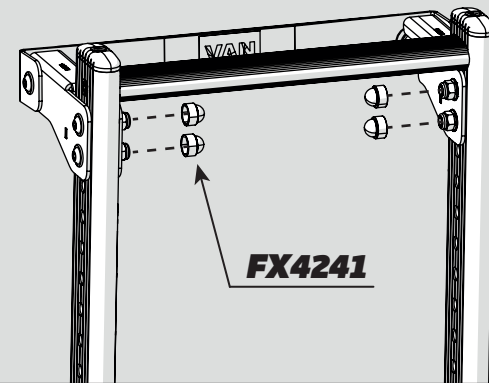

23

