


# IN8404


## ULTI Ladder

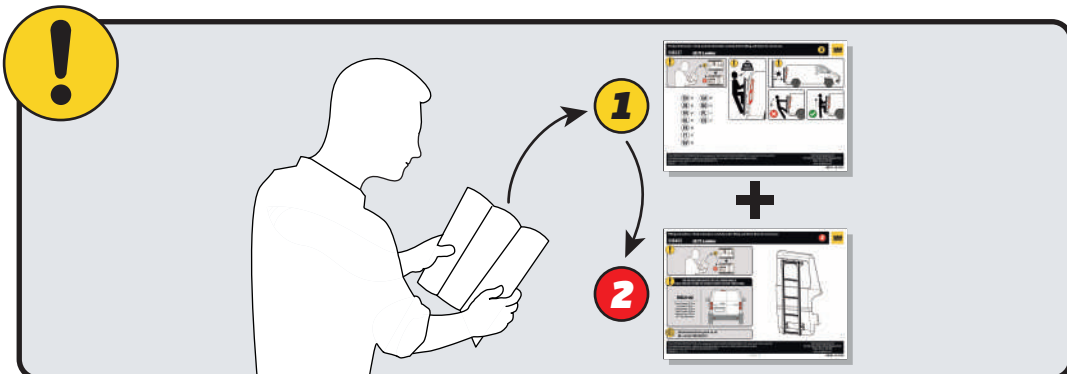


**! THIS INSTRUCTION COVERS THE FOLLOWING MODELS  
CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING**

### VGL5-06

Volkswagen T5: 2002-2015  
Volkswagen T6: 2015 on  
H1 - Twin Rear Doors

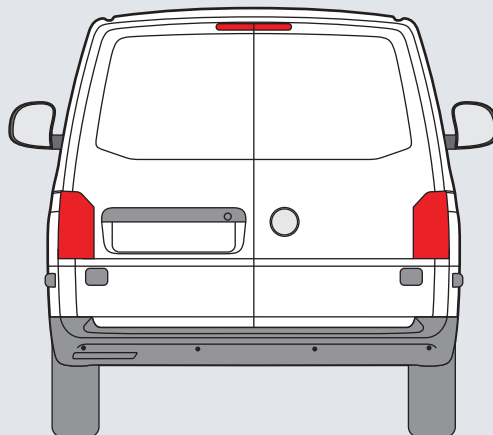


**? Customercare@van-guard.co.uk  
UK +44 (0) 1392 368 351**

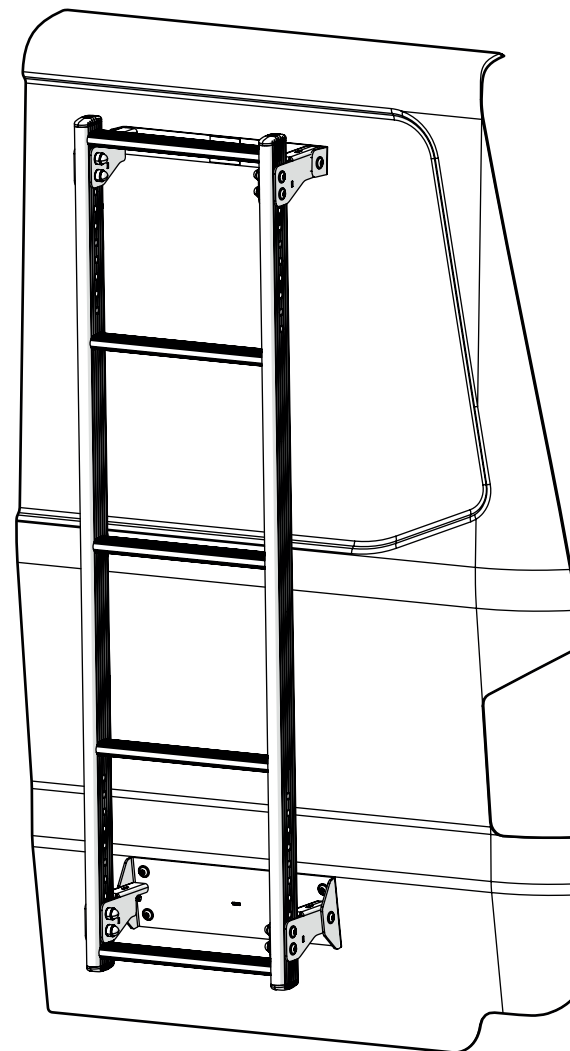


**SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING**

**TOOLS REQUIRED**


**13MM X1**

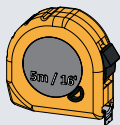

**4MM X1**

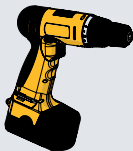


**9MM X1**

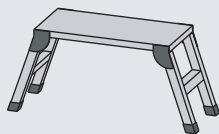

**X1**




**AS3592 X1**

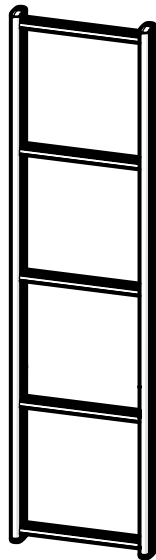


**FX4249 X8**

(M8X40)



**FX4250 X10**

(M8X25)



**ME1944 X1**




**FX4240 X18**


(M8)




**FX4241 X8**




**ME1920 X1**

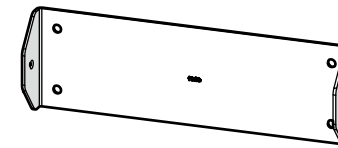


**MA6200 X3**



**FX4252 X2**

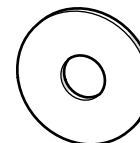


**ME1927 X1**




**FX4008 X1**




**ME1906 X2**

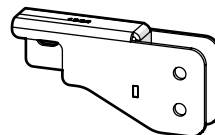


**ME1905 X2**

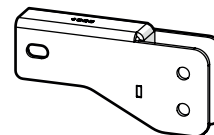


**ME1924 X1**

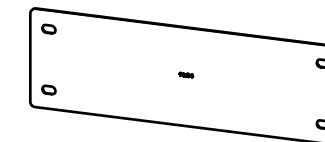


01

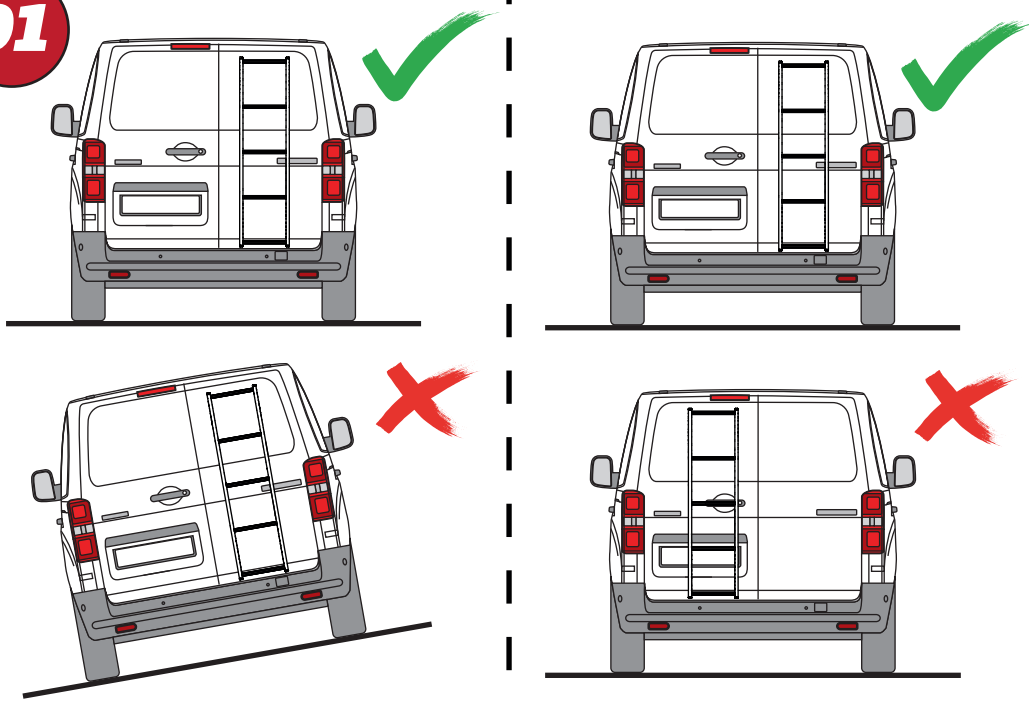


02

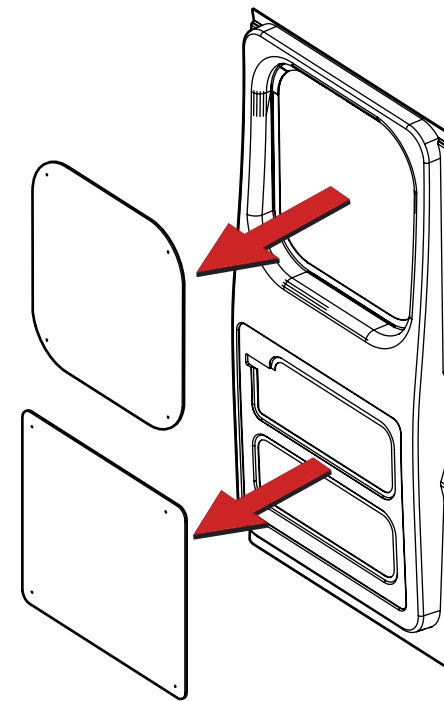

03

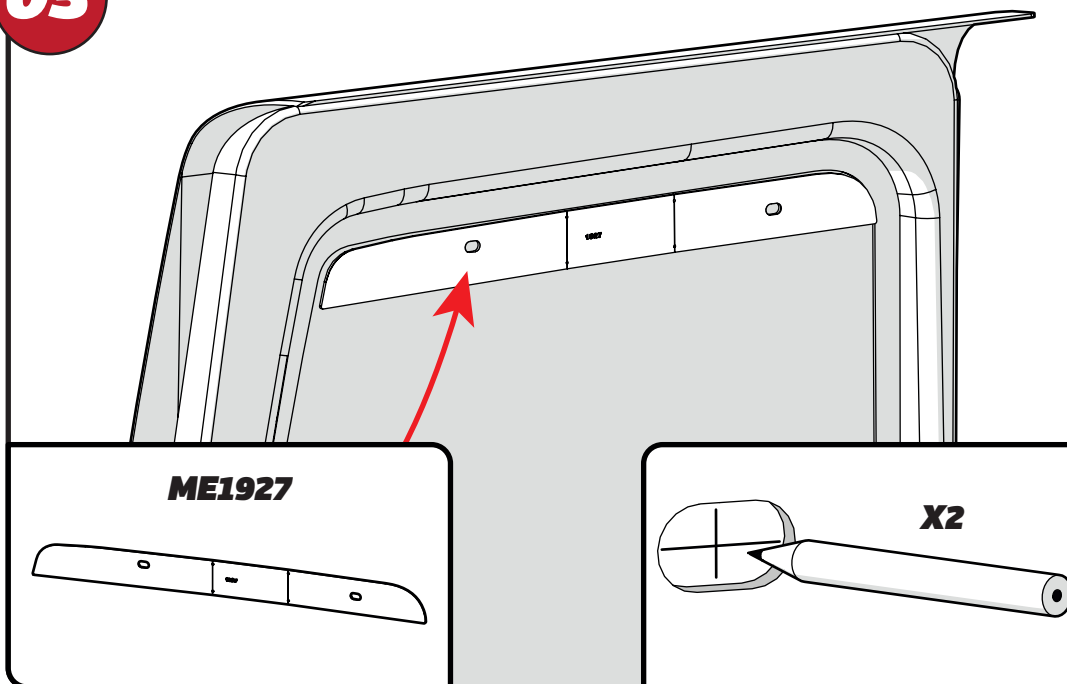


04

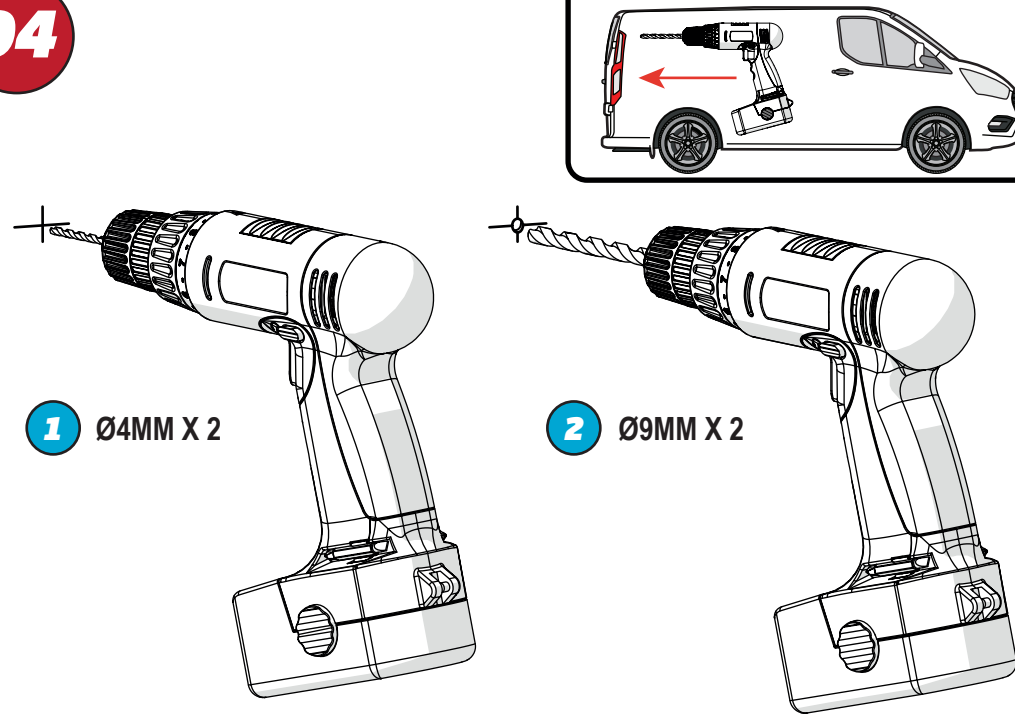

05


MA6200

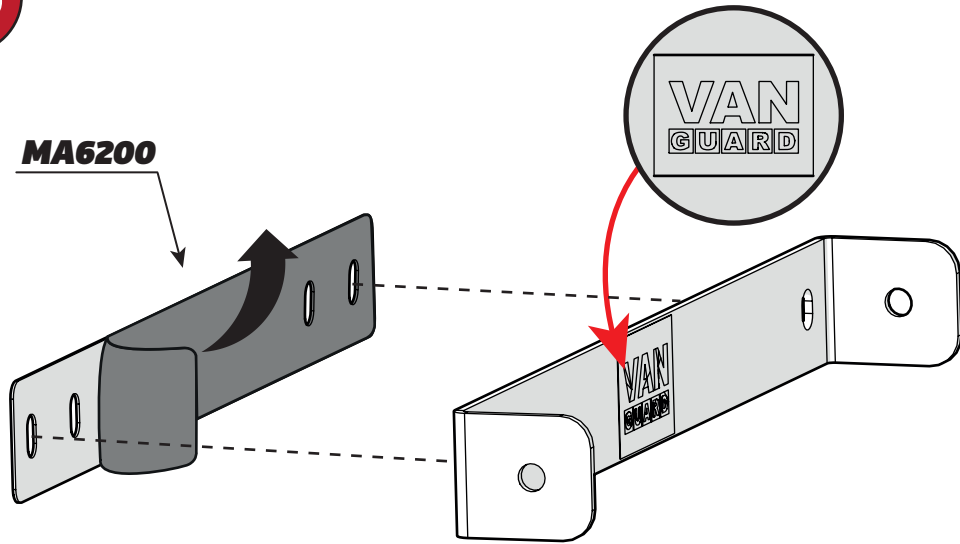

06


FX4250

FX4252

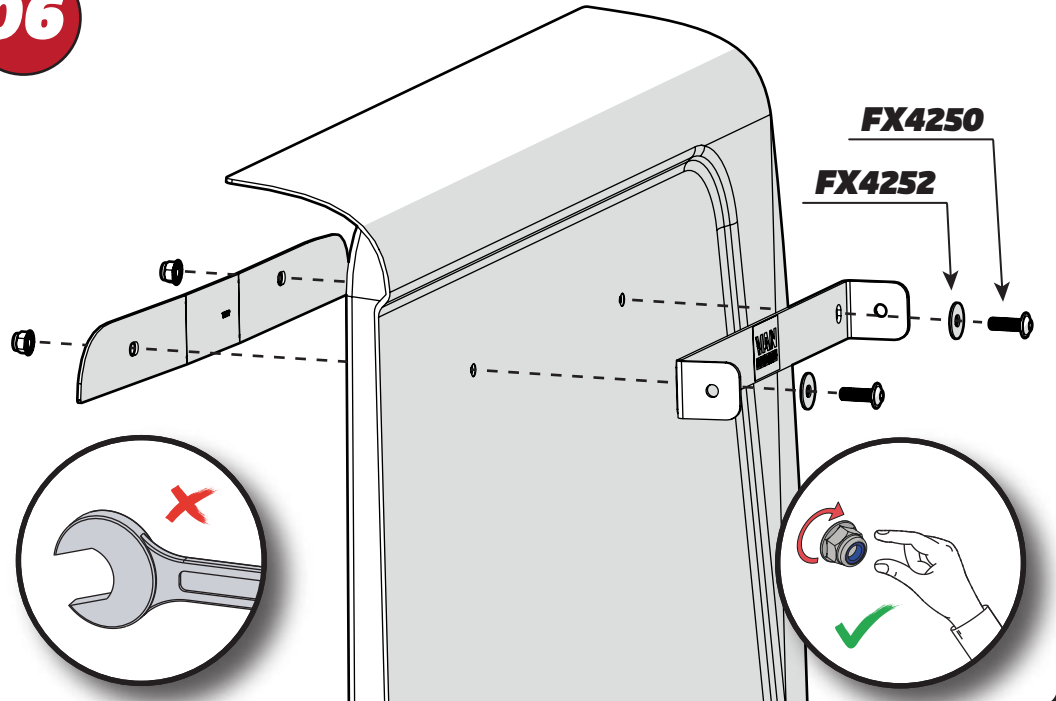



07

MA6200

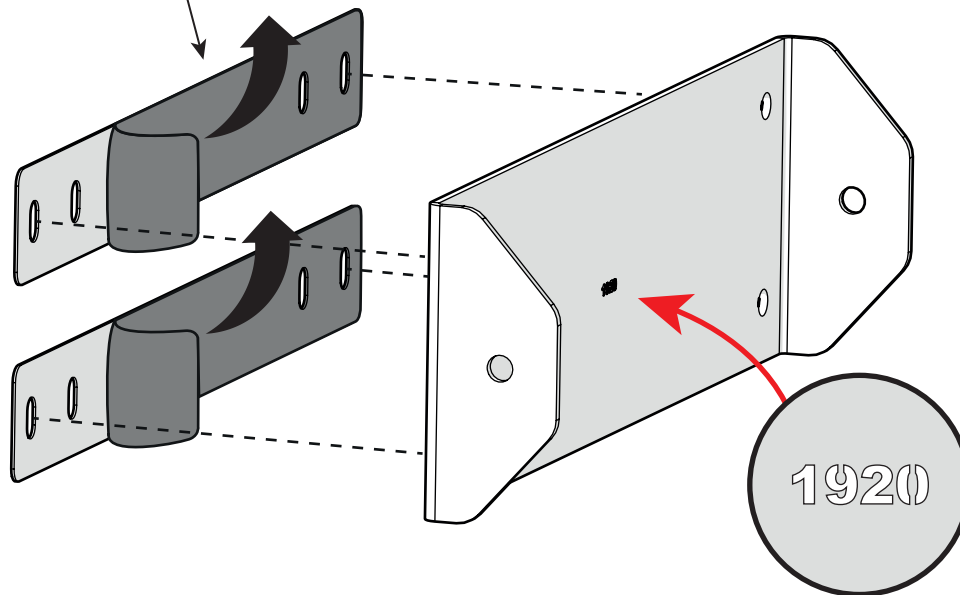


08




1920

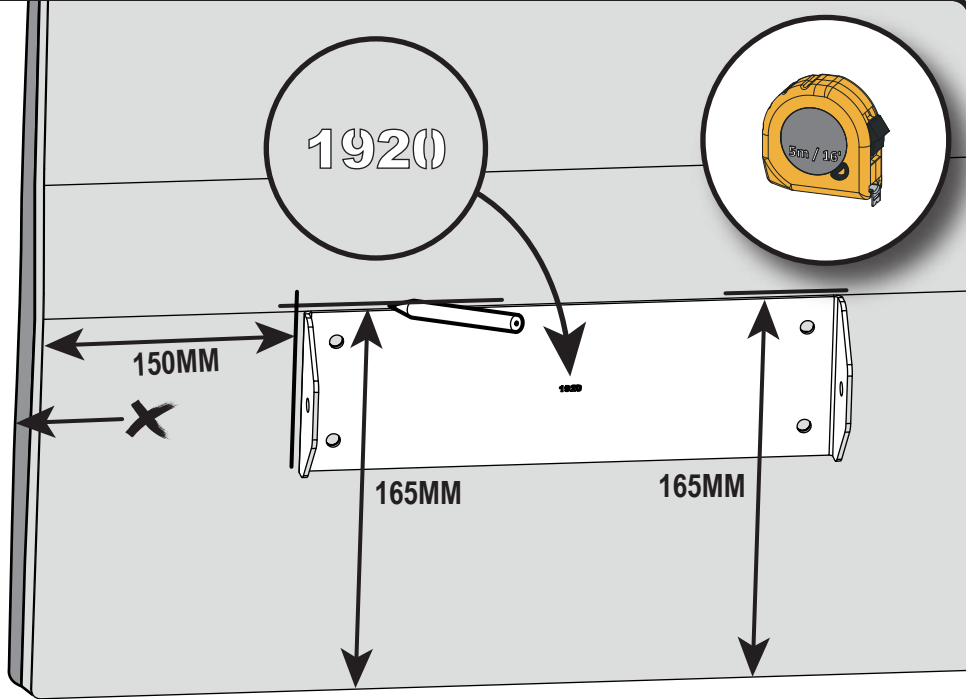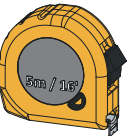


09

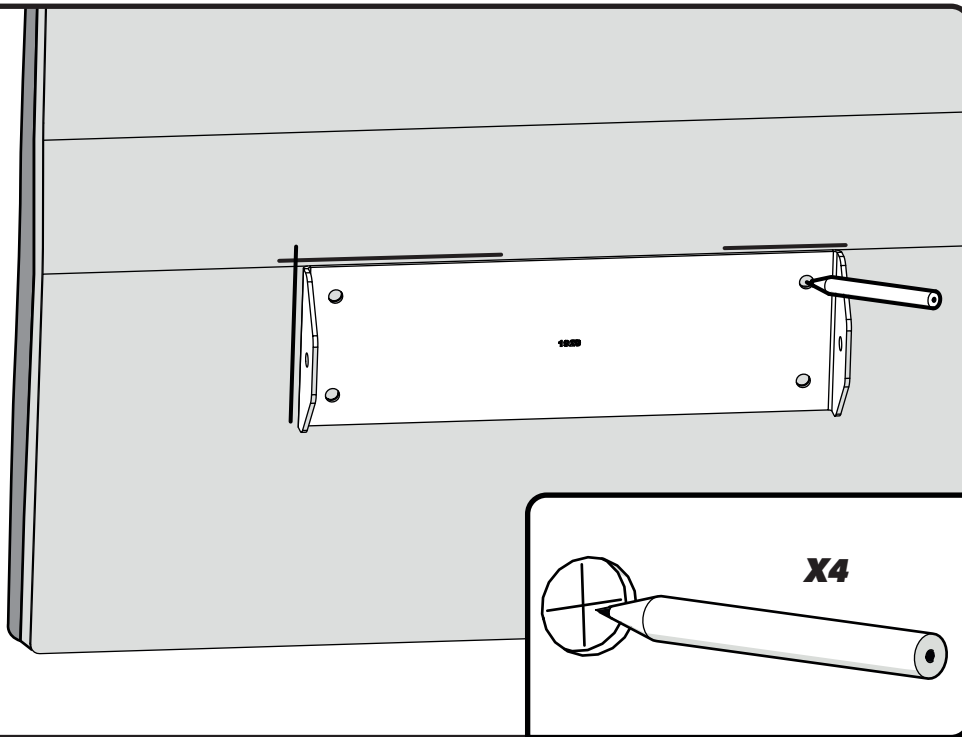


10

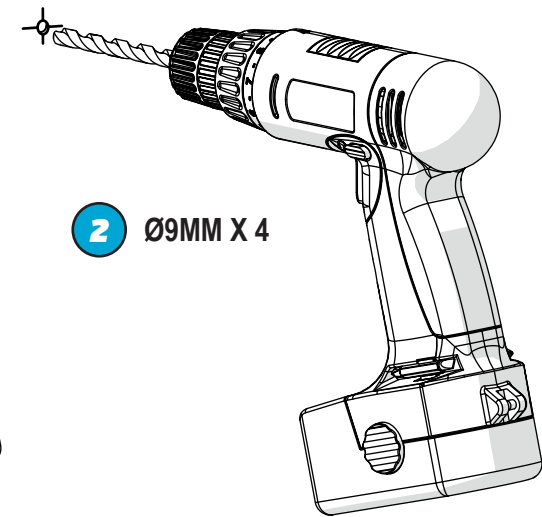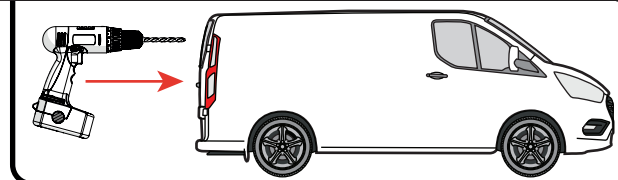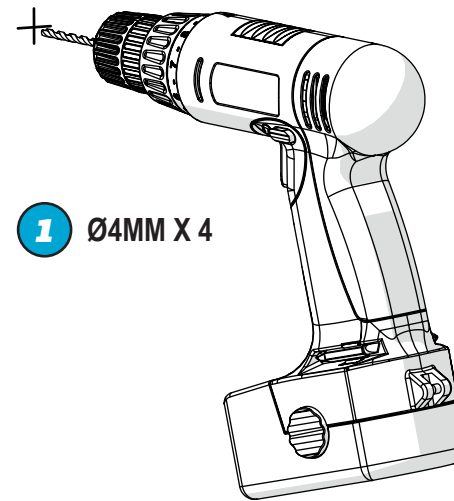


11

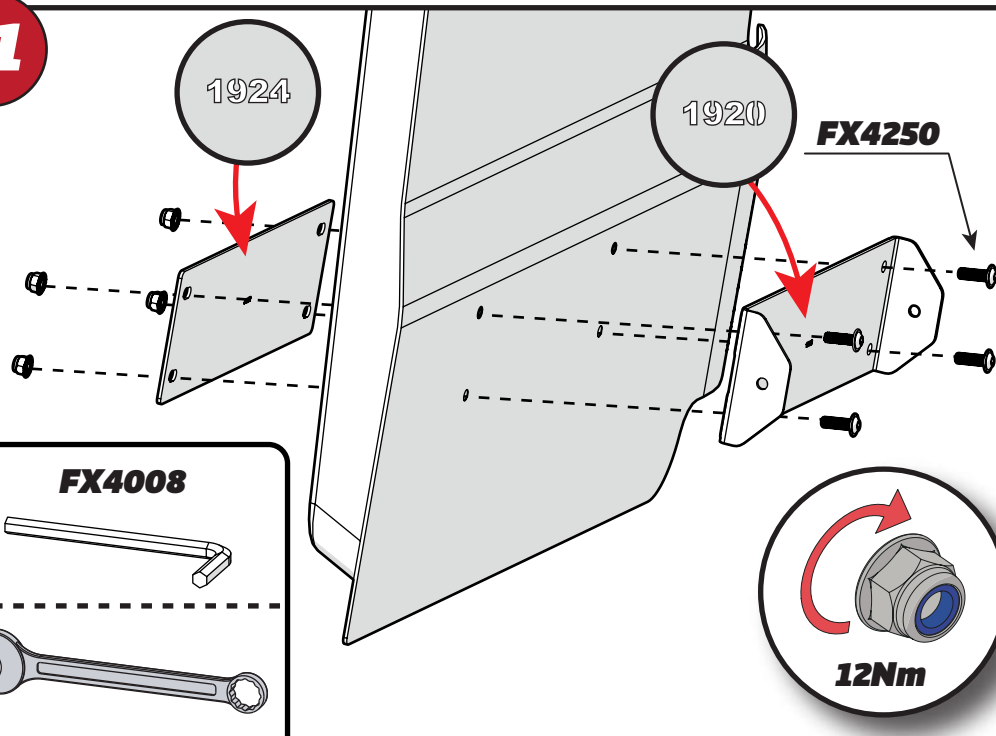


12

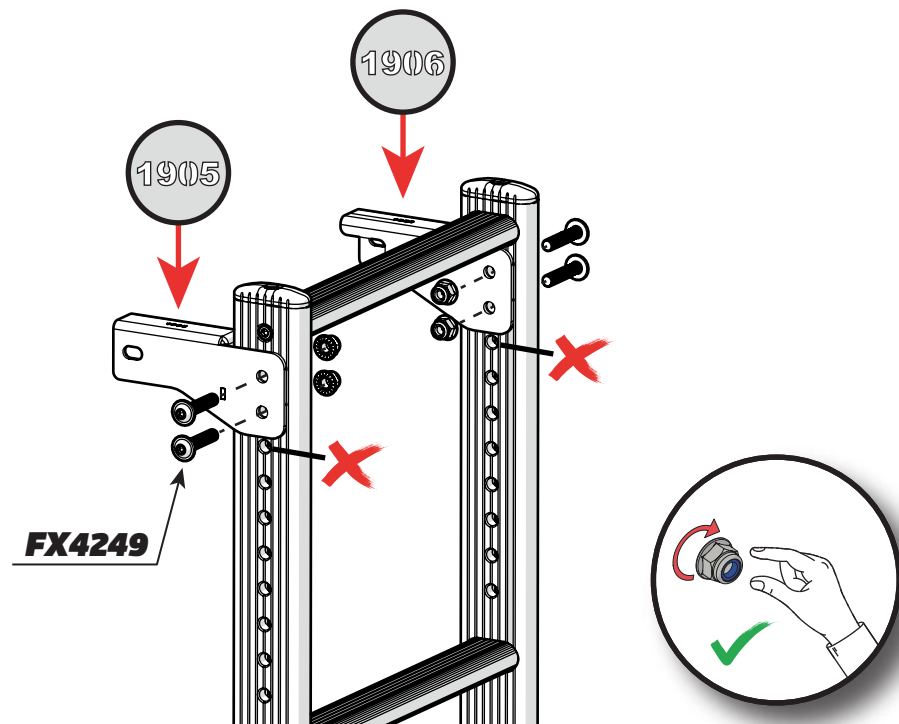


13

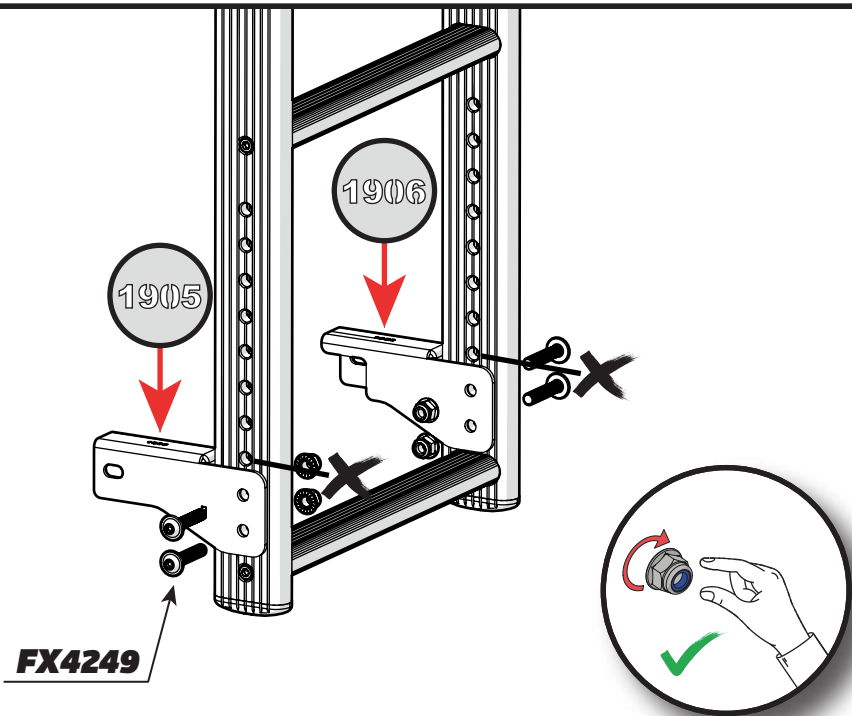


14

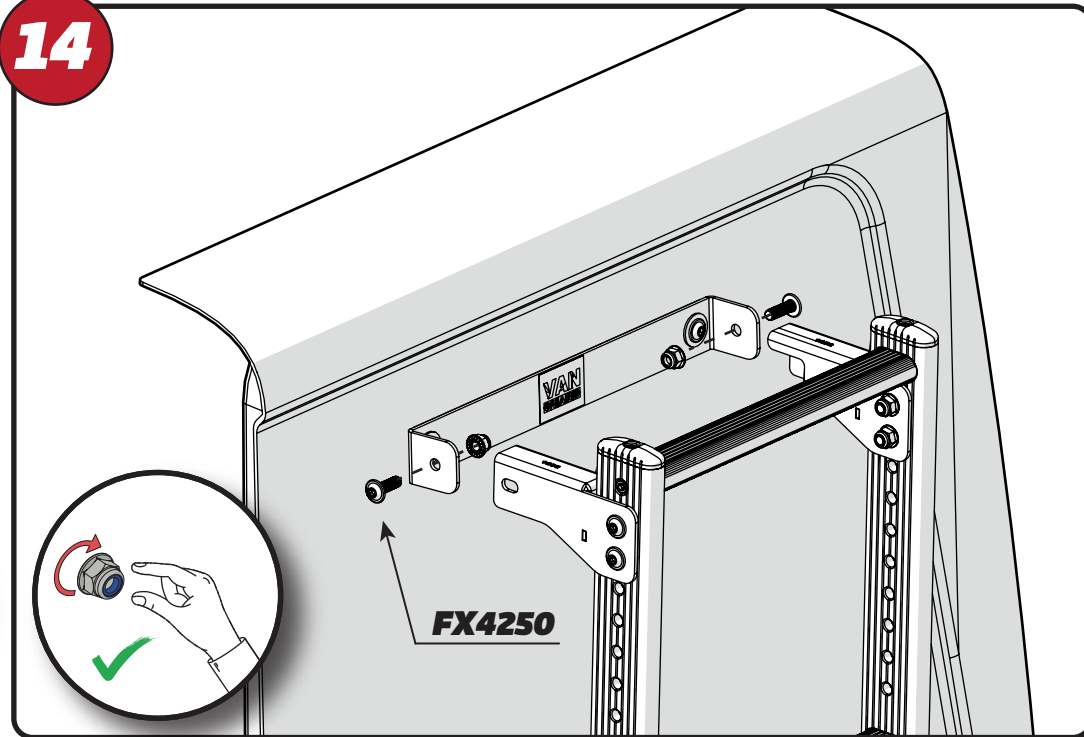




15

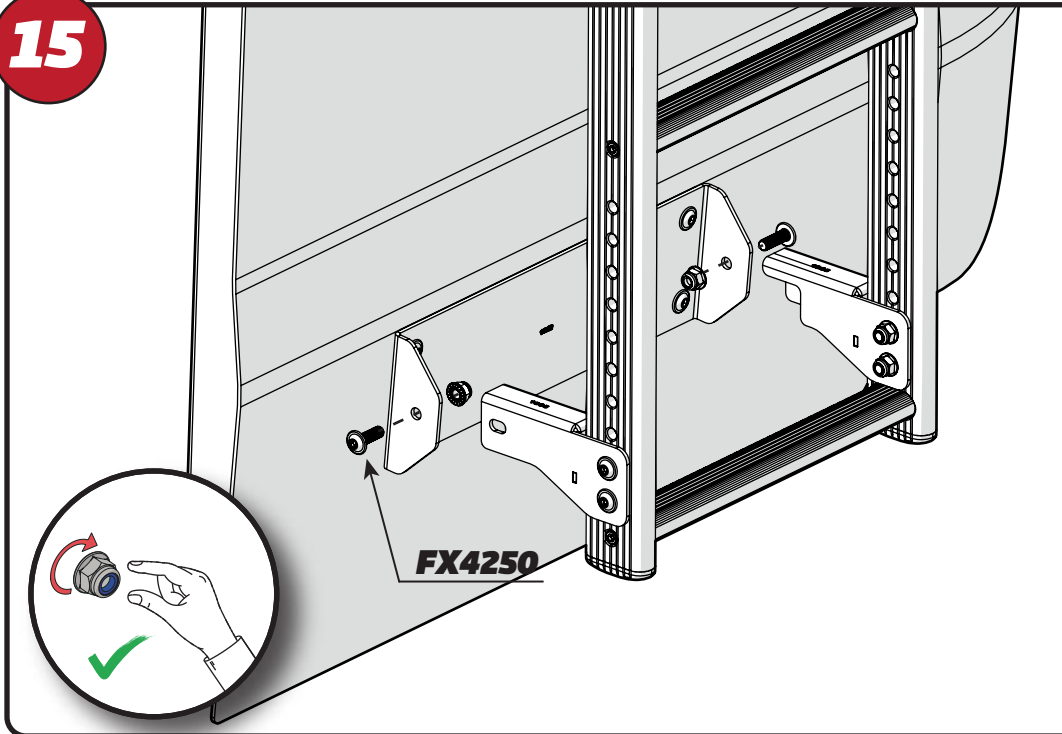




16

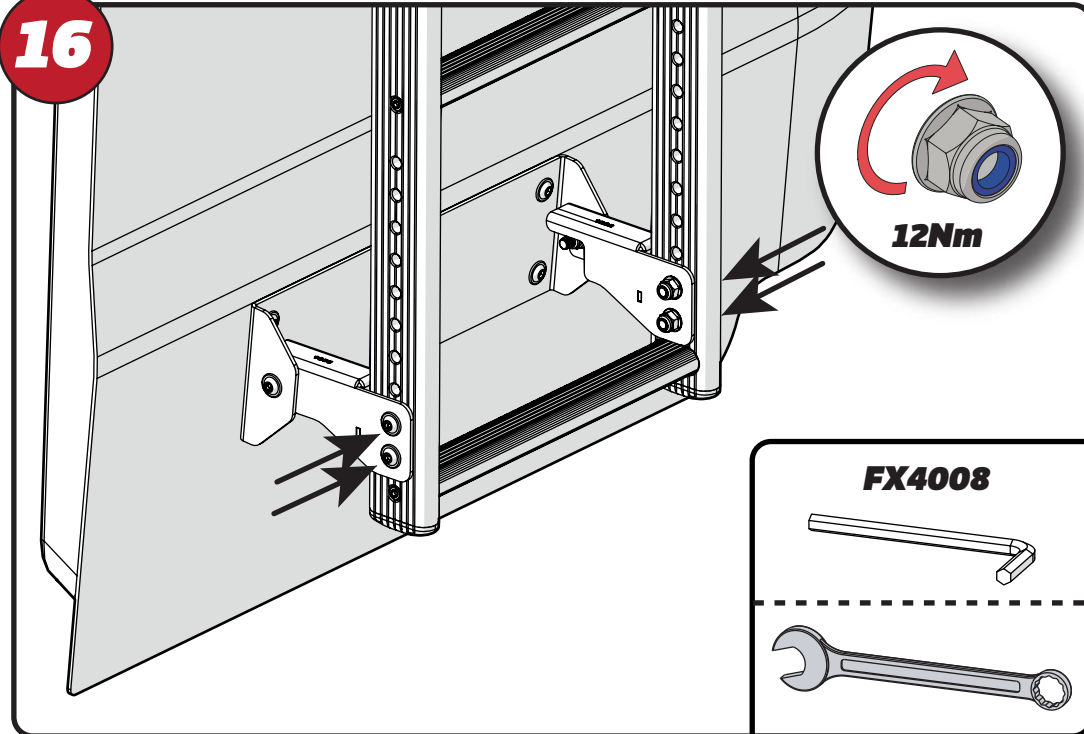




17

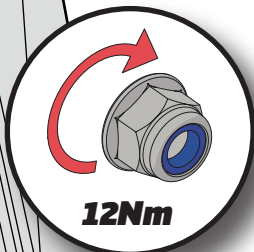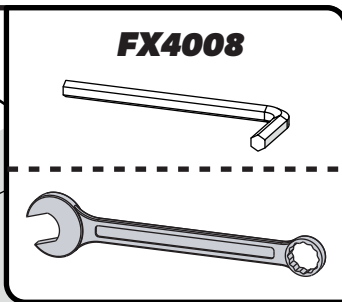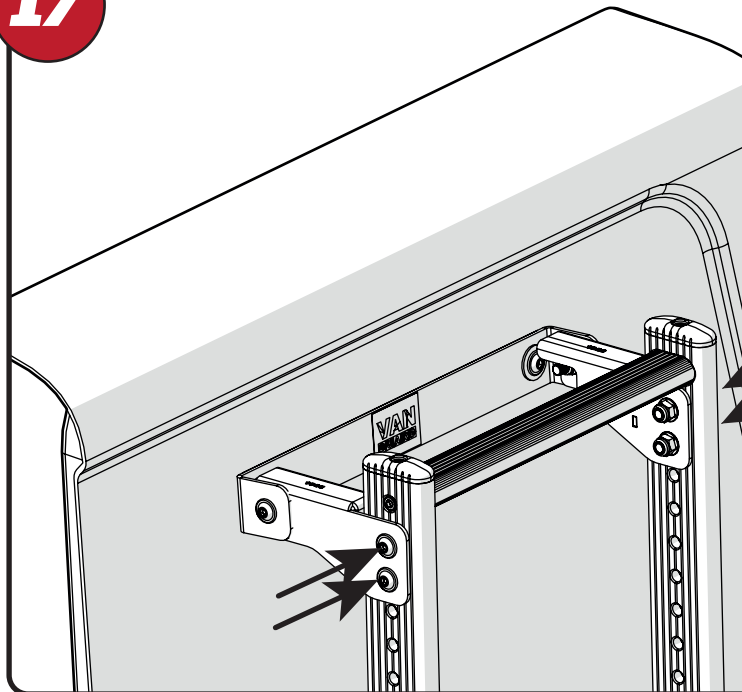




18

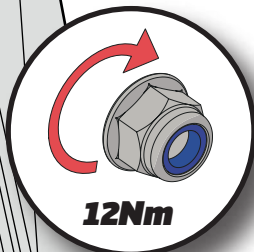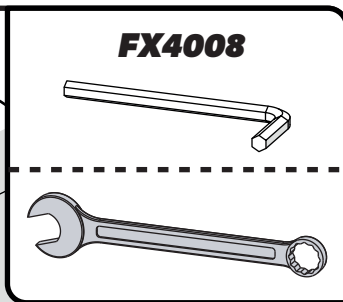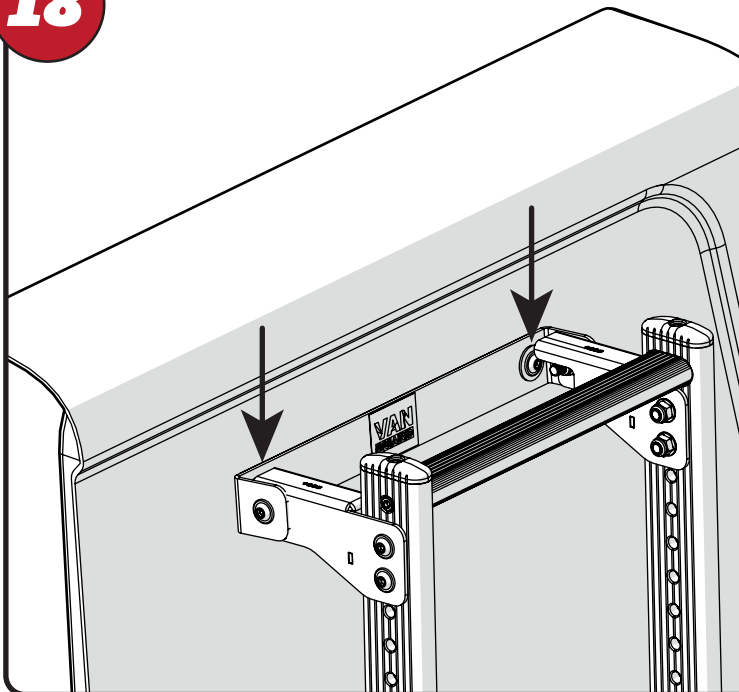


19

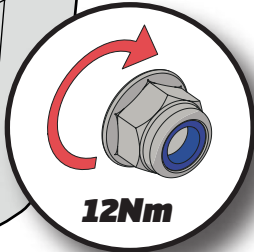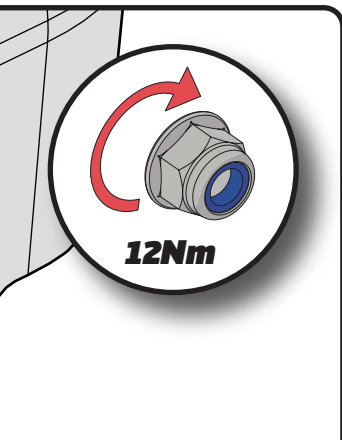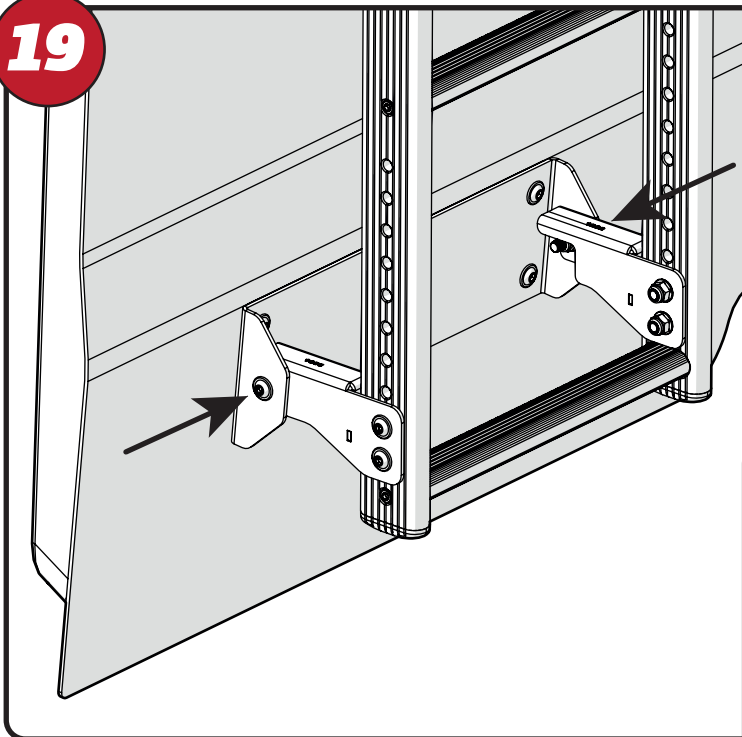


20

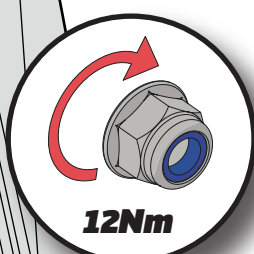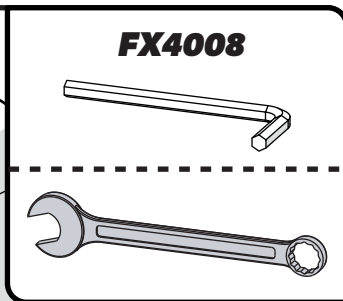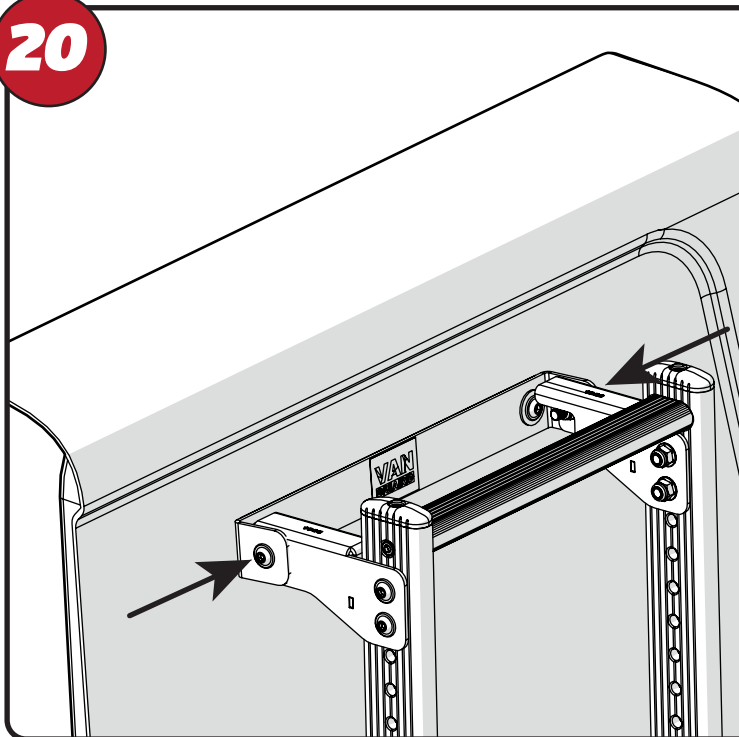

21

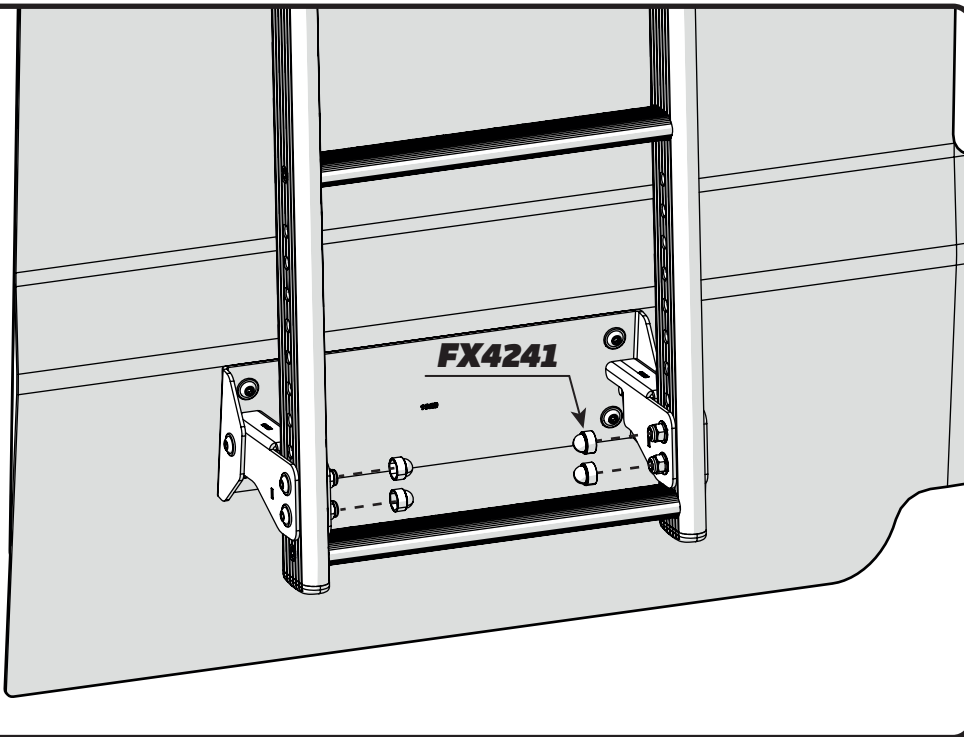

22

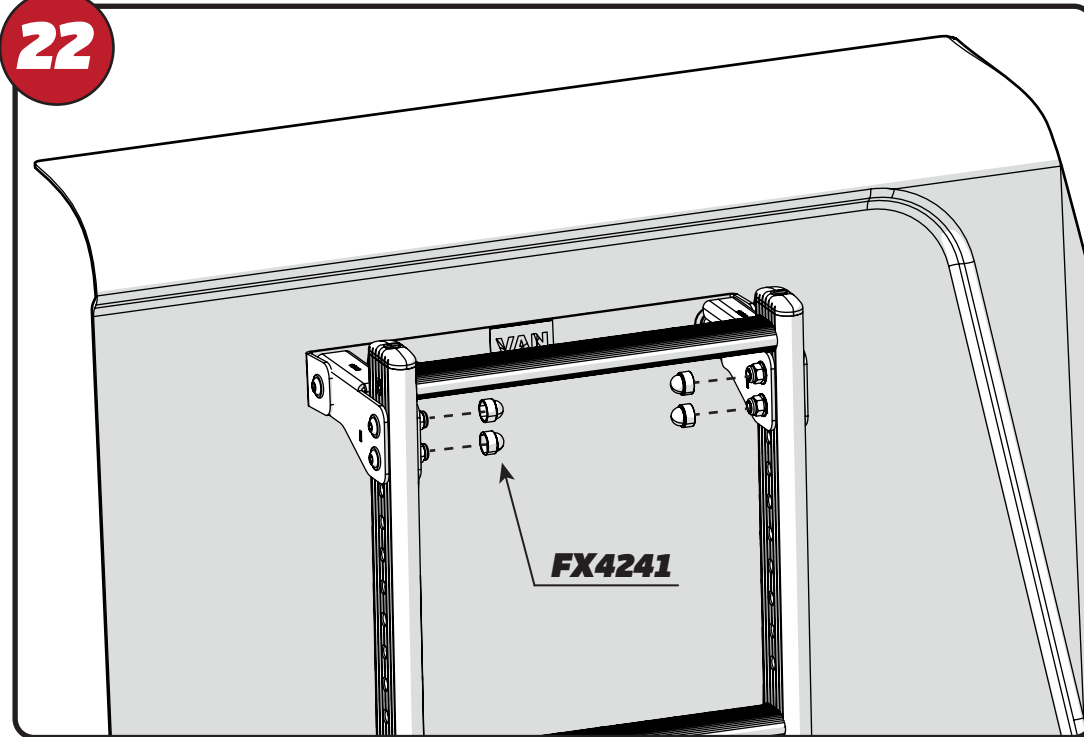

23

