


# IN8409


## ULTI Ladder

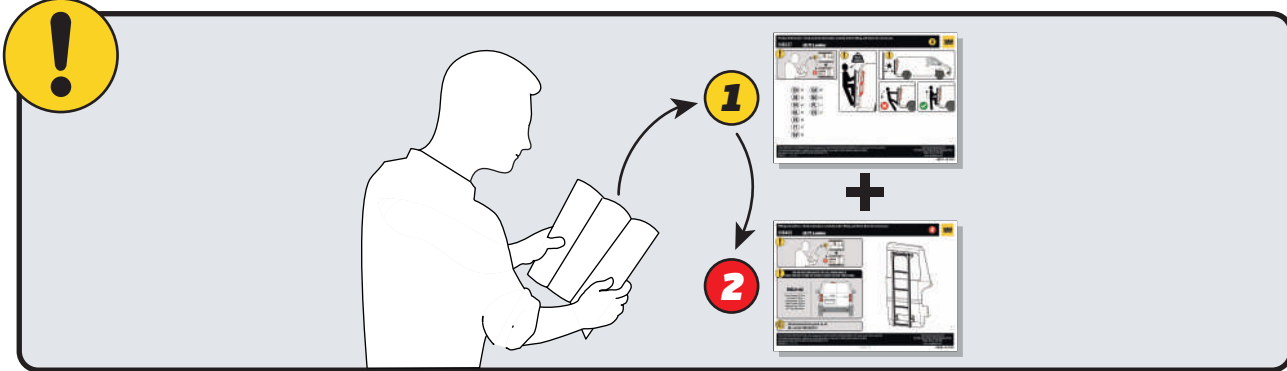


**THIS INSTRUCTION COVERS THE FOLLOWING MODELS  
CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING**

### VGL6-05

MAN TGE: 2017 on  
Volkswagen Crafter: 2017 on  
H2 / H3 - Twin Rear Doors

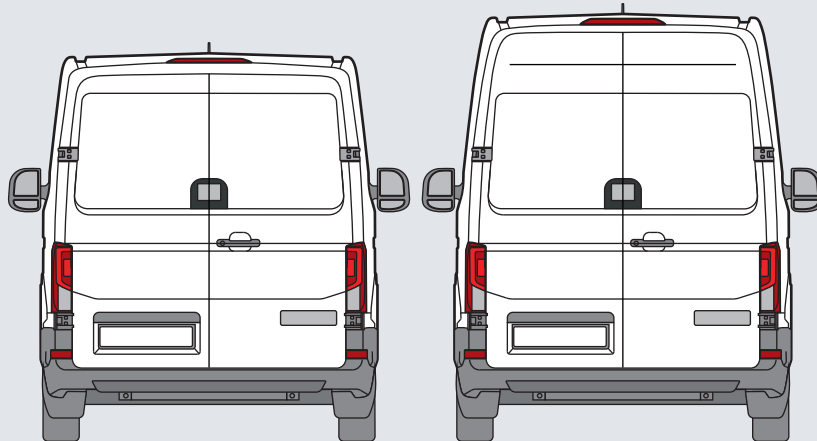


**Customercare@van-guard.co.uk**  
**UK +44 (0) 1392 368 351**

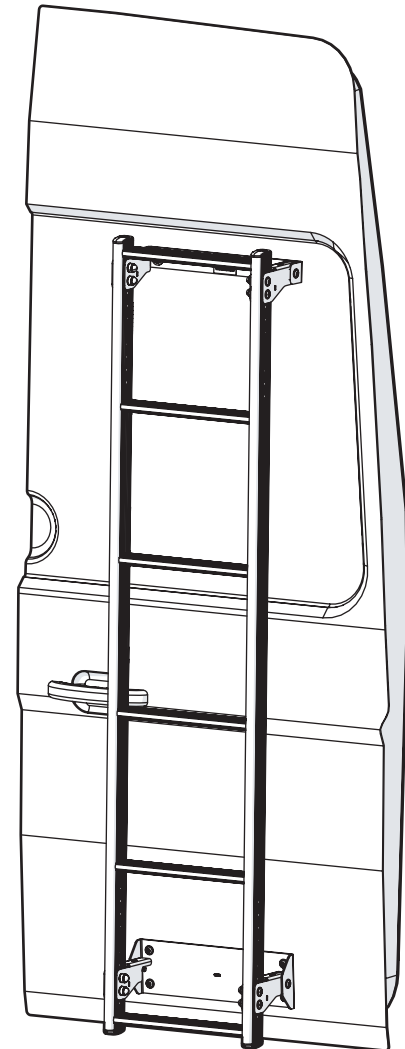


**SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING**

**TOOLS REQUIRED**


**13MM X1**

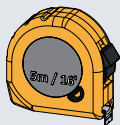

**4MM X1**

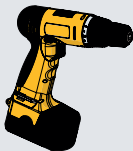


**9MM X1**

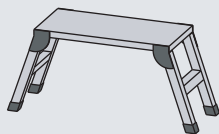

**X1**




**AS3593 X1**

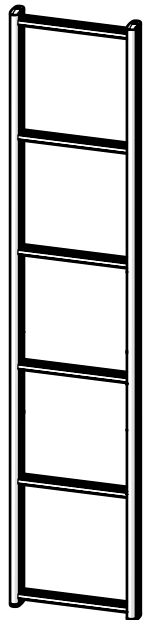


**FX4249 X8**

(M8X40)



**FX4250 X10**

(M8X25)




**ME1944 X1**




**FX4240 X18**


(M8)




**FX4241 X8**




**ME1920 X1**

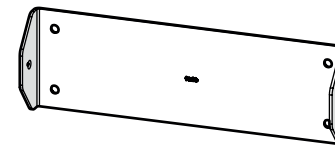


**MA6200 X3**



**FX4252 X2**

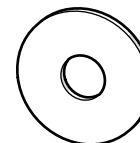


**ME1921 X1**




**FX4008 X1**



**ME1906 X2**

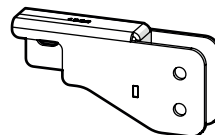


**ME1905 X2**

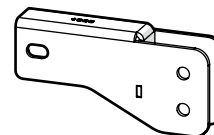


**ME1922 X1**




**ME1926 X1**




01

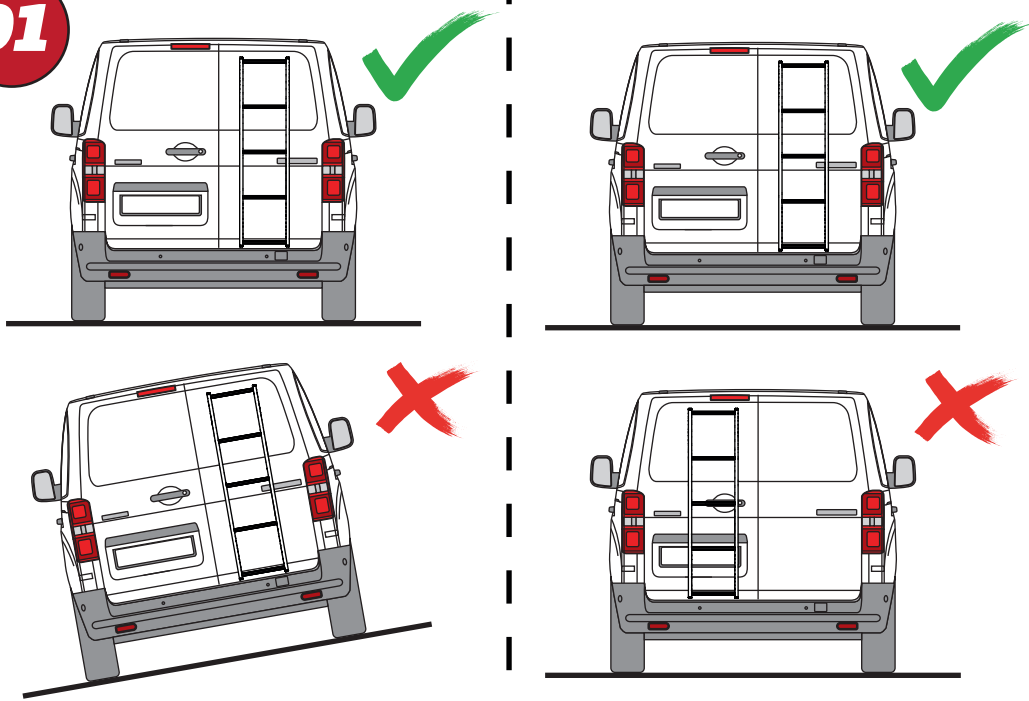



02

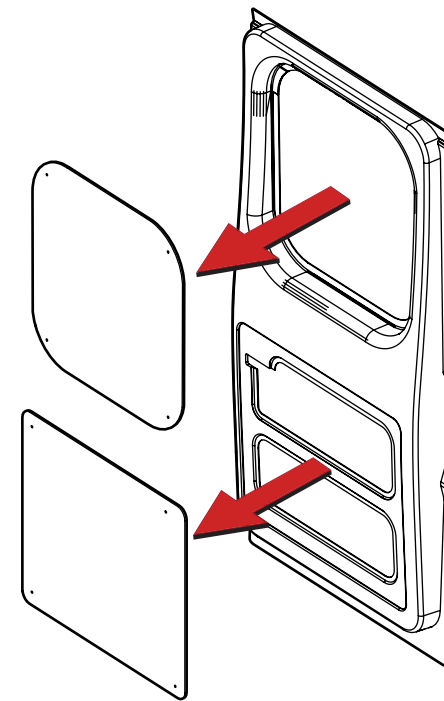


03

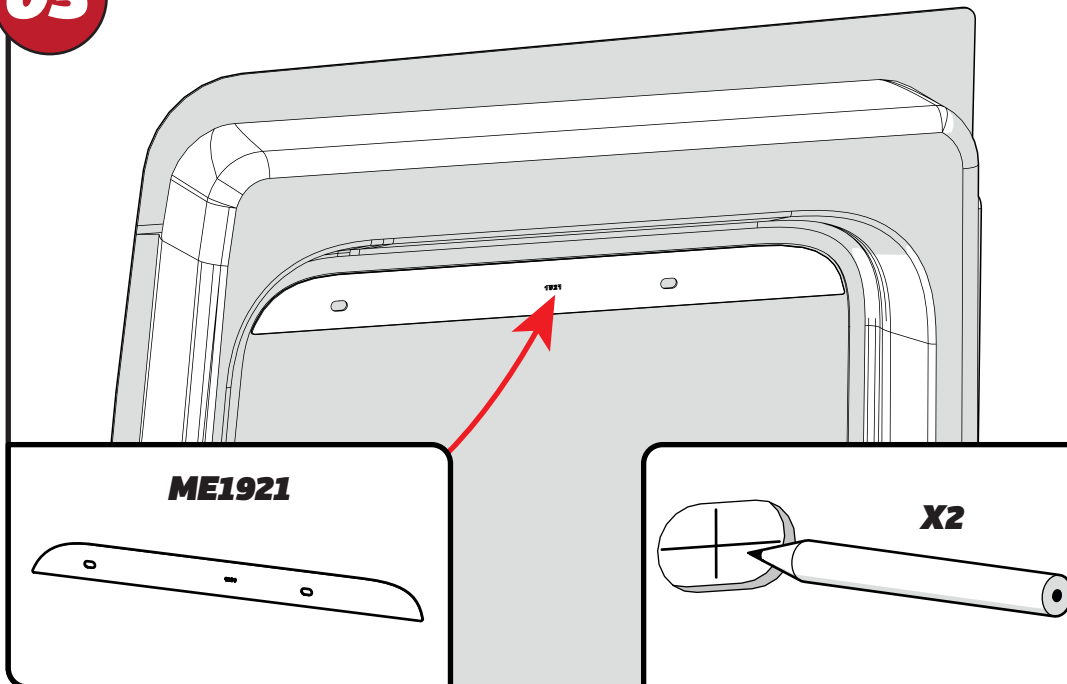

04

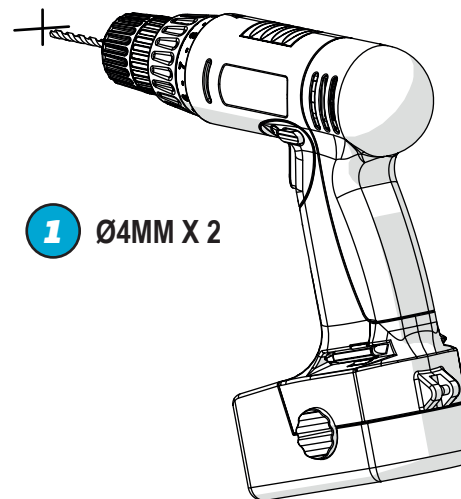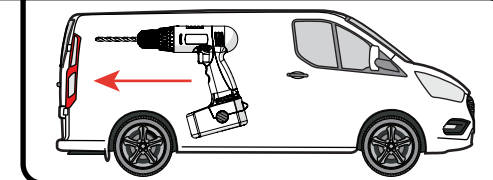


1 Ø4MM X 2

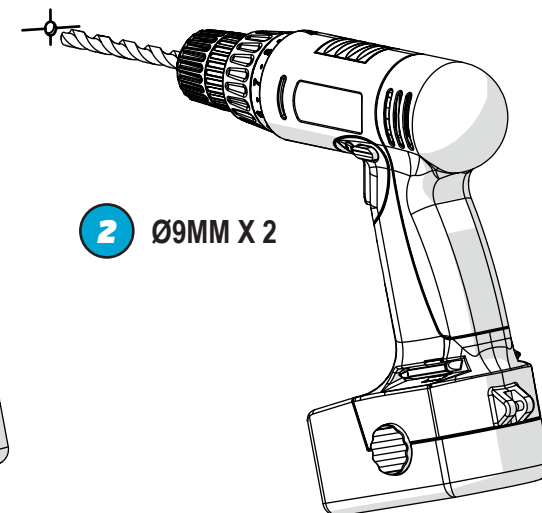

2 Ø9MM X 2

05


MA6200

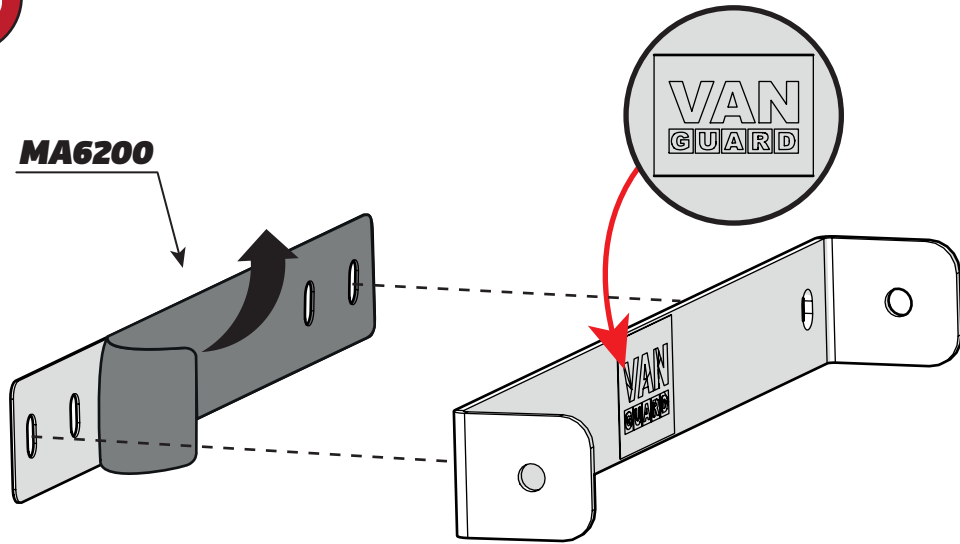

06


FX4250

FX4252

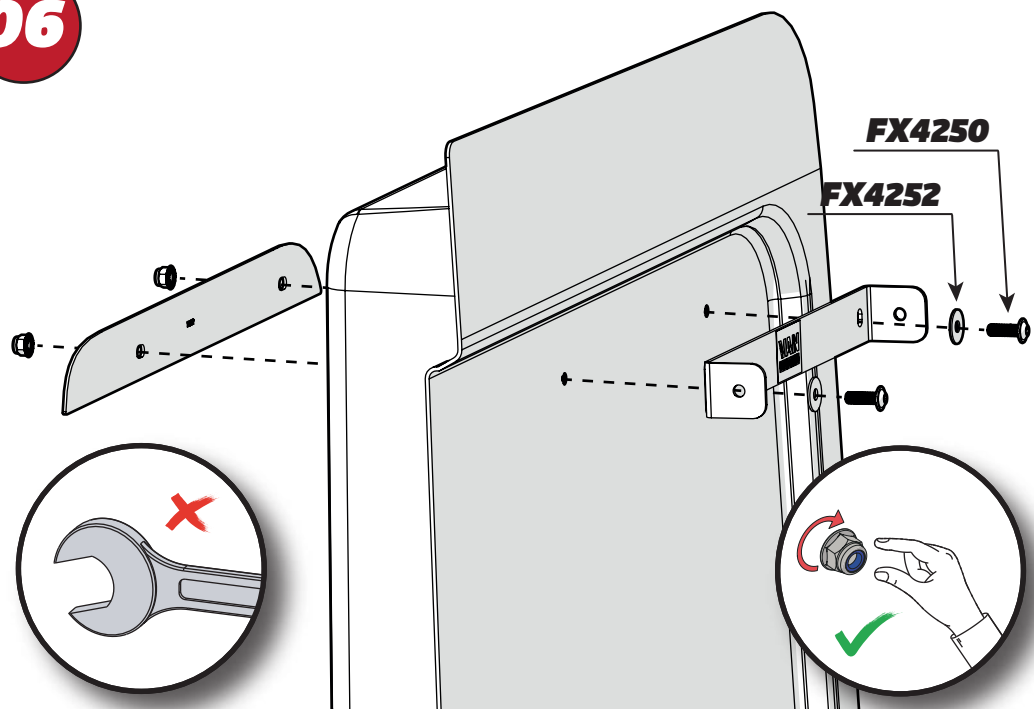


07

MA6200


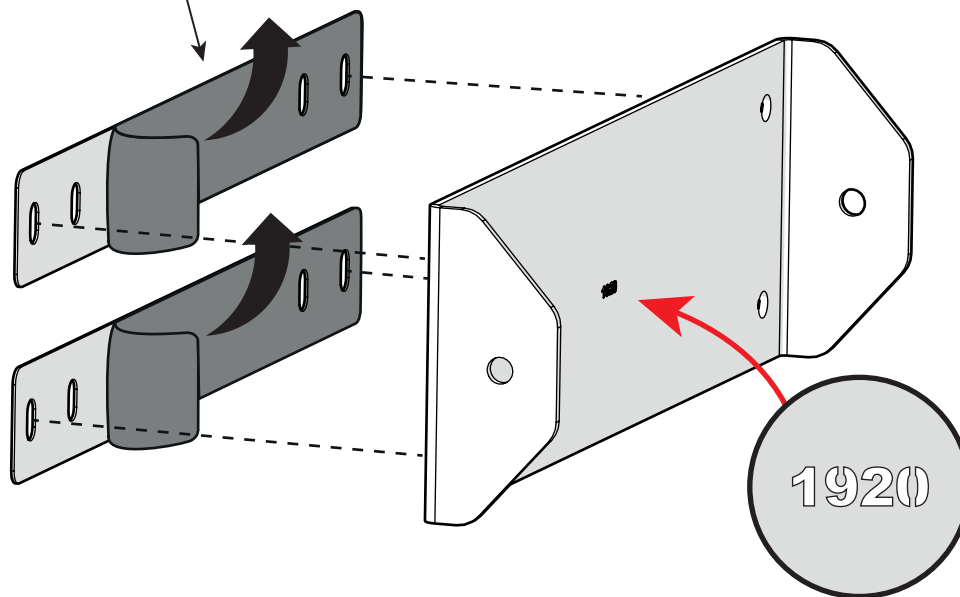


08




1920

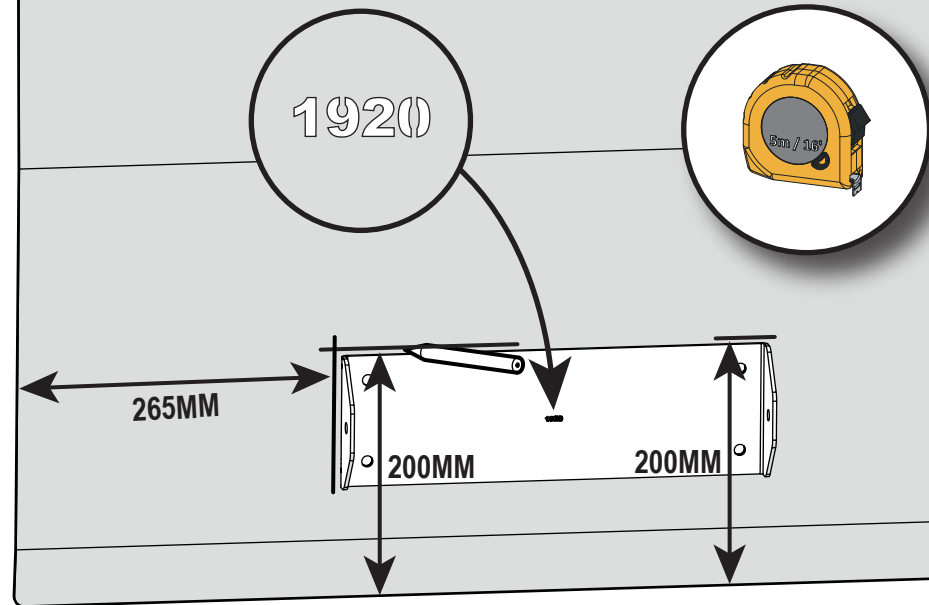



09

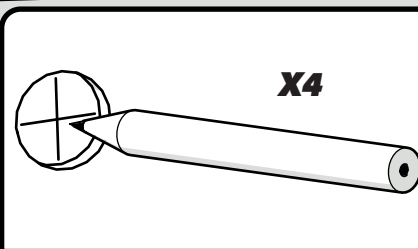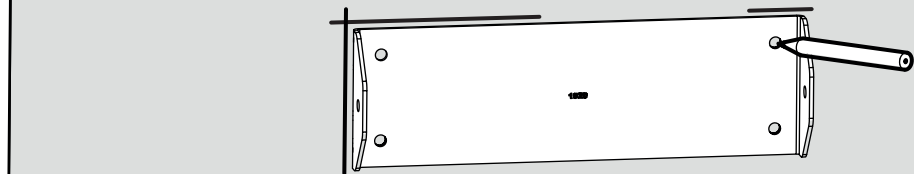




10

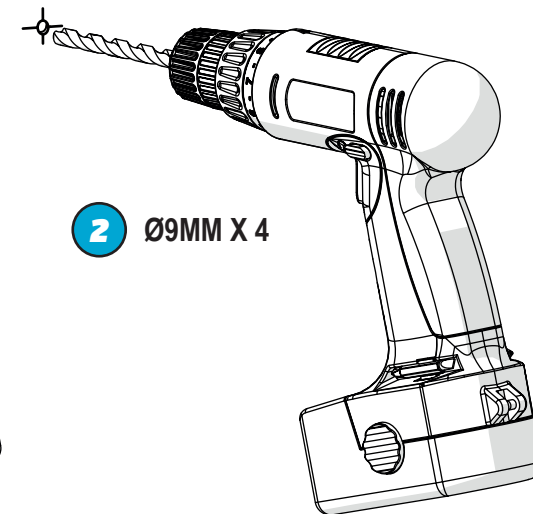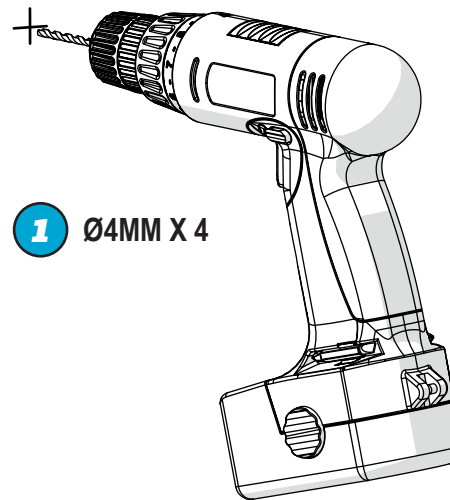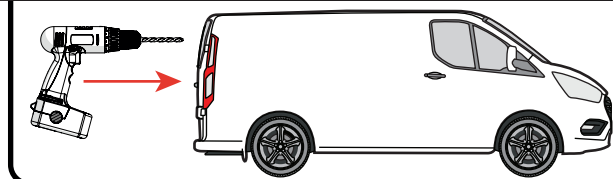



11

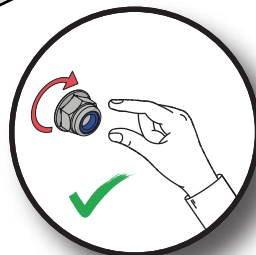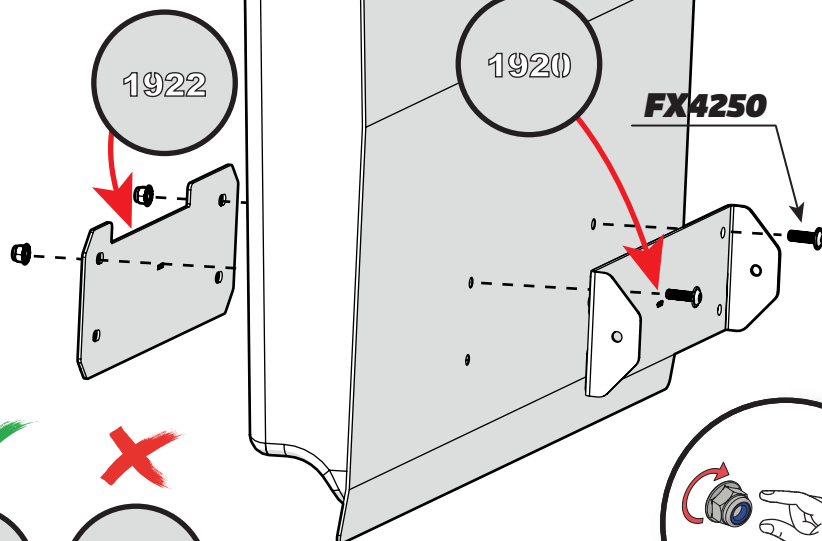


12

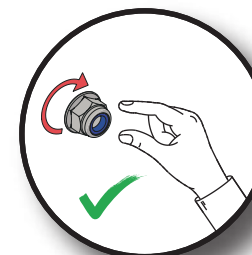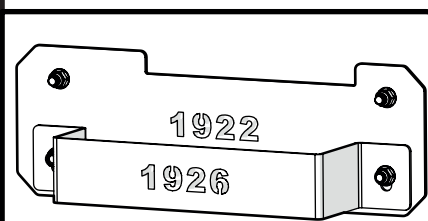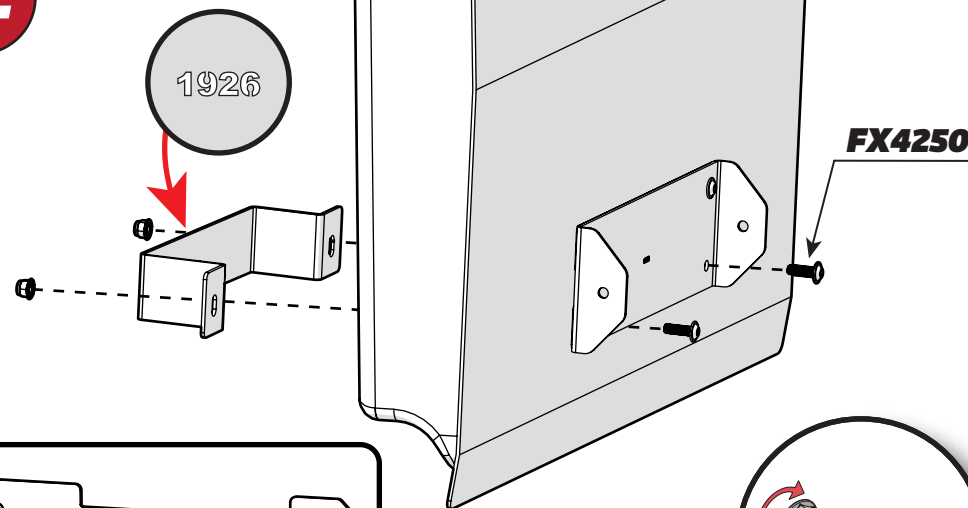


13

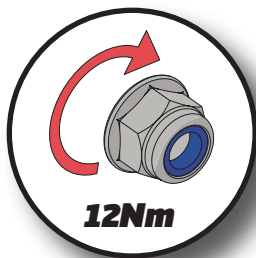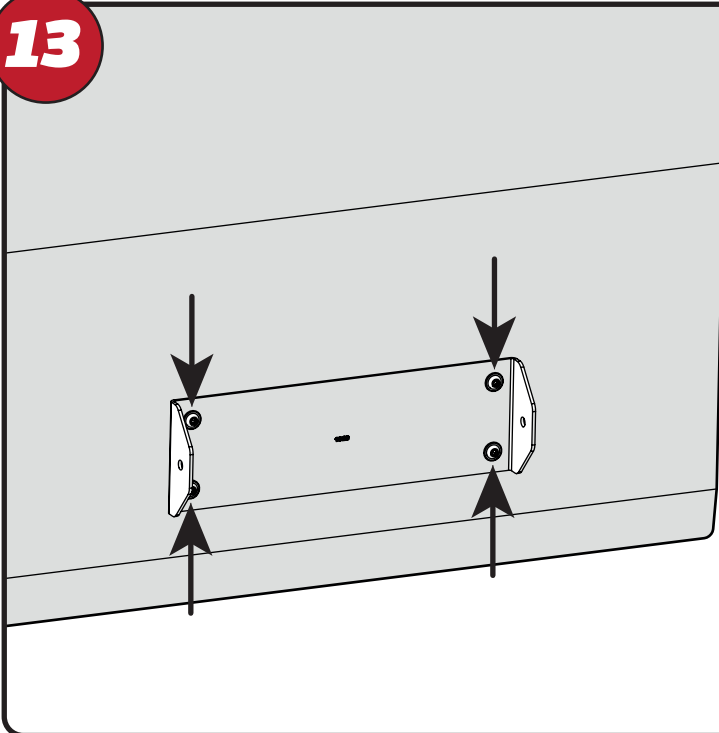

**FX4008**

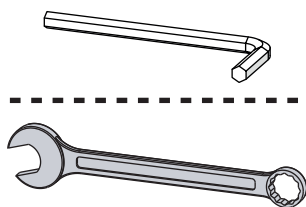


14

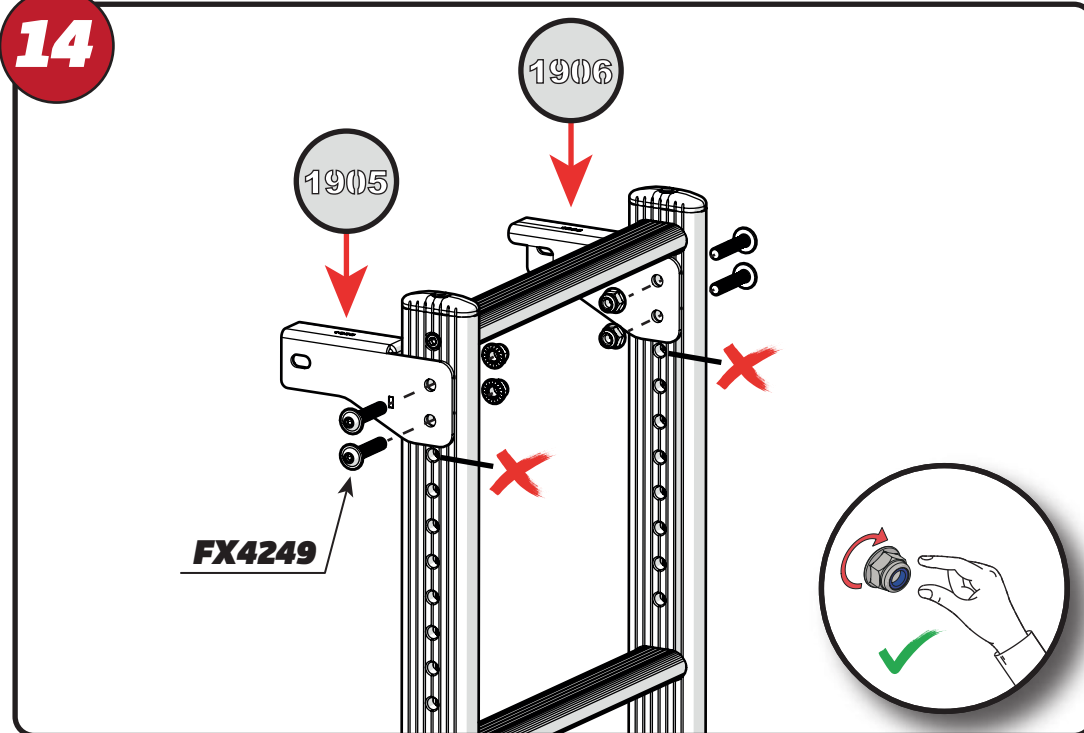


**FX4249**

15

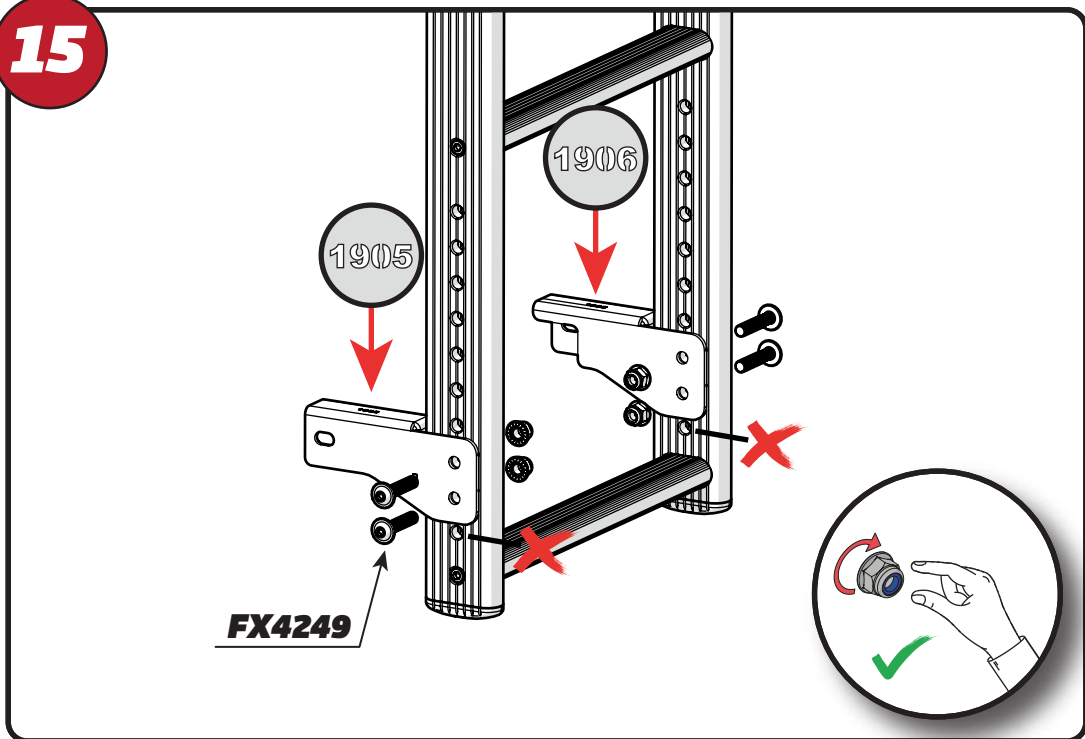


**FX4249**

16

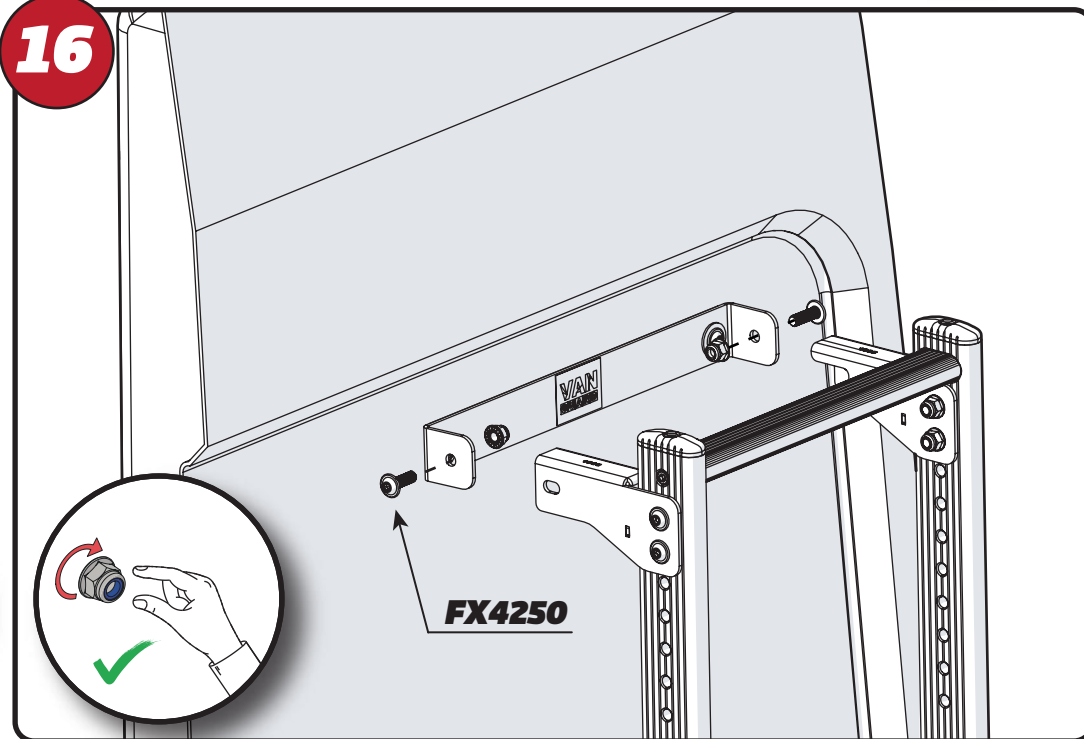


**FX4250**


17

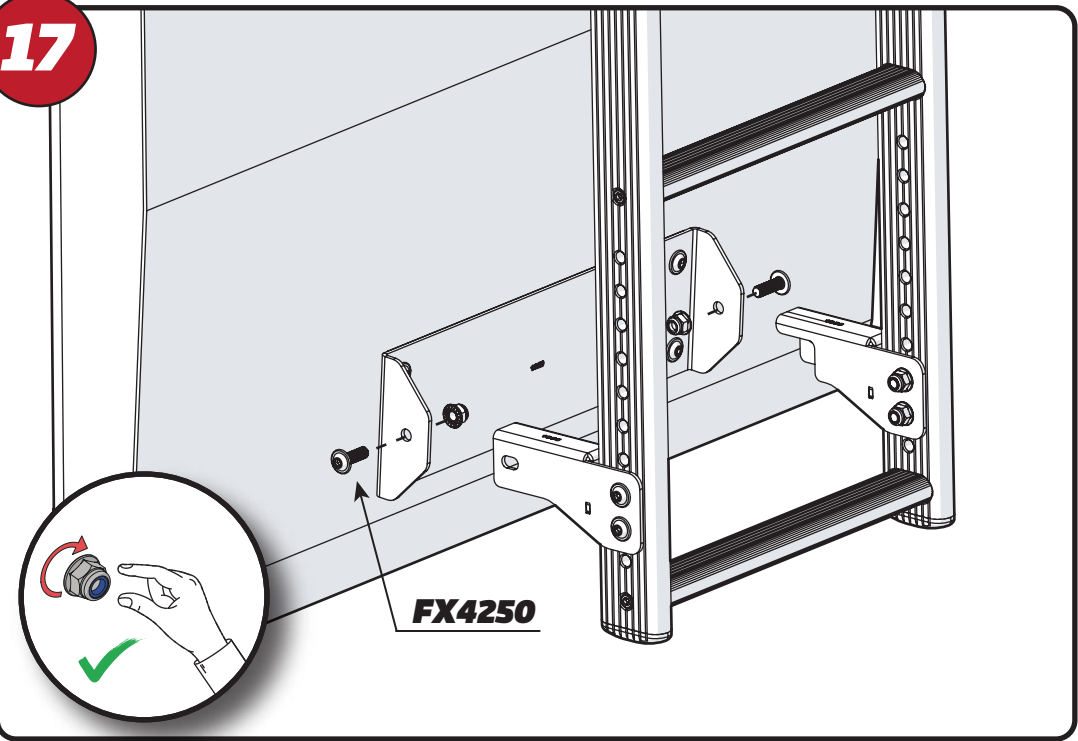


18

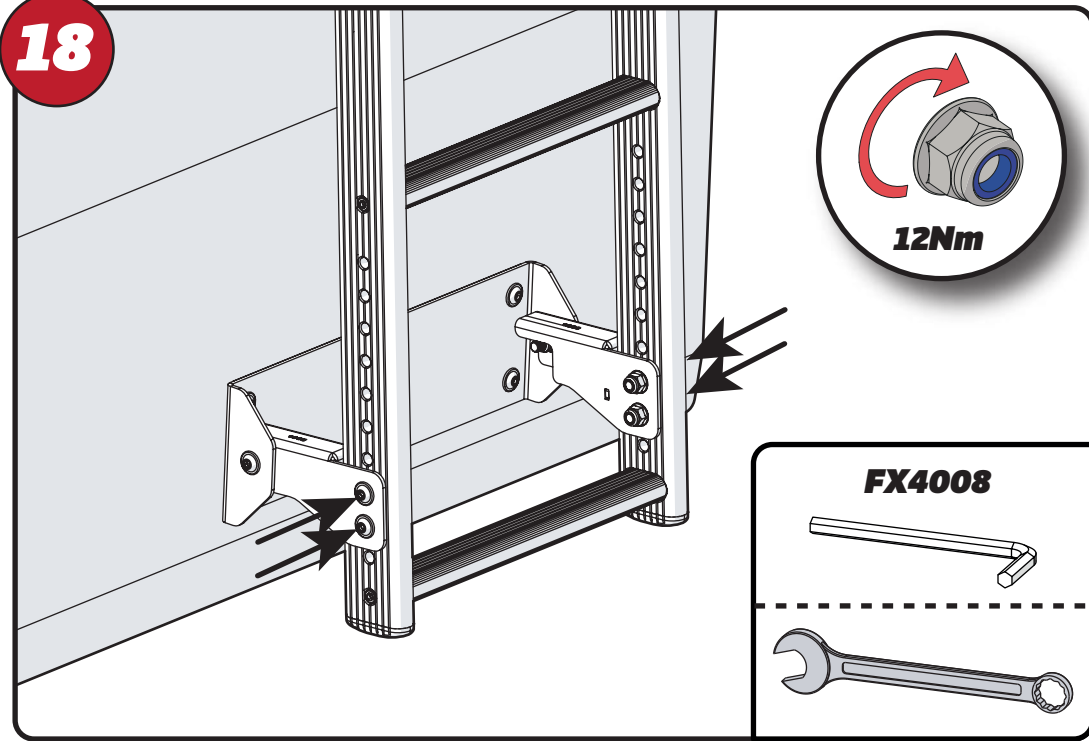




19

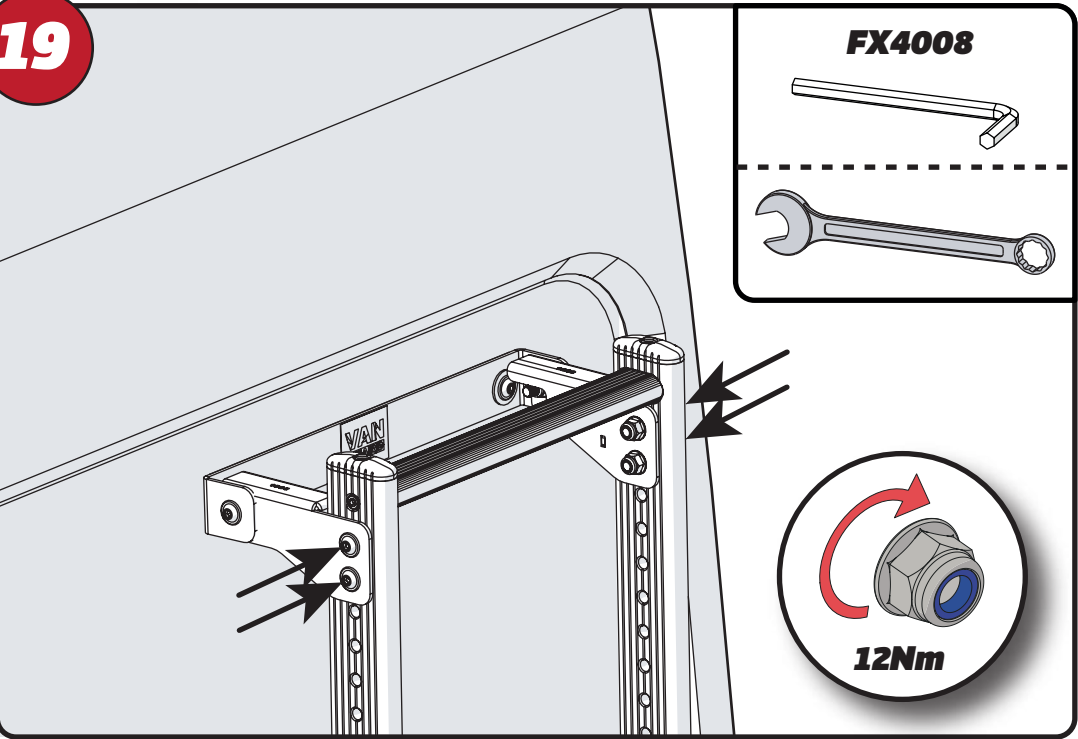



20

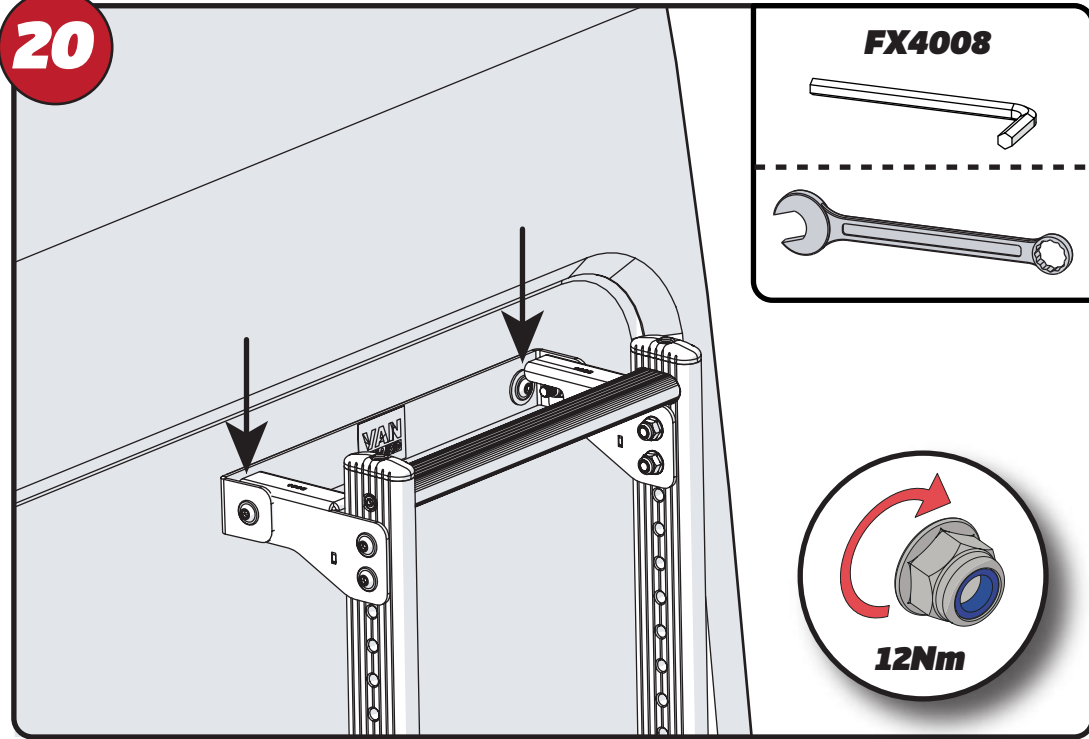


21

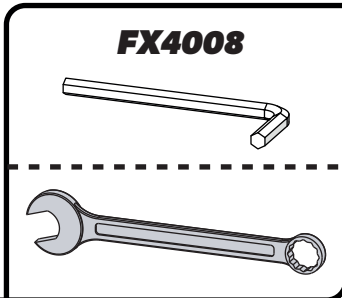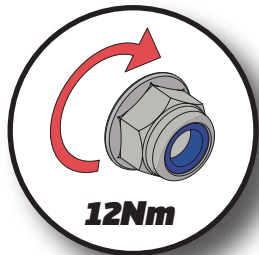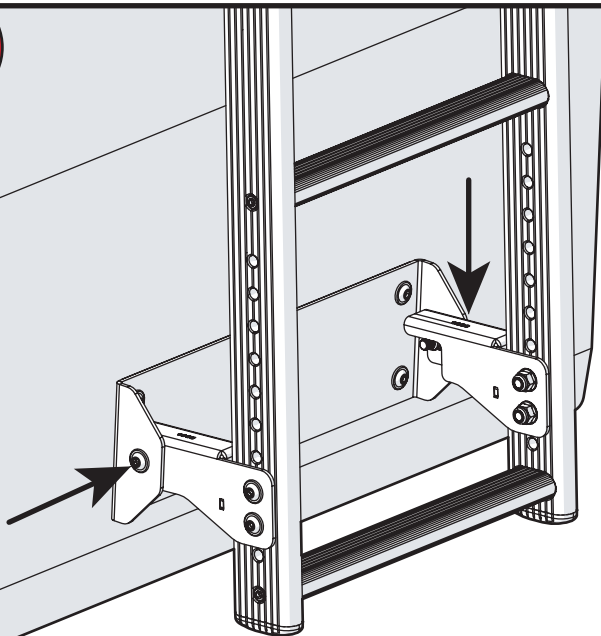


22

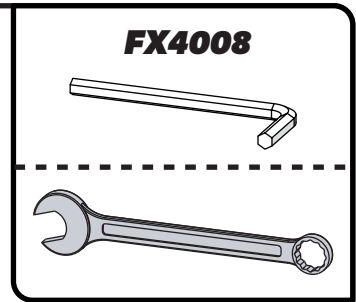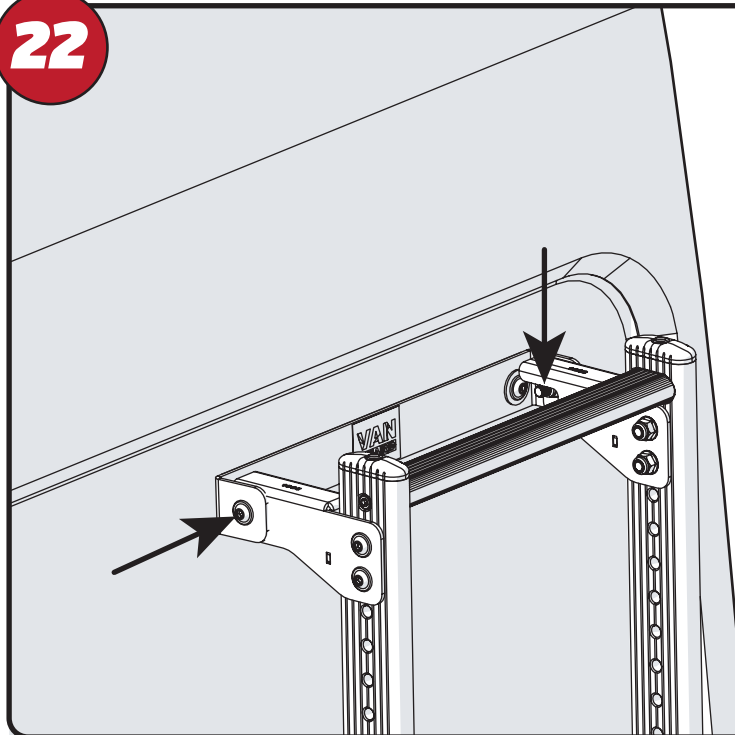

23

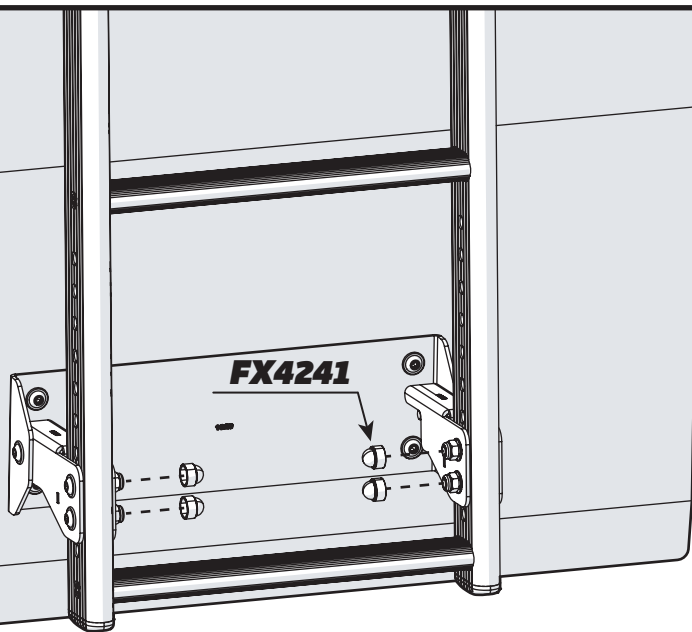

24

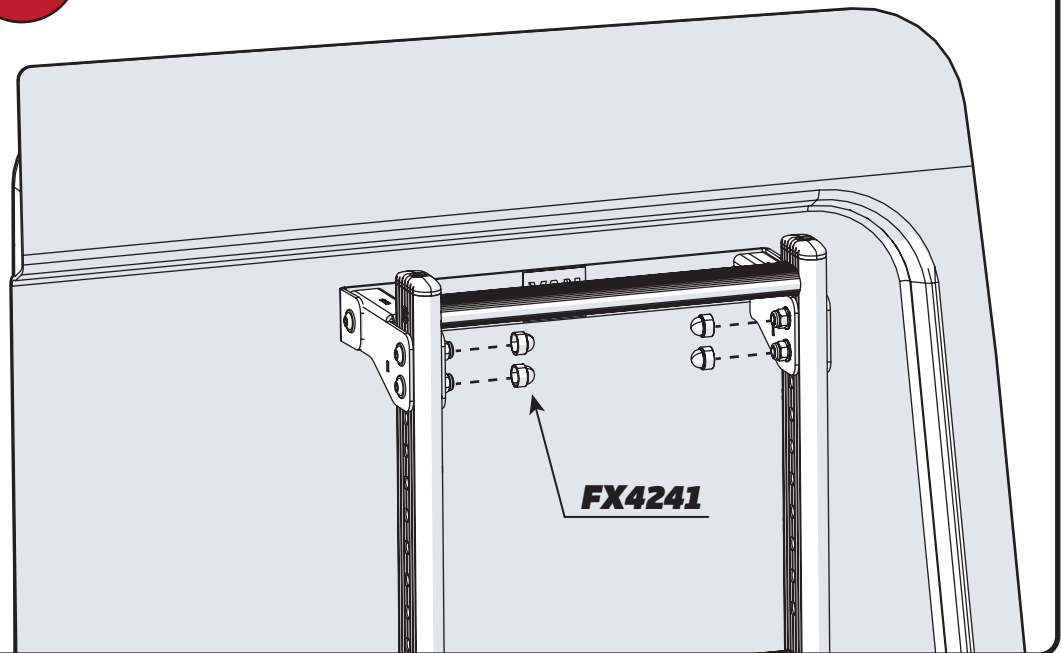



25

