


# IN8411


## ULTI Ladder

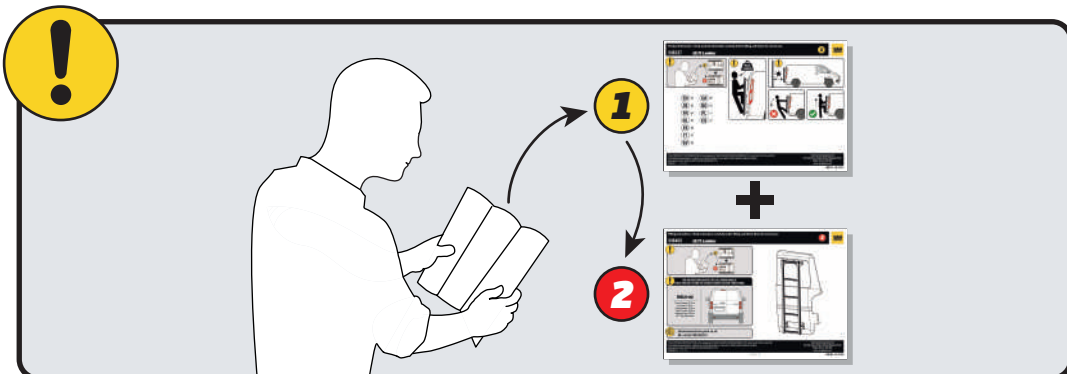


**THIS INSTRUCTION COVERS THE FOLLOWING MODELS  
CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING**

### VGL6-07

- Nissan NV400: 2010-2021
- Nissan Interstar: 2022 on
- Renault Master: 2010 on
- Vauxhall Movano: 2010-2021
- H1 - Twin Rear Doors

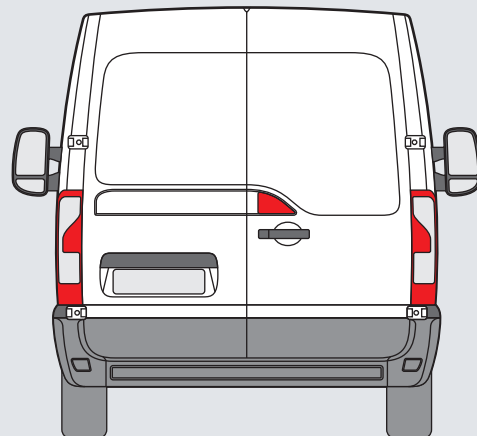


**Customercare@van-guard.co.uk**  
**UK +44 (0) 1392 368 351**

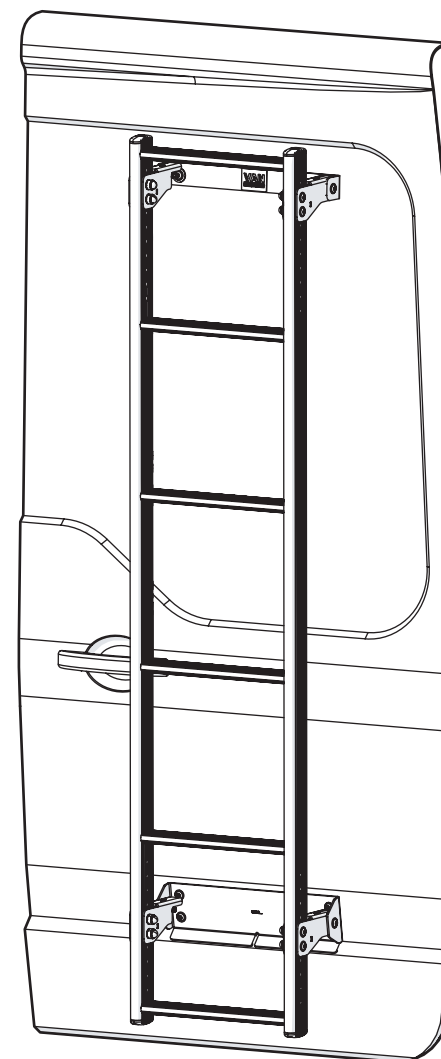


**SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING**

**TOOLS REQUIRED**


**13MM X1**

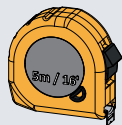

**4MM X1**

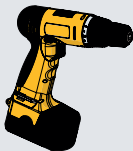


**9MM X1**

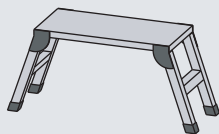

**X1**




**AS3593 X1**

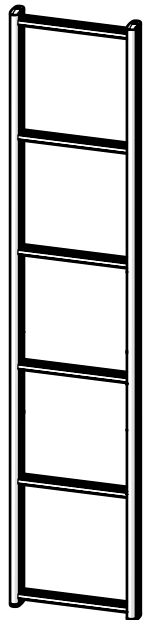


**FX4249 X8**

(M8X40)



**FX4250 X10**

(M8X25)



**ME1944 X1**




**FX4240 X18**


(M8)




**FX4241 X8**




**ME1938 X1**

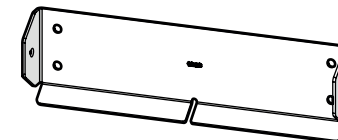


**MA6200 X3**



**FX4252 X2**

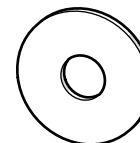


**ME1949 X1**




**FX4008 X1**




**ME1906 X2**

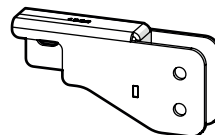


**ME1905 X2**

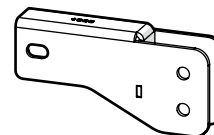


**ME1937 X1**

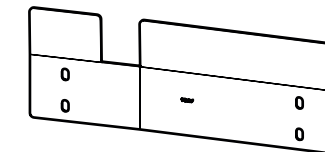


01

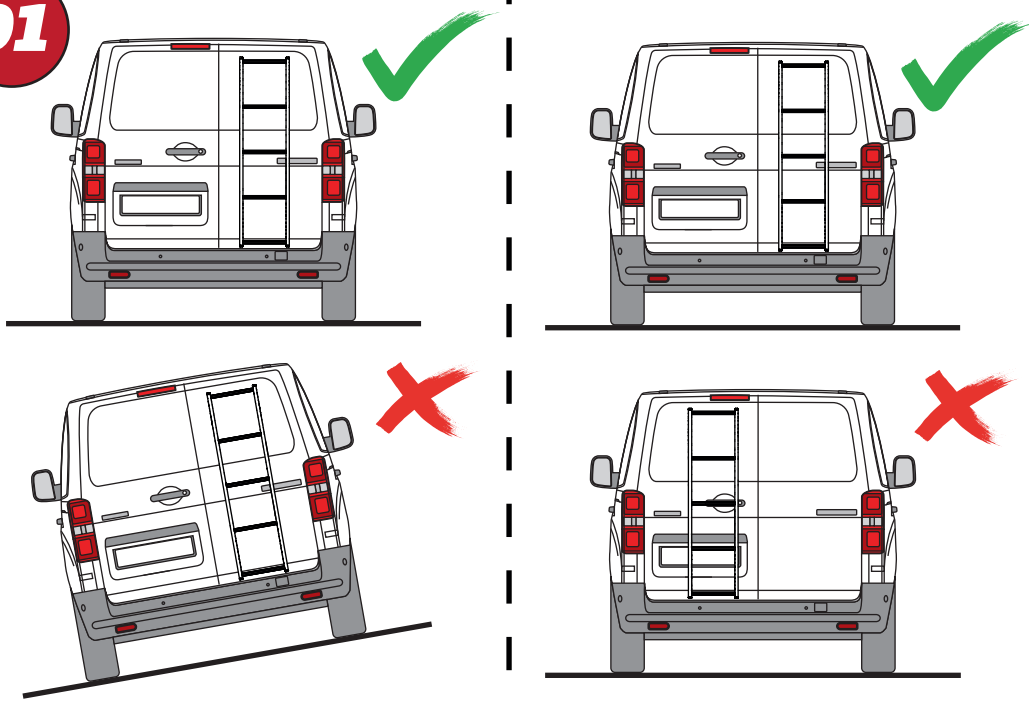


02

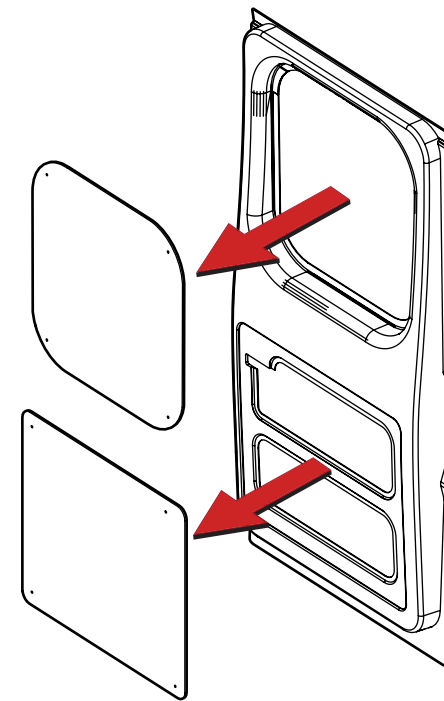

03

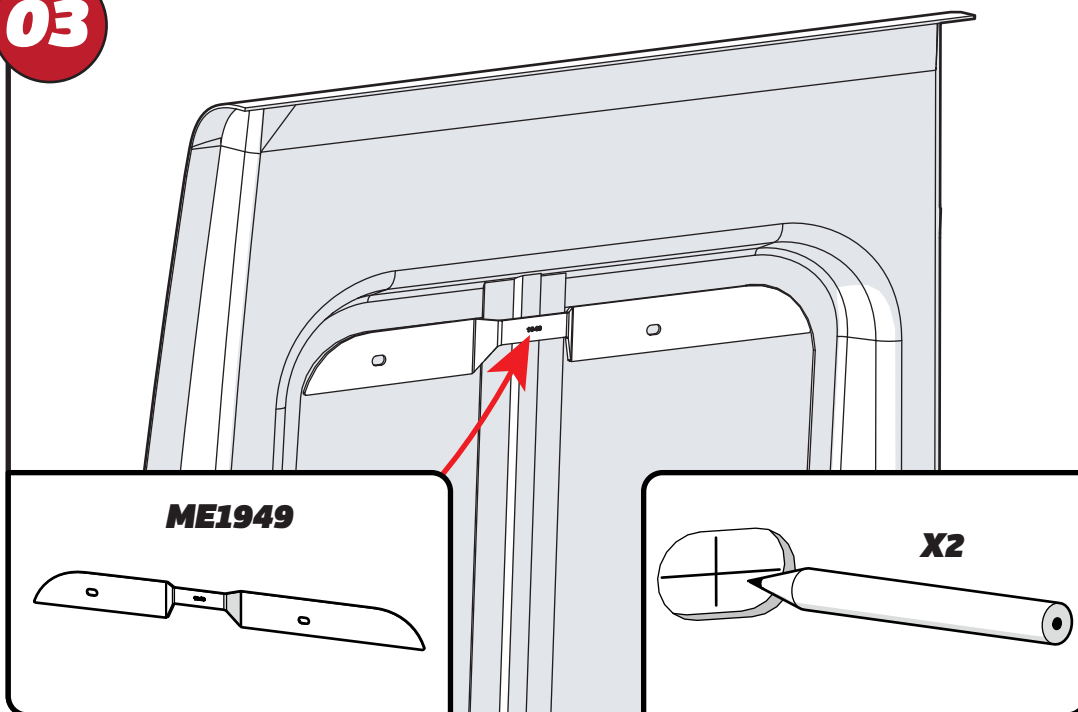


04

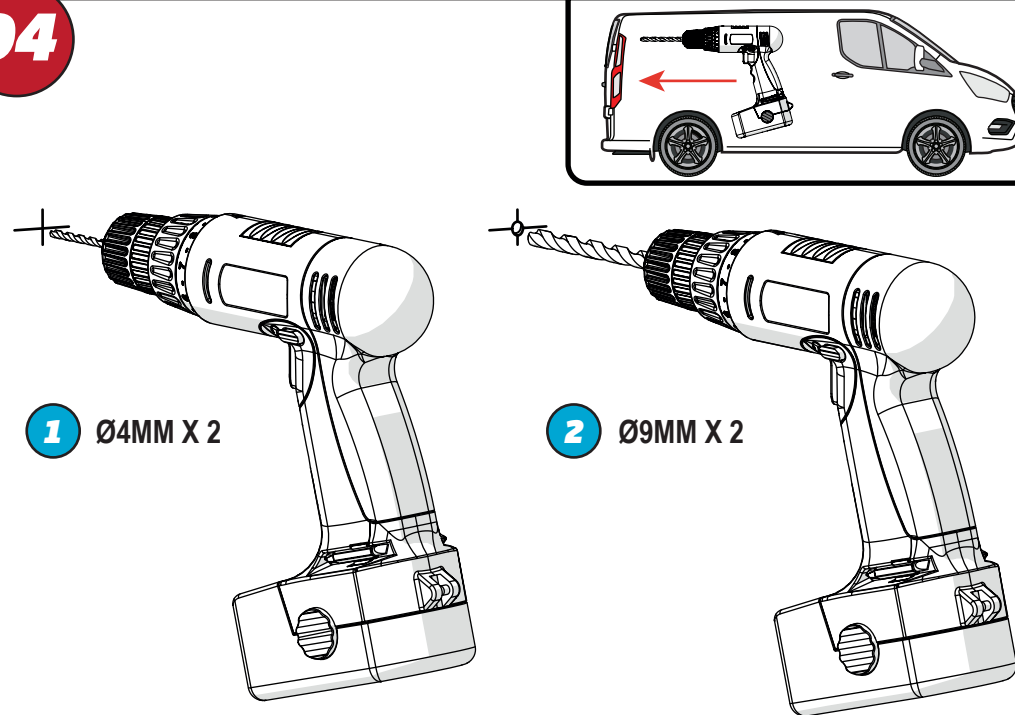

05


MA6200

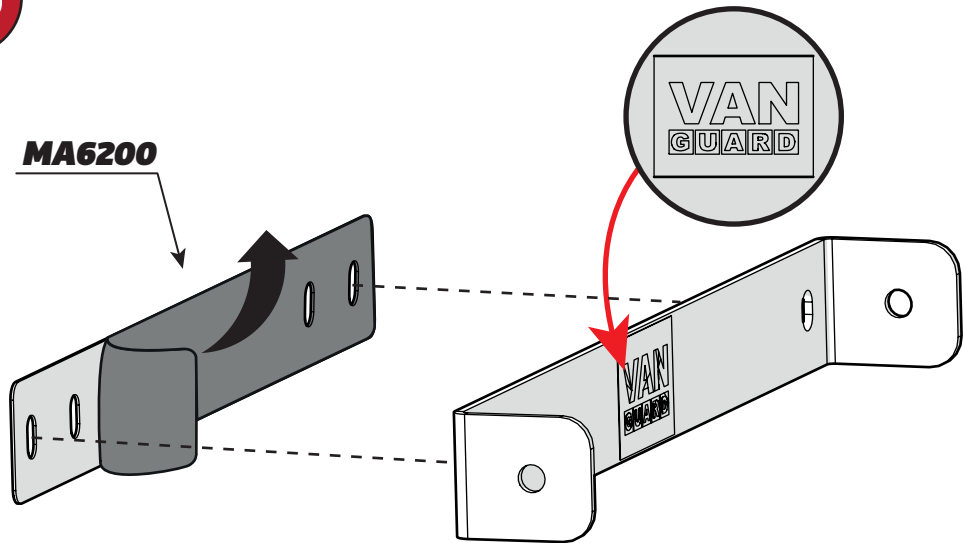

06


FX4250

FX4252

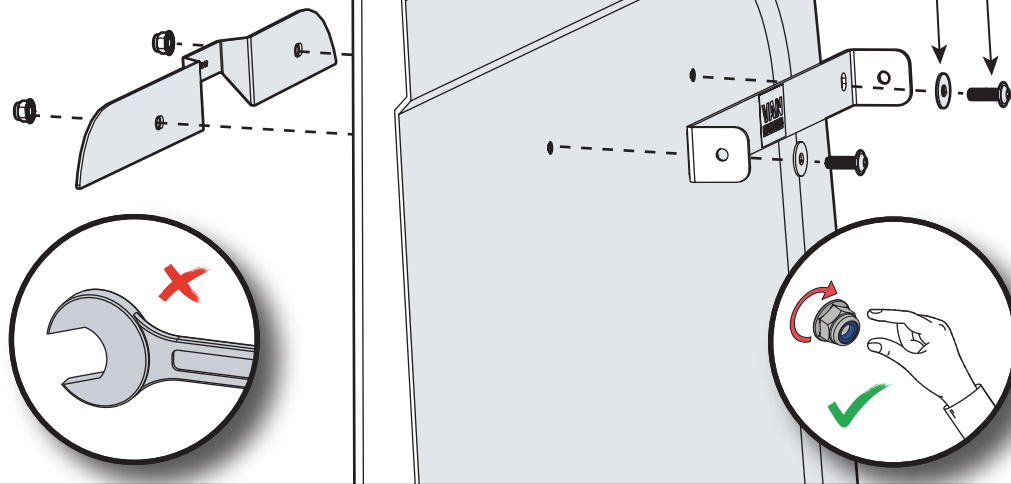

07


MA6200

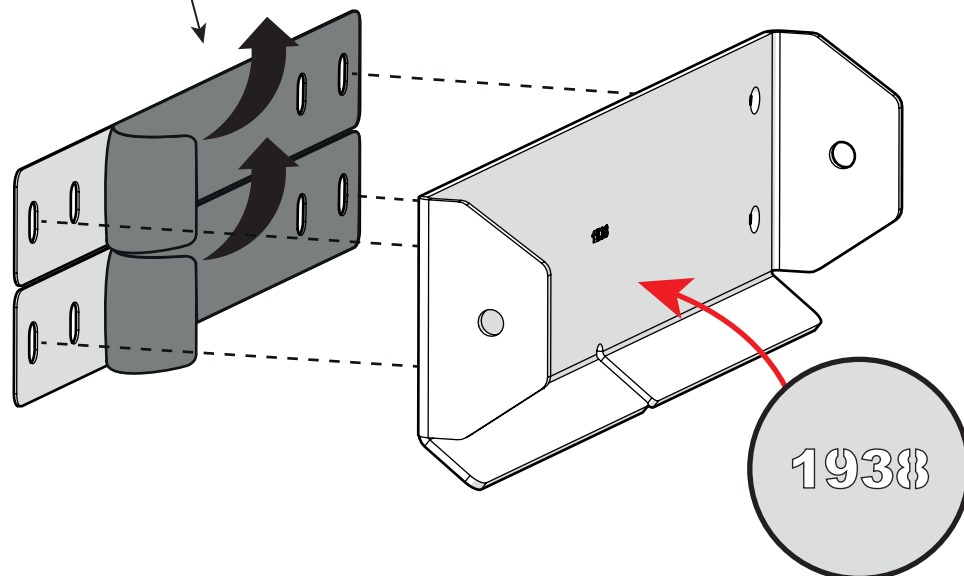


08

1938




270MM

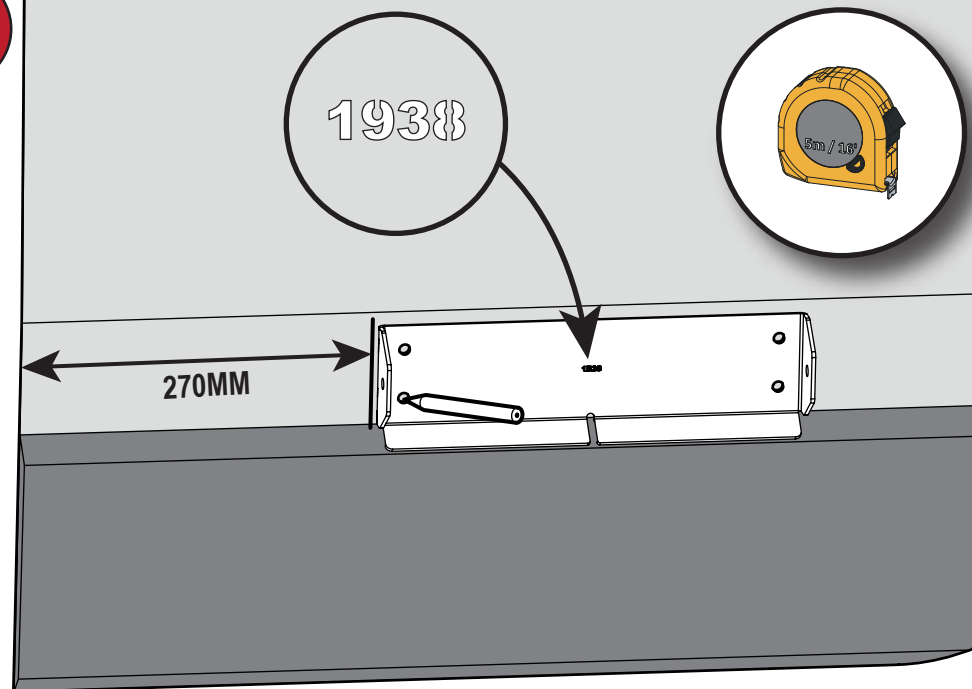





09

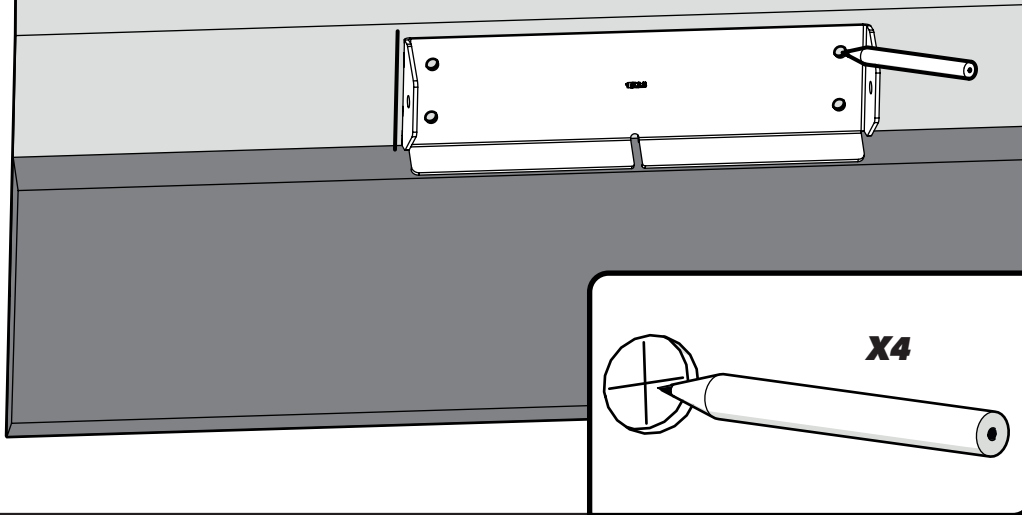


10

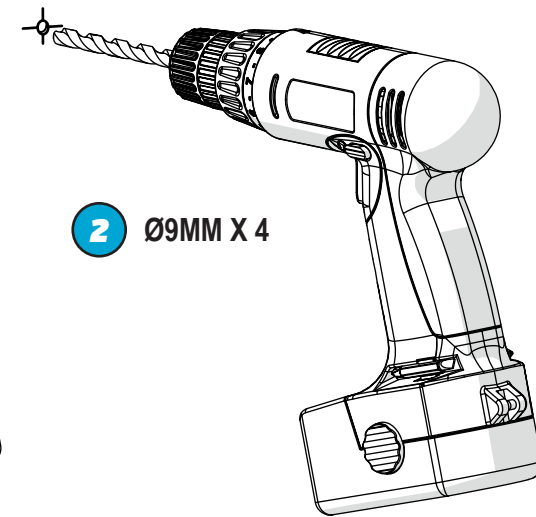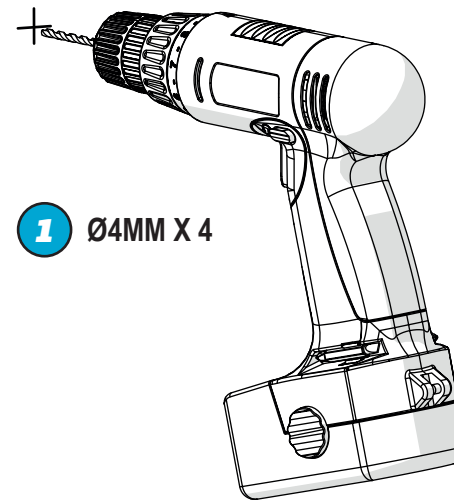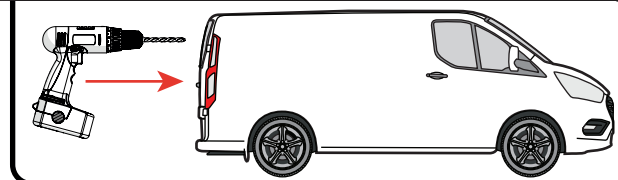


11

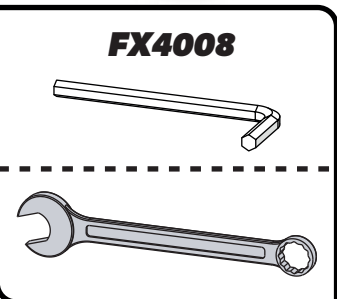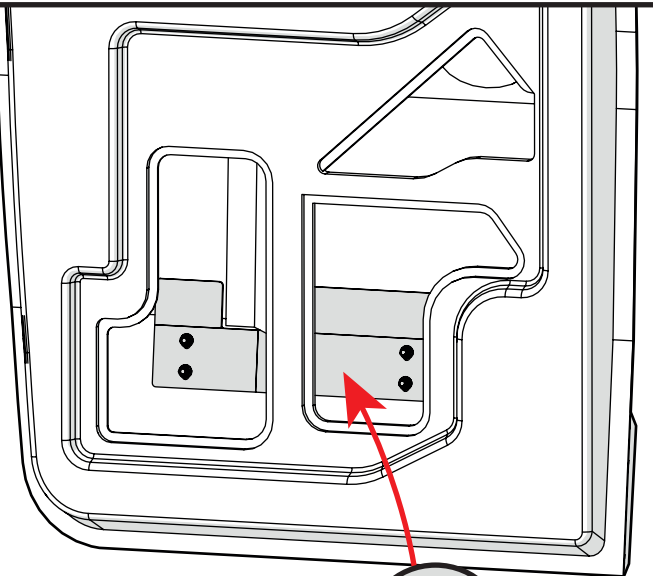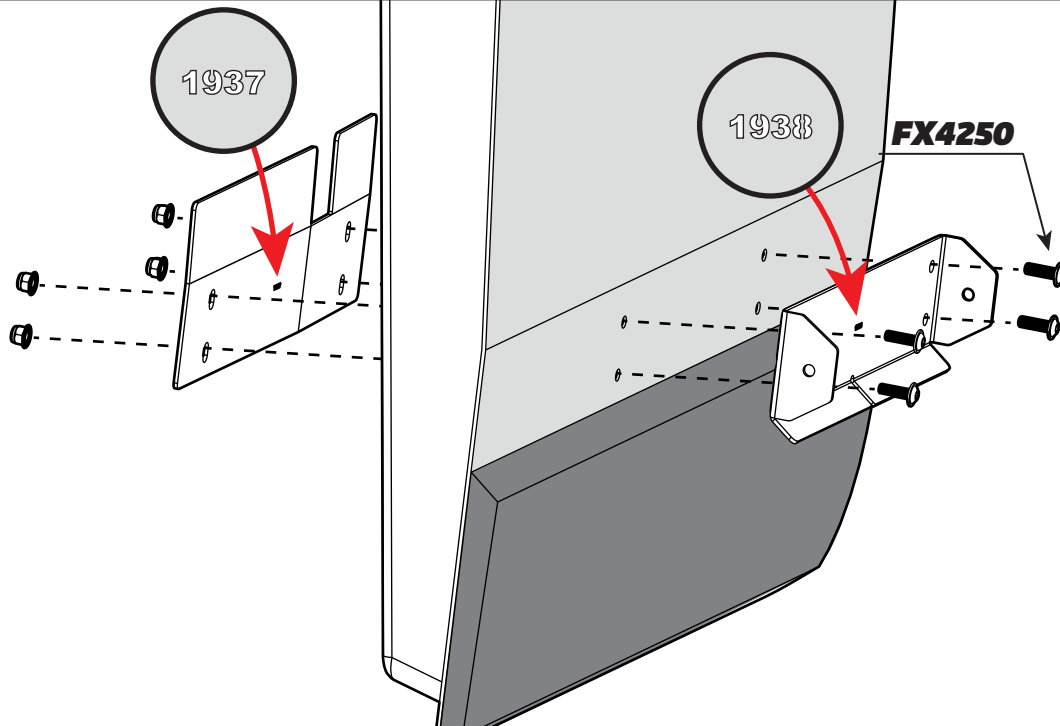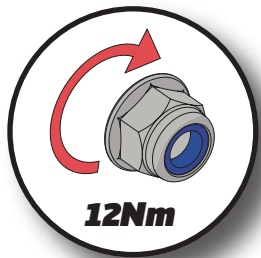


12

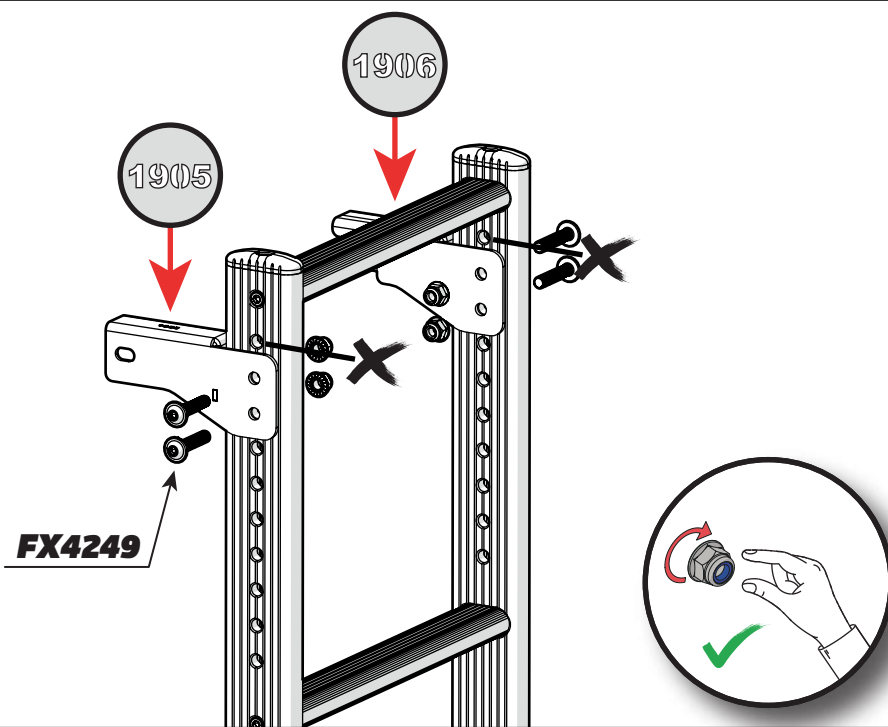


13

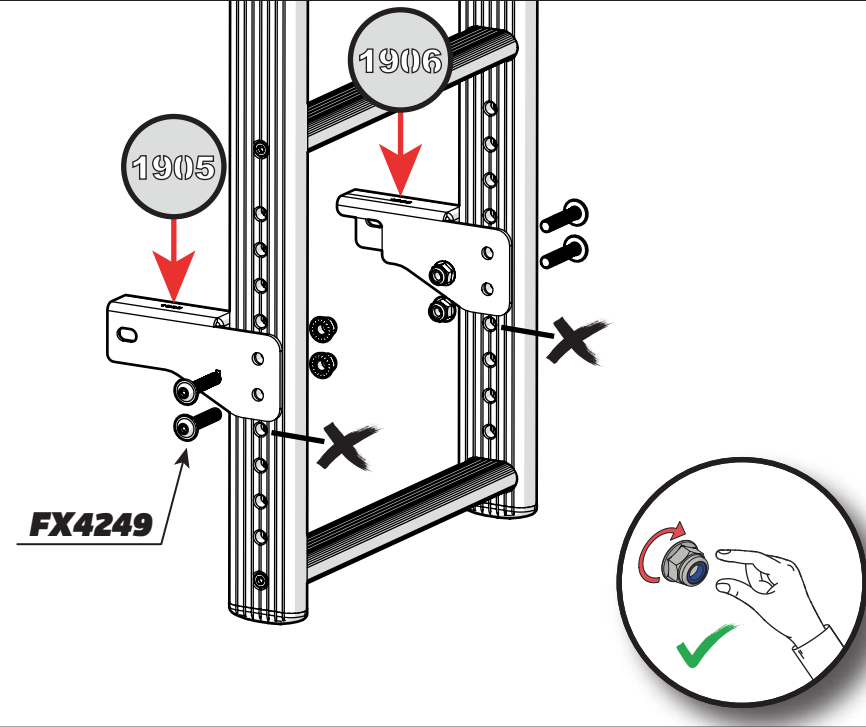


14

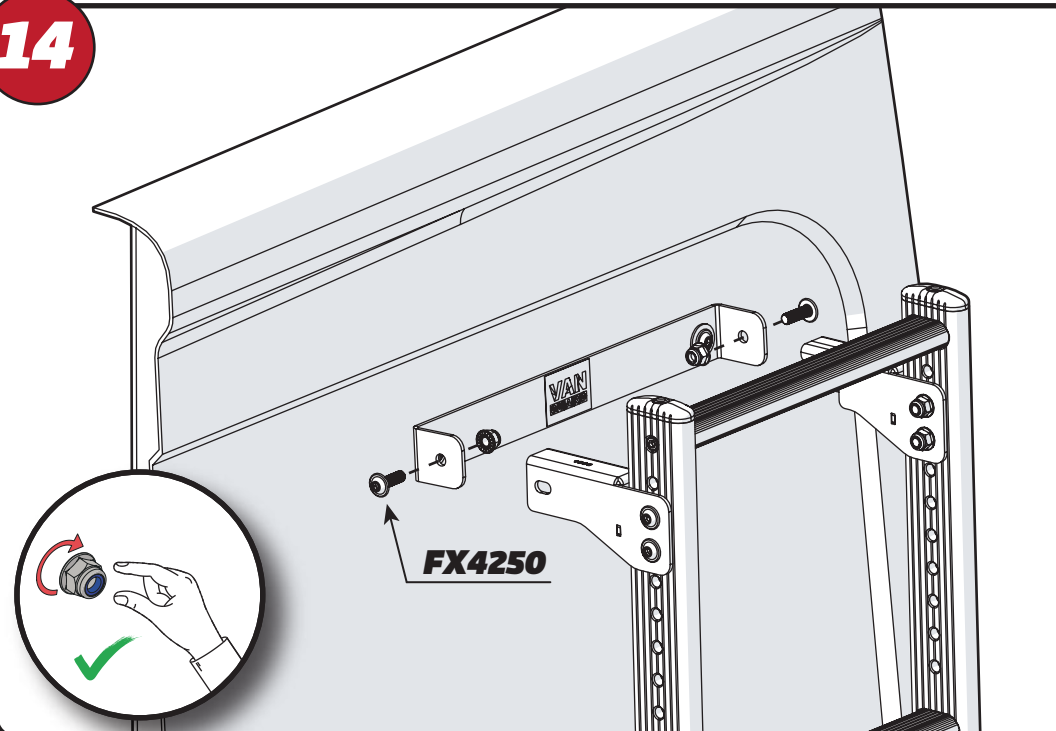


15

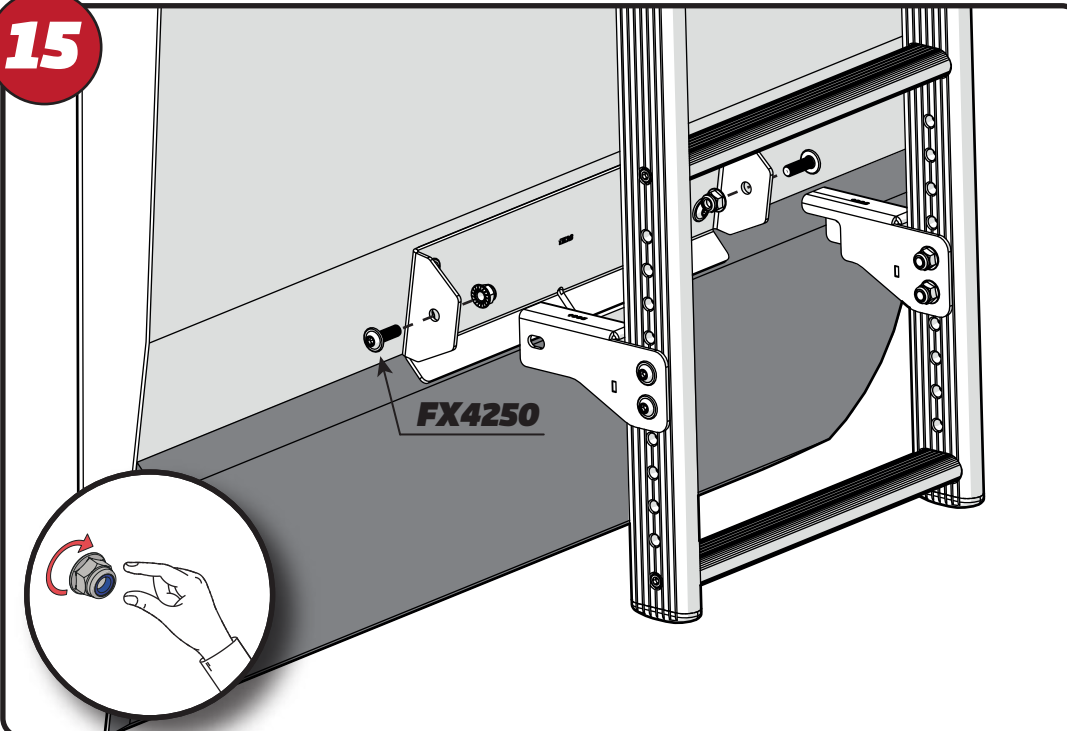


16

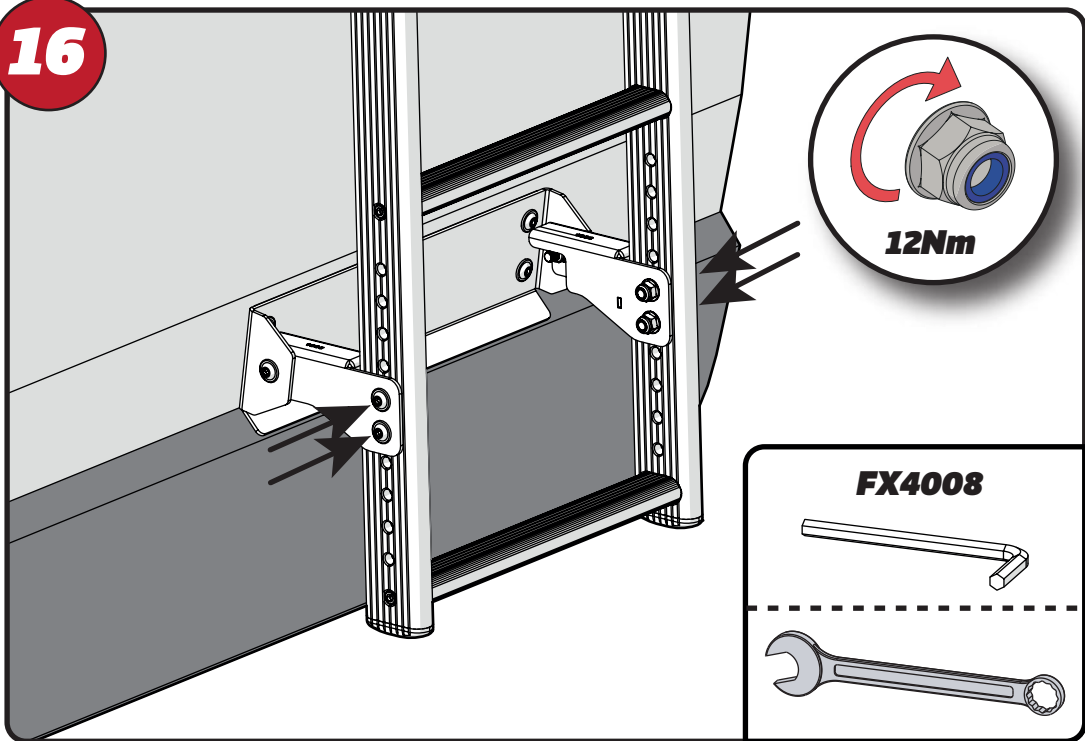


17

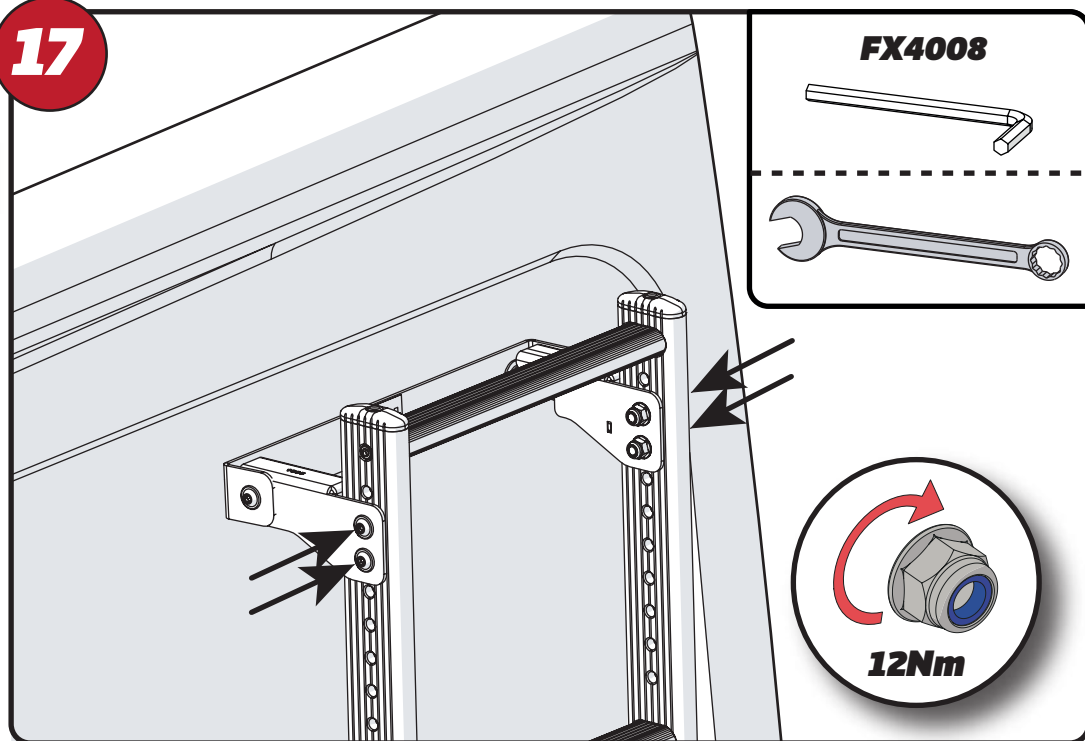


18

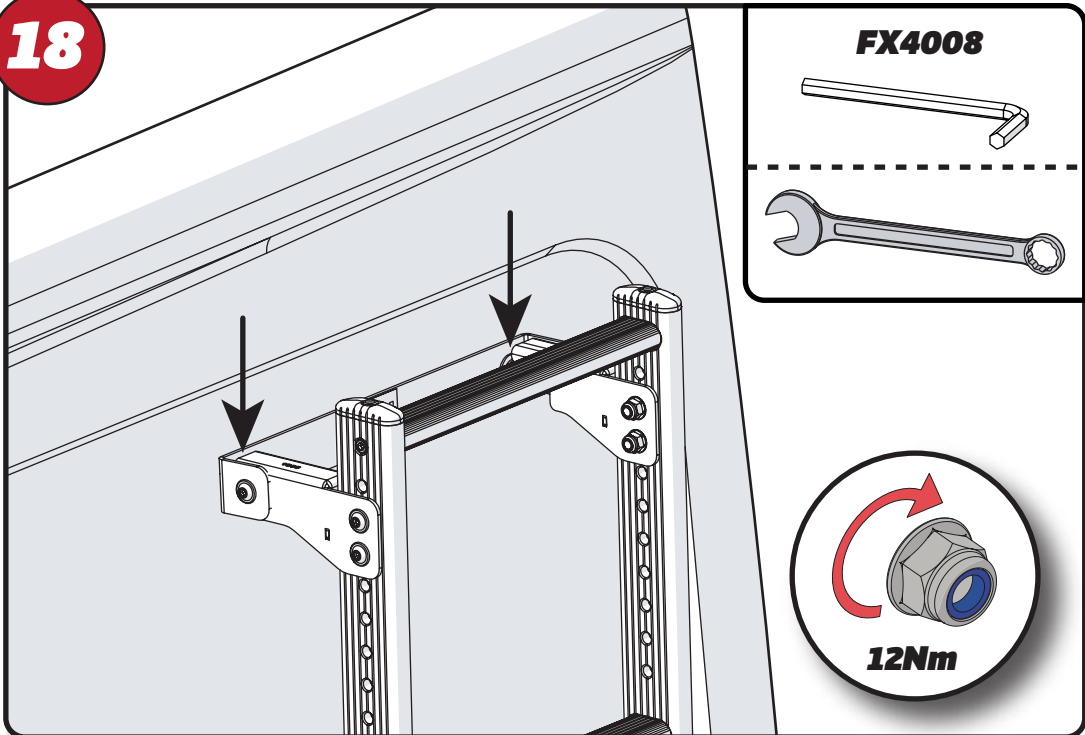



19

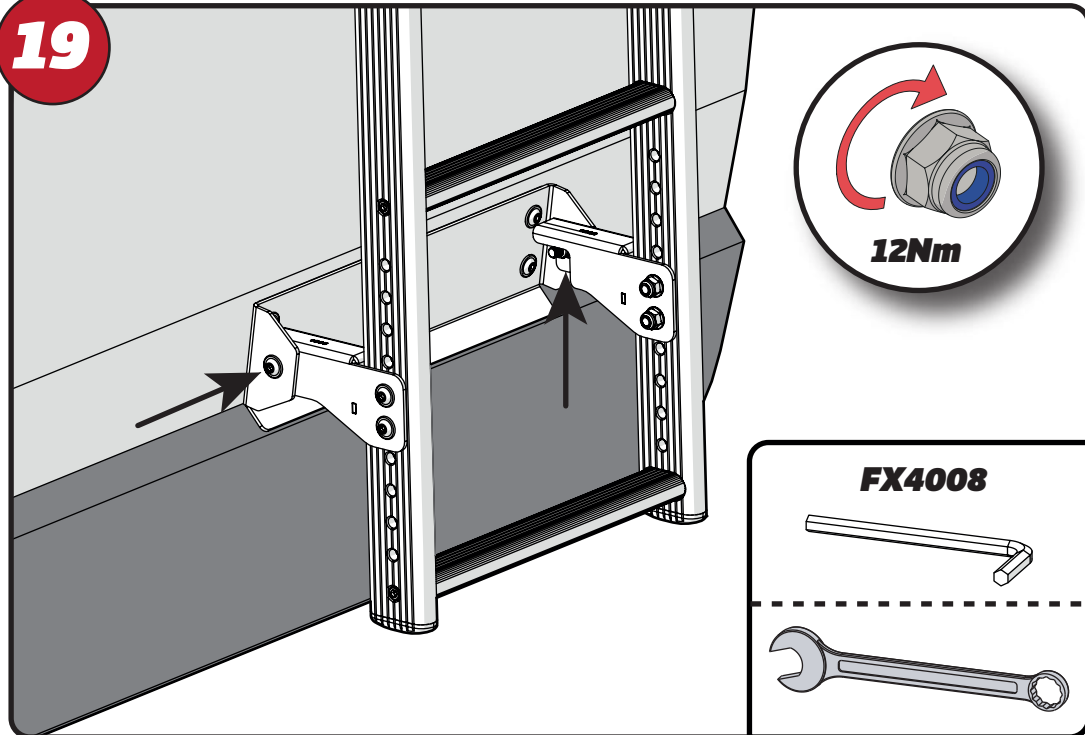

20

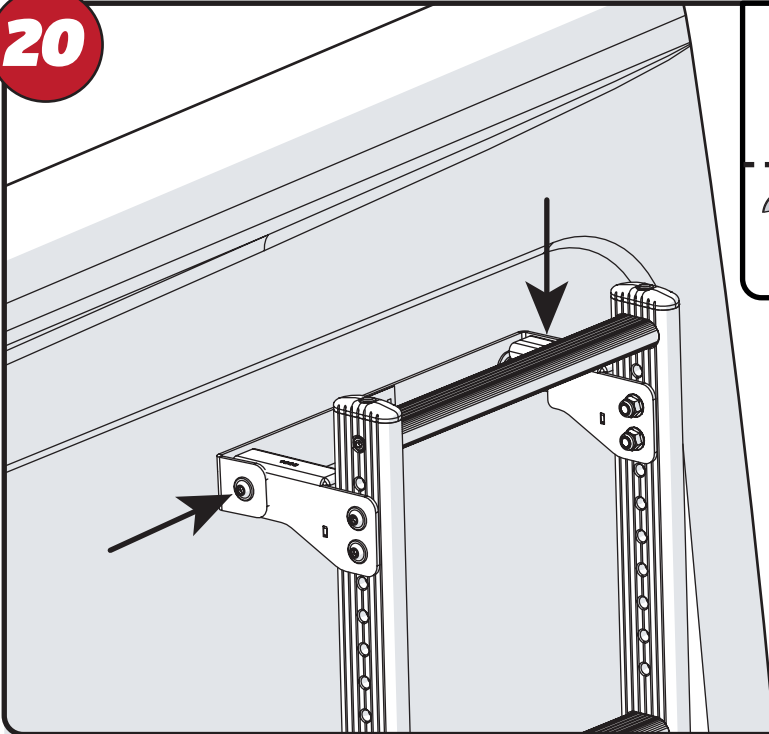


FX4008

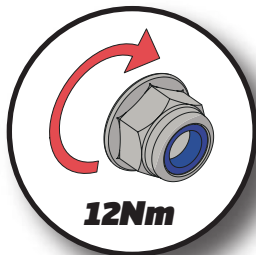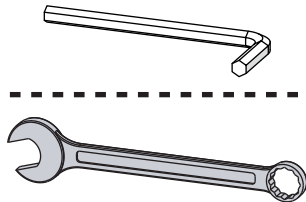


12Nm

21

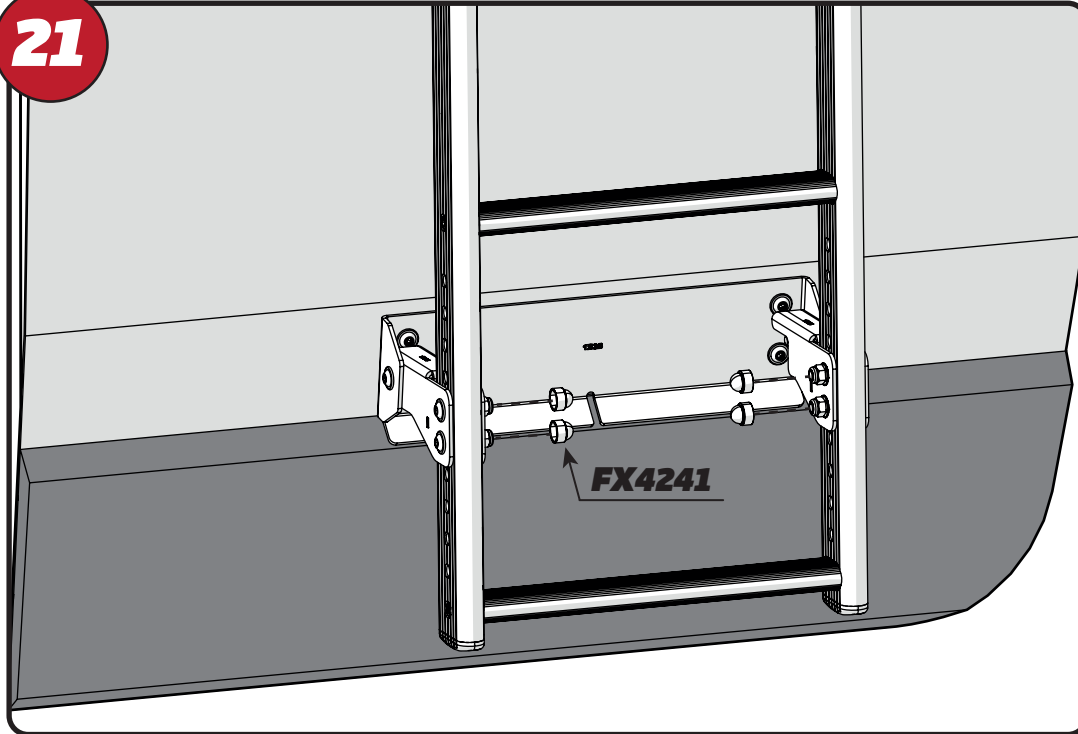

FX4241

22

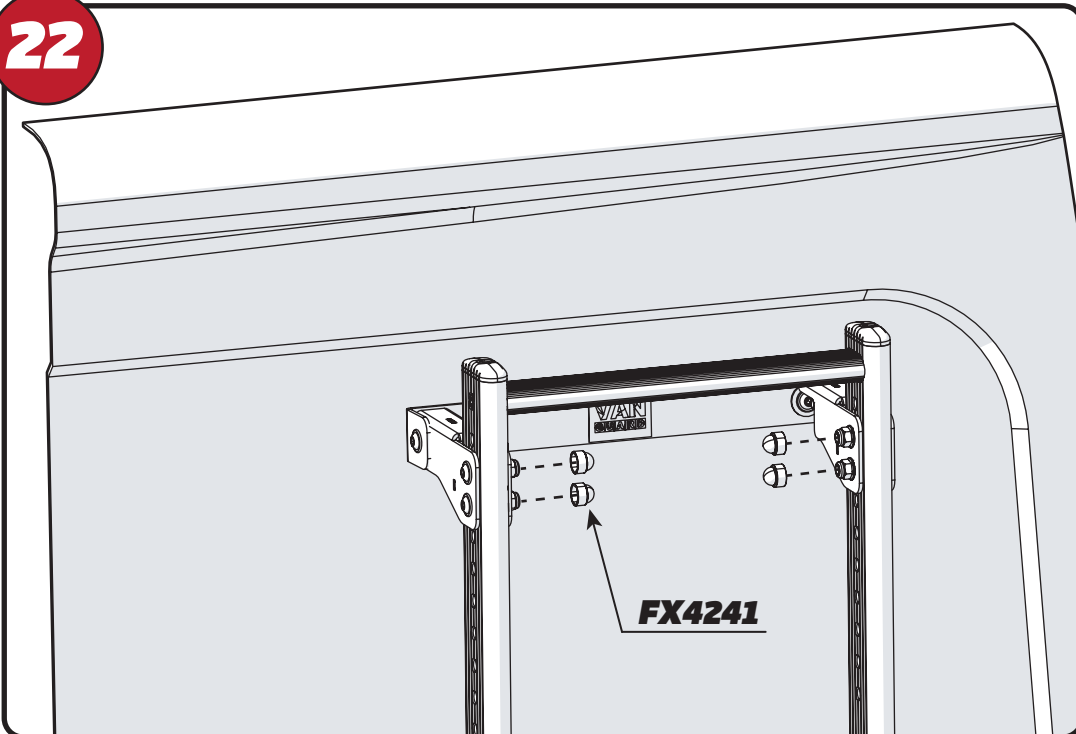

FX4241

23

