

IN8413

ULTI Ladder

2

**VAN
GUARD**



1



+


2




**THIS INSTRUCTION COVERS THE FOLLOWING MODELS
CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING**

VGL7-02

Ford Transit: 2000-2014
H3 - Twin Rear Doors

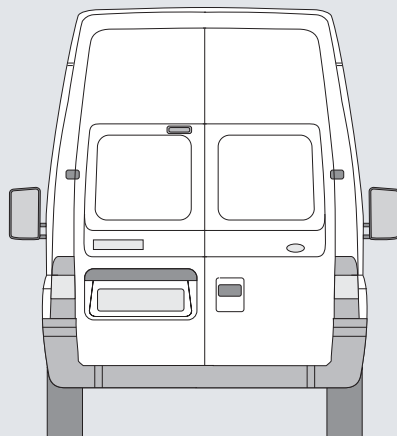

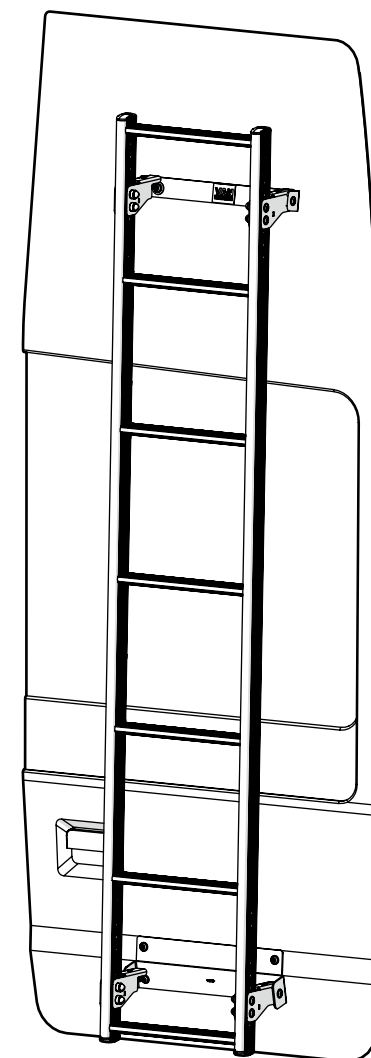


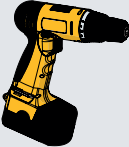
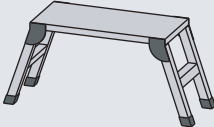
Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351

















This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8413_B (CN:00140)


Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING


TOOLS REQUIRED	
13MM X1	
4MM X1	
9MM X1	
	
	

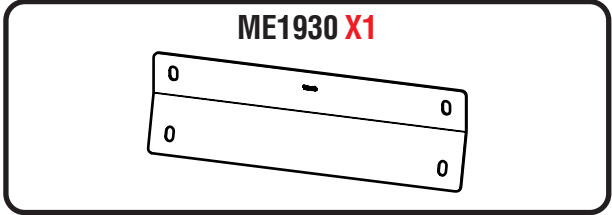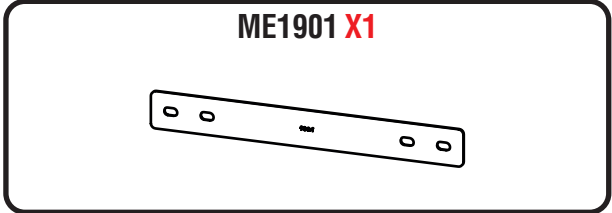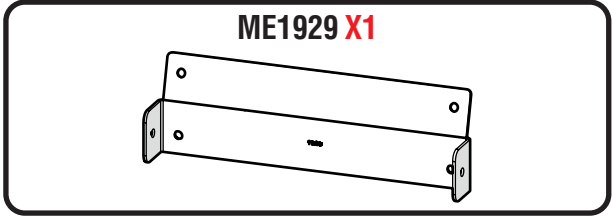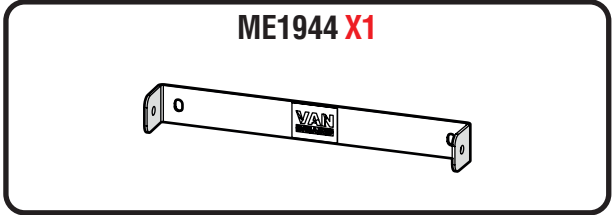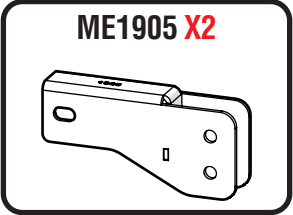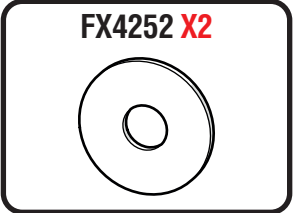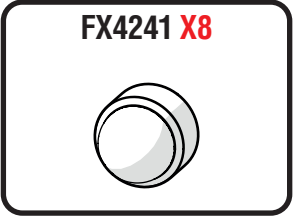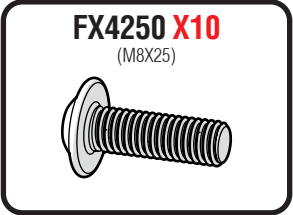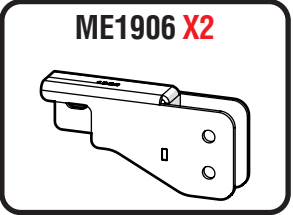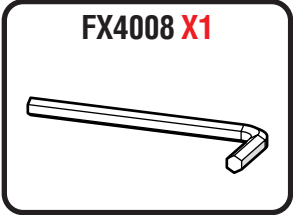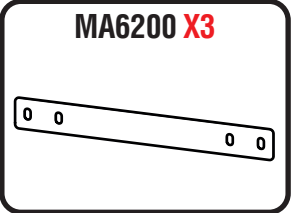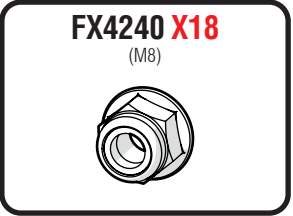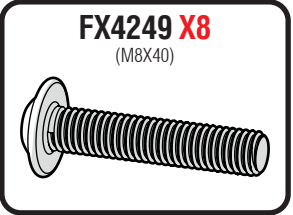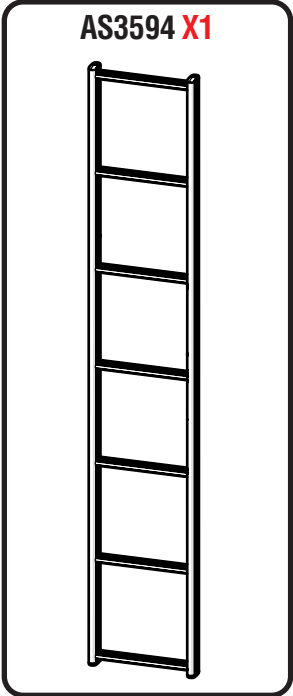


01

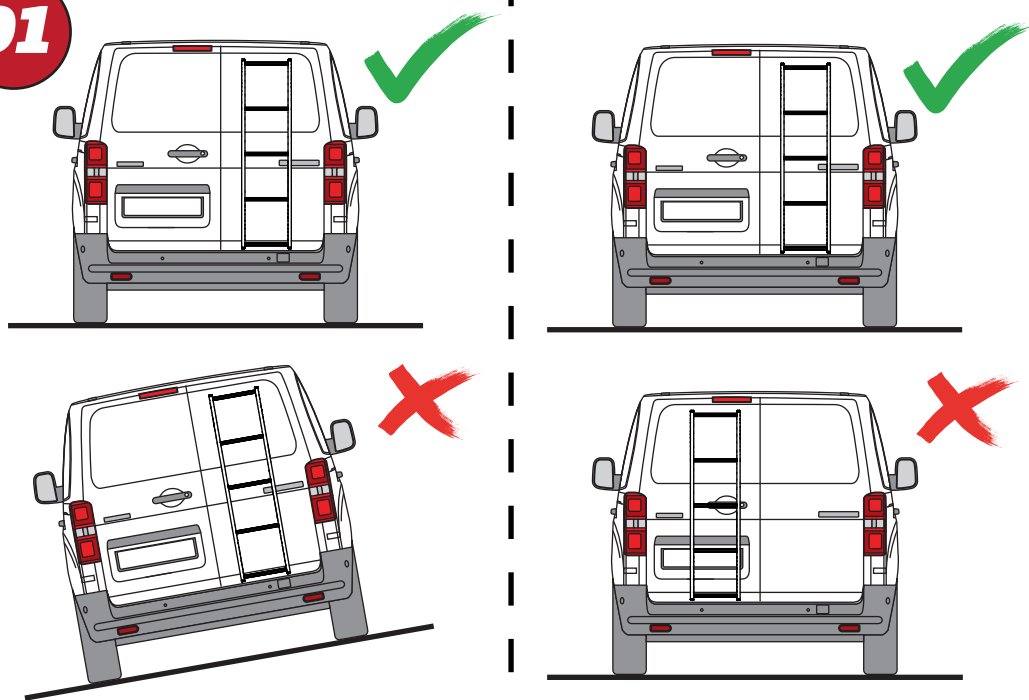


02

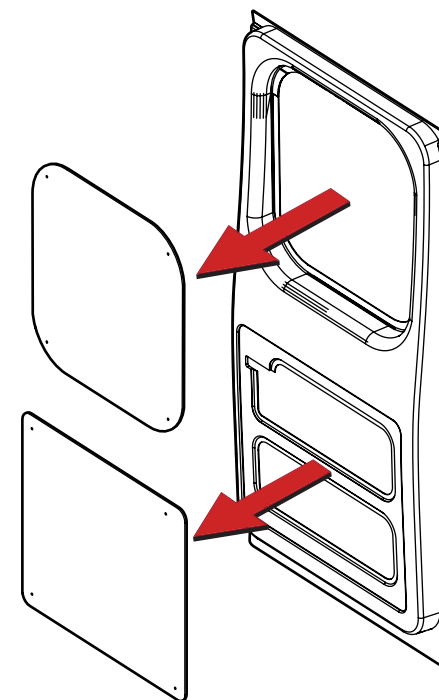

03

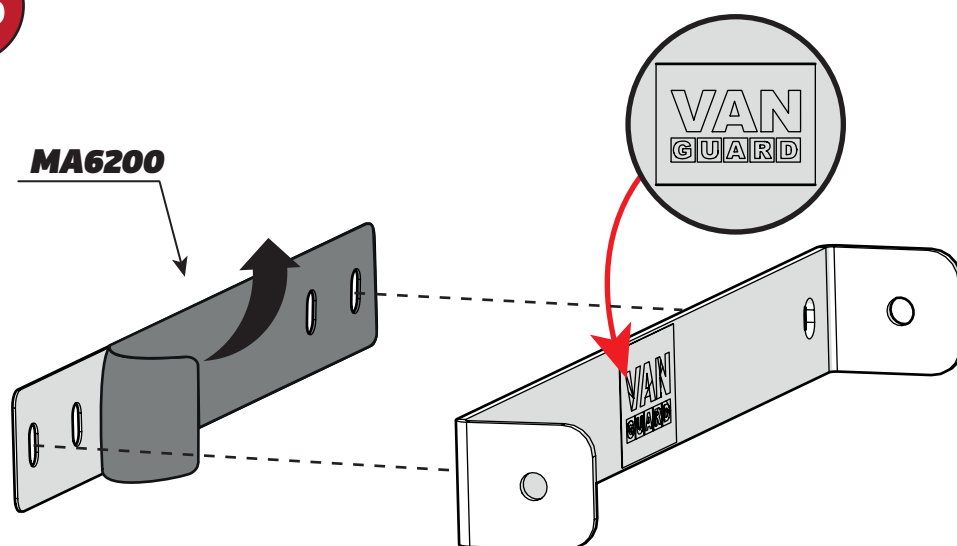



04

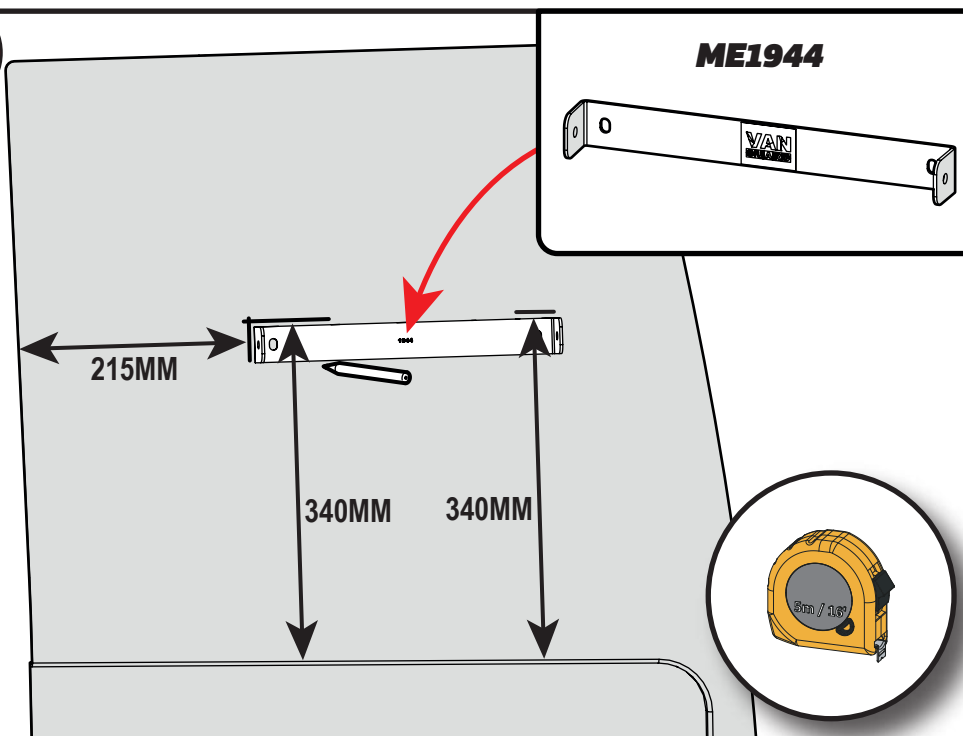


05



06


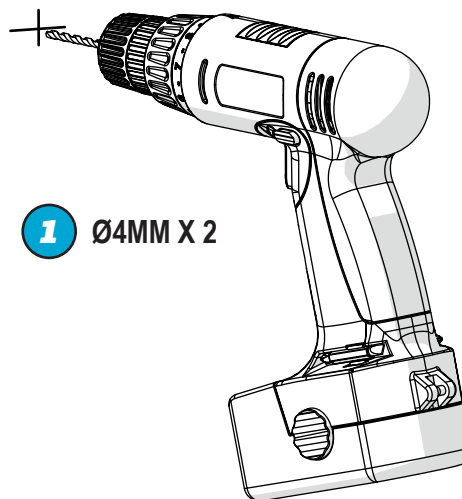
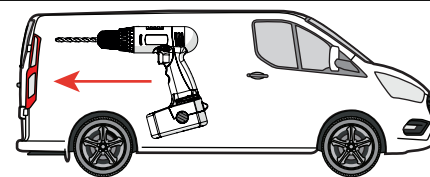


1 Ø4MM X 2

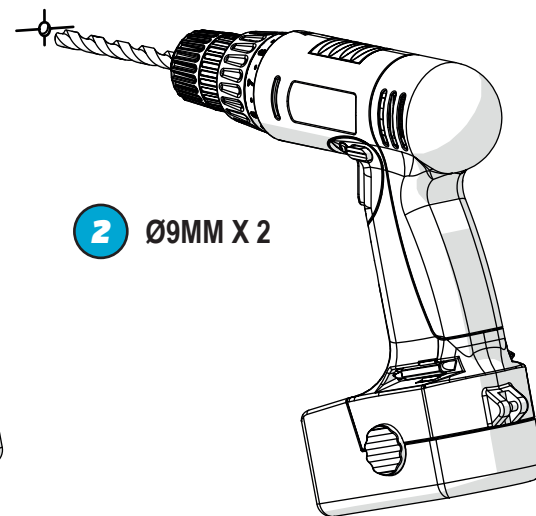


2 Ø9MM X 2

07

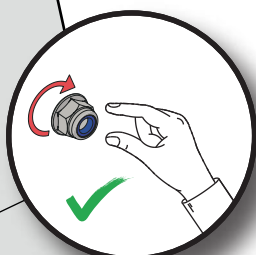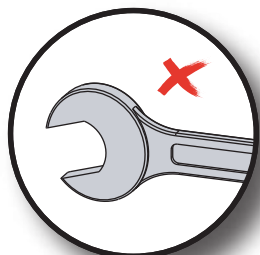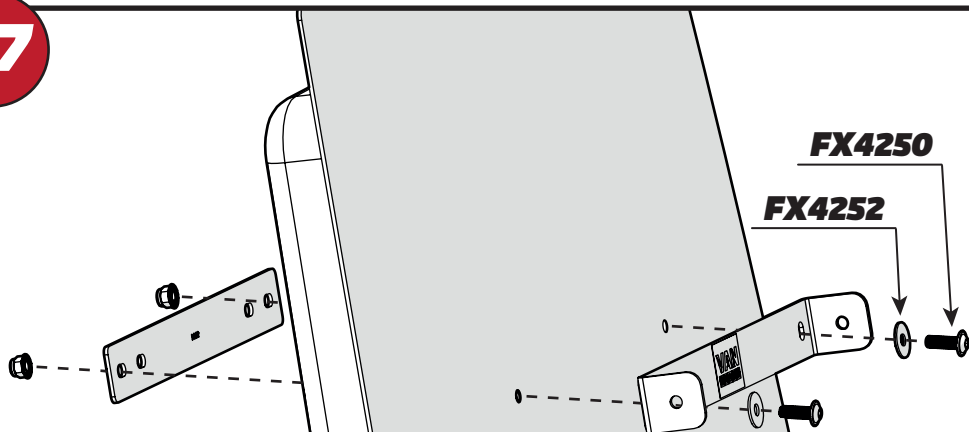


08

MA6200

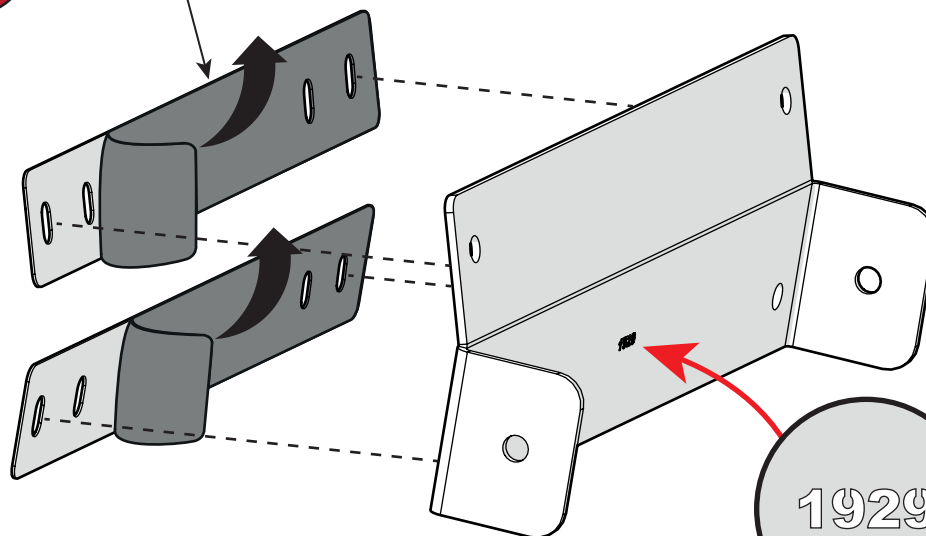


1929


09

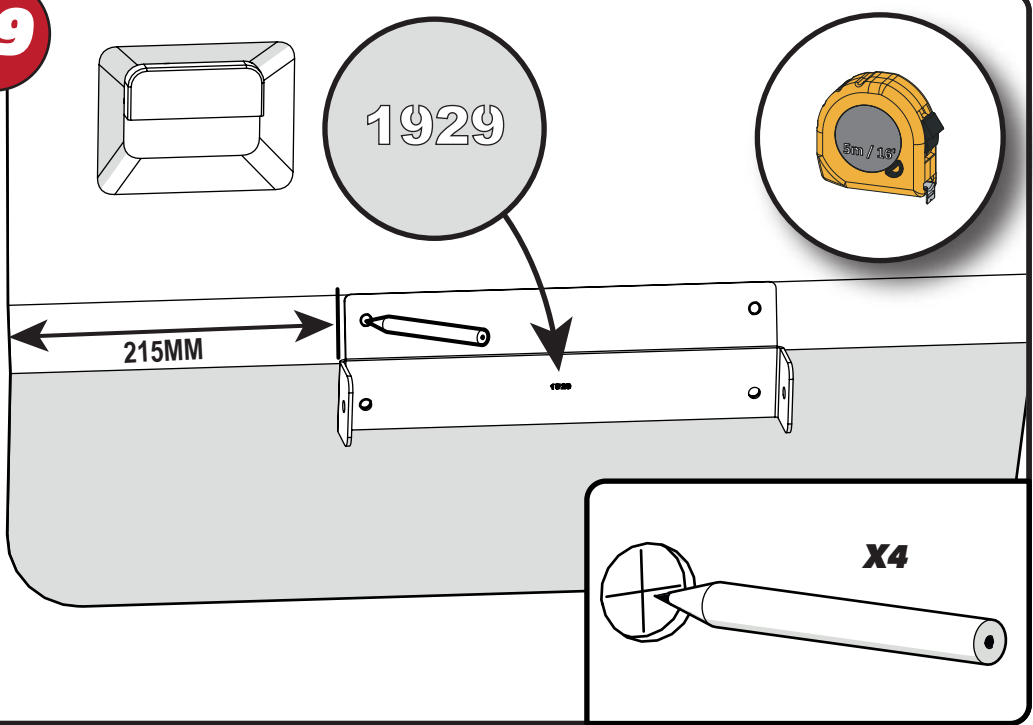


10

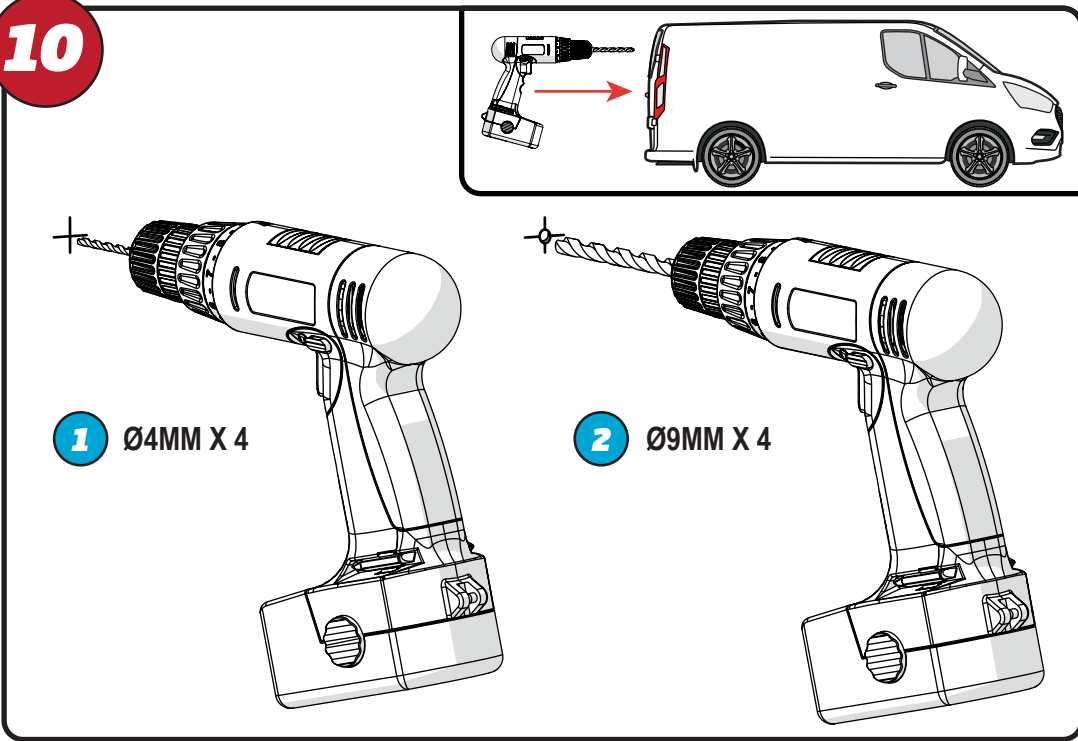


11

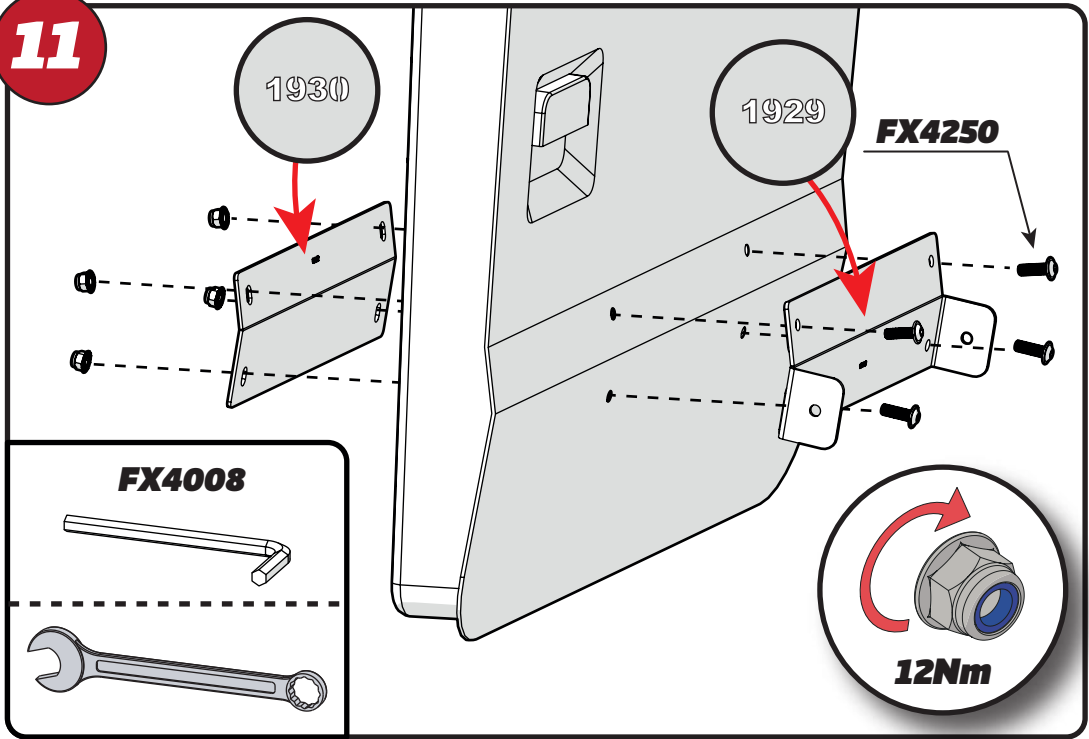


12

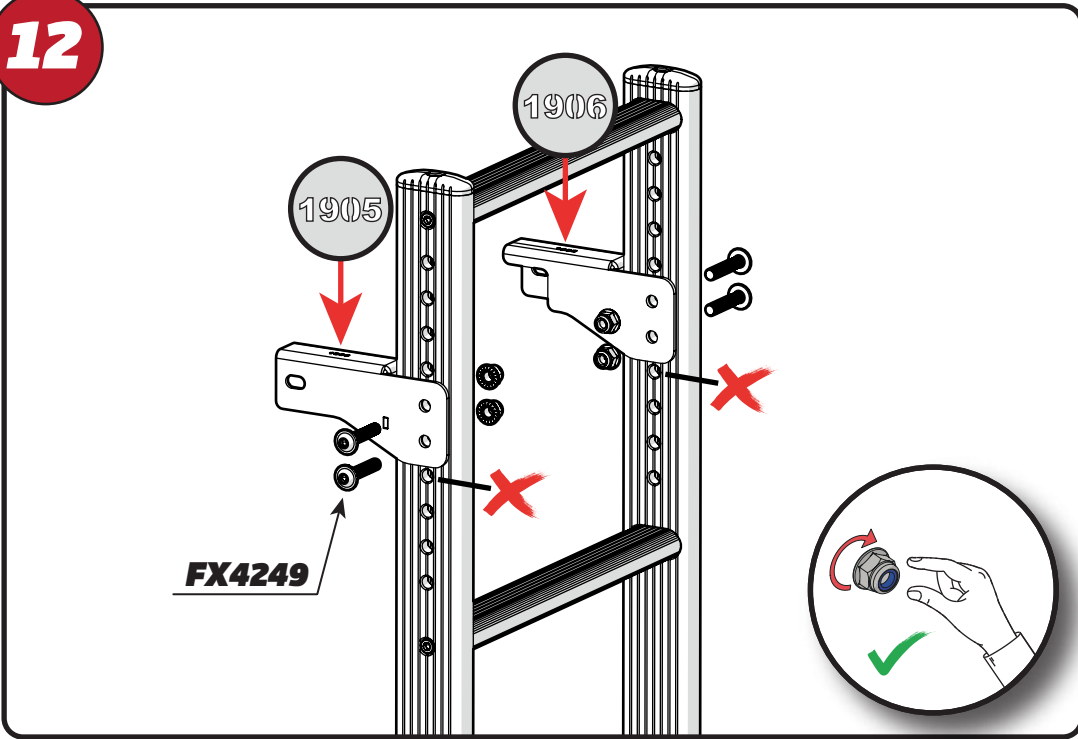


13

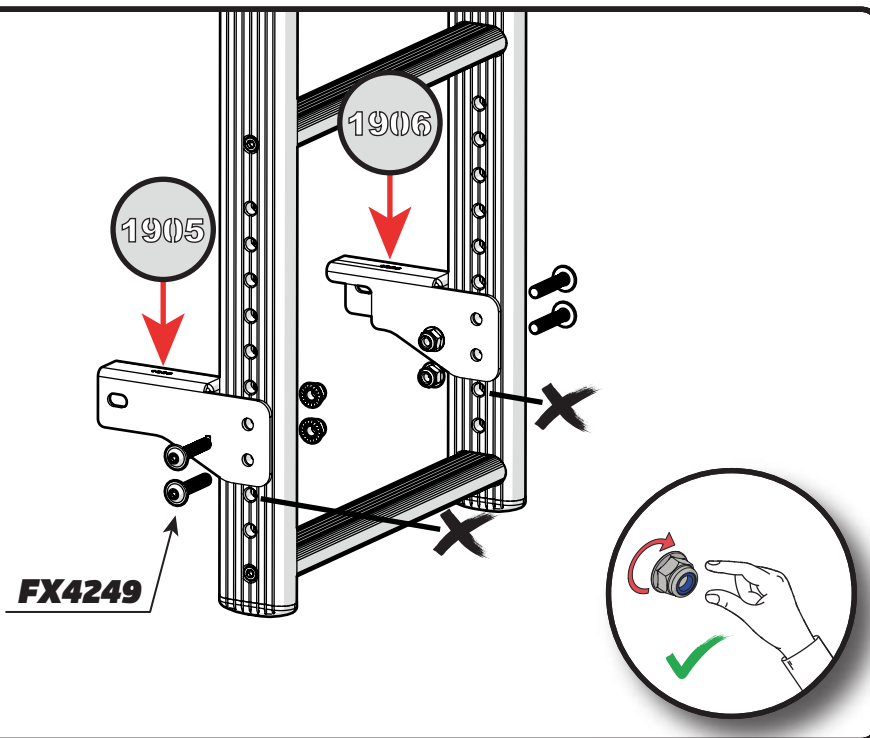


14

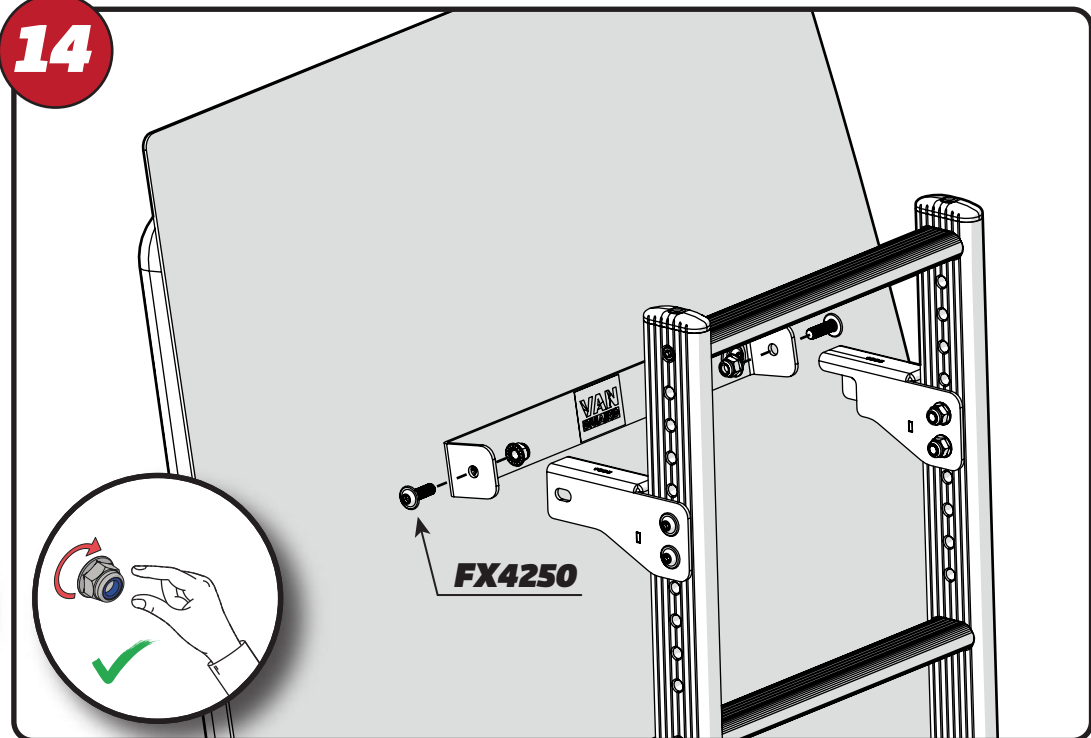


15

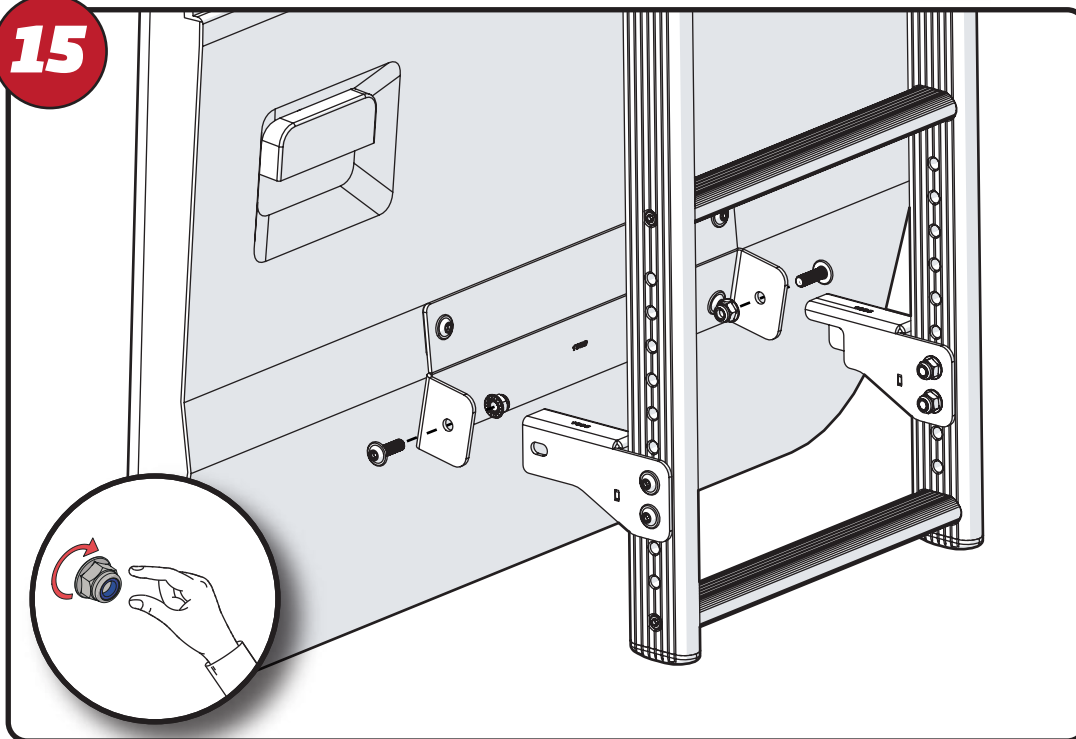


16

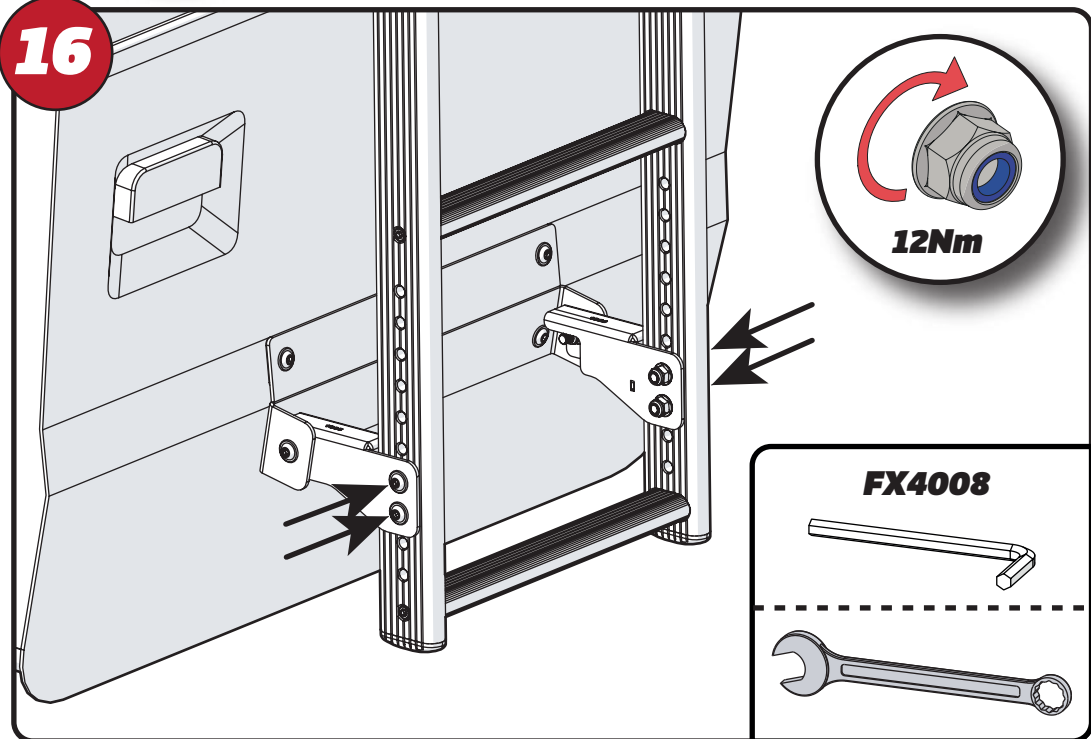


17

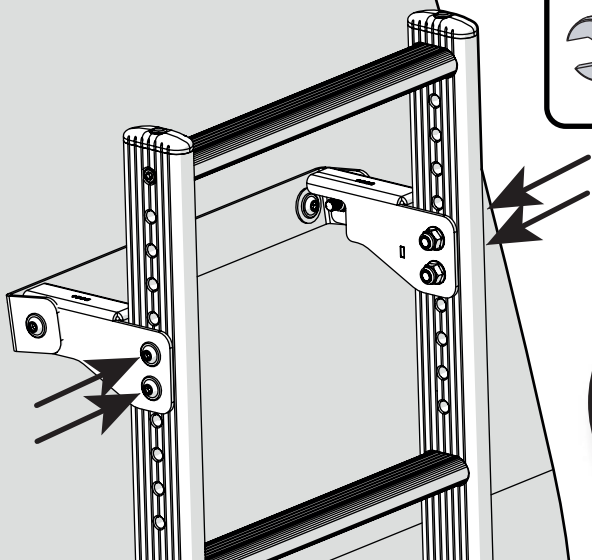


FX4008




18

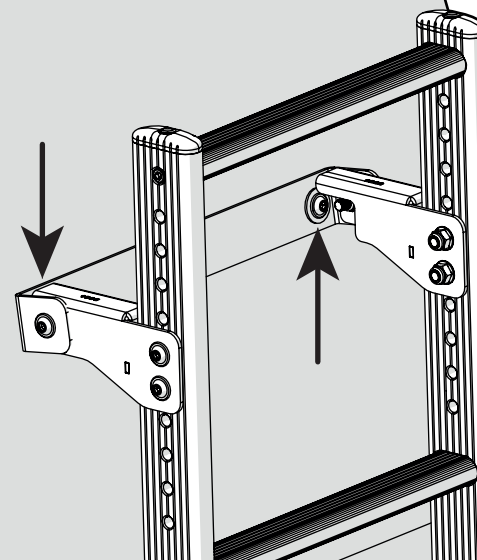


FX4008




19

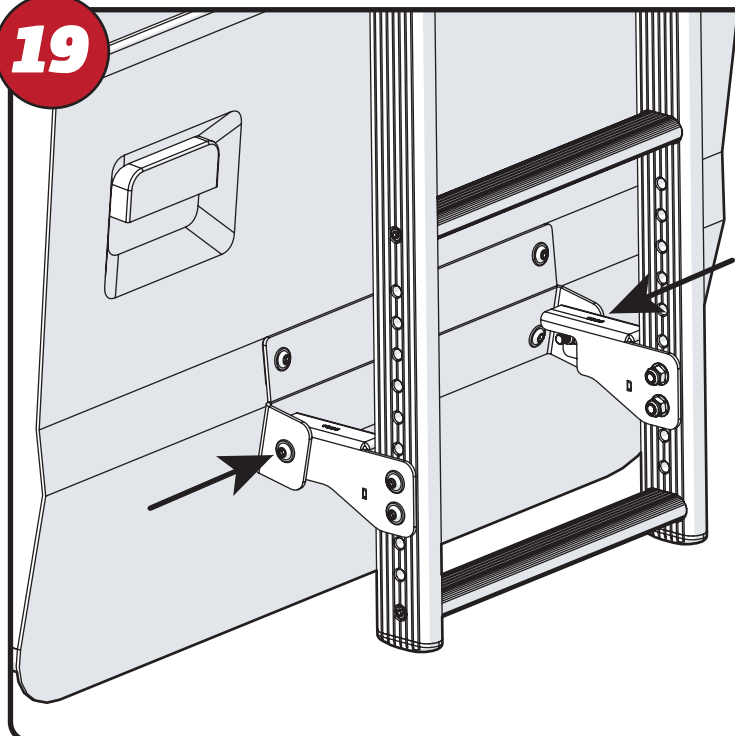


FX4008

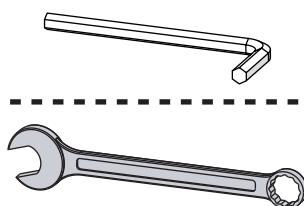


20

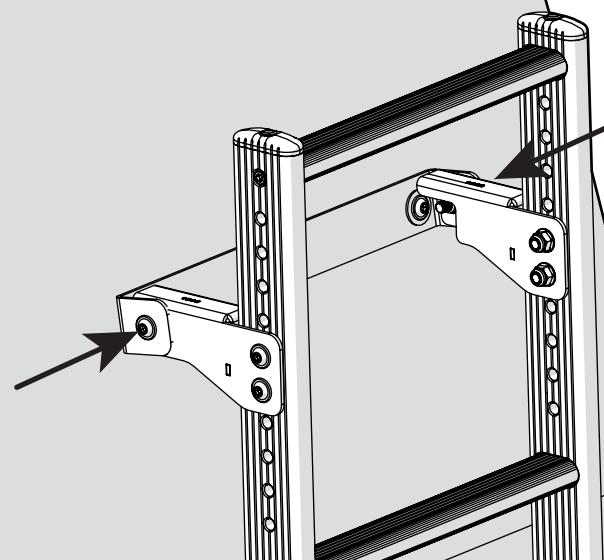


FX4008



21

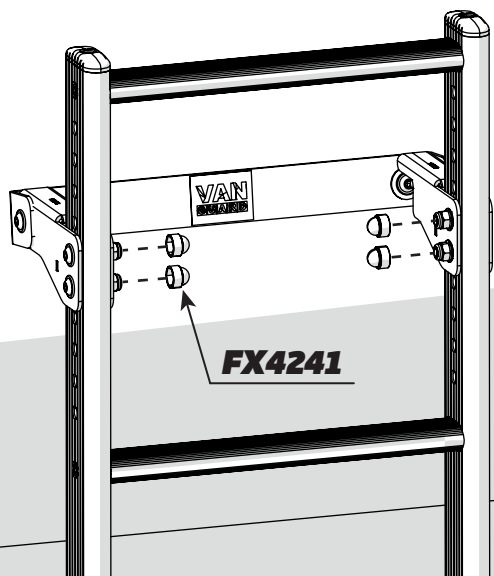

22

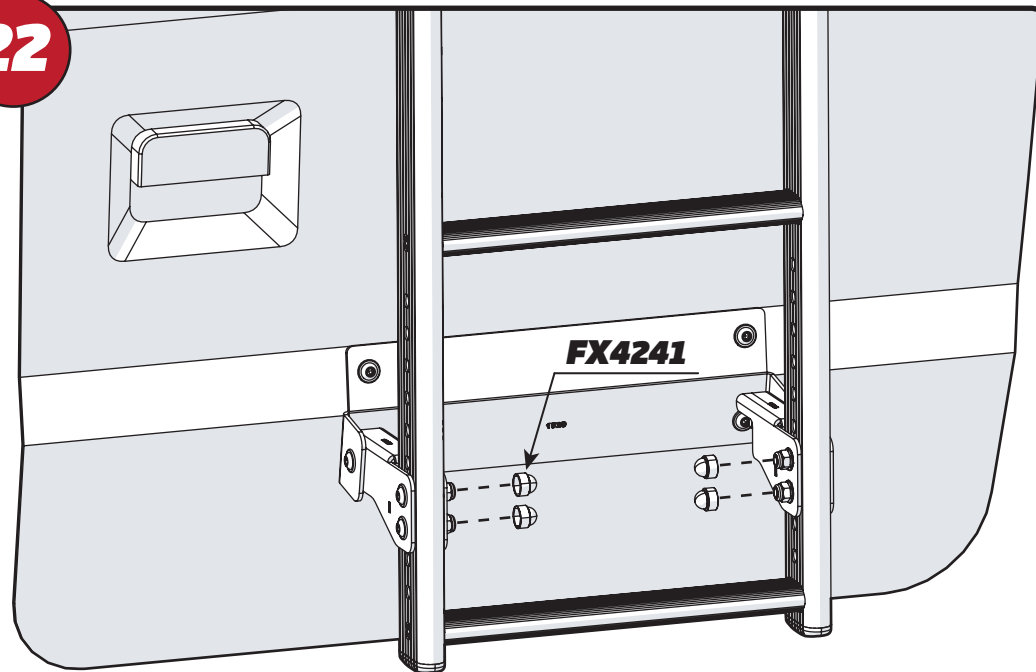

23

