

IN8416

ULTI Ladder


1

2


**THIS INSTRUCTION COVERS THE FOLLOWING MODELS
CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING**

VGL7-05

Citroen Relay: 2006 on
Fiat Ducato: 2006 on
Peugeot Boxer: 2006 on
Vauxhall Movano: 2022 on
H2 / H3 - Twin Rear Doors

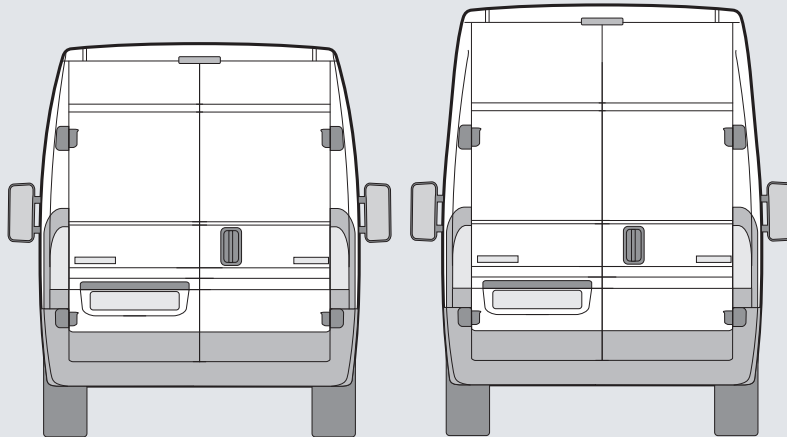


Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351

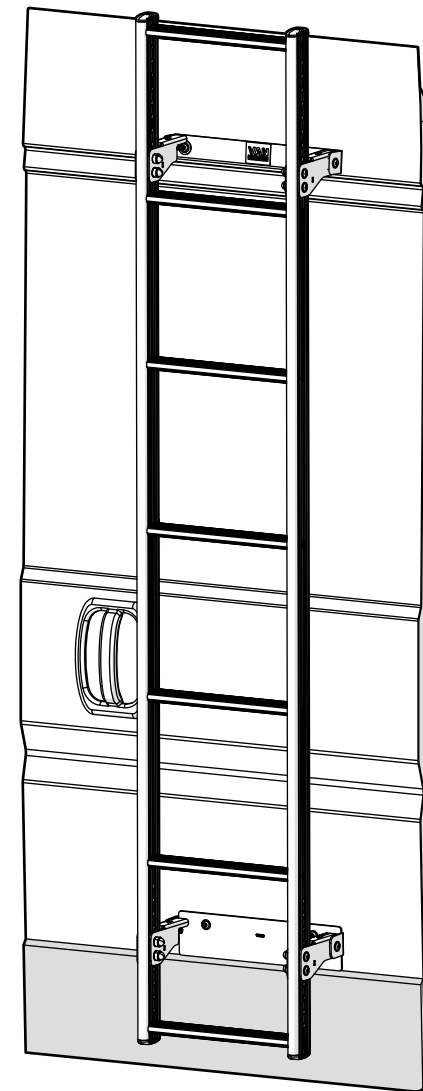


SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING

TOOLS REQUIRED


13MM X1

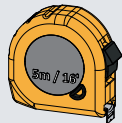

4MM X1

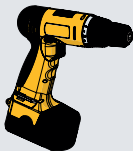


9MM X1

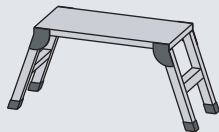

X1




AS3594 X1

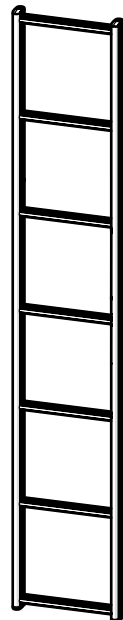


FX4249 X8

(M8X40)



FX4250 X10

(M8X25)




ME1944 X1




FX4240 X18


(M8)




FX4241 X8




ME1909 X1



MA6200 X3



FX4252 X2

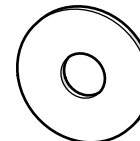


ME1901 X1




FX4008 X1




ME1906 X2

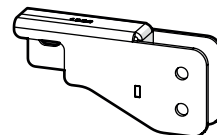


ME1905 X2

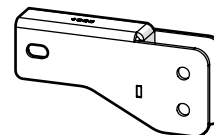


ME1908 X1

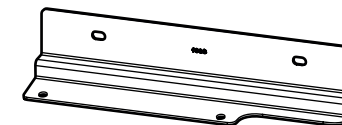


01

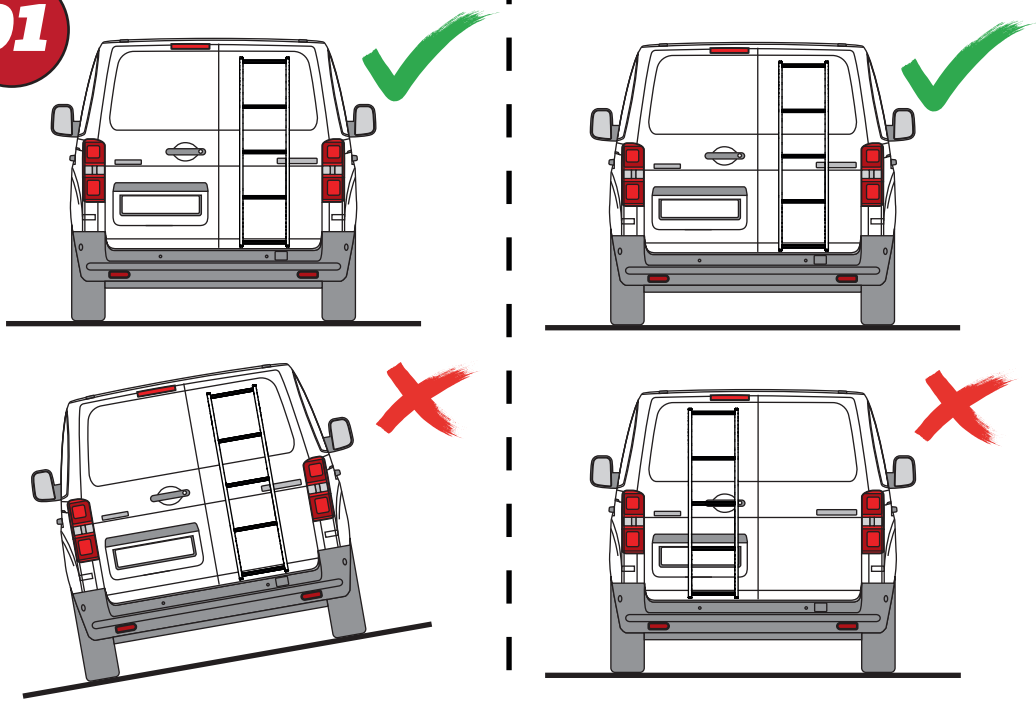


02

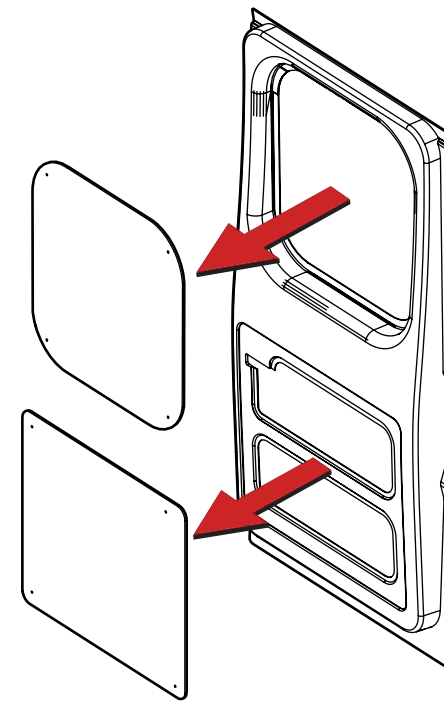


03

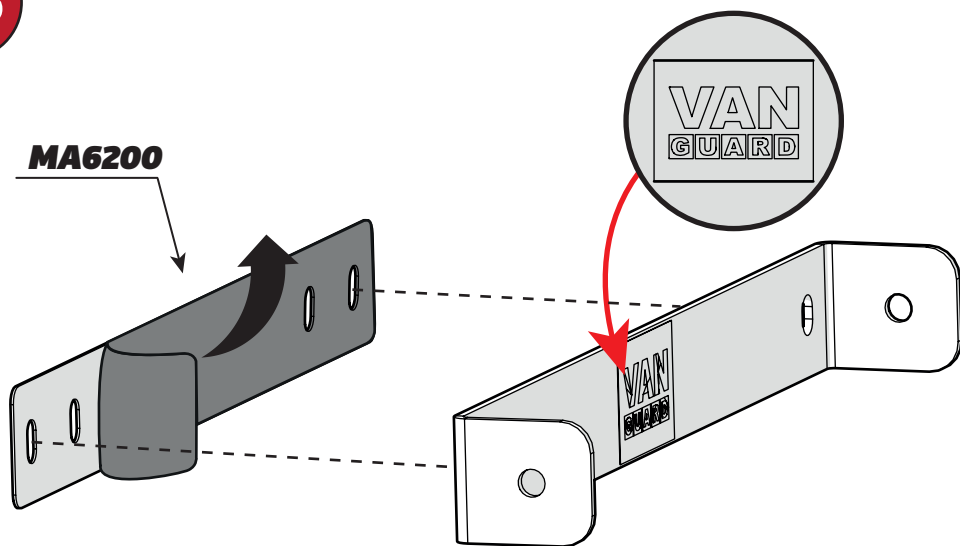



04

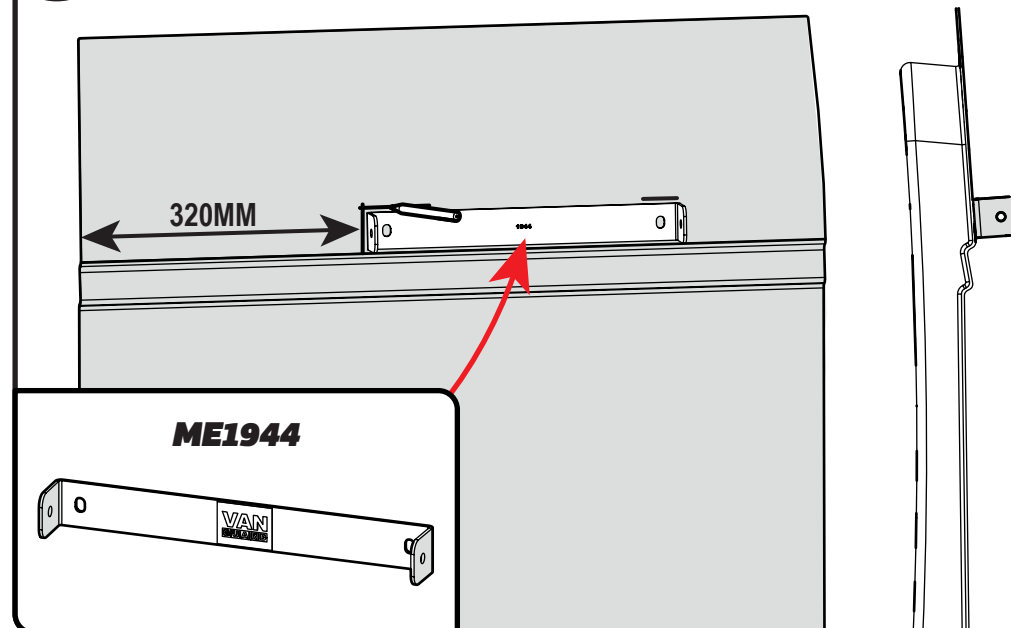


05

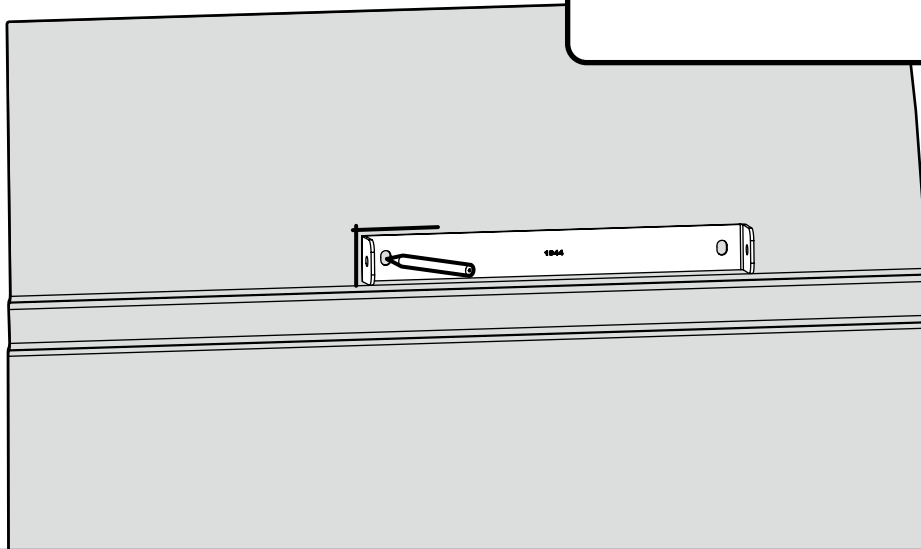


06

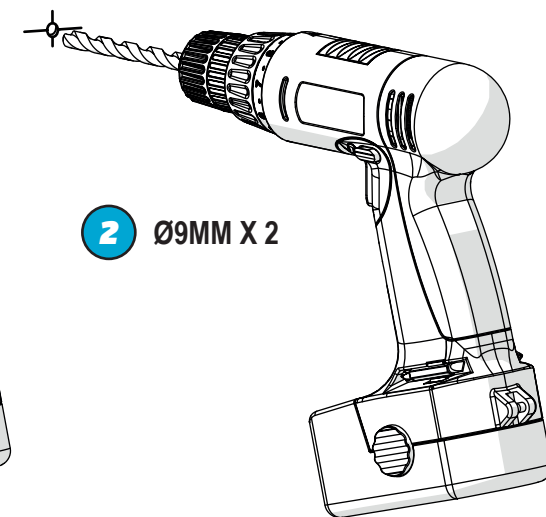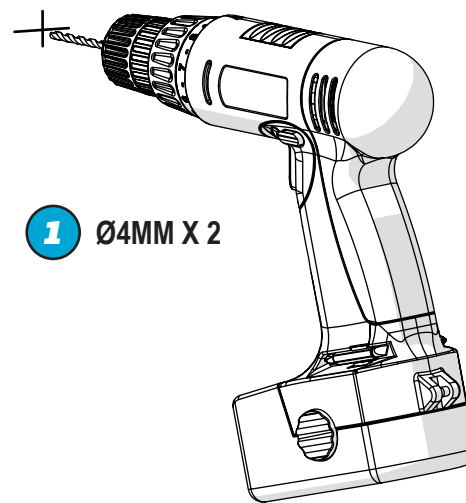


07

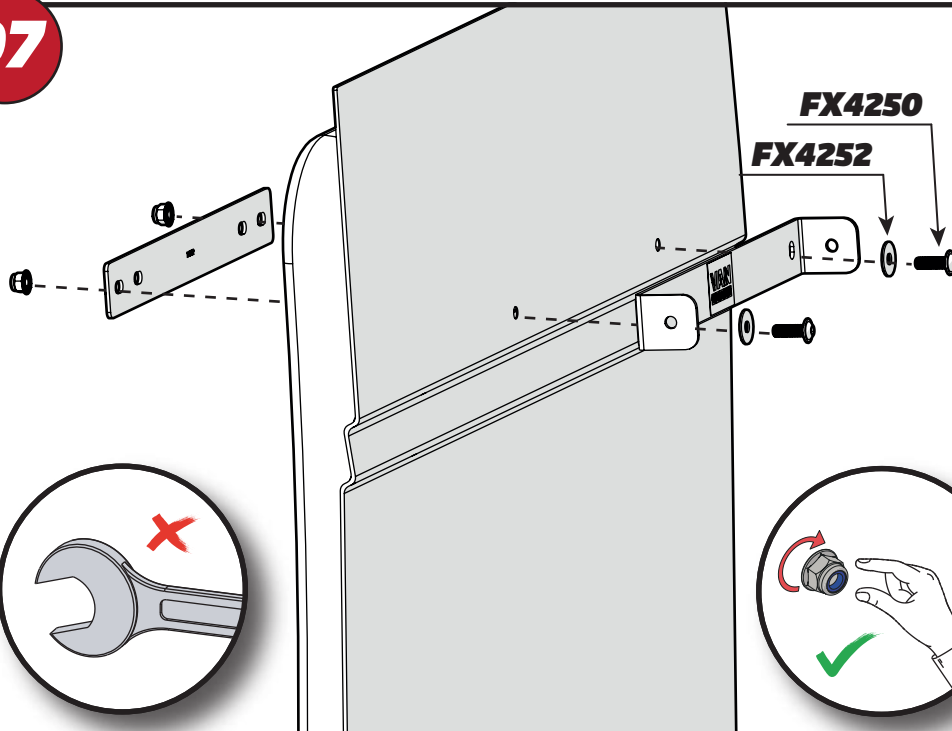


08

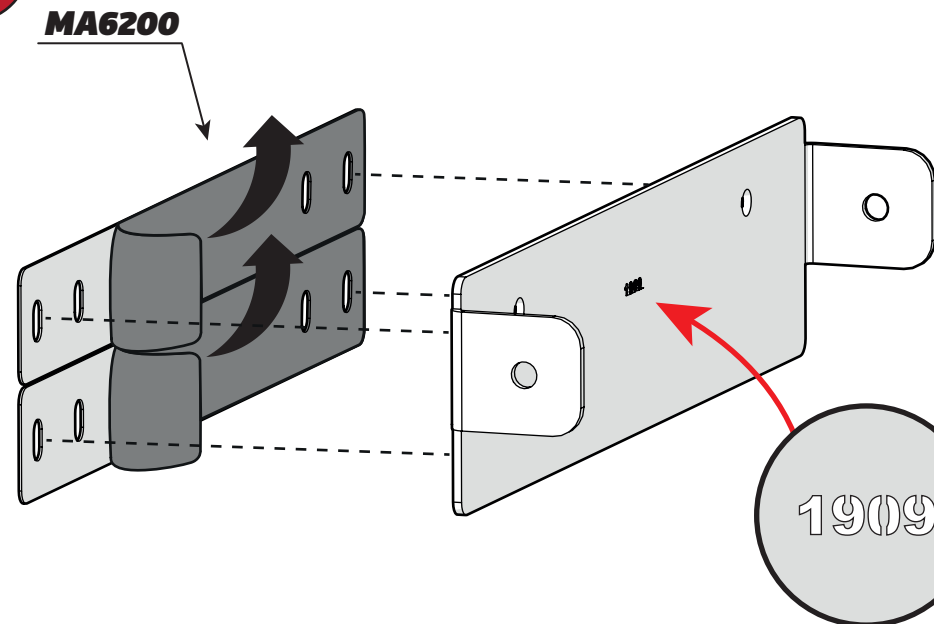




09

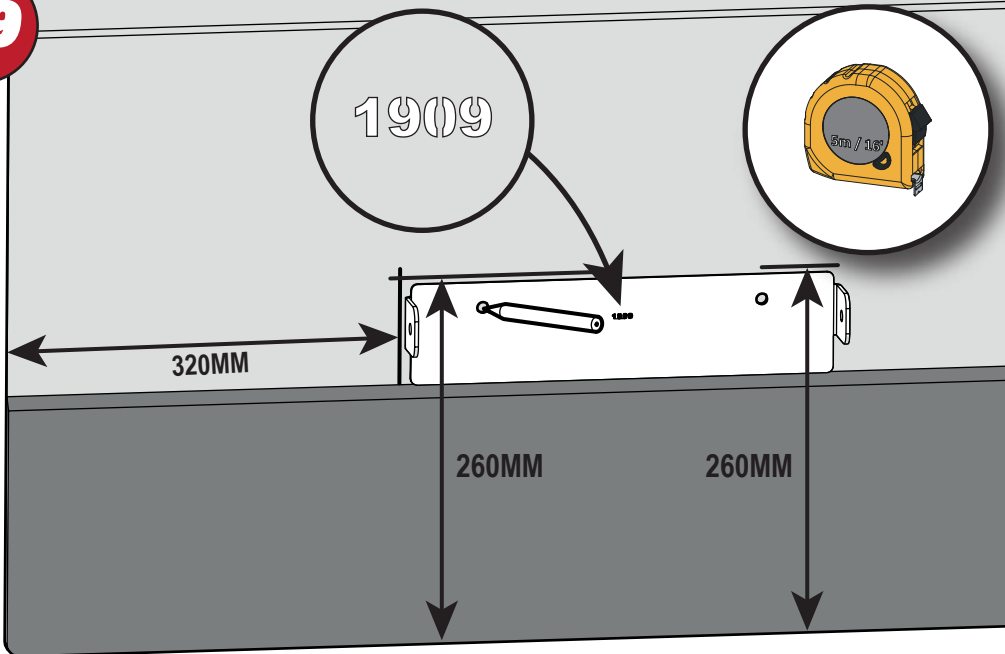




10

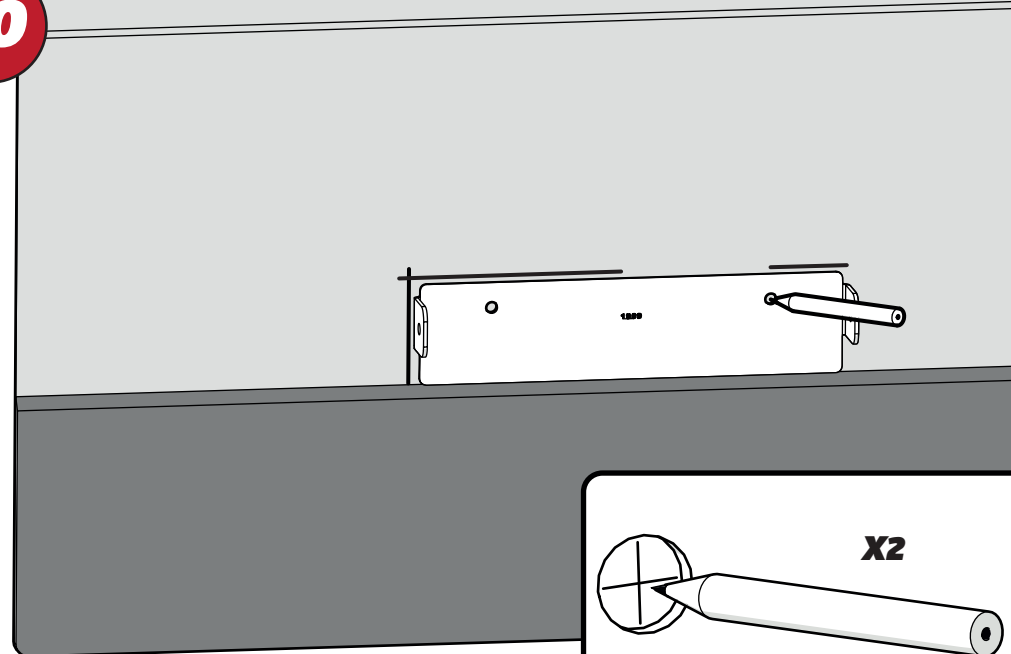


11

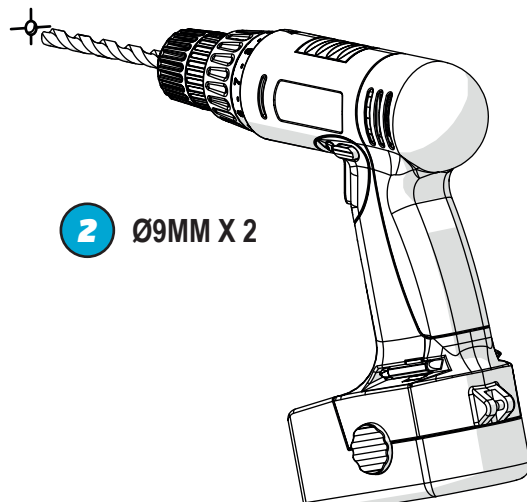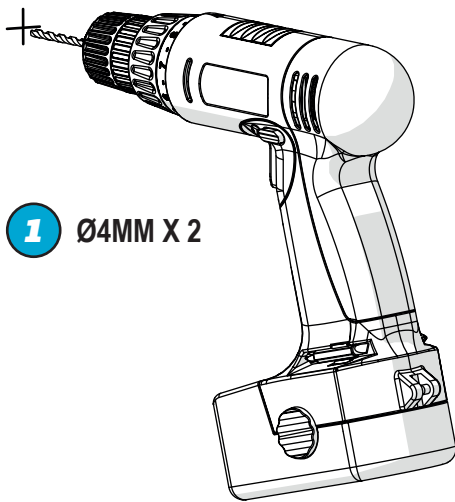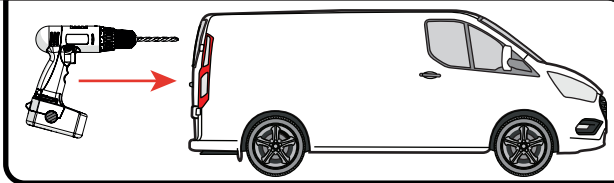


12

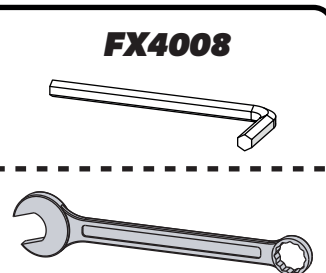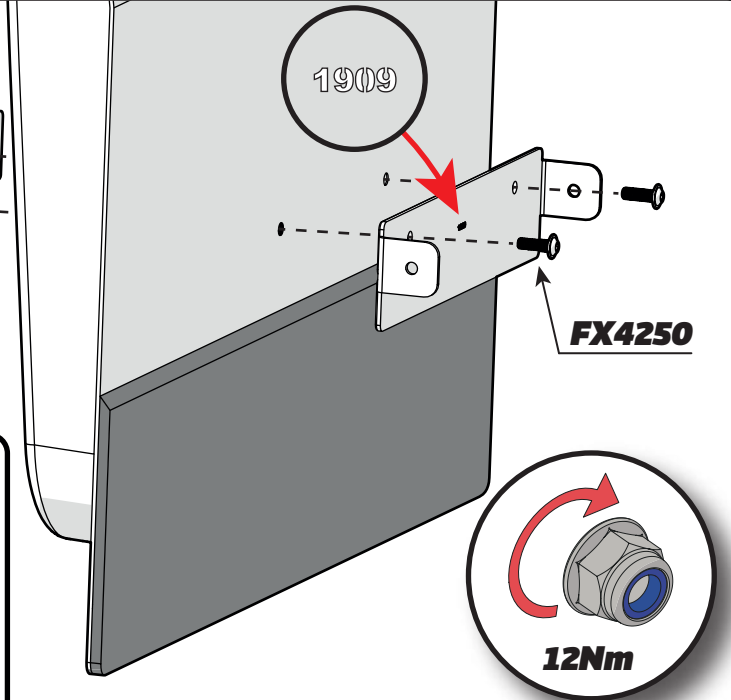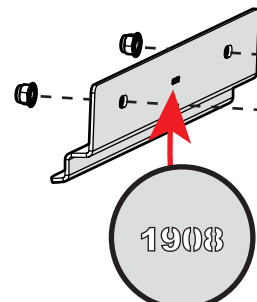


13

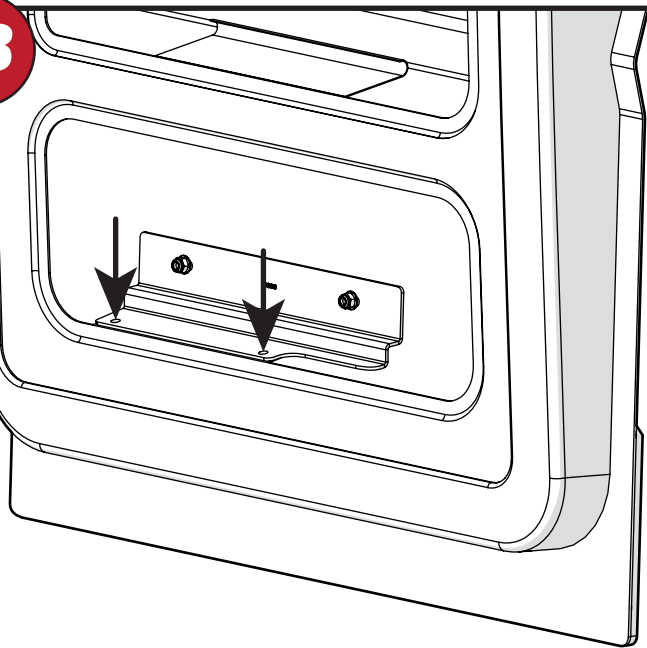


1 Ø4MM X 2

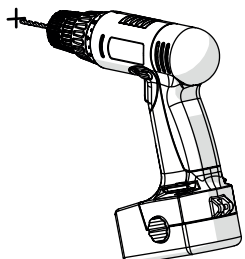

2 Ø9MM X 2

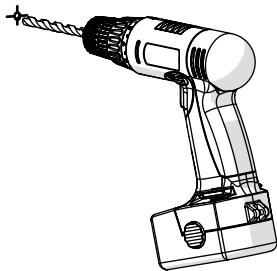


14

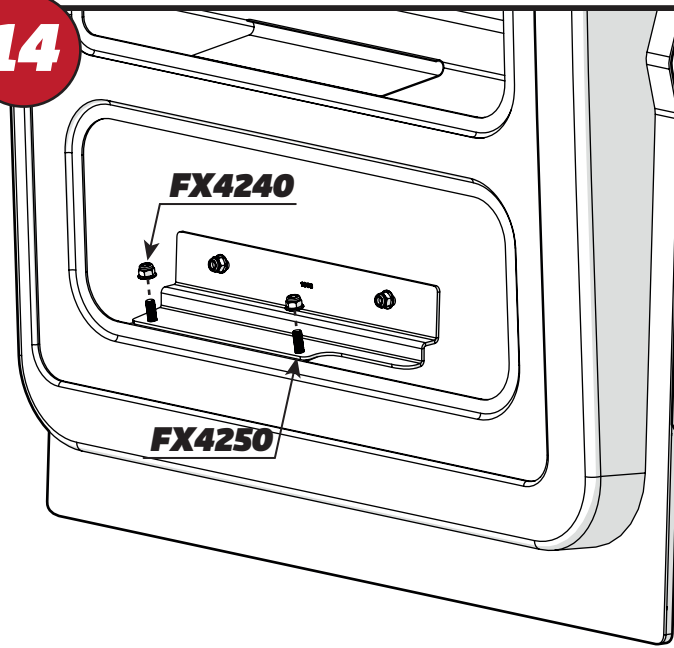


12Nm


FX4008




15

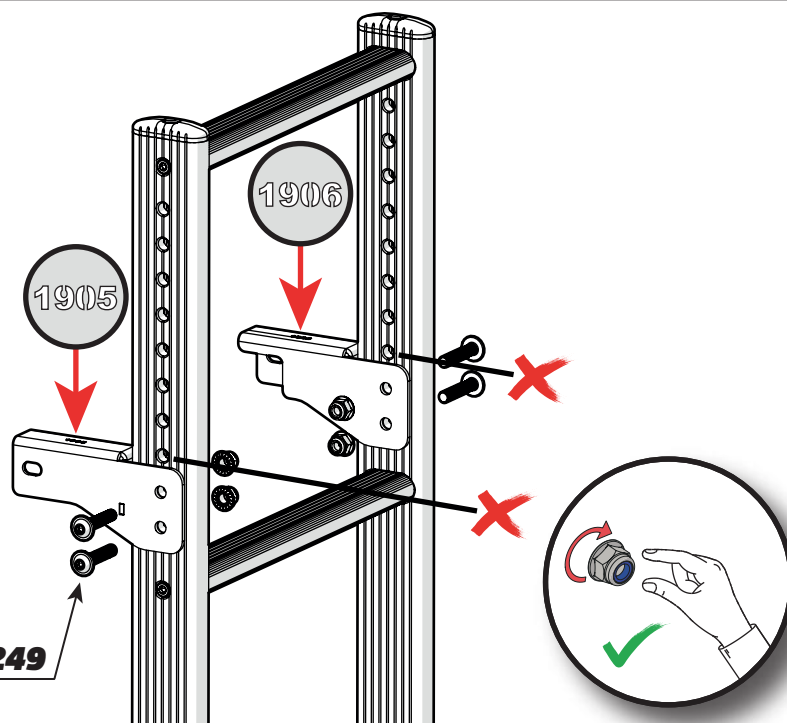


16

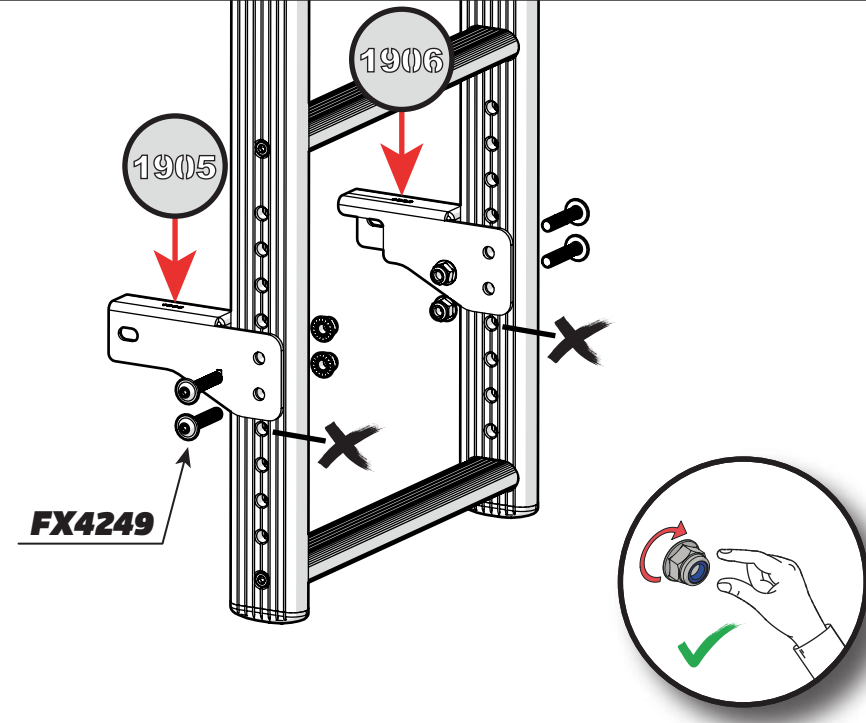


17

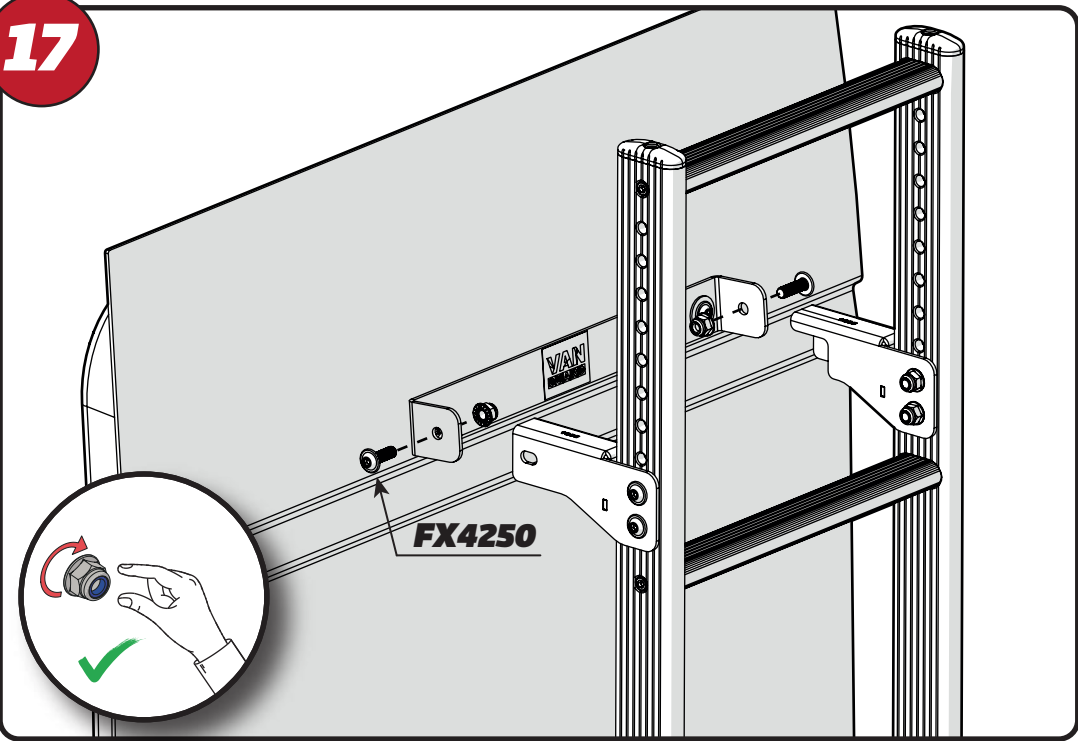


18

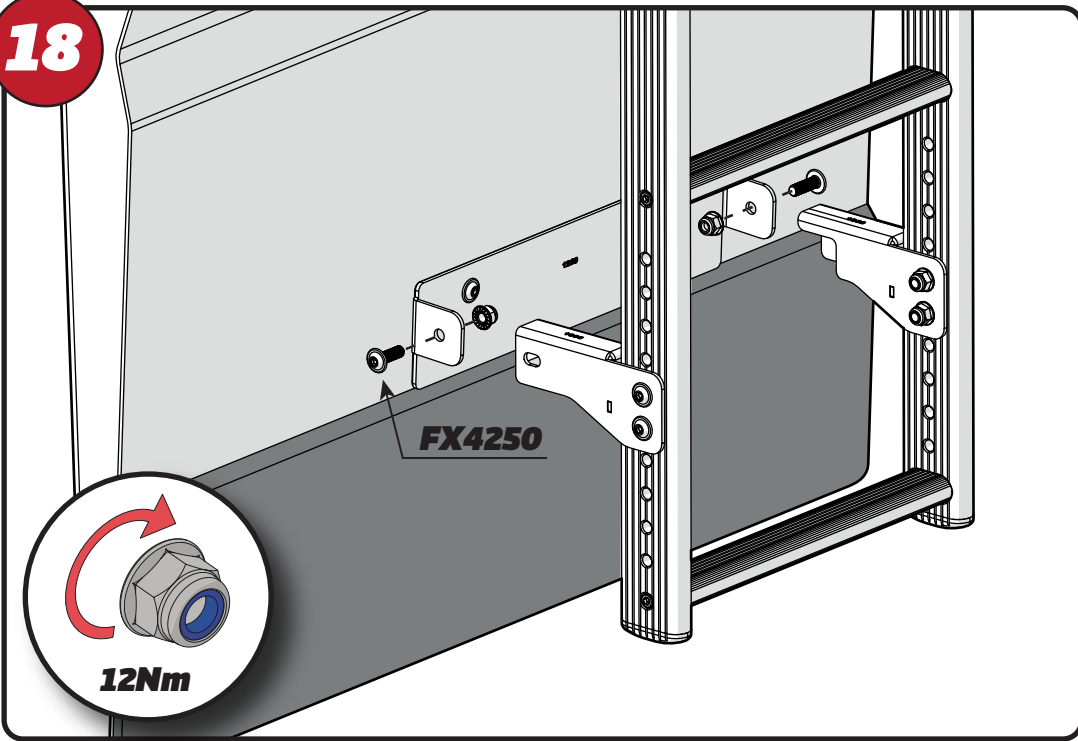




19

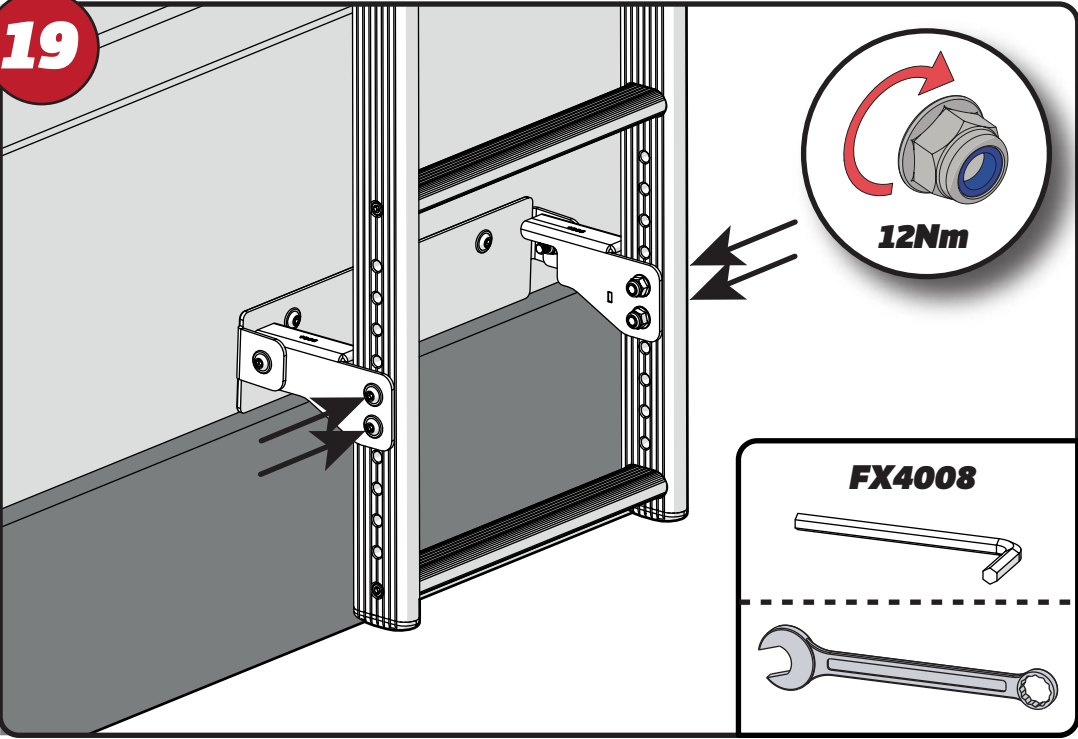



20

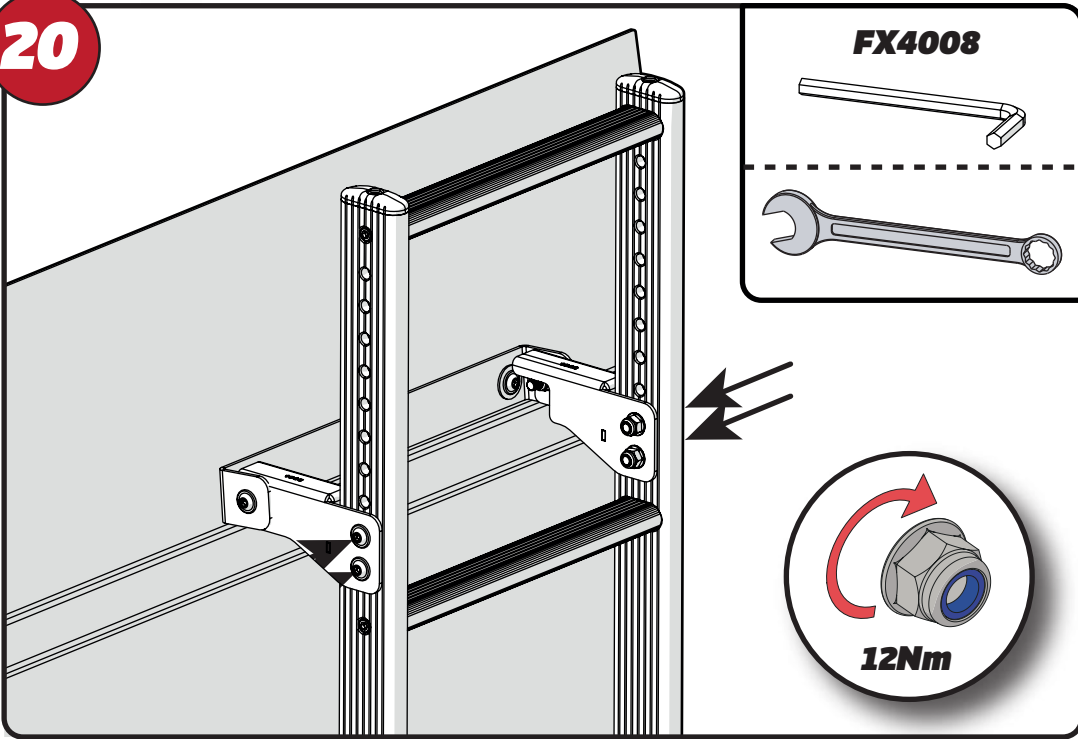




21

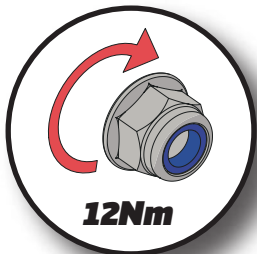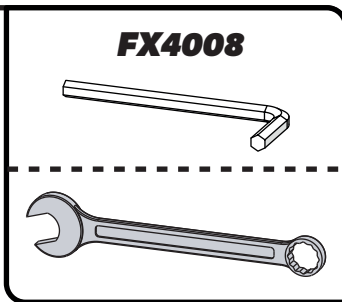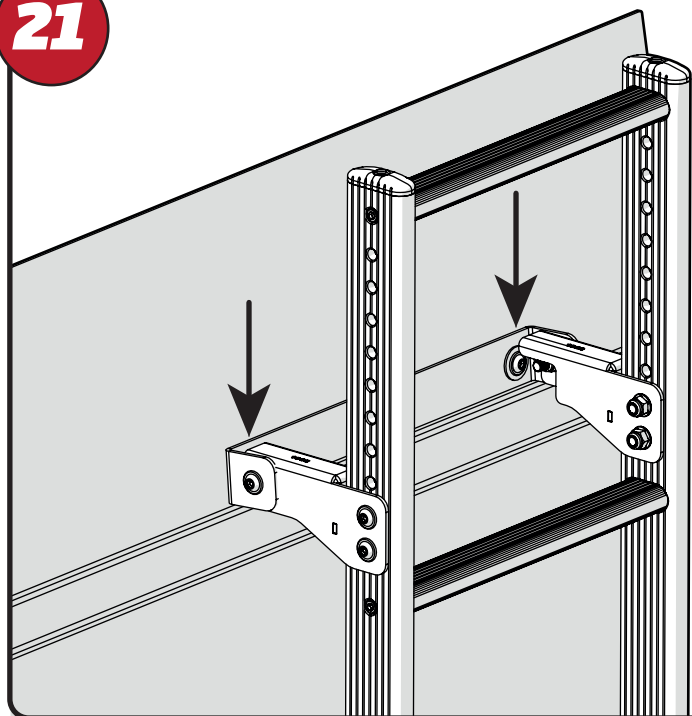


22

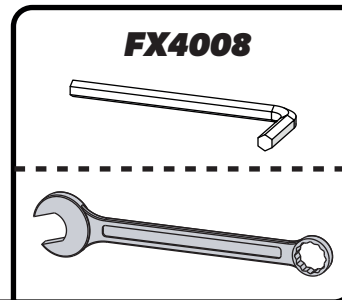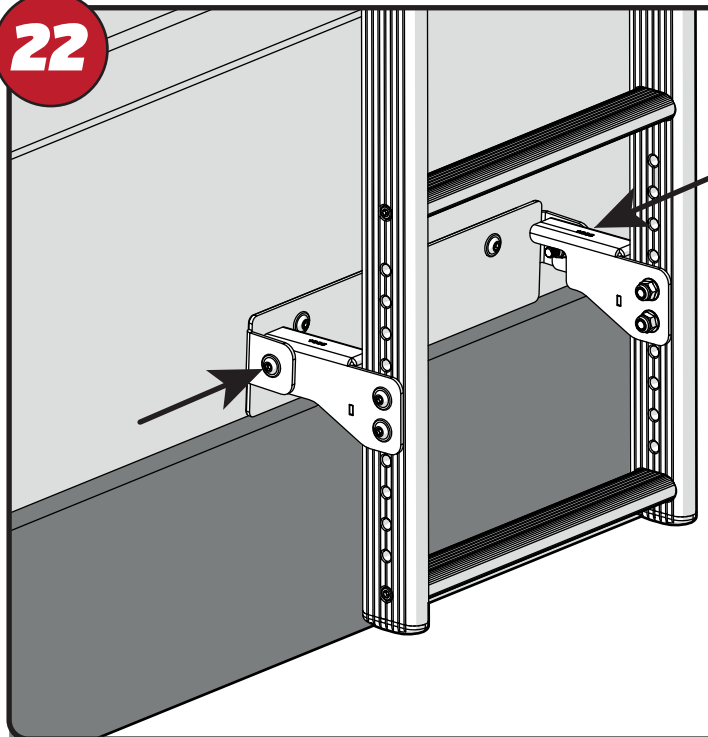


23

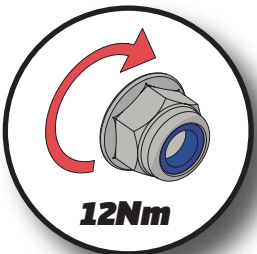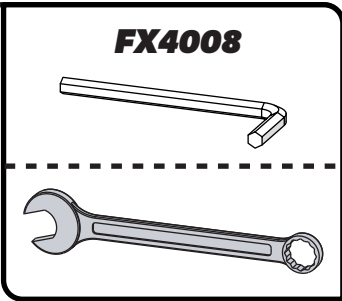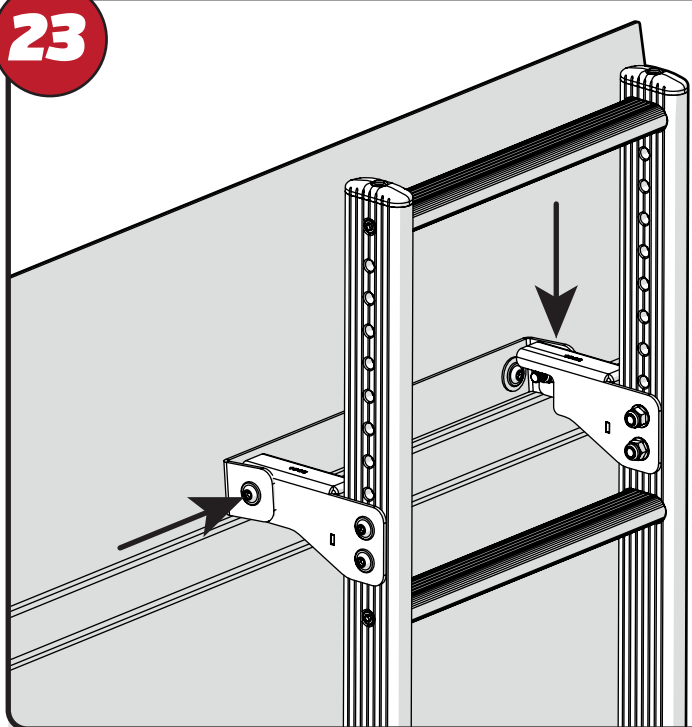

24

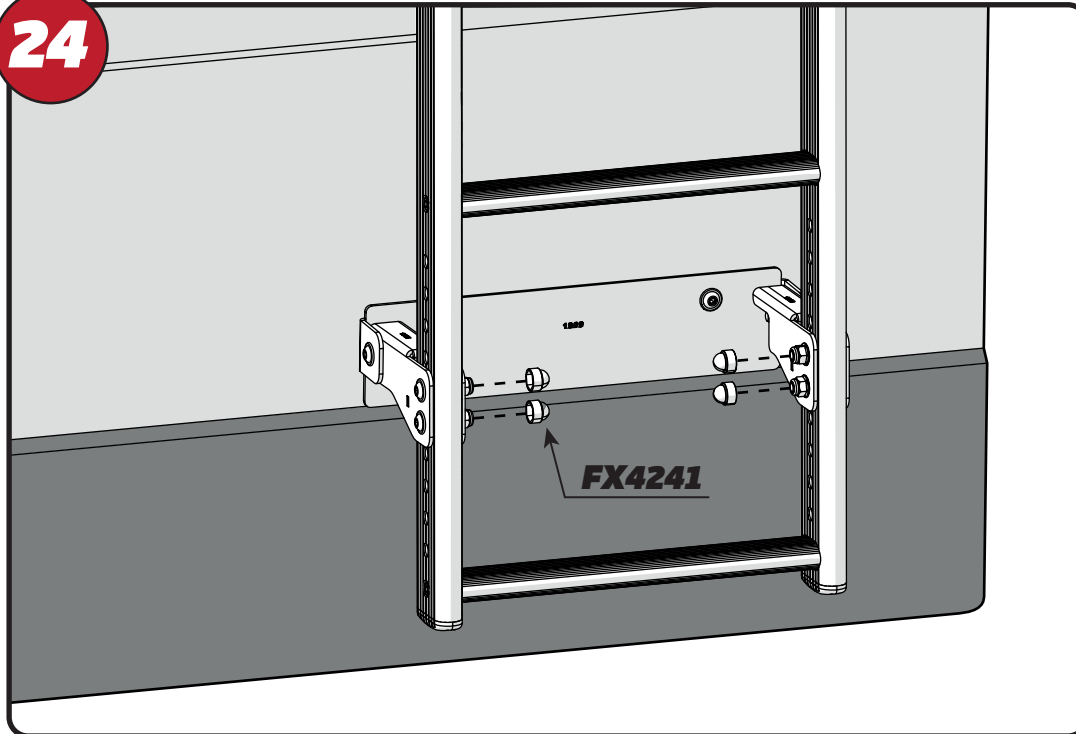

25

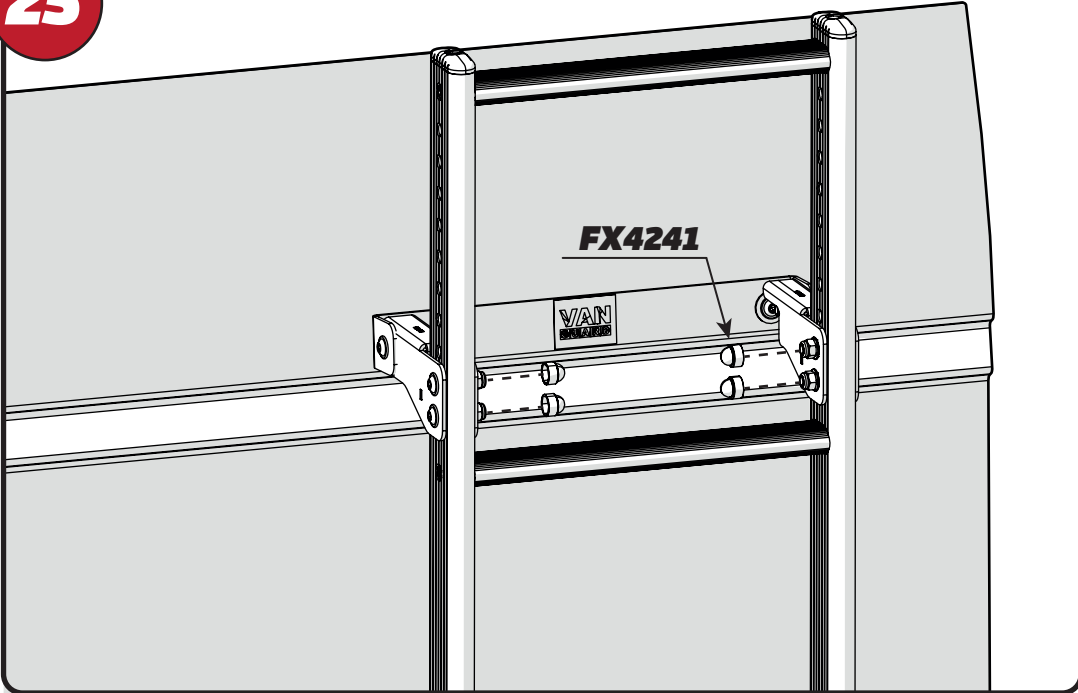

26

