




IN8421 Trade Van Racking - Kick Plate

SUPPLIED COMPONENTS


FX4011 X2
(M8 FLANGE NUT)



FX4040 X2
(M8 WASHER)




FX4138 X2
(M8X50 COACH BOLT)

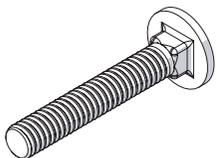

TOOLS REQUIRED

13MM X1

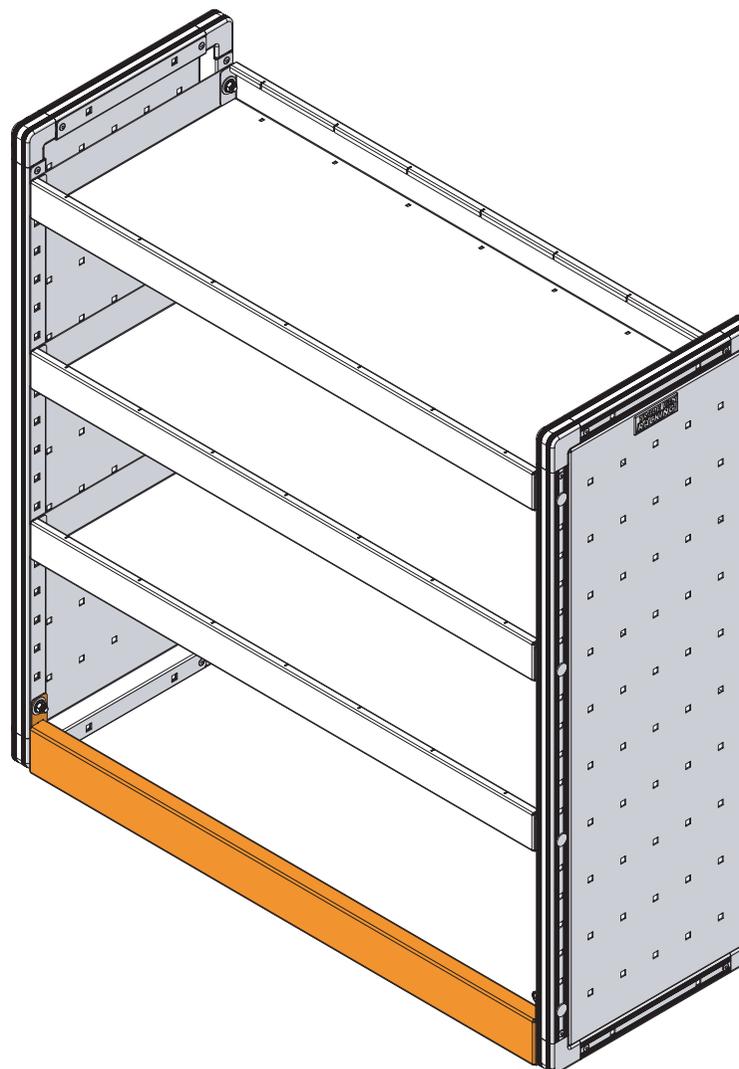


Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351

This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8421_A (CN:00000)


Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

01

Place the kick plate into position.

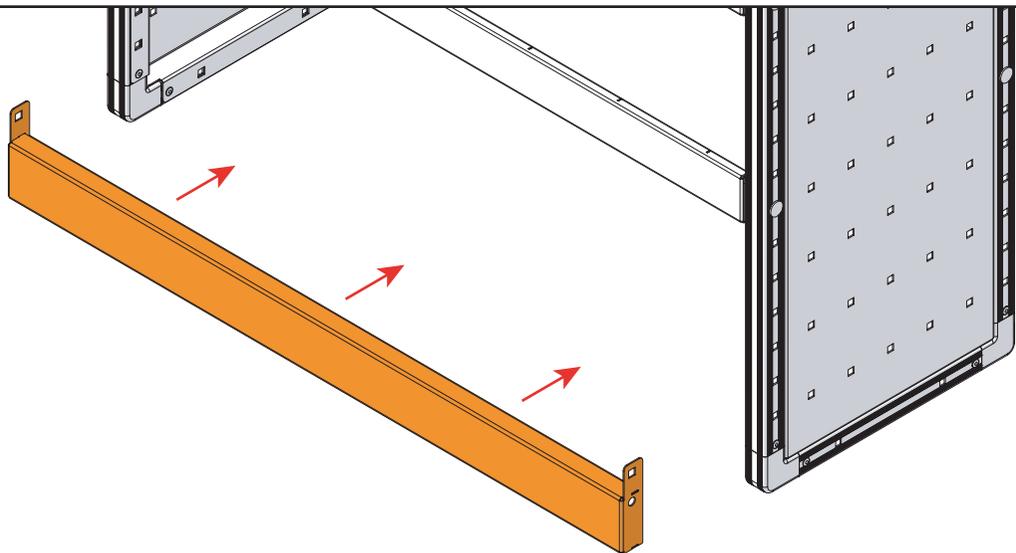**02**

Secure the right side of the kick plate to the side panel using a M8x50 coach bolt, M8 washer, and a M8 flange nut. Tighten fixing to 5Nm. Take care not to damage the unit by over tightening.

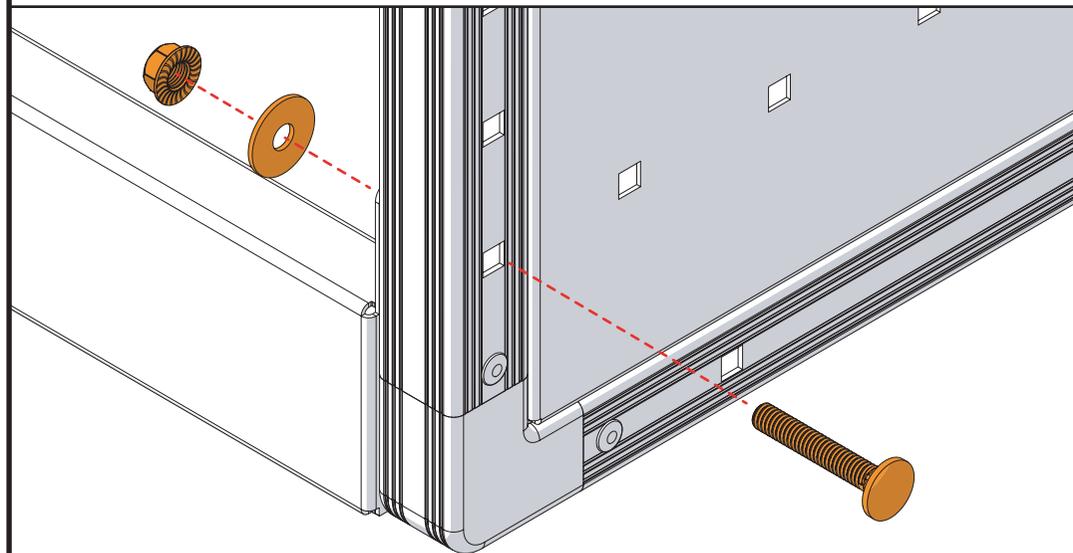**03**

Secure the left side of the kick plate to the side panel using a M8x50 coach bolt, M8 washer, and a M8 flange nut. Tighten fixing to 5Nm. Take care not to damage the unit by over tightening.

