

**IN9332**


**Internal Shield - Twin Rear Door**

**THANK YOU FOR PURCHASING A VAN GUARD INTERNAL SHIELD**

**SUITS THE FOLLOWING MODELS**

**Vehicle:**  
Ford Transit 2014 on

**Door:**  
Rear - Twin

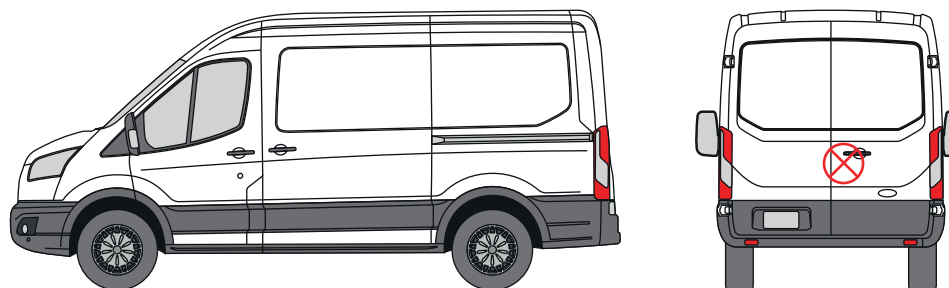

⊗ Indicates approximate placement of shield




**CAUTION**

**PLEASE TAKE THE TIME TO READ THROUGH THE IMPORTANT INFORMATION BELOW BEFORE PROCEEDING TO FIT THIS PRODUCT**



**FAILURE TO TAKE NOTICE OF THE FOLLOWING INFORMATION MAY RESULT IN DAMAGE TO THE VEHICLE.**

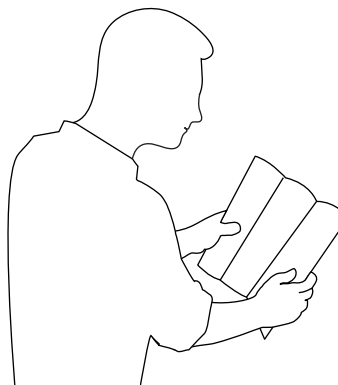

**Important:** Follow the instructions and all measurements carefully. Double check measurements before making any cuts. Drawings are for guidance only. Every effort has been made to ensure the accuracy of the instructions provided however Van Guard Accessories Ltd accepts no liability for any inaccuracies of either the drawings provided or vehicle variations. All bare metal should be treated with a manufacturer approved anti-corrosion compound and no liability is accepted for any incorrect installation or corrosion to body panels or within cavities. It is the sole responsibility of the installer to ensure the suitability of both the vehicle and of the supplied parts before installation is started. No liability is accepted for the fitting of the products.

This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.  
IN9332\_A

Van Guard Accessories Ltd  
Fair Oak Close, Exeter Airport Business Park,  
Exeter, Devon, EX5 2UL  
[www.van-guard.co.uk](http://www.van-guard.co.uk)

# SUPPLIED COMPONENTS

**ME3408 X1**  
(SHIELD)



**ME3449 X1**  
LATCH SPACER



**FX4244 X3**  
(M6X20 COUNTERSUNK SCREW)  
T30 TORX



Wear the appropriate protective equipment (safety glasses & gloves) while fitting this product.



Dispose of packaging materials responsibly - Do not dispose until you have checked all parts and fixings are present.

## 1. REMOVAL OF DOOR CARD

Prise off the plastic rear door cover and peel back the interior liner to gain access to the door latch.




## 2. LOOSEN THE DOOR LATCH

Remove the three T30 Torx head screws from the rear edge of the door to loosen the rear door latch. Take off the plastic internal release handle cap to enable the latch to move within the door cavity. Note: The latch is not unclipped from any release cables for this install, but it will be easier to fit if you unclip the central locking temporarily.



### 3. INSTALLING THE SHIELD

Insert the shield into the door cavity, with the holes facing downward, as shown below. Then slide underneath the loosened door latch and rotate upward to locate to its correct position. Note: You may need to lift the latch housing and pull slightly back from the door edge to enable the shield to rotate into place.

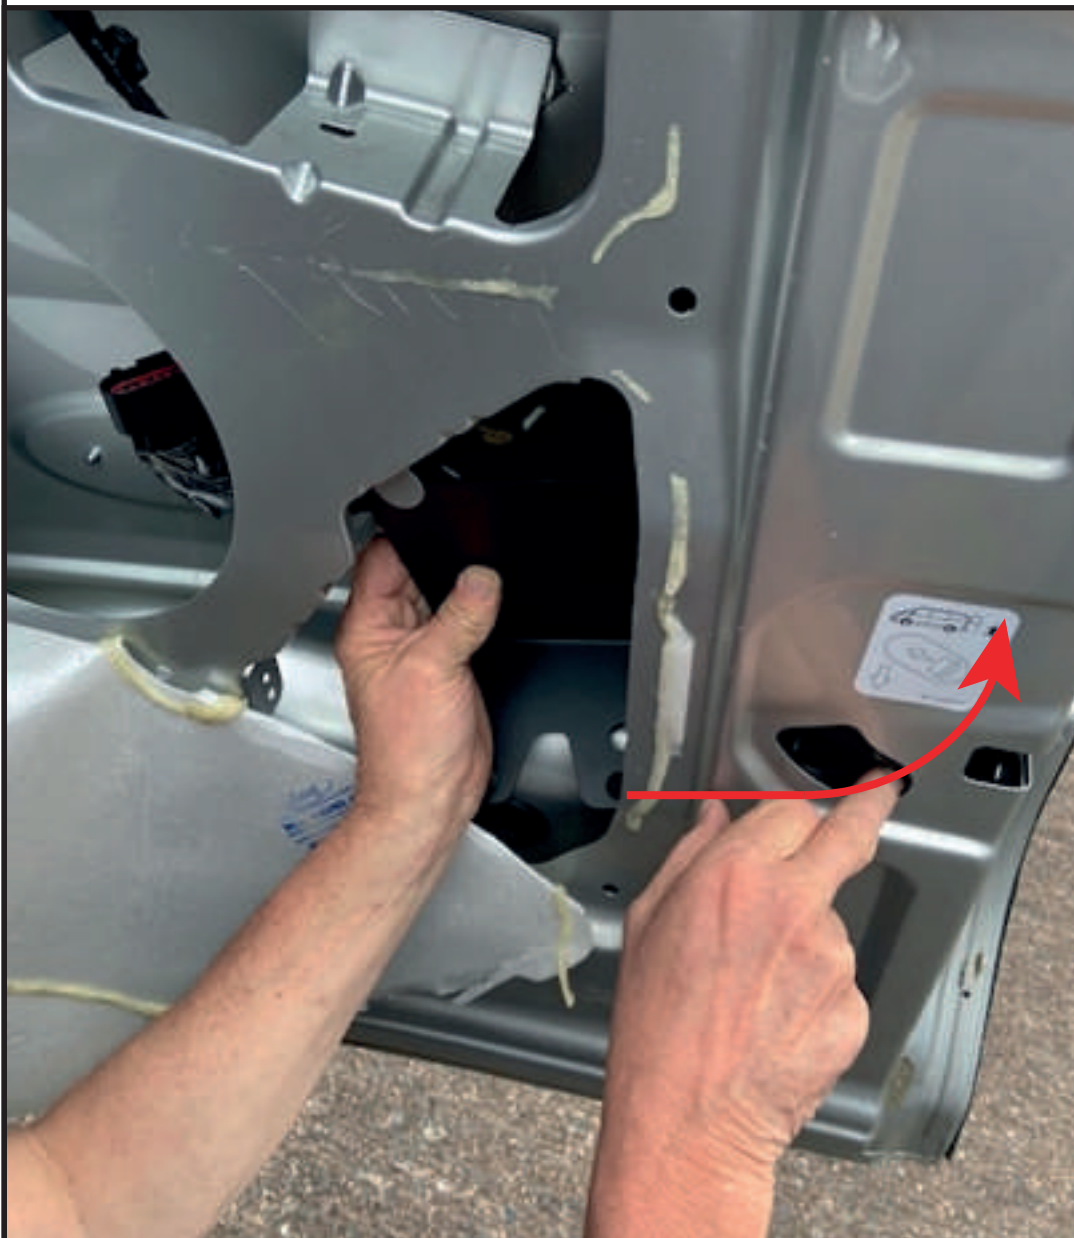

### 4. REFIT THE DOOR LATCH

Holding the shield around the latch, relocate the latch into position within the door cavity and secure using the three T30 x 20mm Torx head screws provided with the shield.

Once the latch is secured, refit the yellow internal door release handle and interior trim panel.

Check the door closes and reopens smoothly. If necessary, fit the provided spacer behind the door catch loop on the passenger door. This can be assessed from inside the van with the doors closed.

