



IN8358

ULTI Rack+

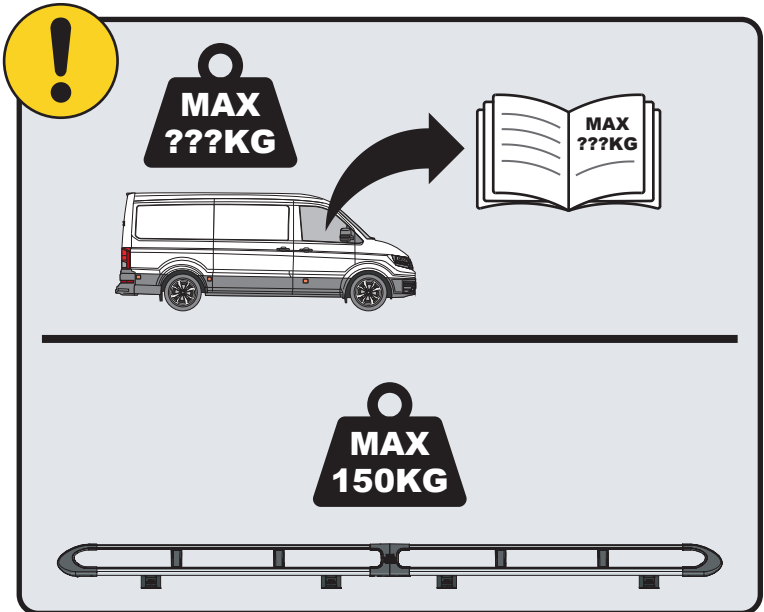

 Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351

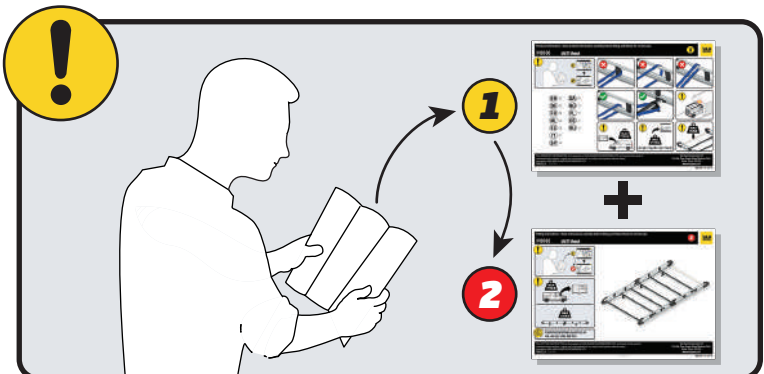



This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8358_A (CN:NR)

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

THIS INSTRUCTION COVERS THE FOLLOWING MODELS - CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING



VGUR-279

MAN TGE: 2017 on
Volkswagen Crafter: 2017 on
L3H2
Twin Rear Doors

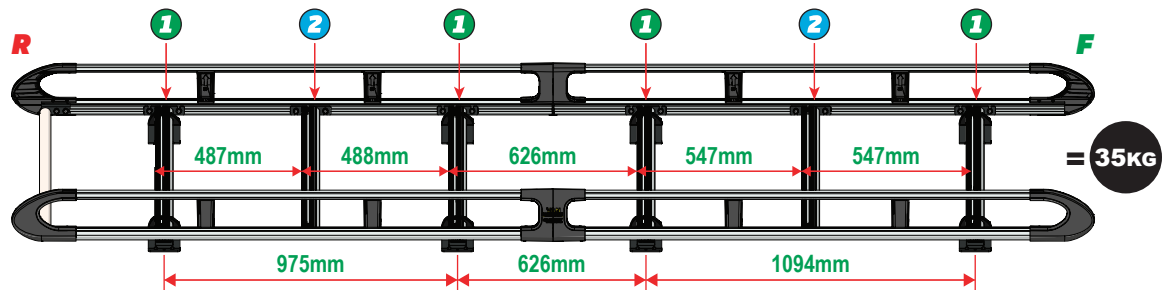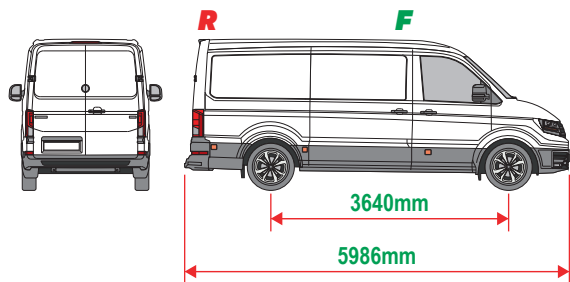

VGUR-280


MAN TGE: 2017 on
Volkswagen Crafter: 2017 on
L3H3
Twin Rear Doors

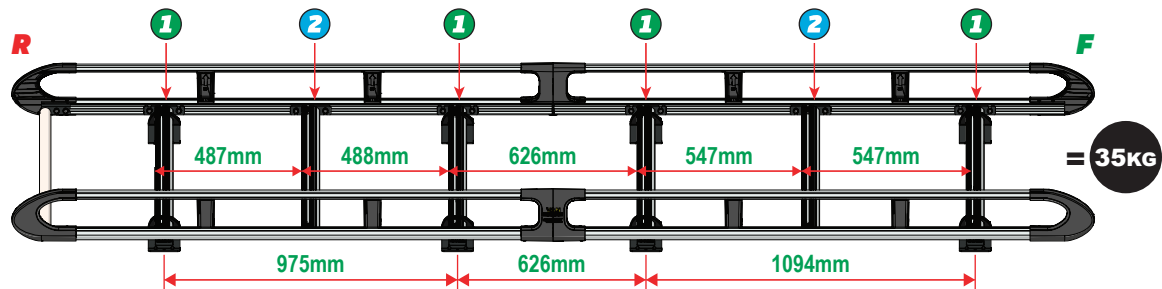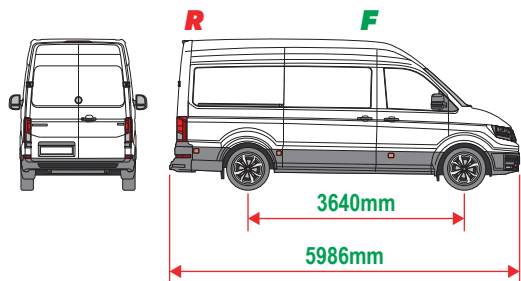



SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (1 OF 2)

TOOLS REQUIRED


10MM X1

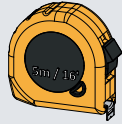


13MM X1

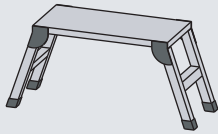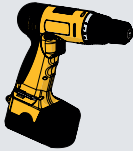


AS3545 X2
(3400 / A)

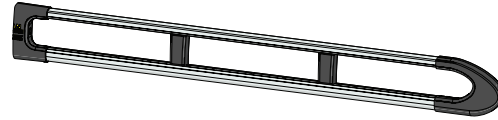


MA6118 X12




FX4241 X28



ME1622 X2




AS3544 X2
(3400 / B)




FX4008 X1




MA6145 X1



ME1623 X2



ME1628 X6
(1554mm)




FX4001 X2
(M8X40)




FX4235 X24
(M5X25)




ME0203 X8




AS3160 X1
(1540mm)




MA6007 X4




FX4248 X1
(T25)




MA6065 X8

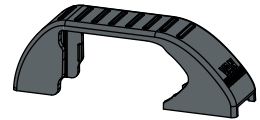


AS3590 X1

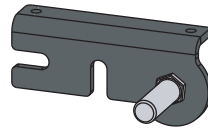


MA6093 X12



FX4239 X28
(M8X20)




ME1620 X4




FX4016 X24
(M6)



AS3591 X1




ME0316 X12




FX4240 X28
(M8)



ME1621 X4




FX4042 X16
(M6X16)




SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (2 OF 2)


ME0717 X4




FX4022 X8
(M6X25)




ME0922 X1




FX4023 X8

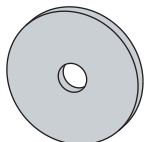


ME0923 X1




MA6091 X8



ME0924 X1

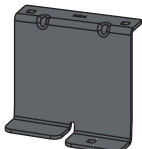

ME0925 X1

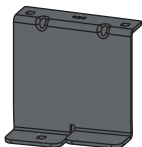


FX4014 X8




01

1L



X4

1R



X4




2L





X2

2R



X2


02

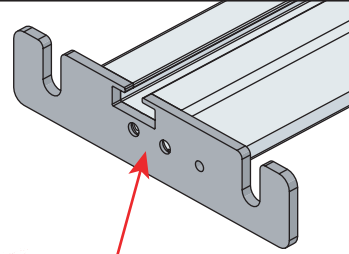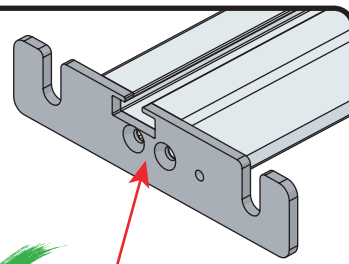


03

01


FX4248

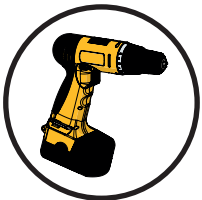


+

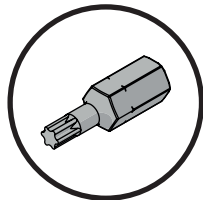

02

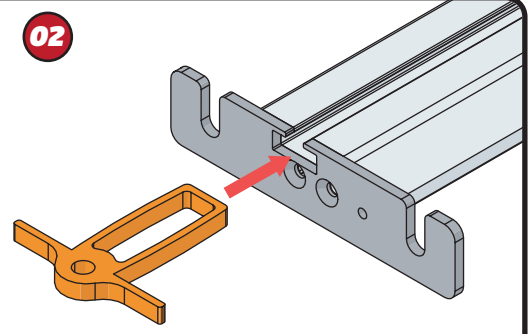


04

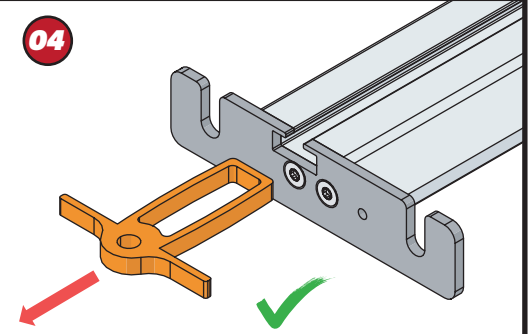

04




1

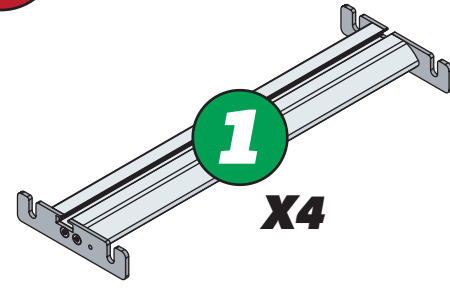

X4

2



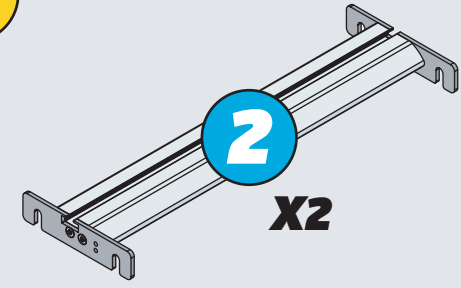


X2


03




11Nm

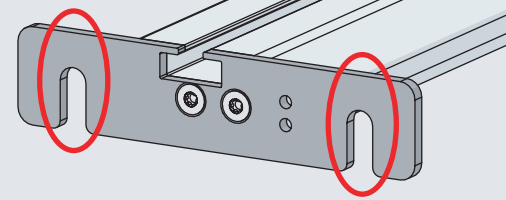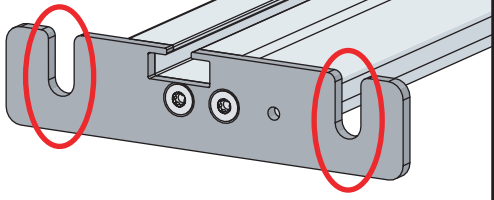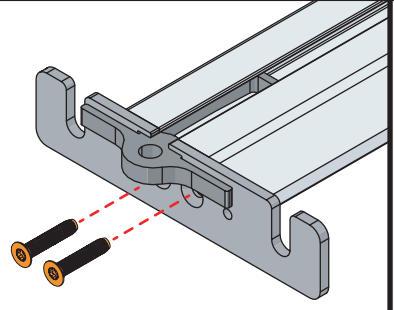


05

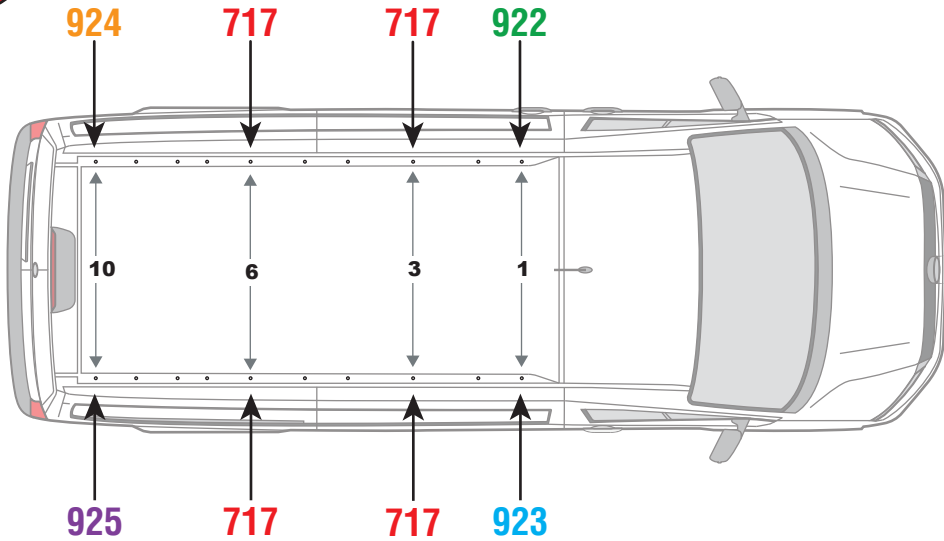


717

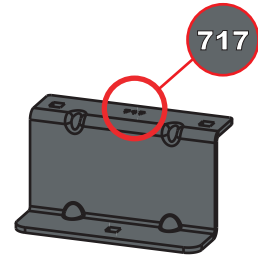


922

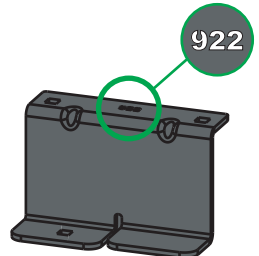


923

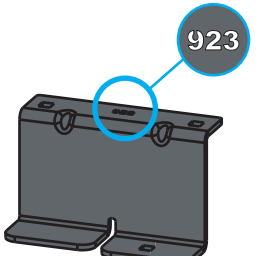



924









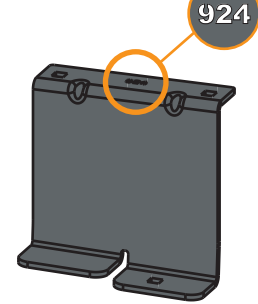




925

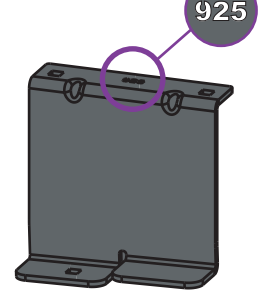

06

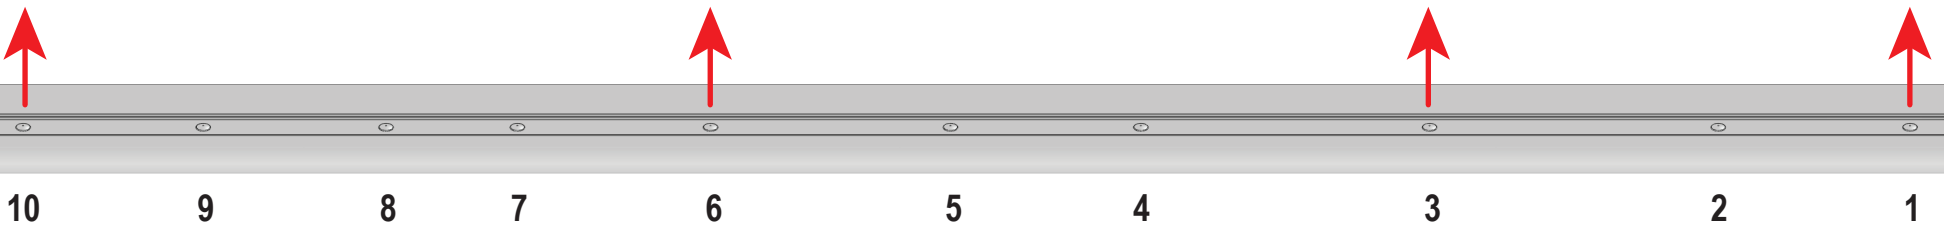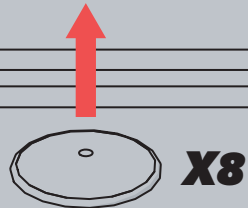

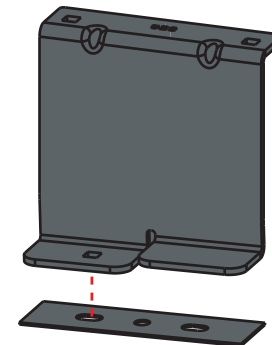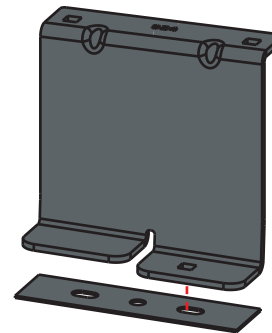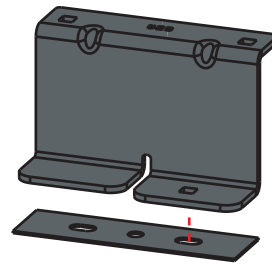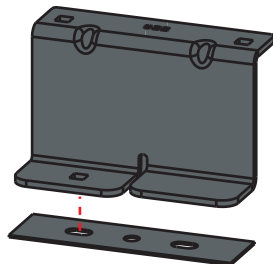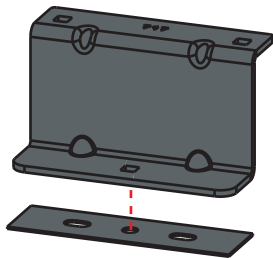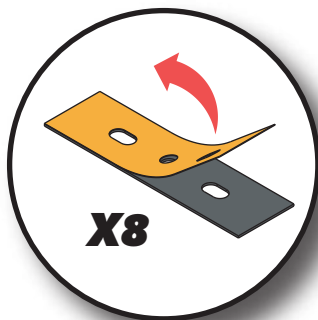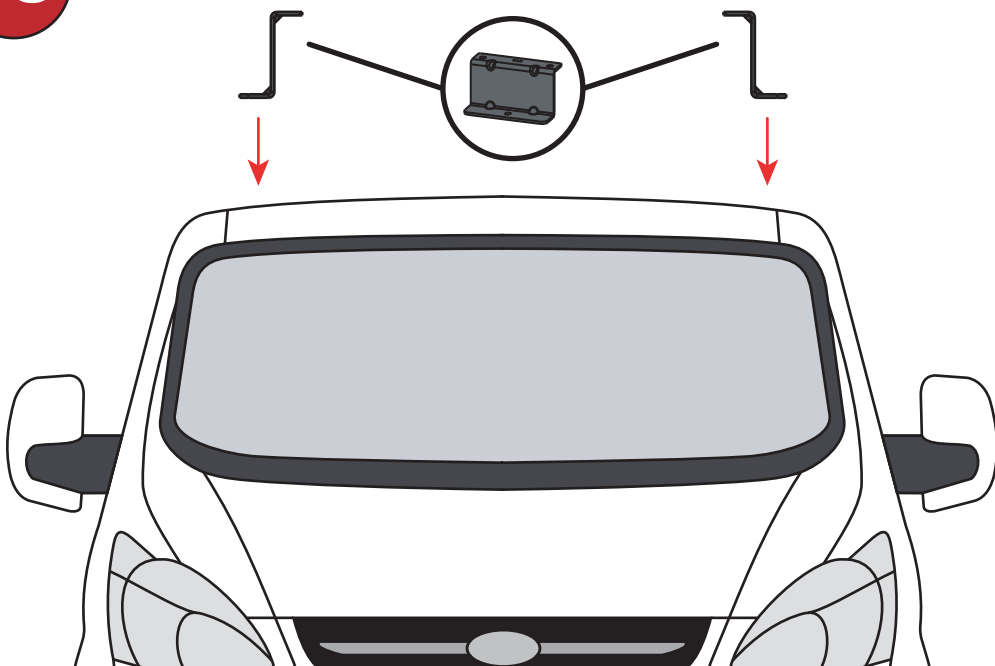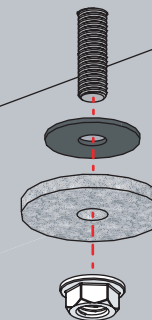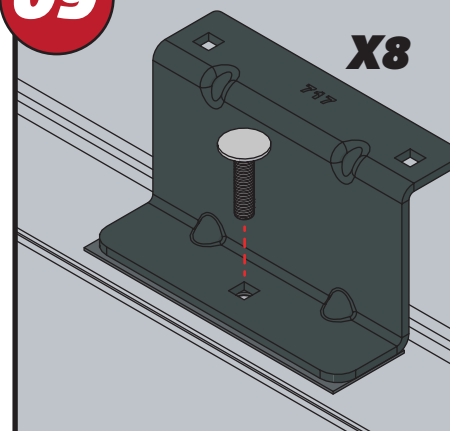07**EN** - STICK GASKETS TO ALL BRACKETS**DE** - KLEBEN SIE DIE DICHTUNG AN ALLEN HALTERUNGEN**FR** - COUSSINETS ADHÉSIFS À TOUS LES SUPPORTS**NL** - PLAK PAKKING OP ALLE BEUGELS**ES** - PEGA LAS ALMOHADILLAS A TODOS LOS SOPORTES**IT** - ADESIVI GUARNIZIONI A TUTTE LE STAFFE**SV** - FÄST GUMMI PÅ ALLA FÄSTEN**DA** - KLÆB GUMMI PÅ ALLE BESLAG**NO** - PLIST GUMMI PÅ ALLE BRACKETTER**PL** - NAKLEJ USZCZELKI DO WSZYSTKICH WSPORNIKÓW**CS** - PŘILEPTE TĚSNĚNÍ NA VŠECHNY DRŽÁKY**08****09**

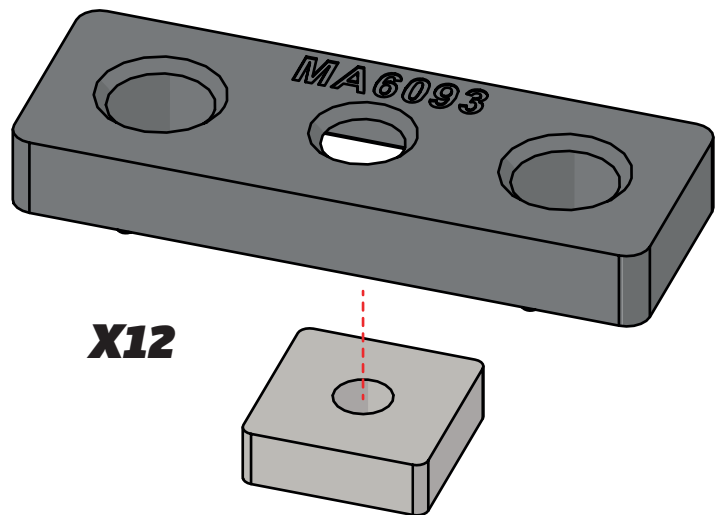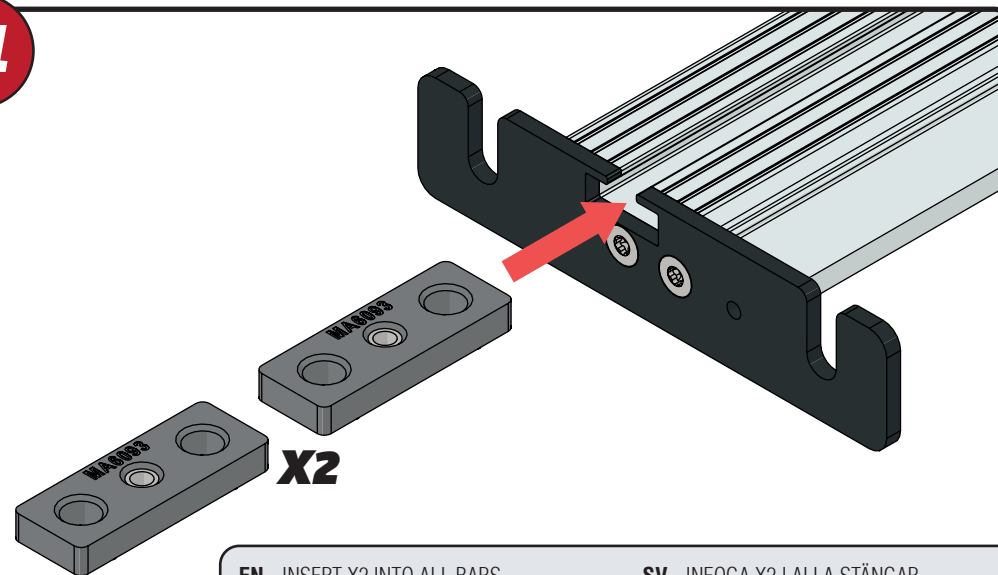10**11**

EN - INSERT X2 INTO ALL BARS

DE - X2 IN ALLE STANGEN EINFÜGEN

FR - INSÉRER X2 DANS TOUTES LES BARRES

NL - PLAATS X2 IN ALLE BARS

ES - INSERTAR X2 EN TODAS LAS BARRAS

IT - INSERIRE X2 IN TUTTE LE BARRE









SV - INFOGA X2 I ALLA STÄNGAR

DA - INDSÆT X2 I ALLE STÆNGER


NO - SETT X2 INN I ALLE TAKSTENGER

PL - WSTAW X2 DO WSZYSTKICH PRĘTÓW


CS - VLOŽTE X2 DO VŠECH TYČÍ

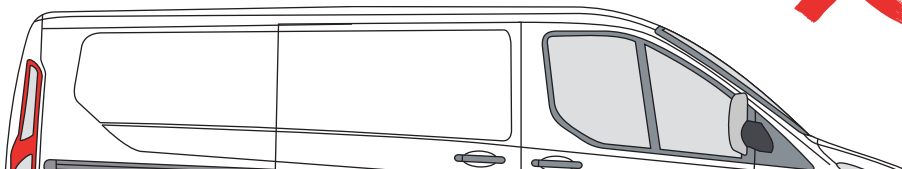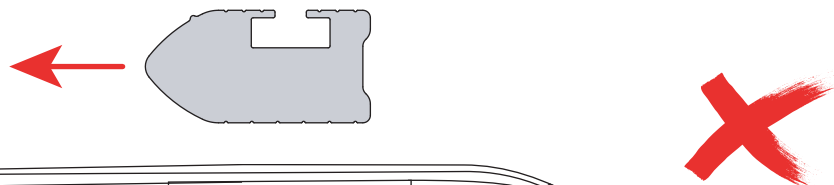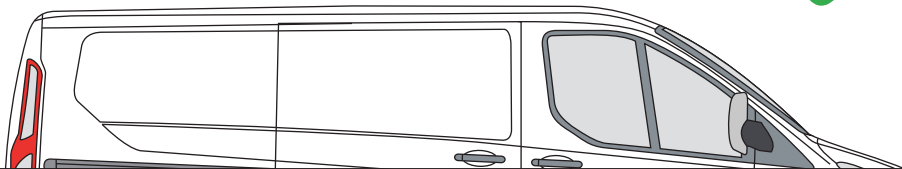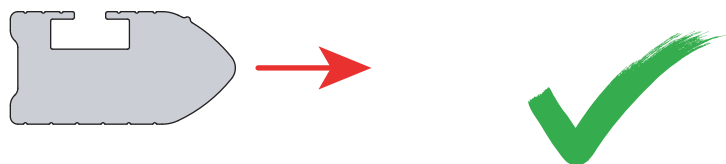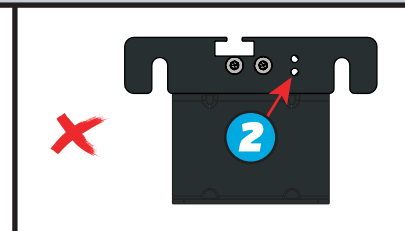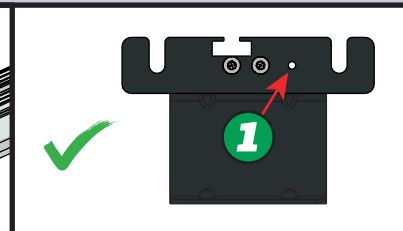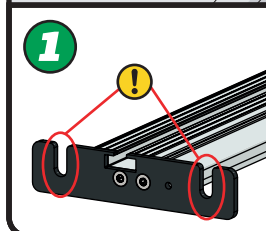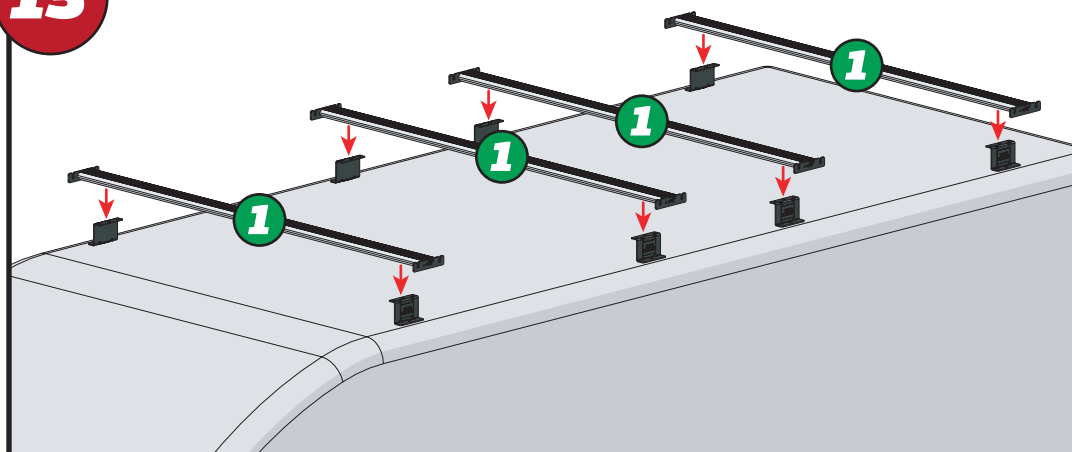12**13**


14

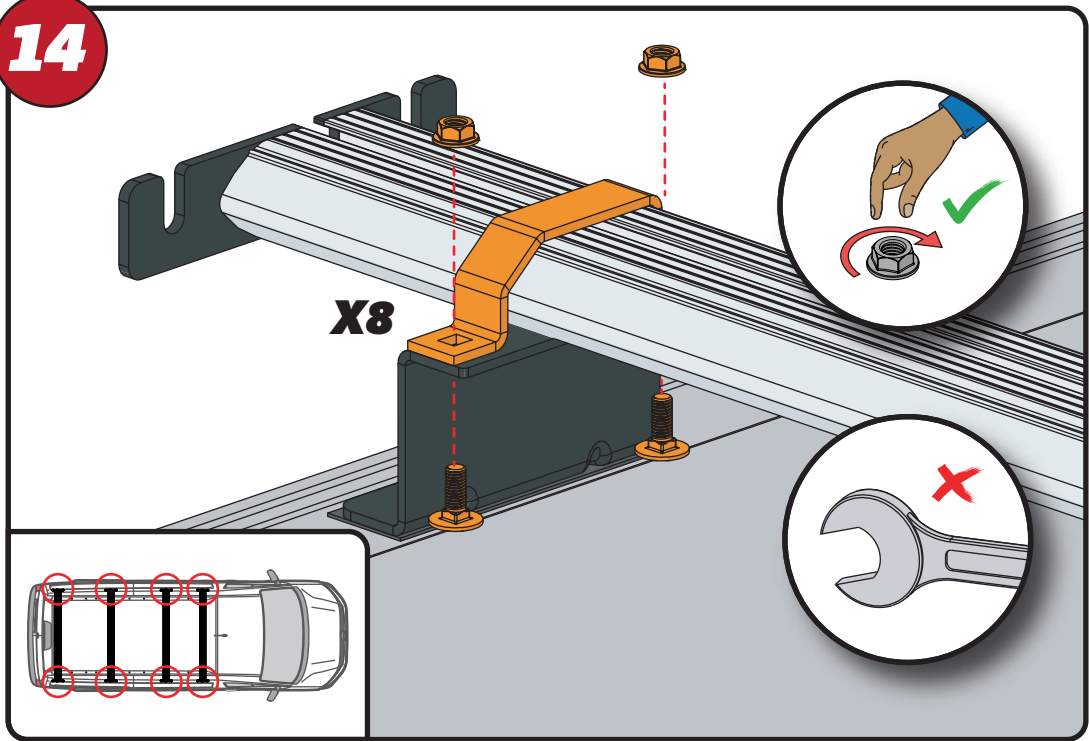


15

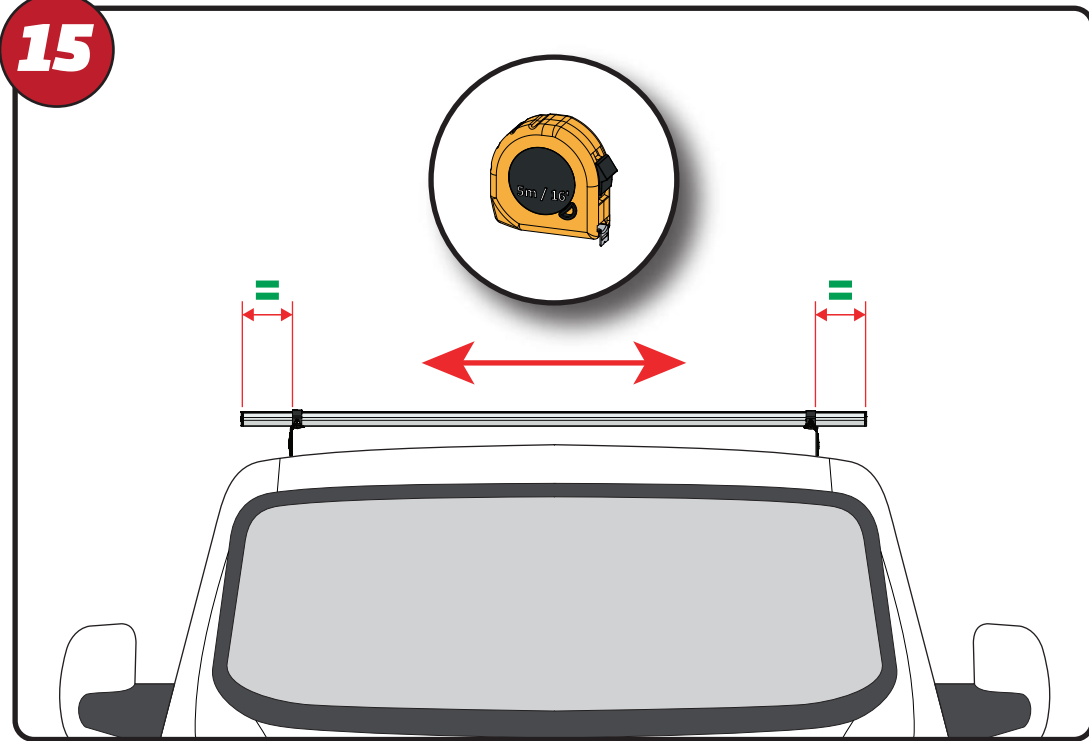


16

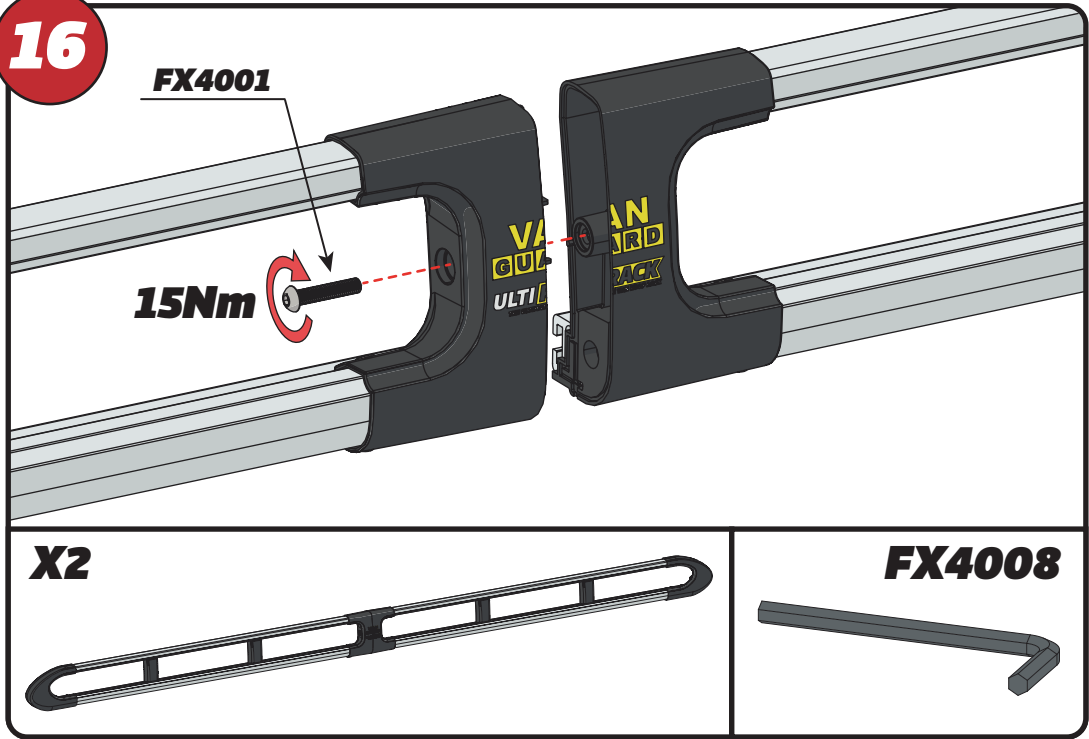


17

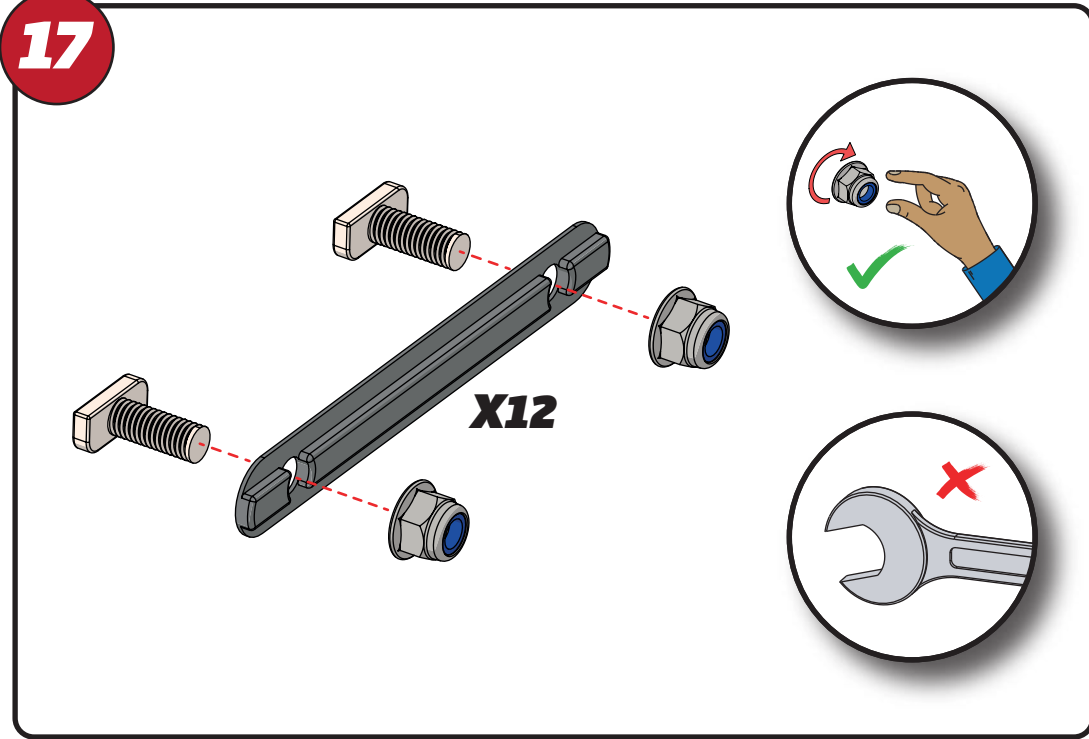


18

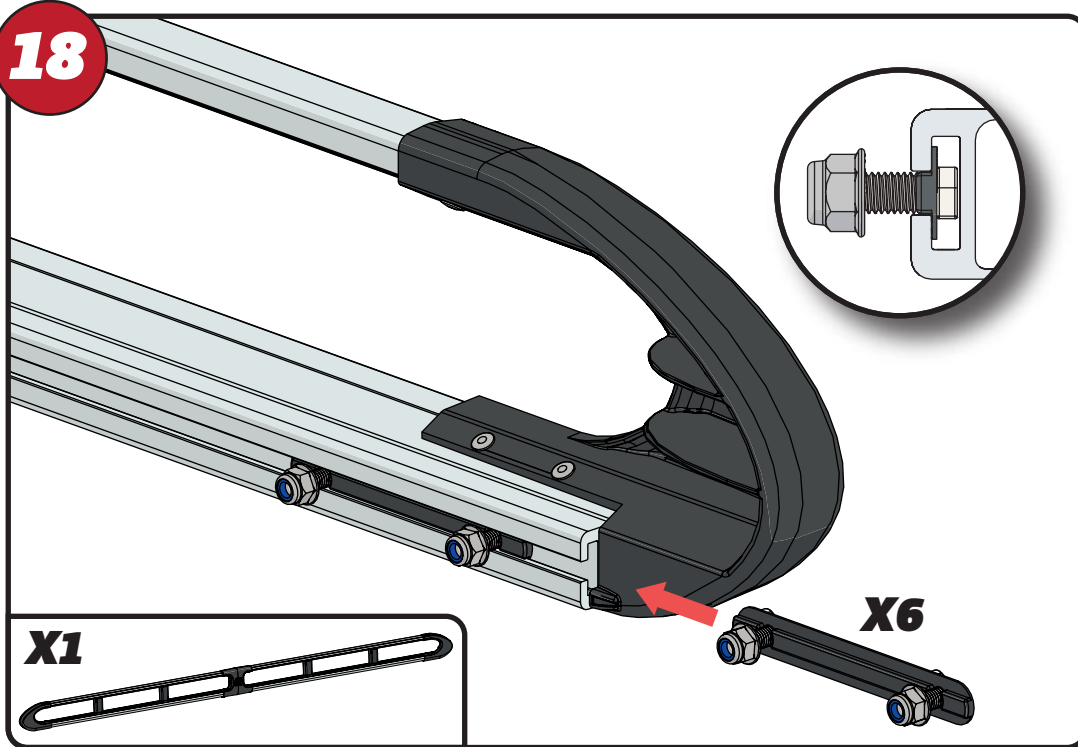


19

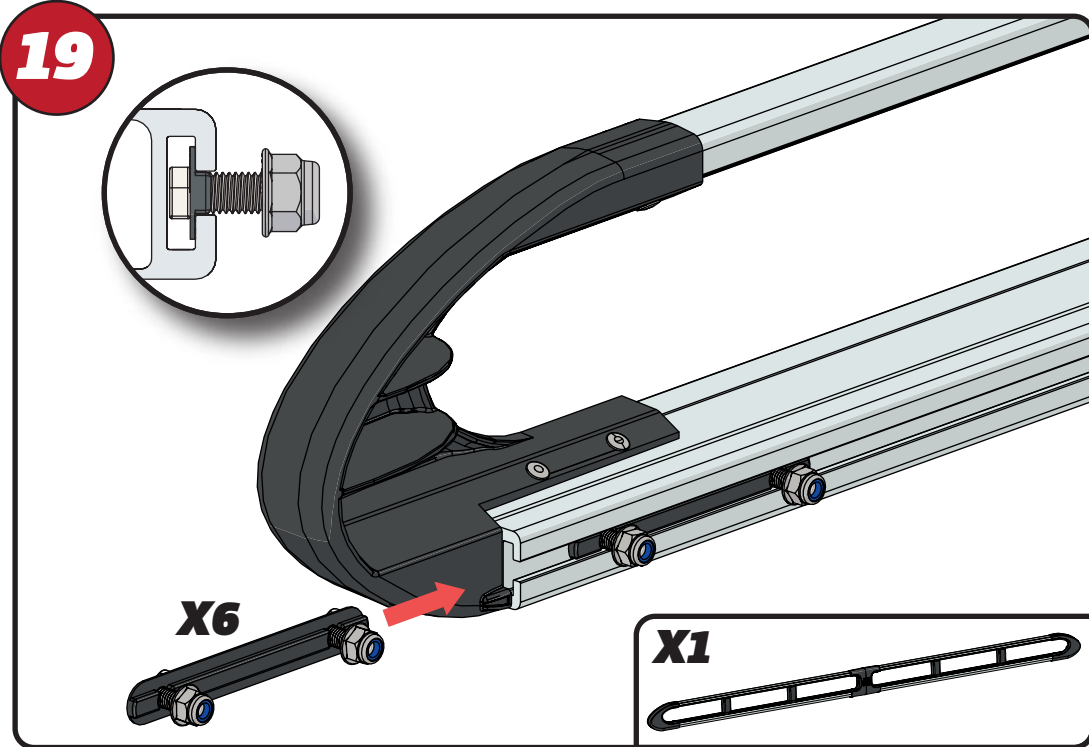


20

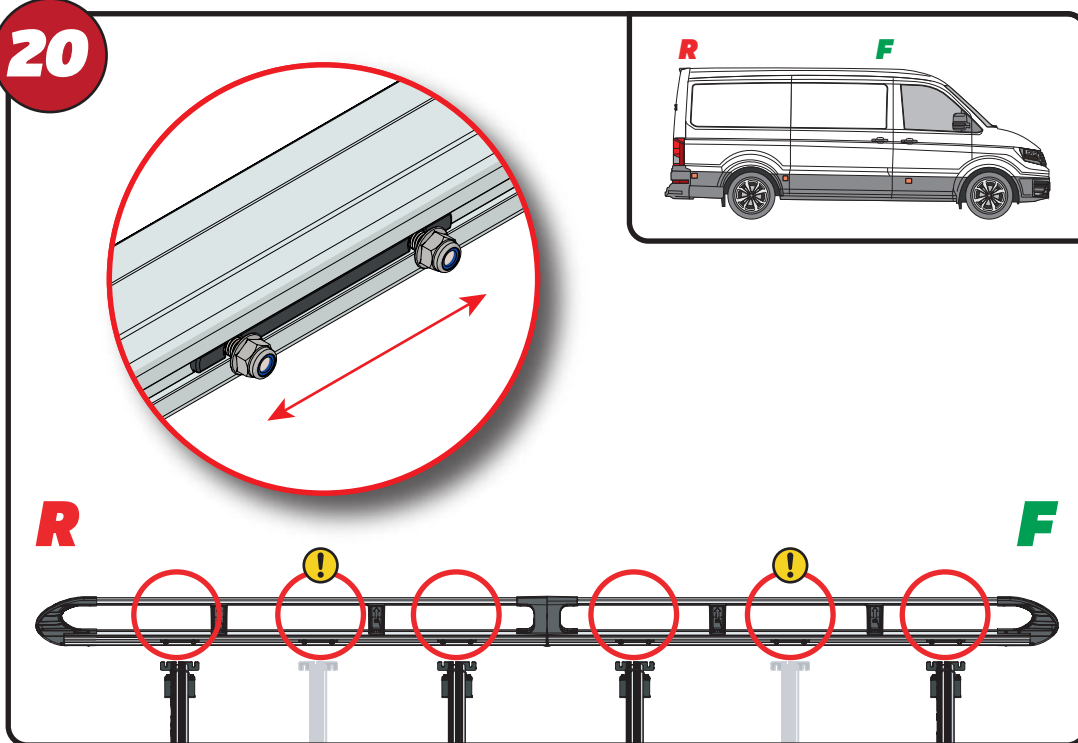


21

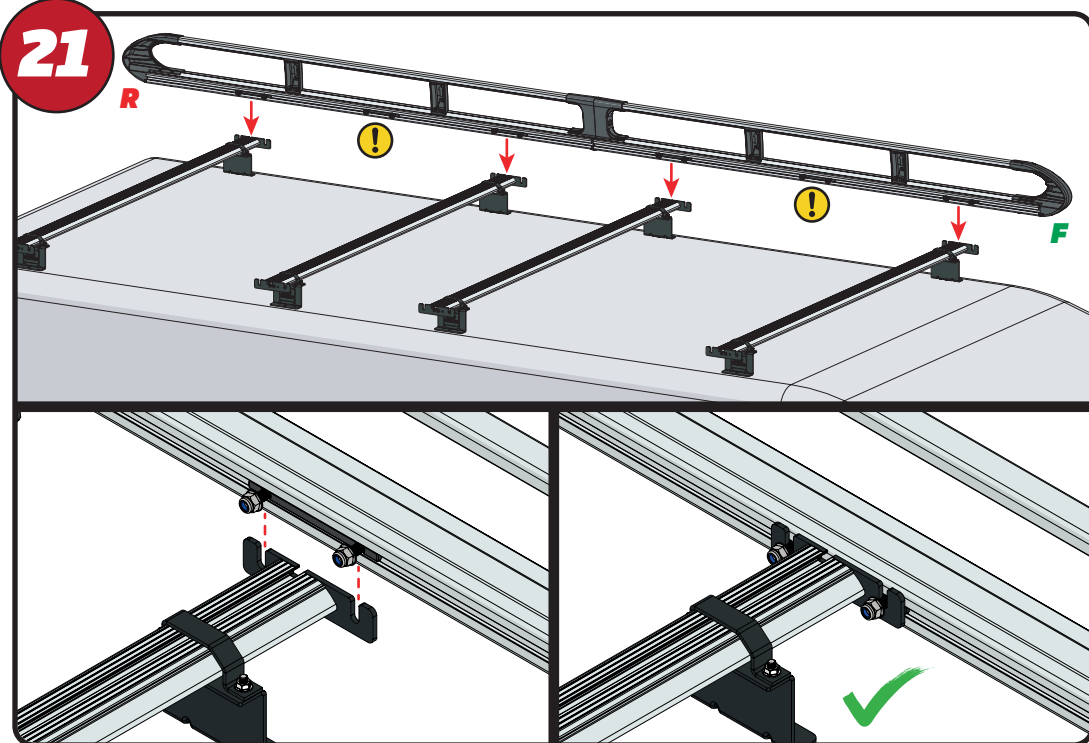


22

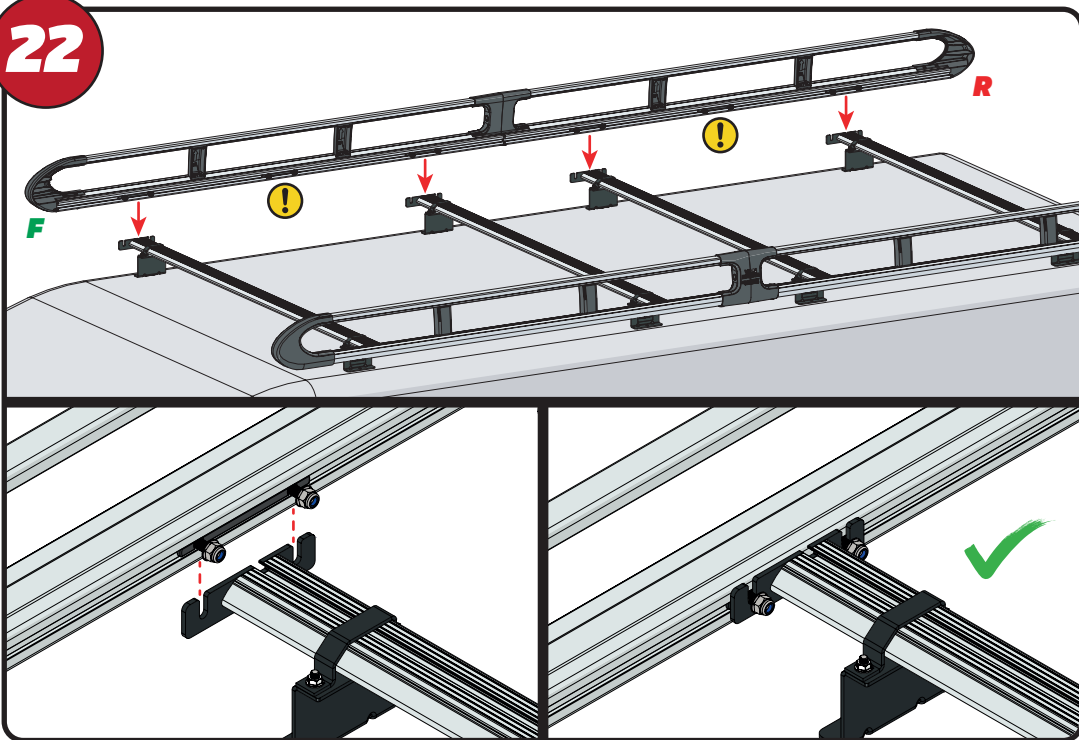


23

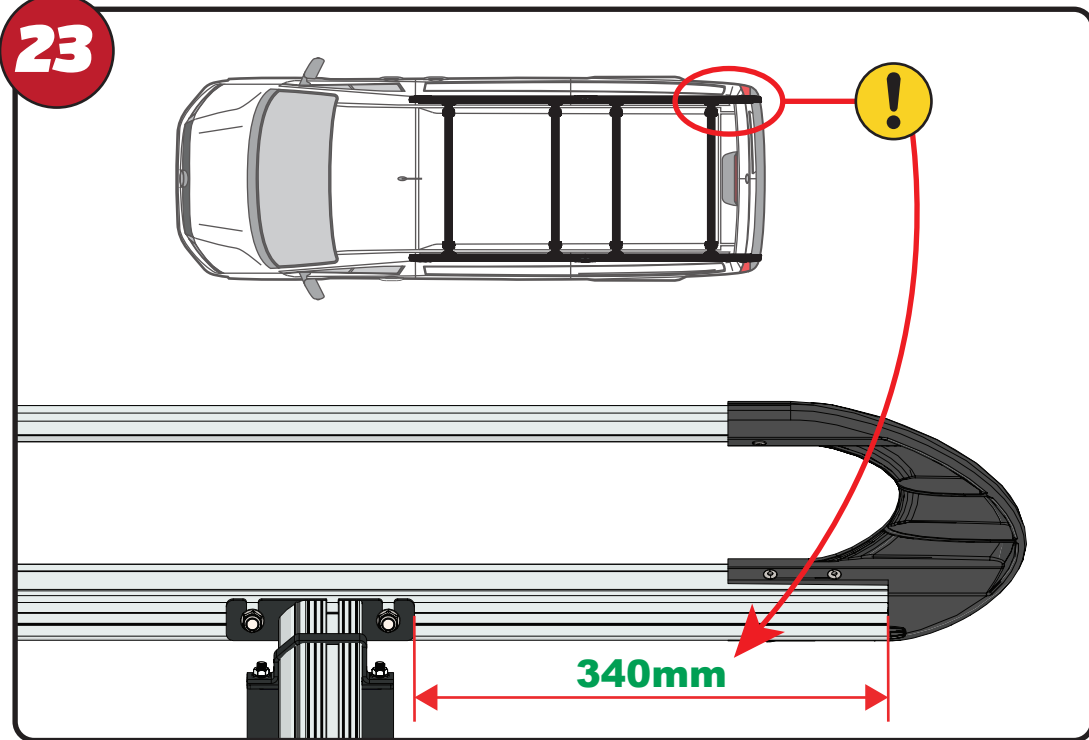

24



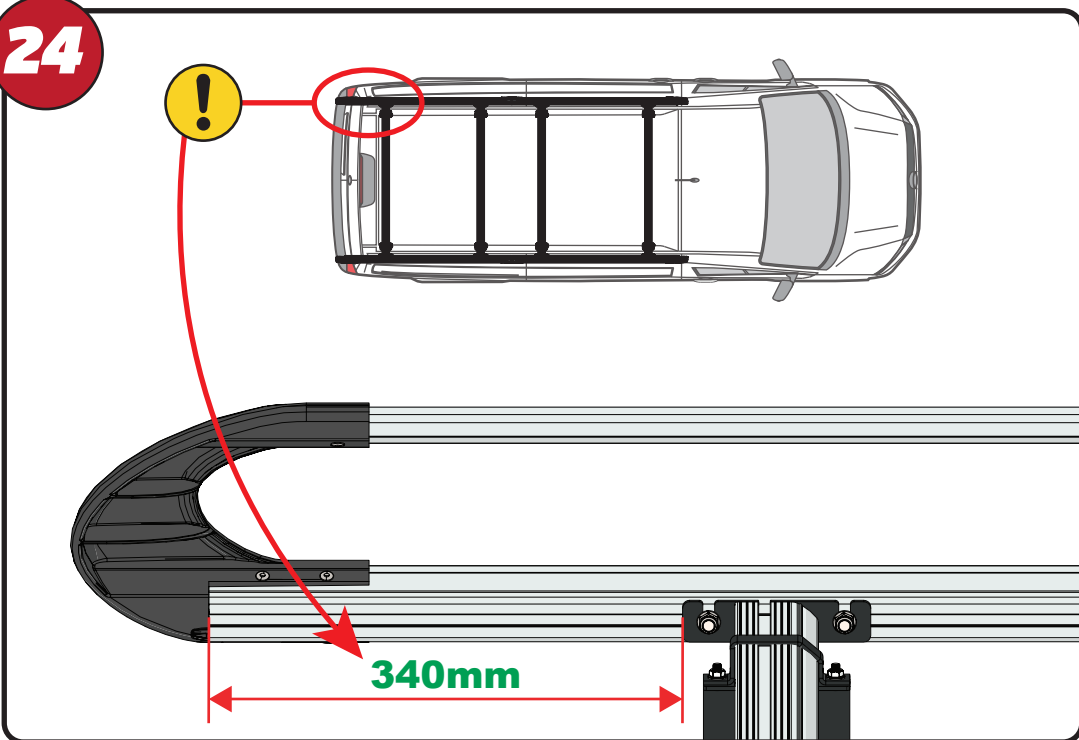


25

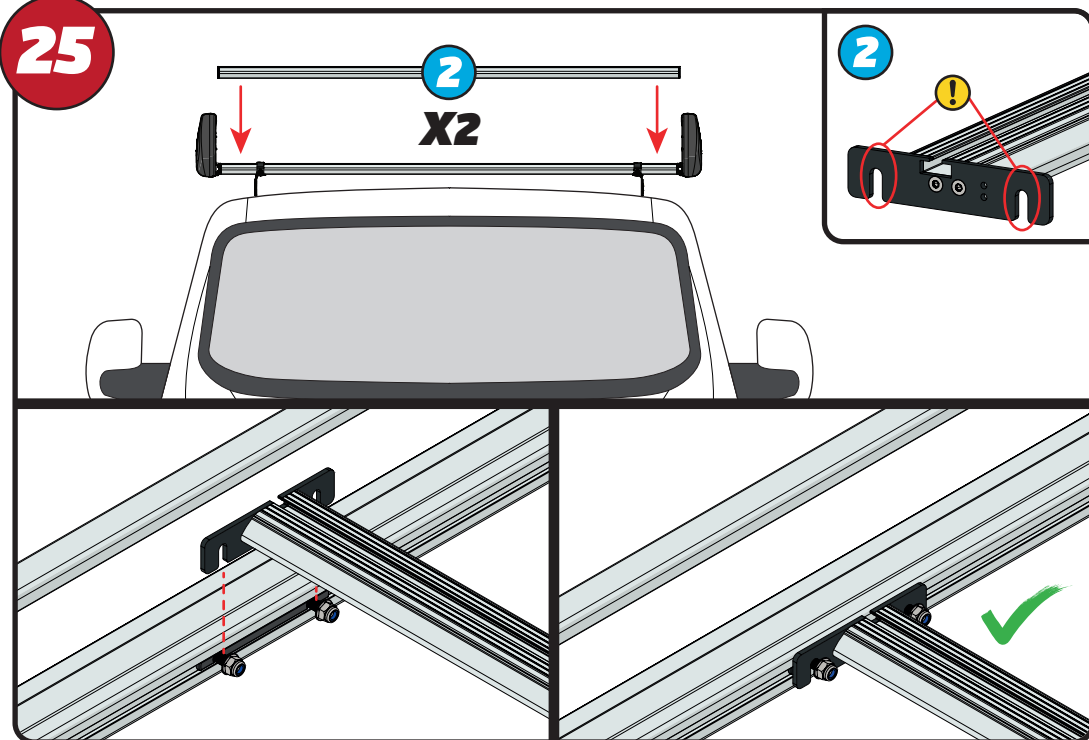



26

XXX =
PAGE 2 OF 15

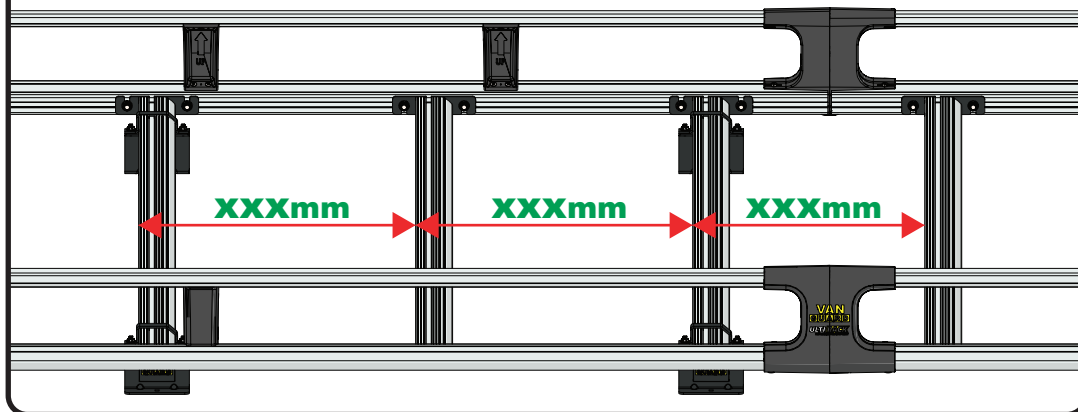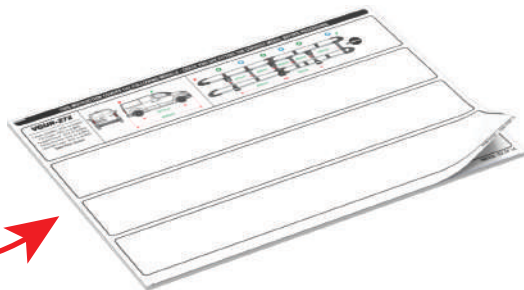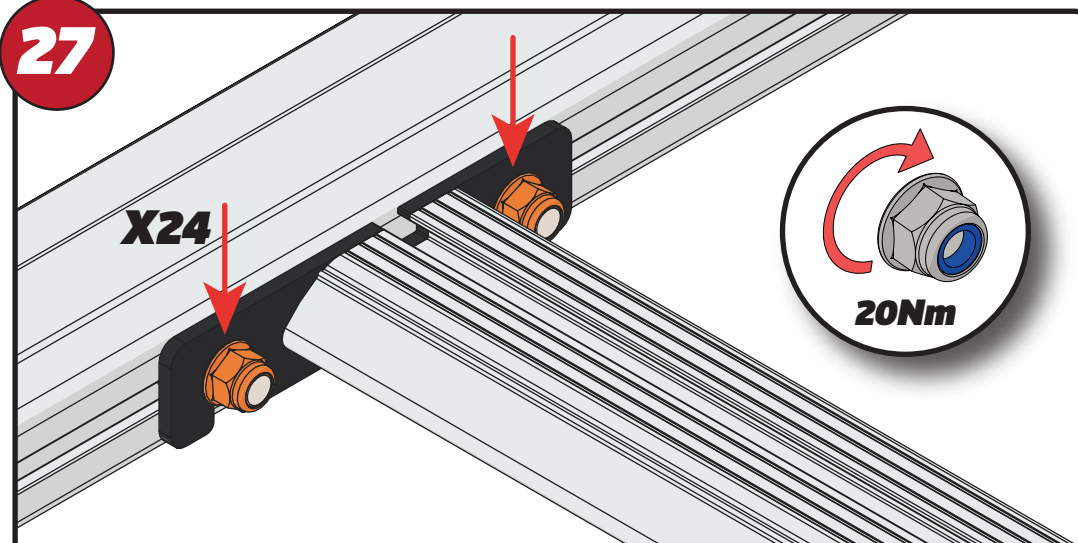
**27**

EN - TIGHTEN ALL OF THE CROSS BARS
DE - ALLE QUERSTANGEN FESTZIEHEN
FR - SERREZ TOUTES LES BARRES TRANSVERSALES
NL - DRAAI ALLE DWARSBALK VAN HET DAK AAN
ES - APRIETE TODAS LAS BARRAS TRANSVERSALES
IT - STRINGERE TUTTE LE BARRE TRASVERSALI


SV - SKRU UPP ALLA KORSSTANGAR
DA - SKRU ALLE TAGBØJLER OP
NO - SKRU OPP ALLE TVERRSTENGER
PL - DOKRĘCIĆ WSZYSTKIE POPRZECZKI
CS - VŠECHNY PŘÍČNÉ TYČE SEŠROUJTE

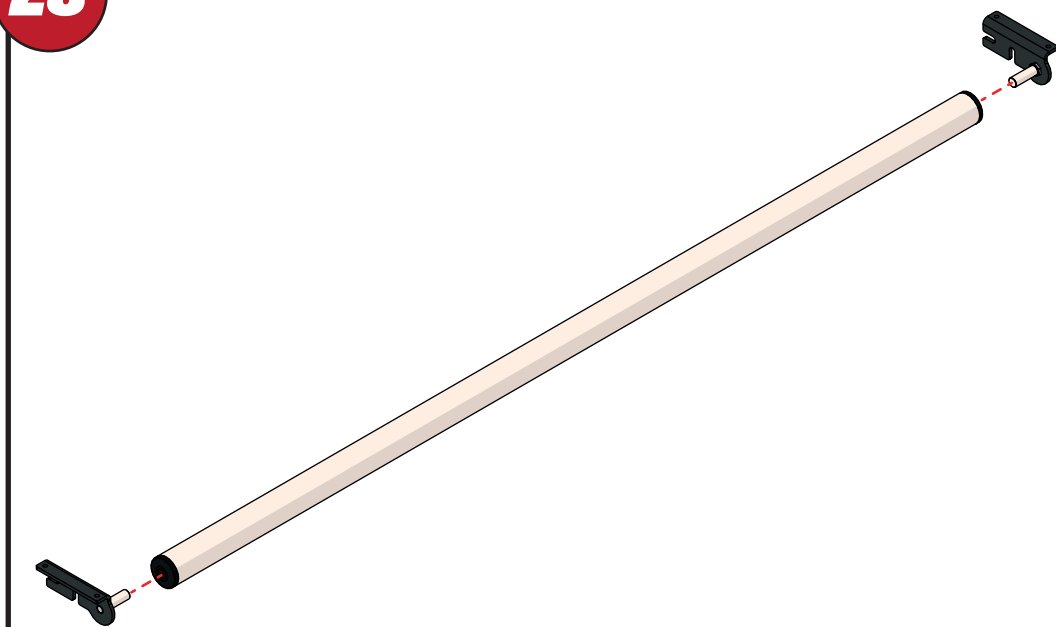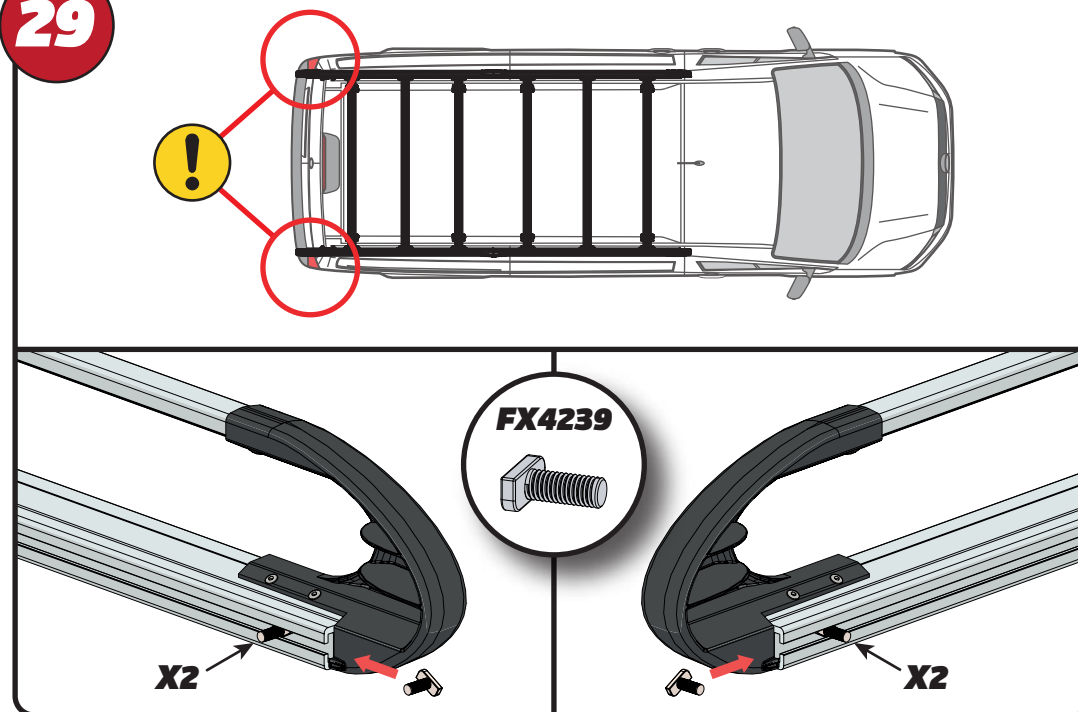28**29**


30

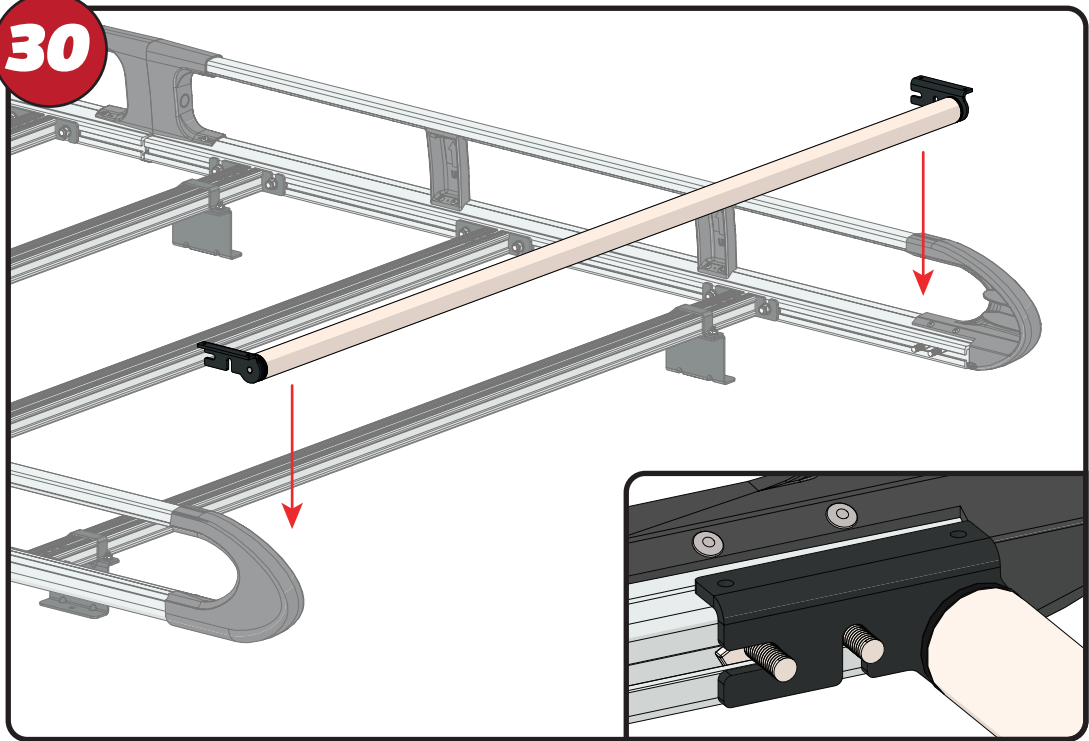


31

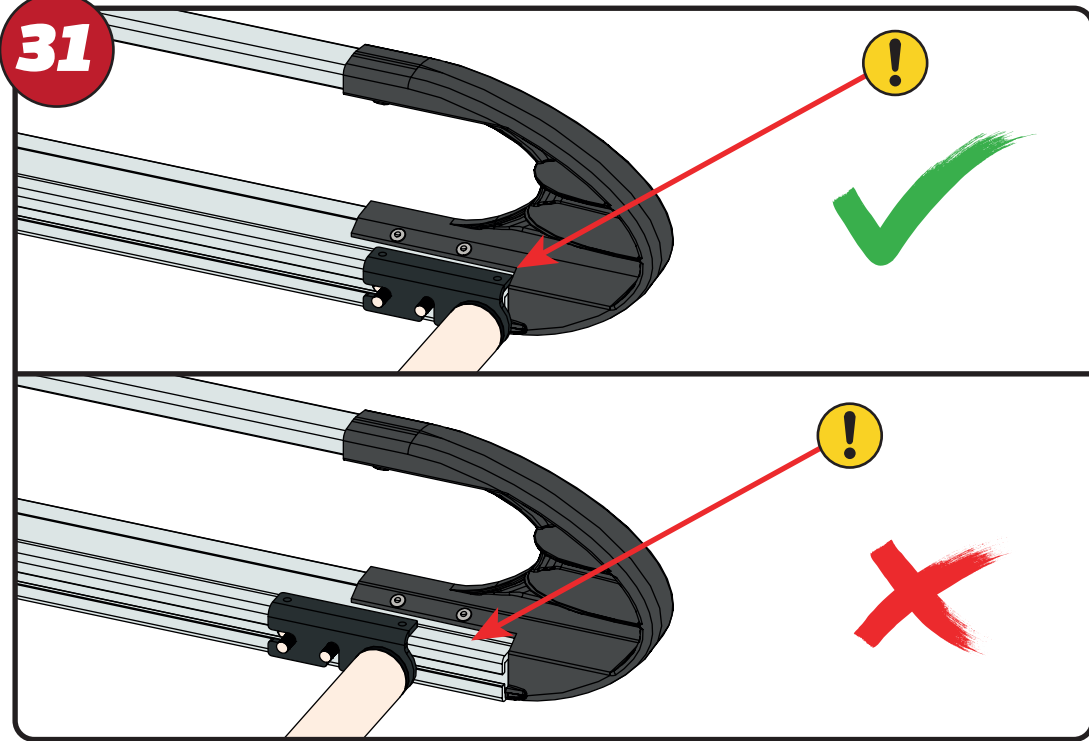


32

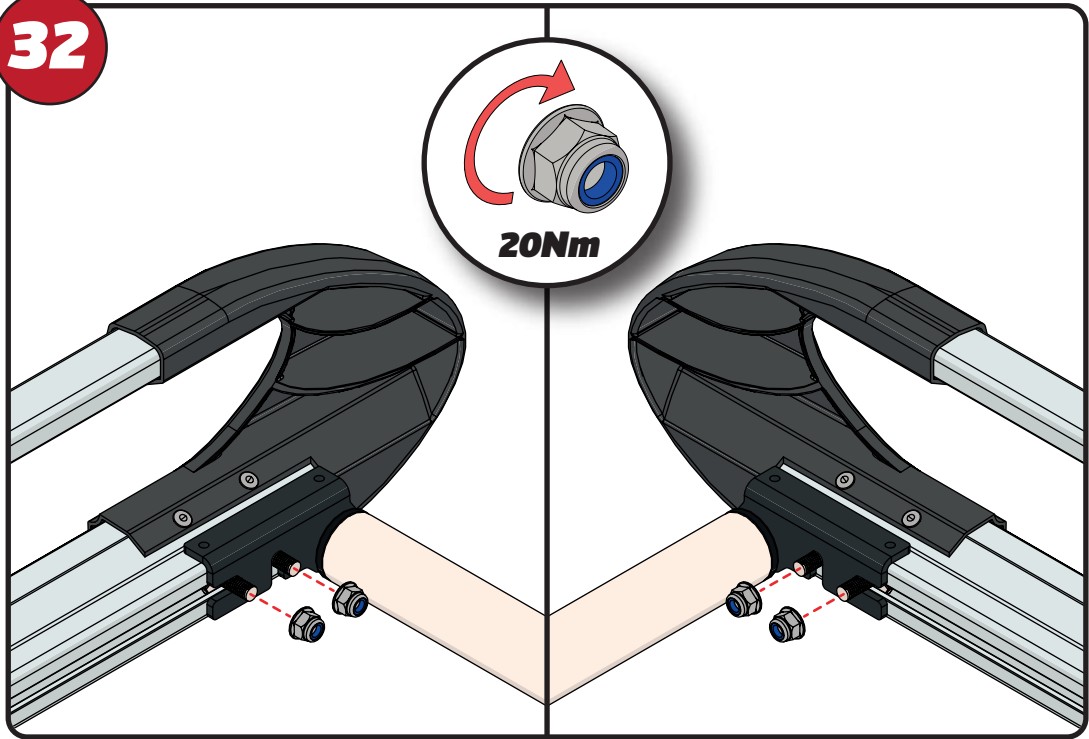


33

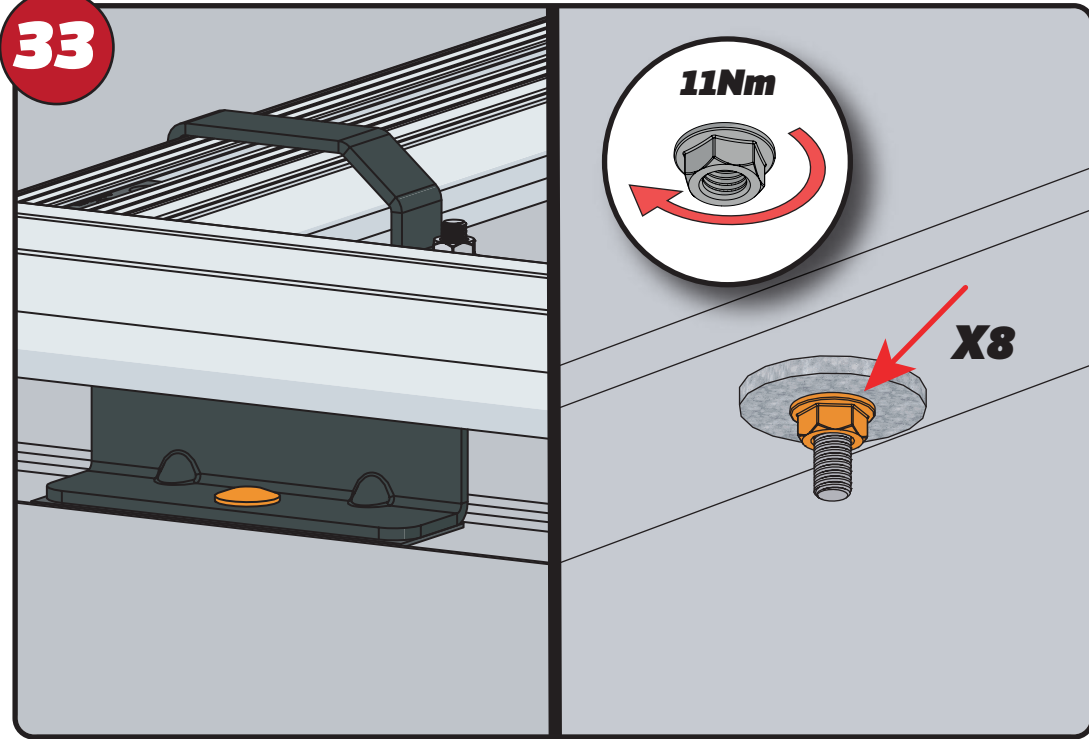


34

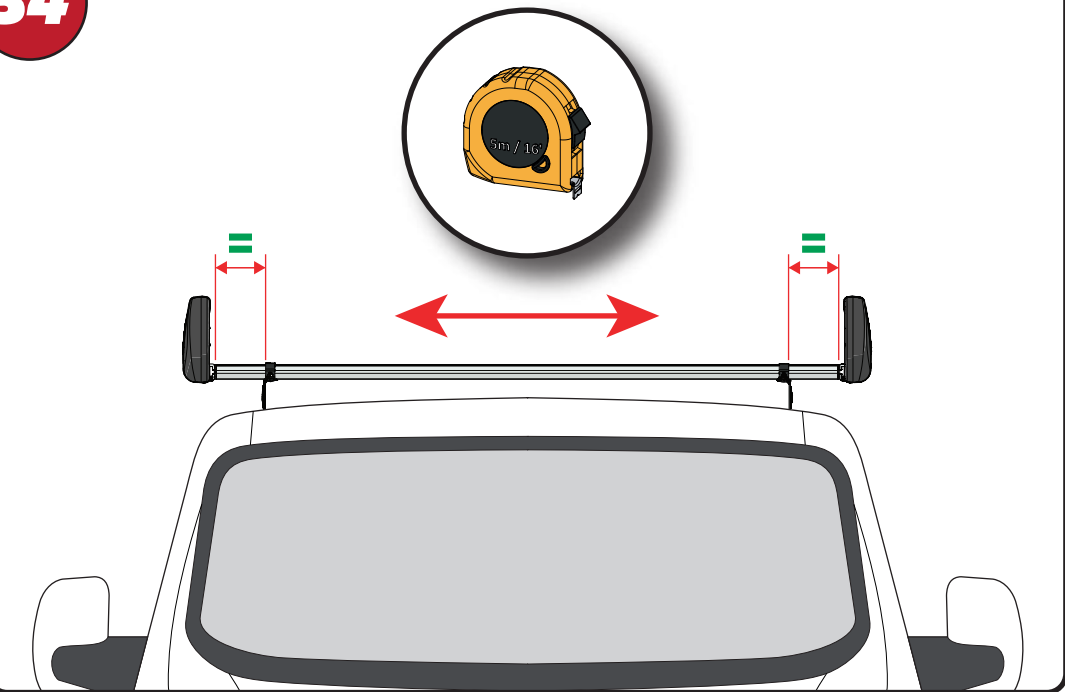


35

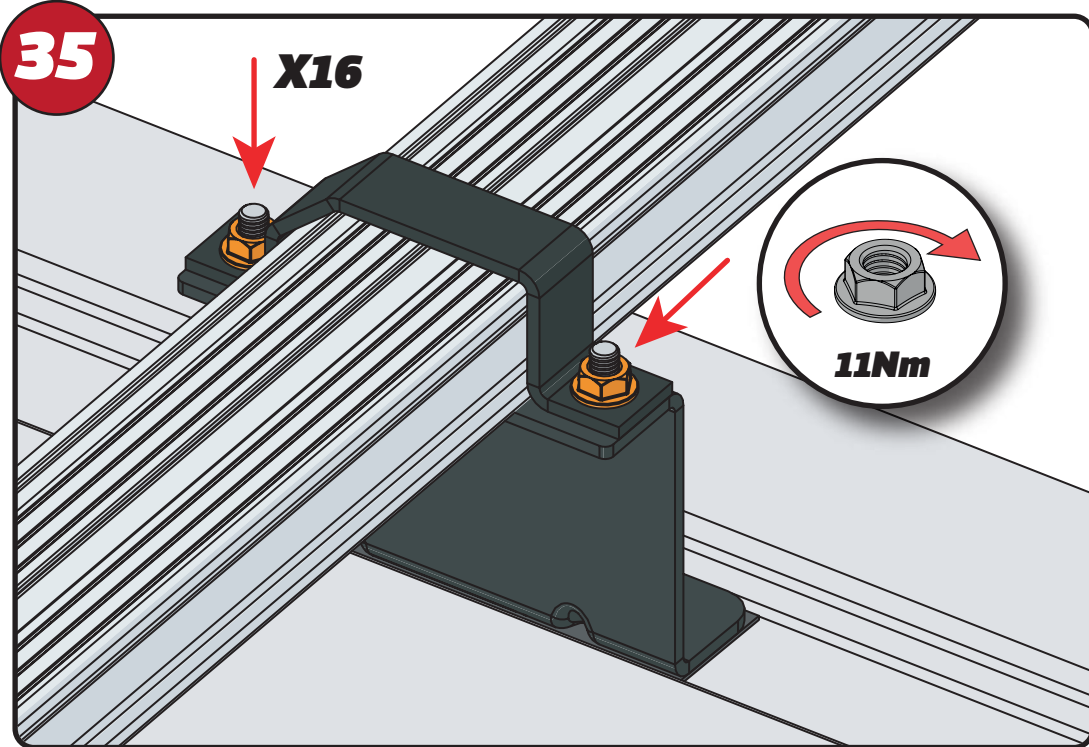


36

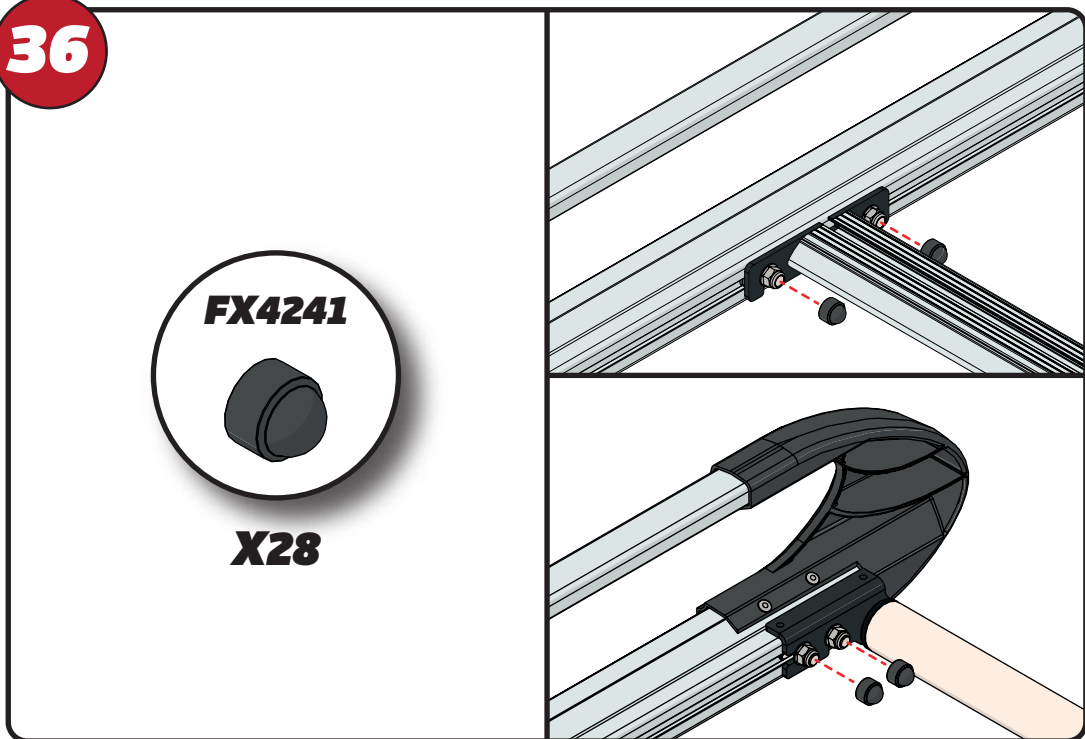

37

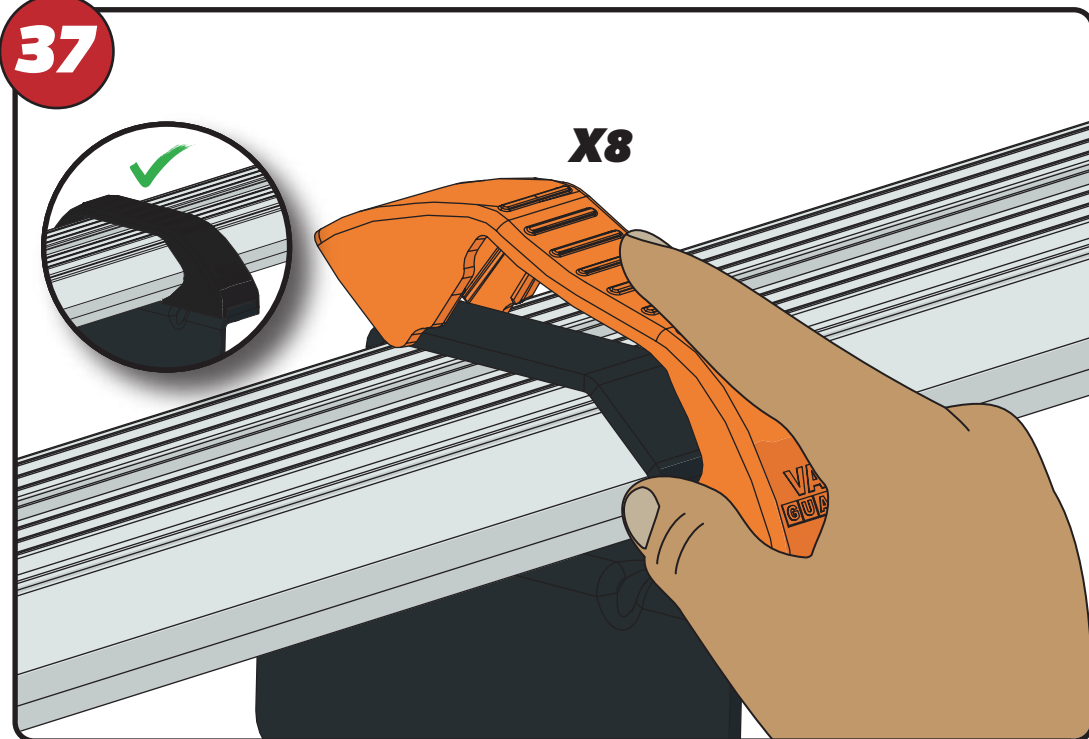

38

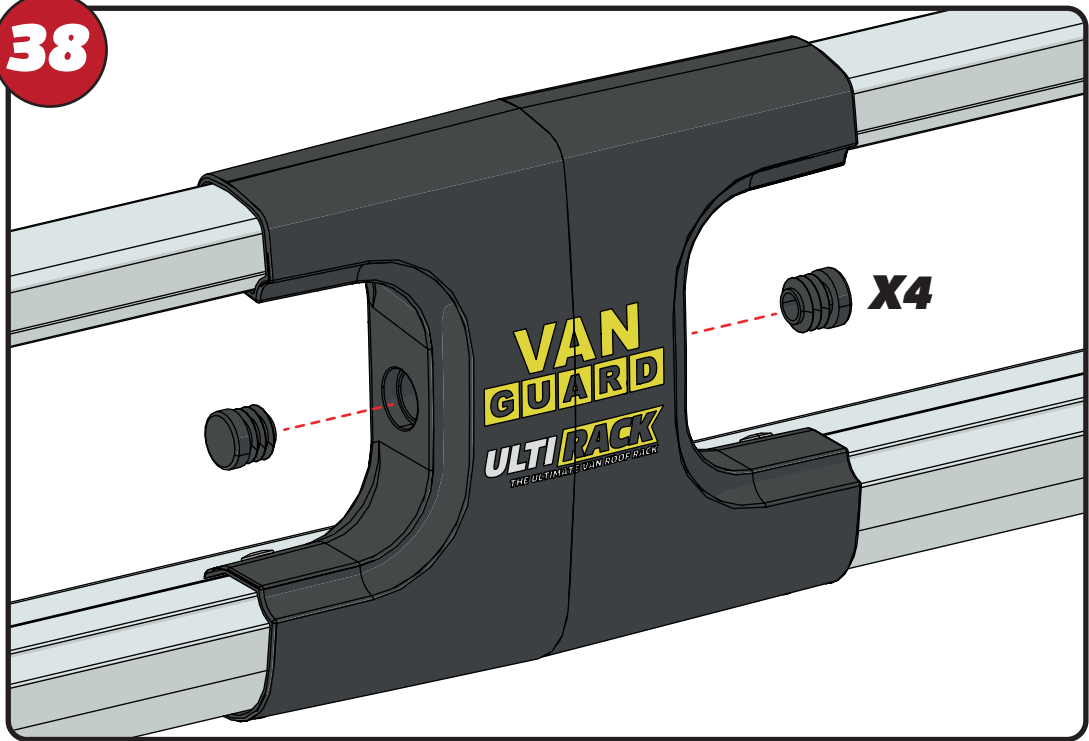

39

