


IN8037

ULTI Bars - X4

FX4014 X16
(RUBBER)

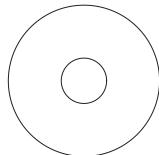


FX4016 X16
(M6)




FX4017 X16
(M6)




FX4025 X16




FX4026 X16
(M6X20)




FX4042 X16
(M6X16)

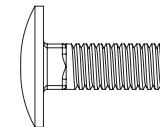


FX4069 X16
(M10X35)

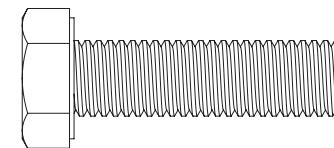

FX4092 X16
(M10)

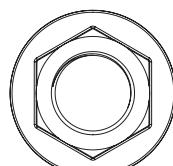


FX4099 X16
(M10)

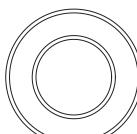


MA6021 X8




MA6065 X8




ME0203 X8



ME0681 X8

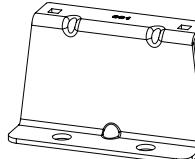


ME0682 X8

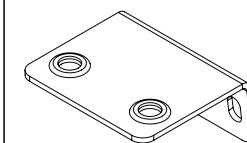

TOOLS REQUIRED



10MM X 1



14MM X 1



17MM X 1



EN - SAFETY AND PRODUCT INFORMATION
DE - SICHERHEITS- UND PRODUKTINFORMATIONEN
FR - INFORMATIONS DE SÉCURITÉ ET DU PRODUIT
NL - VEILIGHEIDS- EN PRODUCTINFORMATIE
ES - INFORMACIÓN DE SEGURIDAD Y DEL PRODUCTO
IT - INFORMAZIONI SULLA SICUREZZA E SUL PRODOTTO


SV - SÄKERHETS- OCH PRODUKTINFORMATION
DA - SIKKERHEDS- OG PRODUKTINFORMATION
NO - SIKKERTS- OG PRODUKTINFORMASJON
PL - INFORMACJE O BEZPIECZENSTWIE I PRODUKCIE
CS - INFORMACE O BEZPEČNOSTI A PRODUKTU



Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351



i

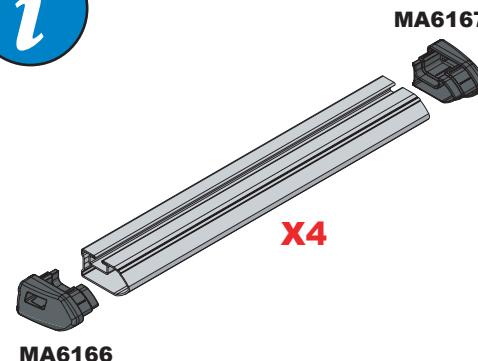

MA6166

ULTI Bar Trade
(Steel)



ULTI Bar+
(Aluminium)


This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.

IN8037_E (CN:00183)


Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

1


Insert the M6 1/4 turn nut inserts as shown below inside the vehicle, below the fixing points you wish to use.

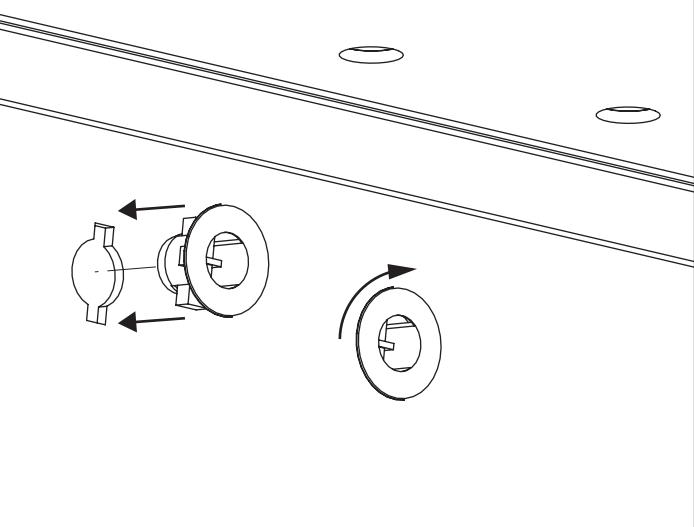INSIDE VEHICLE**2**



Secure the inner fixing brackets to the inside of the vehicle by bolting into the M6 1/4 turn nut inserts using M6x20 hex bolts and M6 washers. Tighten to 11Nm.

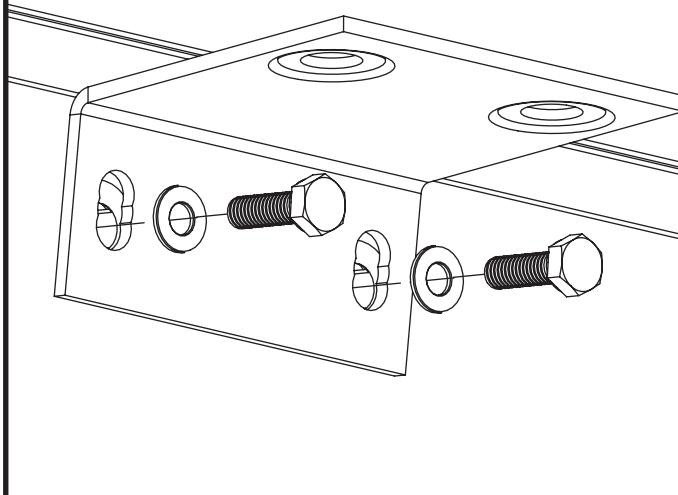**3**


Stick rubber pads to the underside of all roof brackets.

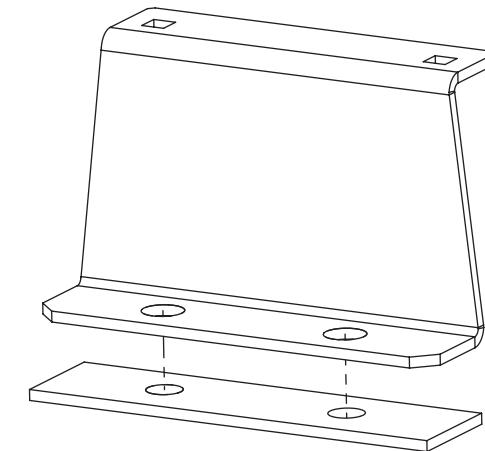**4**


Remove roof plugs to reveal the vehicles fixing points. Secure roof brackets by bolting through the fixing points using M10x35 hex bolts, M10 washers & rubber washers, secure under the roof using M10 serrated nuts. Ensure that the top hat flange is facing inwards. Tighten to 15Nm.

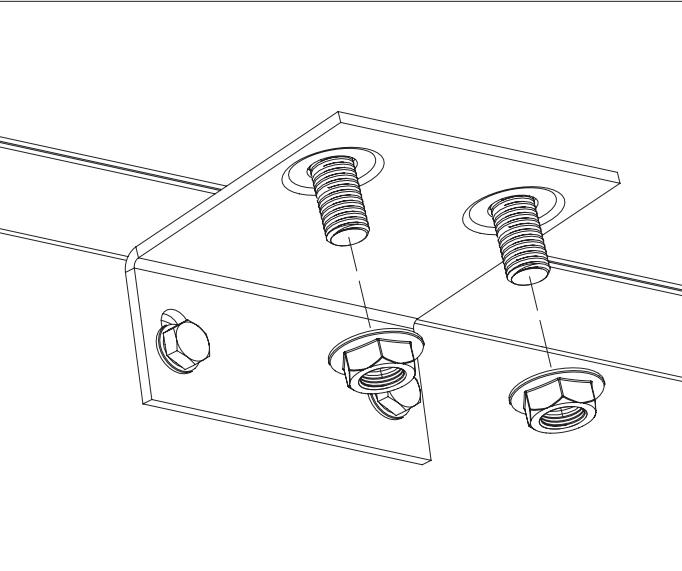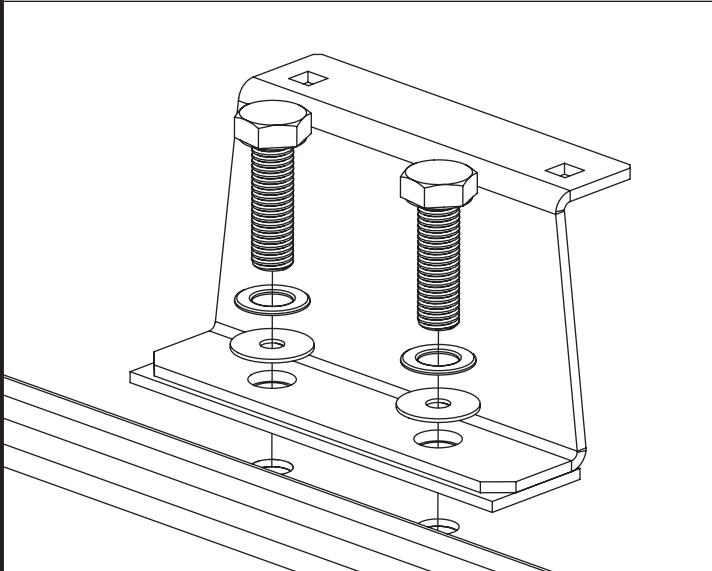**5**


Place roof bars onto the roof brackets with the t-slot facing upwards and loosely secure using top hat brackets, M6x16 coach bolts & M6 serrated nuts.

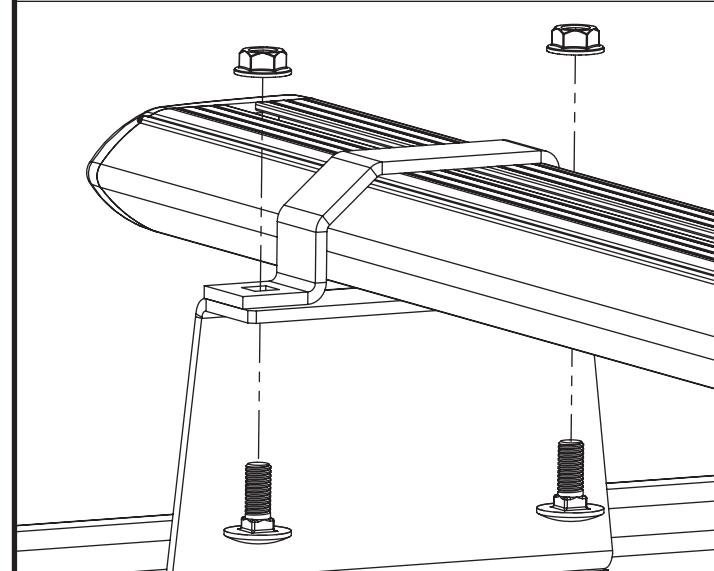

6 Adjust the roof bars to ensure that they are evenly spaced on the vehicle.

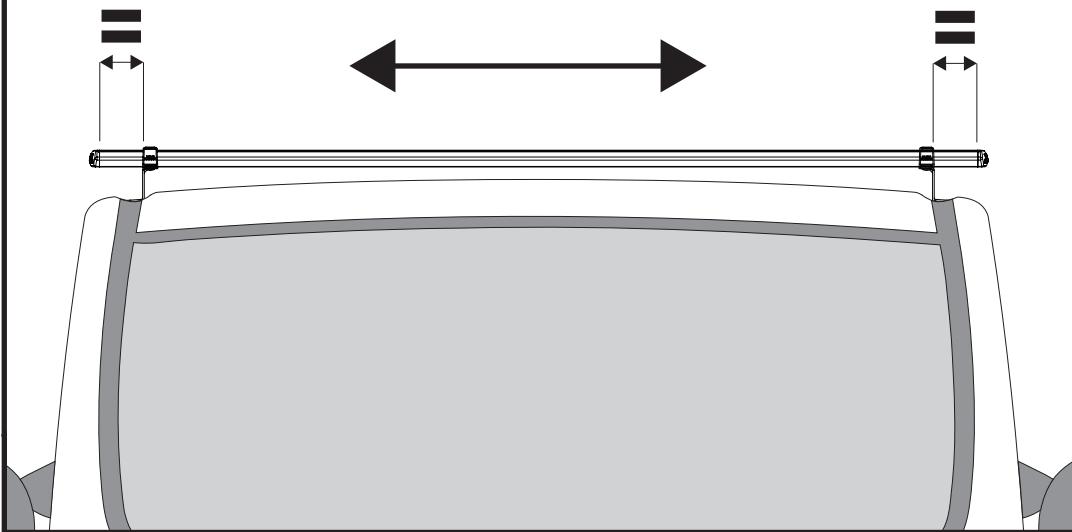


7 Tighten the roof bar fixings to 11Nm.

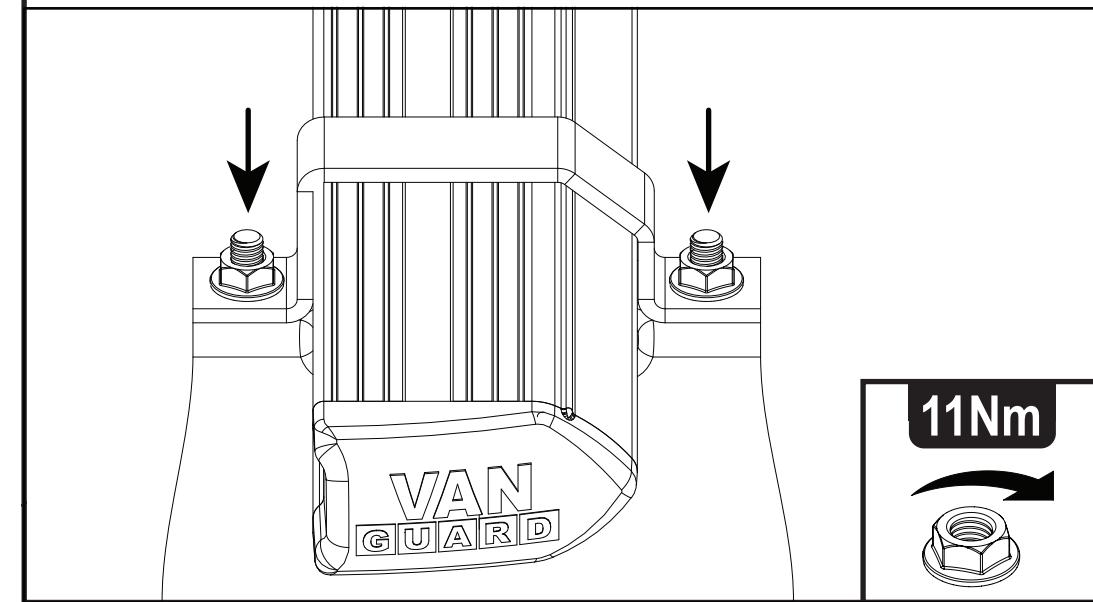


8


1.

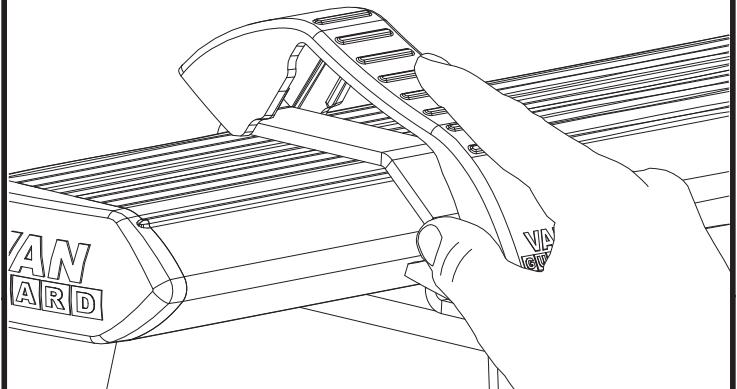


2.

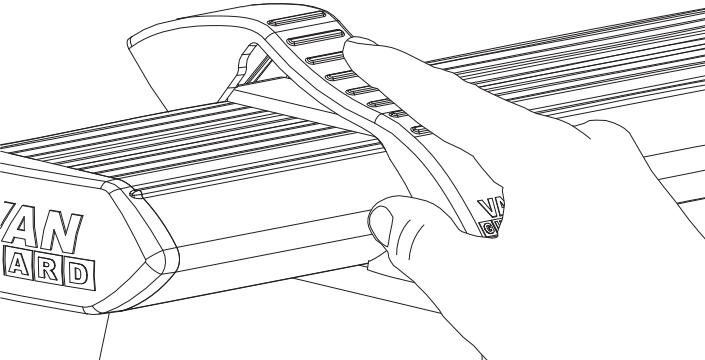

3.

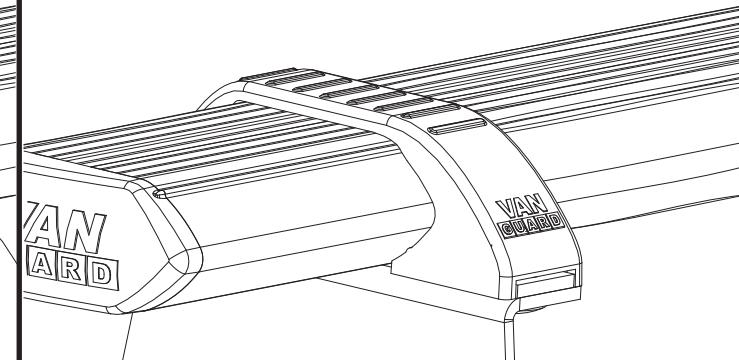

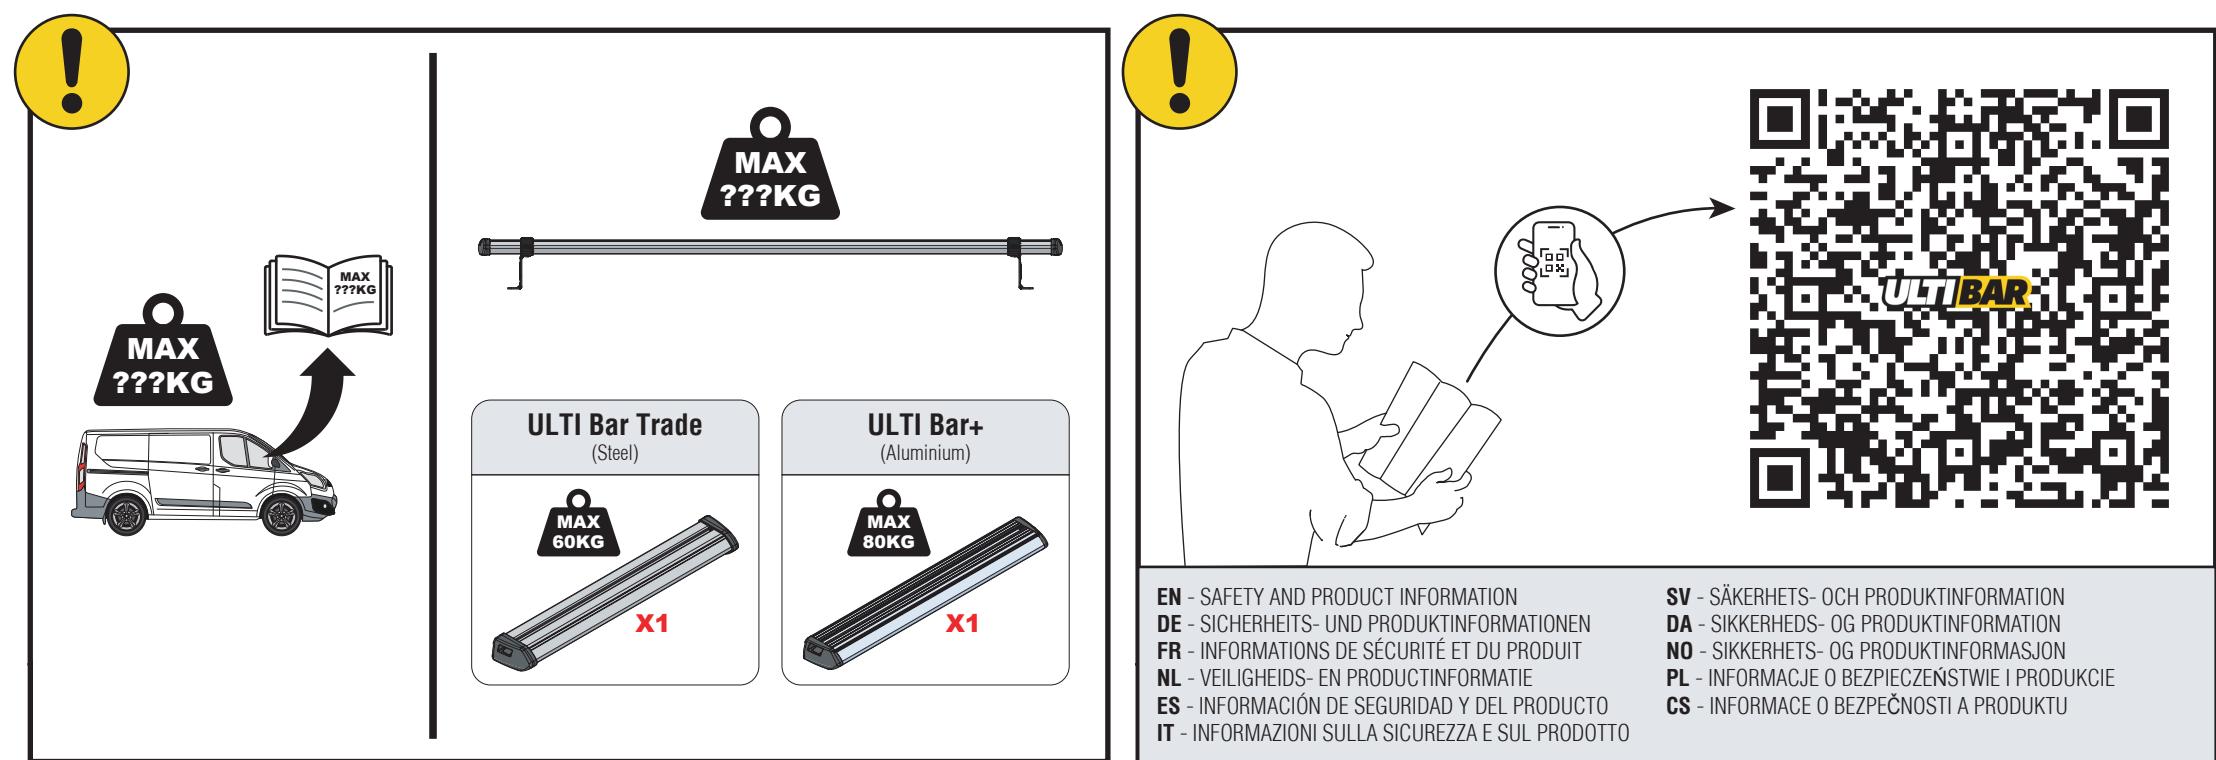

EN - SAFETY AND PRODUCT INFORMATION
DE - SICHERHEITS- UND PRODUKTINFORMATIONEN
FR - INFORMATIONS DE SÉCURITÉ ET DU PRODUIT
NL - VEILIGHEIDS- EN PRODUCTINFORMATIE
ES - INFORMACIÓN DE SEGURIDAD Y DEL PRODUCTO
IT - INFORMAZIONI SULLA SICUREZZA E SUL PRODOTTO

SV - SÄKERHETS- OCH PRODUKTINFORMATION
DA - SIKKERHEDS- OG PRODUKTINFORMATION
NO - SIKKERHETS- OG PRODUKTINFORMASJON
PL - INFORMACJE O BEZPIECZEŃSTWIE I PRODUKCIE
CS - INFORMACE O BEZPEČNOSTI A PRODUKTU