


# IN8066

## Tailgate Grille / Blank

### KIT CONTENTS

**FX4090 X5**  
(No8x1/2" SELF-TAP SCREW)



### CAUTION



**It is important that care is taken when drilling and fixing to your vehicle.**

You should note that it is the responsibility of the installer/s to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that there is no possibility of causing damage to the vehicle. Whilst every effort has been made to ensure our products can be safely fitted, changes to vehicles sometimes occurs so it's always necessary to check before drilling. Always wear safety glasses when drilling.

**If in doubt refer to the vehicle manufacturer's dealership.**

### EXAMPLE IMAGE




### TOOLS REQUIRED


PH SCREW DRIVER X 1



PLIERS X 1



DRILL (Ø3.2MM) X 1

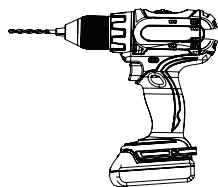

### INSTRUCTIONS

- 1. Carefully remove all tailgate trim.**
- 2.** Place the tailgate grille / blank into the window aperture and use pliers to bend the long perforated tabs at the bottom of the grille to form the shape of the tailgate by the wiper motor.
- 3.** Once happy with the position of the grille / blank carefully drill 3.2mm holes for the self-tapping screws. Take care not to catch any wires.
- 4.** Secure in place using the self-tap screws provided. Regularly inspect all fixings and parts. Any damaged or worn parts should be immediately removed from the vehicle and replaced.
- 5.** Carefully re-fit all tailgate trim.

This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.

IN8066\_B

Van Guard Accessories Ltd  
Fair Oak Close, Exeter Airport Business Park,  
Exeter, Devon, EX5 2UL  
[www.van-guard.co.uk](http://www.van-guard.co.uk)