


IN8067

Tailgate Grille / Blank

KIT CONTENTS

FX4090 X8
(No8x1/2" SELF-TAP SCREW)



CAUTION




It is important that care is taken when drilling and fixing to your vehicle.

You should note that it is the responsibility of the installer/s to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that there is no possibility of causing damage to the vehicle. Whilst every effort has been made to ensure our products can be safely fitted, changes to vehicles sometimes occurs so it's always necessary to check before drilling. Always wear safety glasses when drilling.

If in doubt refer to the vehicle manufacturer's dealership.

IMAGE OF THE TAILGATE TRIM

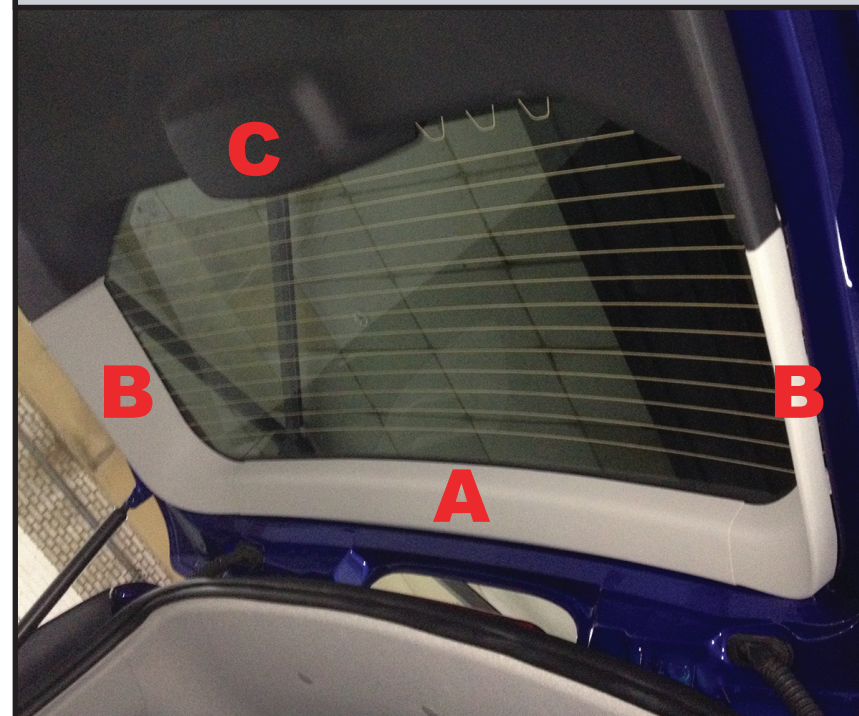


TOOLS REQUIRED

PH SCREW DRIVER X 1



DRILL (Ø3.2MM) X 1

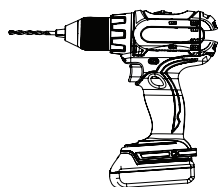

INSTRUCTIONS

- 1.** If fitting to a vehicle without trim please skip to step 4. Carefully unclip and remove the top section of the tailgate trim (A).
- 2.** Carefully unclip and remove the side sections of the tailgate trim. (B)
- 3.** Carefully unclip the bottom section of the tailgate trim. The bottom section does not need fully removing. (C)
- 4.** Place the tailgate grille / blank into the window aperture. Once happy with the position of the grille / blank carefully drill 3.2mm holes for the self-tapping screws. Take care not to catch any wires.
- 5.** Secure in place using the self-tap screws provided and re-fit the trim if applicable. Regularly inspect all fixings and parts. Any damaged or worn parts should be immediately removed from the vehicle and replaced.

This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.

IN8067_B

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk