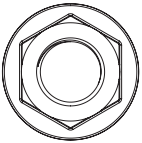
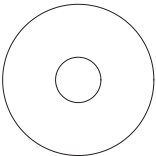
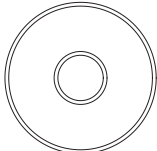




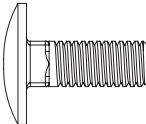




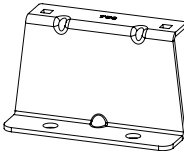


IN8099



ULTI Bars - X2

2

VAN
GUARD

FX4011 X8 (M8)	FX4014 X8 (RUBBER)	FX4016 X8 (M6)	FX4013 X8 (M6)	FX4020 X8 (M8)	FX4024 X8 (M8X40)	FX4025 X8 (M6)	FX4026 X8 (M6X20)	FX4042 X8 (M6)
								
MA6021 X8	MA6065 X4	ME0064 X2	ME0065 X1	ME0066 X1	ME0203 X4	ME0759 X4		
								

TOOLS REQUIRED

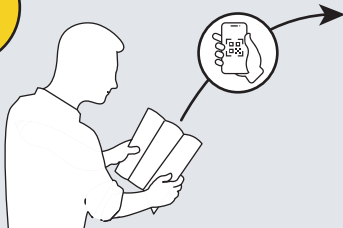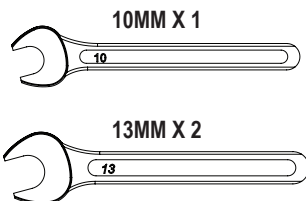


EN - SAFETY AND PRODUCT INFORMATION
DE - SICHERHEITS- UND PRODUKTINFORMATIONEN
FR - INFORMATIONS DE SÉCURITÉ ET DU PRODUIT
NL - VEILIGHEIDS- EN PRODUCTINFORMATIE
ES - INFORMACIÓN DE SEGURIDAD Y DEL PRODUCTO
IT - INFORMAZIONI SULLA SICUREZZA E SUL PRODOTTO


SV - SÄKERHETS- OCH PRODUKTINFORMATION
DA - SIKKERHEDS- OG PRODUKTINFORMATION
NO - SIKKERHETS- OG PRODUKTINFORMASJON
PL - INFORMACJE O BEZPIECZENSTWIE I PRODUKCIE
CS - INFORMACE O BEZPEČNOSTI A PRODUKTU



Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351

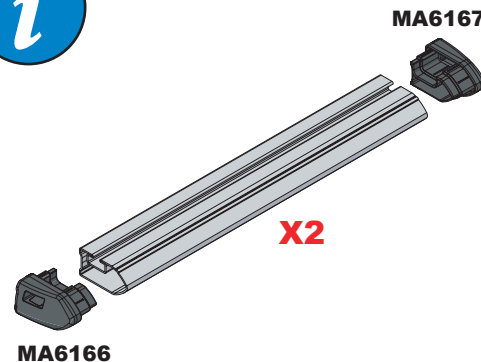

ULTI Bar Trade
(Steel)

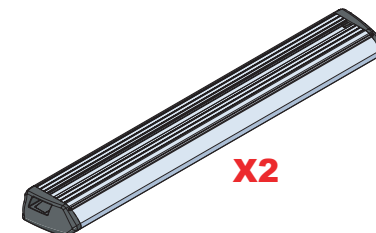



ULTI Bar+
(Aluminium)

This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8099_G (CN:00183)

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk



286-2

Vehicle:
Nissan NV400: 2010-2021
Nissan Interstar: 2022-2024
Renault Master: 2010-2024
Vauxhall Movano: 2010-2021
Wheel Base: SWB (L1)
Roof Height: Low (H1)
Rear Doors: Twin

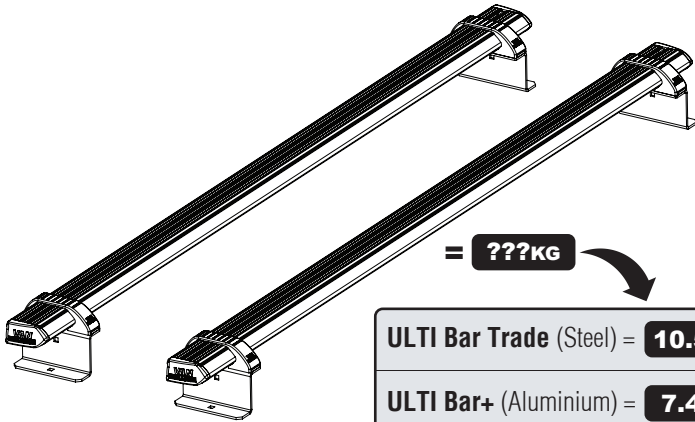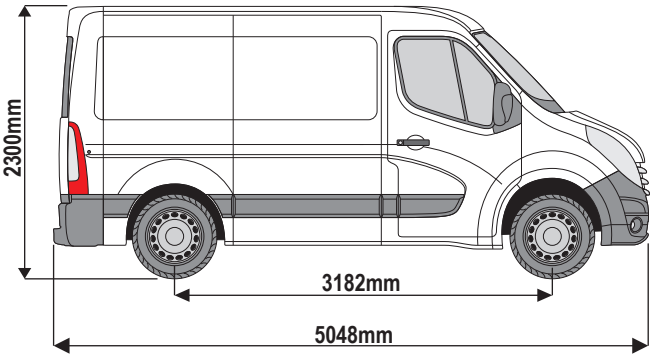



286-2

Vehicle:
Nissan NV400: 2010-2021
Nissan Interstar: 2022-2024
Renault Master: 2010-2024
Vauxhall Movano: 2010-2021
Wheel Base: SWB (L1)
Roof Height: Medium (H2)
Rear Doors: Twin

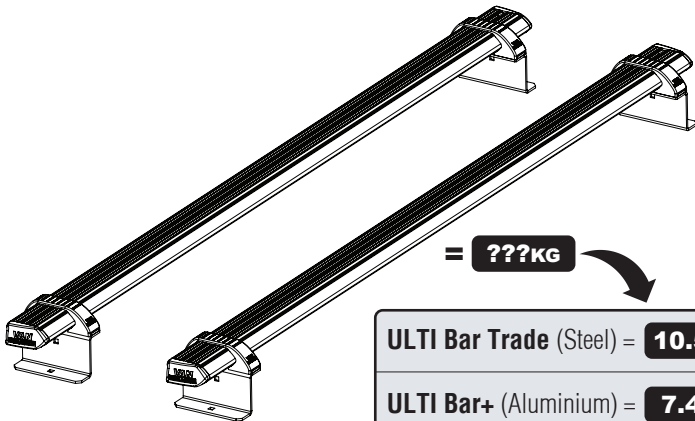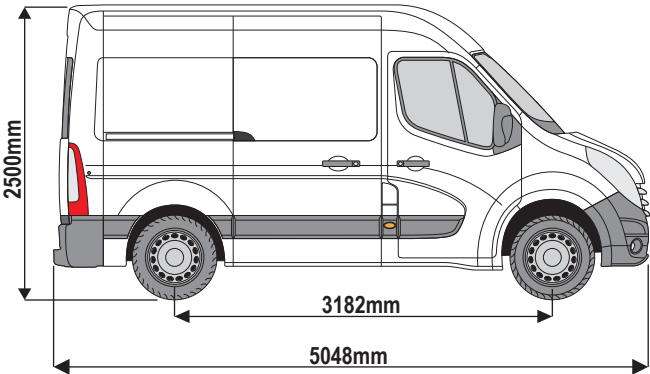



286-2

Vehicle:
Nissan NV400: 2010-2021
Nissan Interstar: 2022-2024
Renault Master: 2010-2024
Vauxhall Movano: 2010-2021
Wheel Base: MWB (L2)
Roof Height: Medium (H2)
Rear Doors: Twin

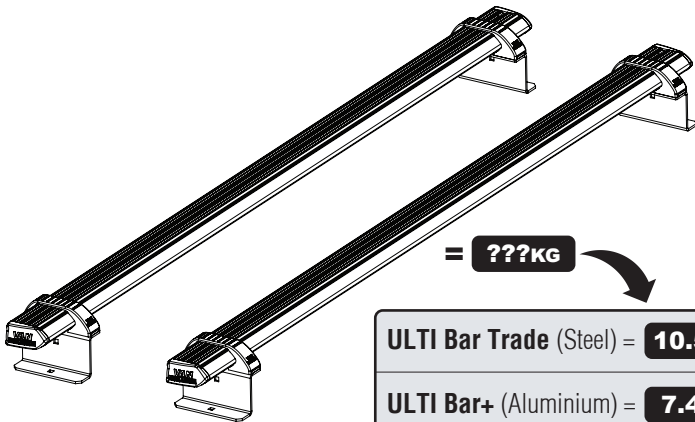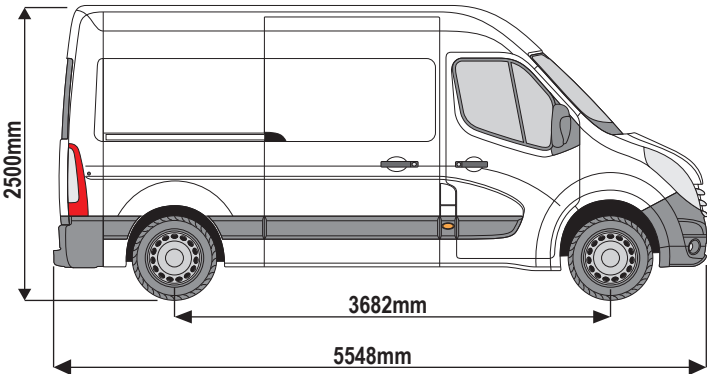



286-2

Vehicle:
Nissan NV400: 2010-2021
Nissan Interstar: 2022-2024
Renault Master: 2010-2024
Vauxhall Movano: 2010-2021
Wheel Base: LWB (L3)
Roof Height: Medium (H2)
Rear Doors: Twin

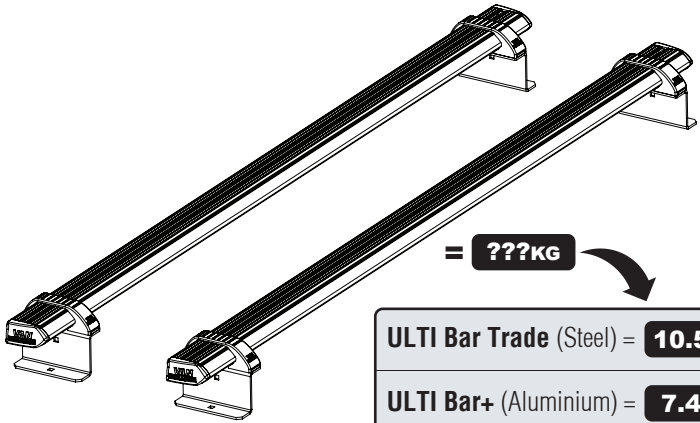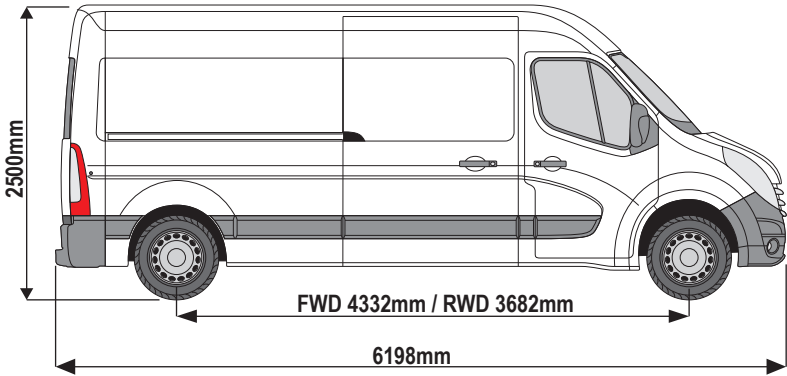


286-2


Vehicle:
Nissan NV400: 2010-2021
Nissan Interstar: 2022-2024
Renault Master: 2010-2024
Vauxhall Movano: 2010-2021
Wheel Base: XLWB (L4)
Roof Height: Medium (H2)
Rear Doors: Twin

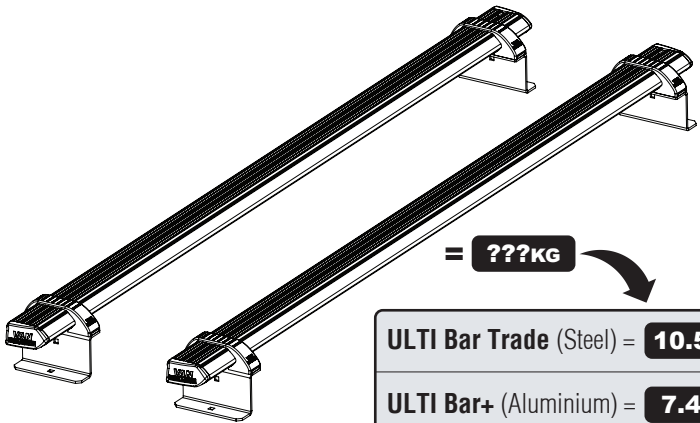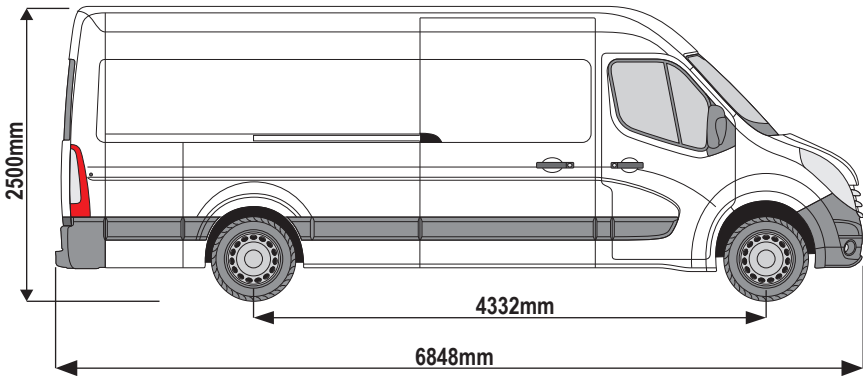


1

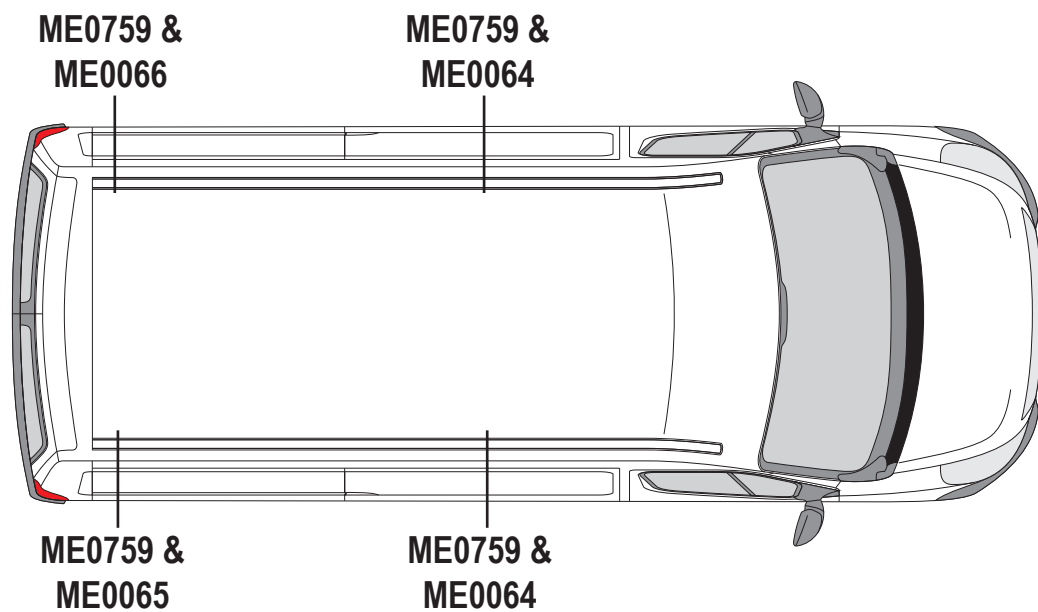


ME0064

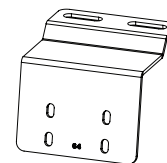


ME0065



ME0066




ME0759

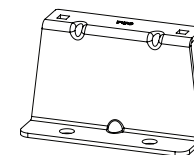


2

Remove roof plugs to reveal the vehicles fixing points.

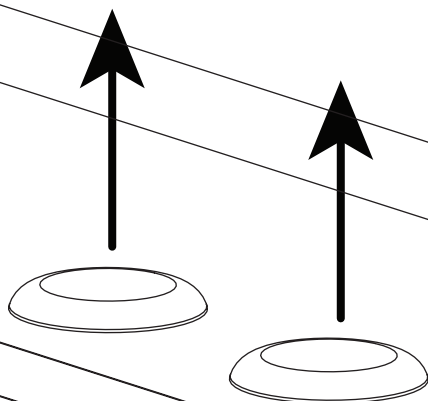


3

Stick rubber pads to all roof brackets.

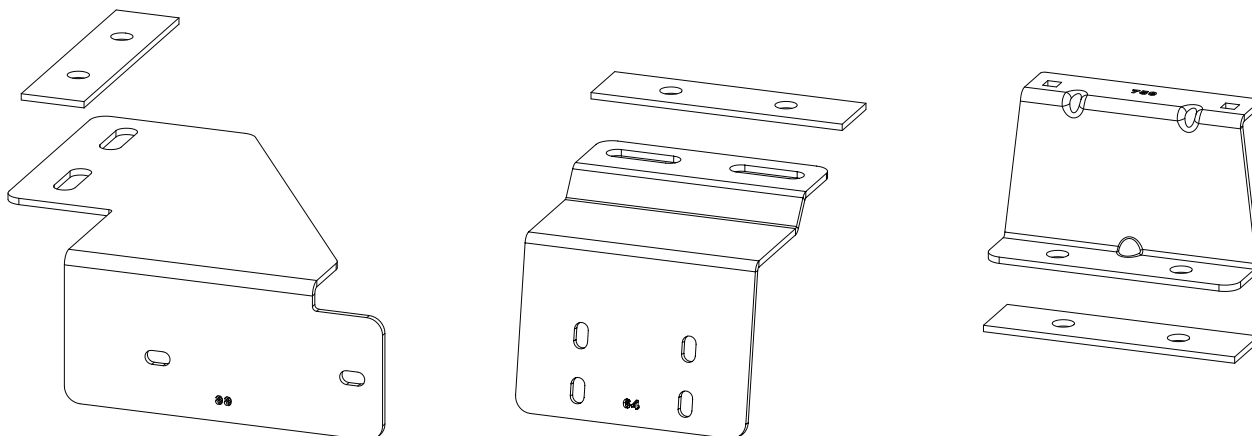


4



Loosely secure the middle inner fixing brackets to the inside of the vehicle by inserting the M6 1/4 turn nut inserts (FX4025) into the positions shown in FIG.1. Then place the middle inner bracket into place and loosely bolt into the M6 1/4 turn inserts using M6x20 hex bolts and M6 washers. Please note the cable trim (shown in FIG.2) may have to be removed. This trim can be refitted after the inner bracket has been secured.

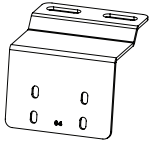MIDDLE (ME0064)

MIDDLE / ME0064

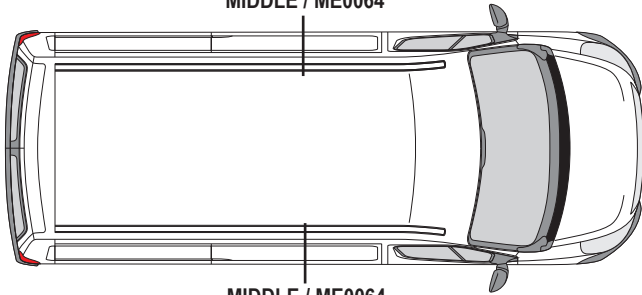



MIDDLE / ME0064

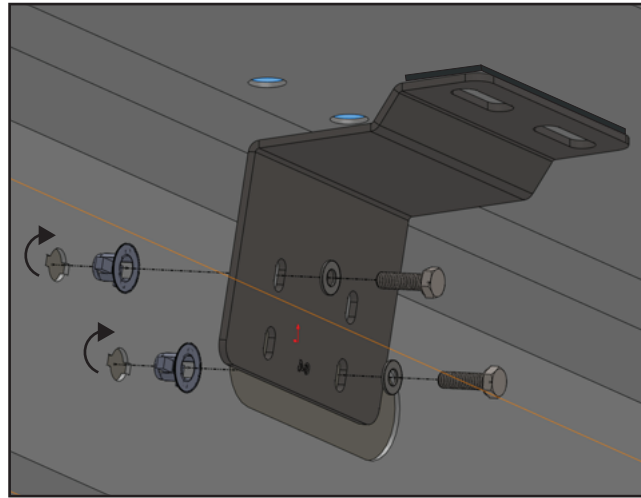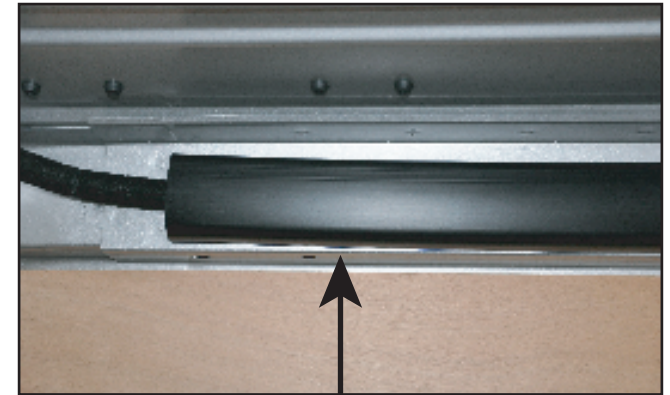FIG.1**FIG.2**


TRIM MAY NEED REMOVING BEFORE FITTING. THIS CAN BE RE-FITTED AFTWARDS.

5


Loosely secure the rear inner fixing brackets to the inside of the vehicle by inserting the M6 1/4 turn nut inserts (FX4025) into the positions shown below. Then place the rear inner bracket in position and loosely bolt into the M6 1/4 turn inserts using M6x20 hex bolts and M6 washers.

LEFT (ME0066)**RIGHT (ME0065)**

LEFT / ME0066

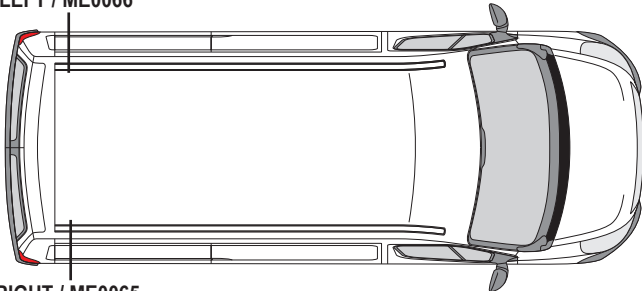


RIGHT / ME0065

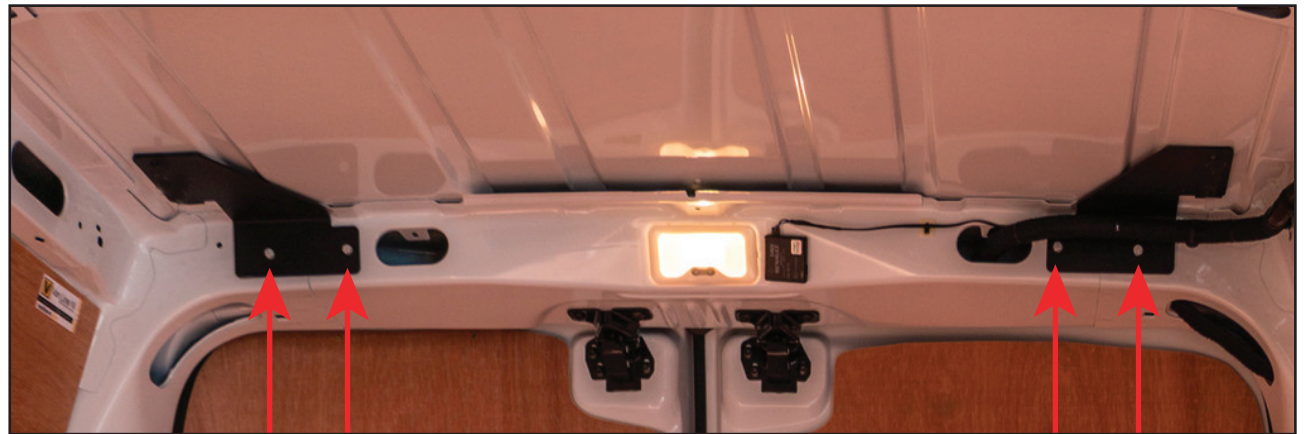


M6 1/4 TURN NUT INSERT LOCATIONS

M6 1/4 TURN NUT INSERT LOCATIONS


- 6** Place the roof brackets onto the roof and bolt down through the fixing points and through the inner fixing brackets using M8X40 hex bolts, M8 washers & rubber washers.

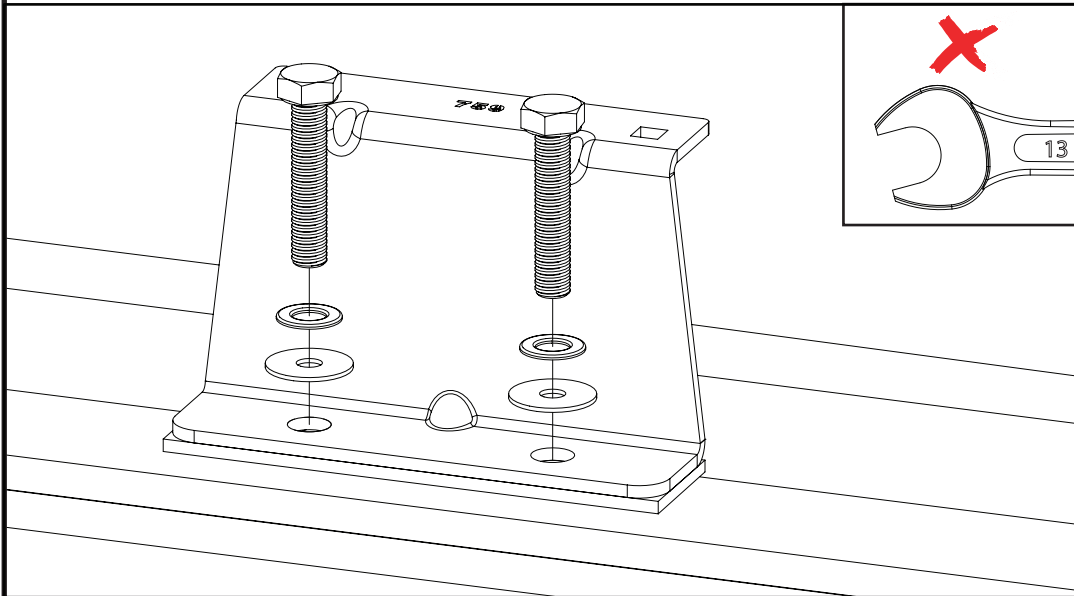


- 7** Place the roof bars onto the roof brackets and loosely secure using M6X16 coach bolts & M6 flange nuts.

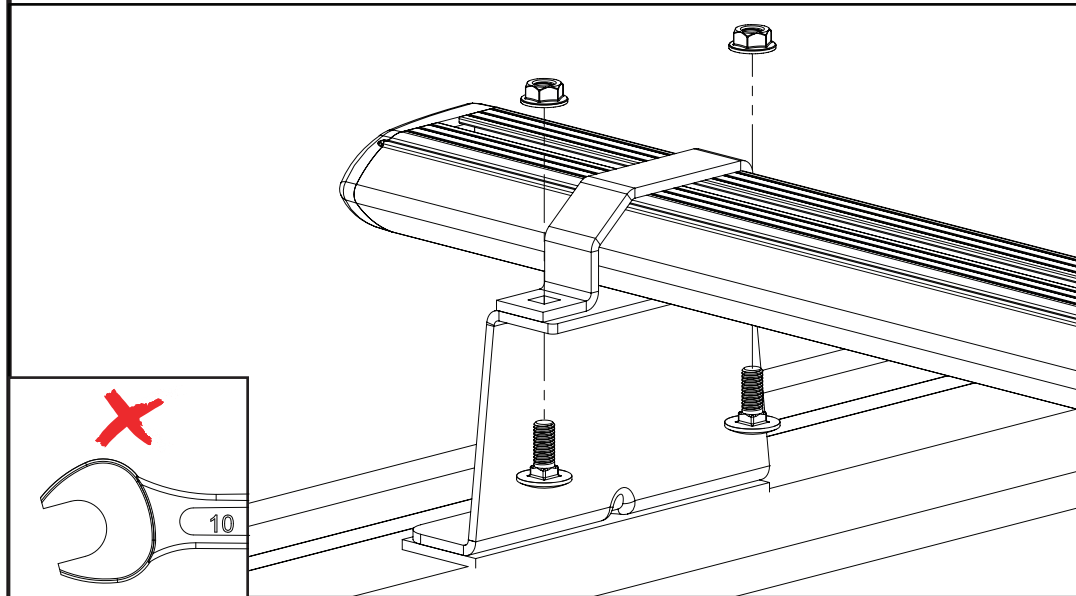


- 8** Adjust the roof bars to ensure that they are evenly spaced on the vehicle.

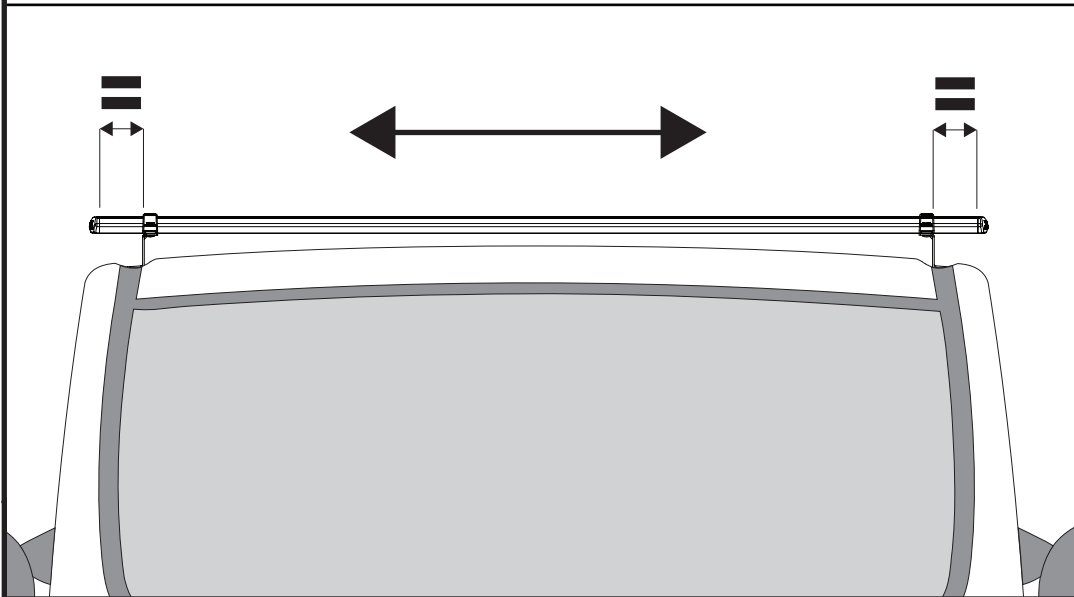


- 9** Tighten the roof bar fixings to 8Nm.

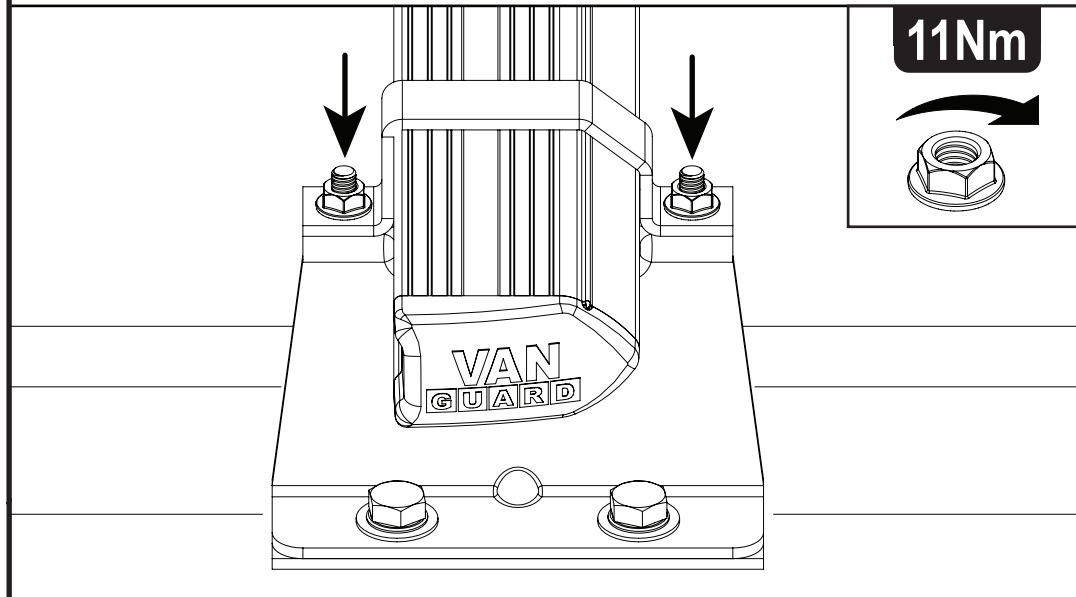

10 Secure the roof brackets to the inner fixing brackets using M8 flange nuts and tighten to 12Nm.

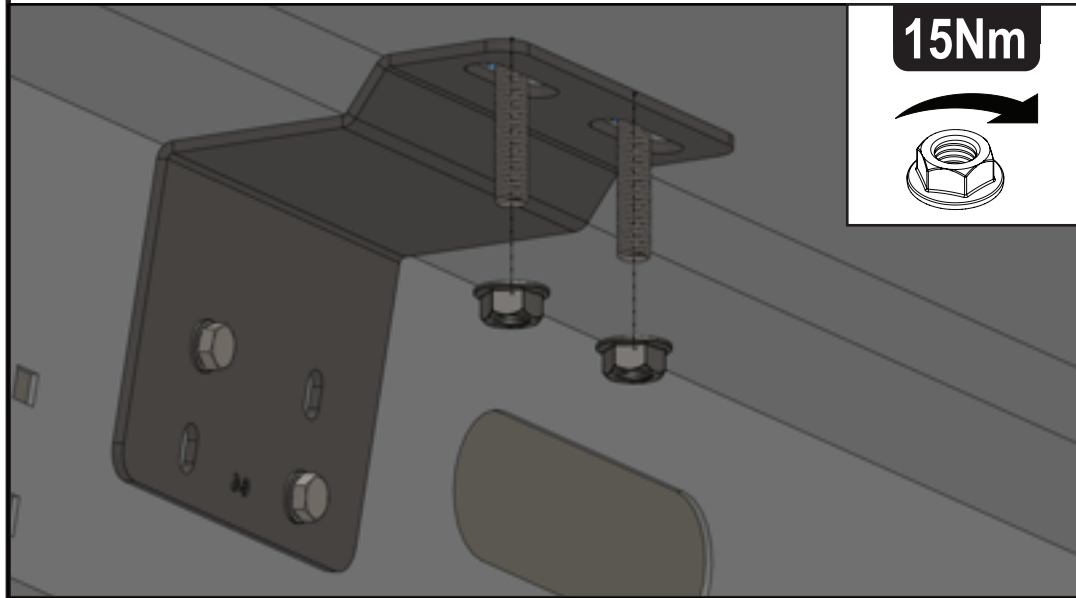


11 Tighten the M6 fixings on all inner fixing brackets to 8Nm.

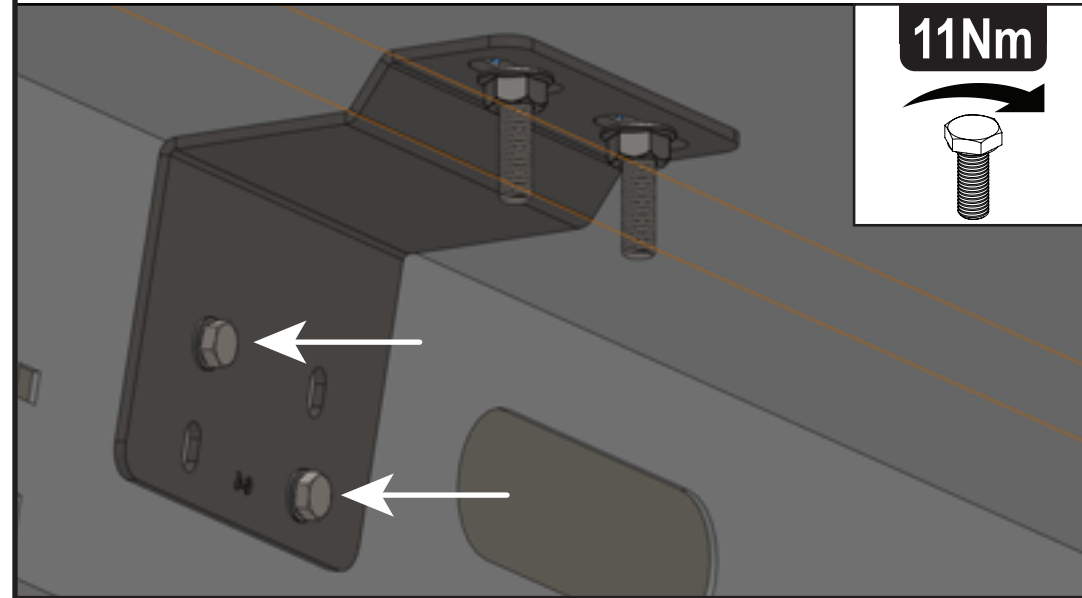


12


1.

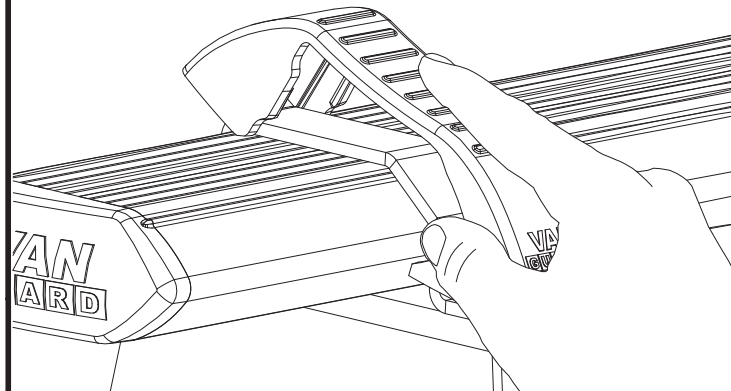


2.

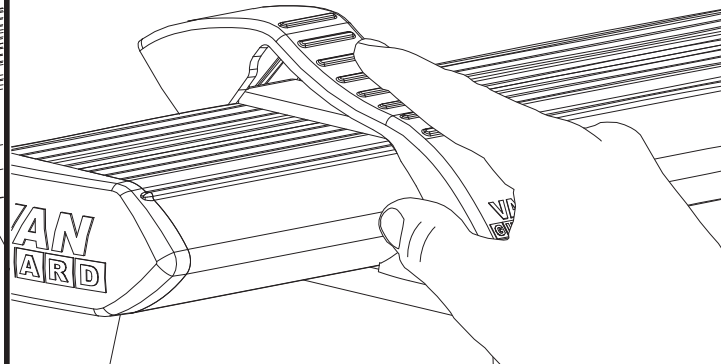

3.

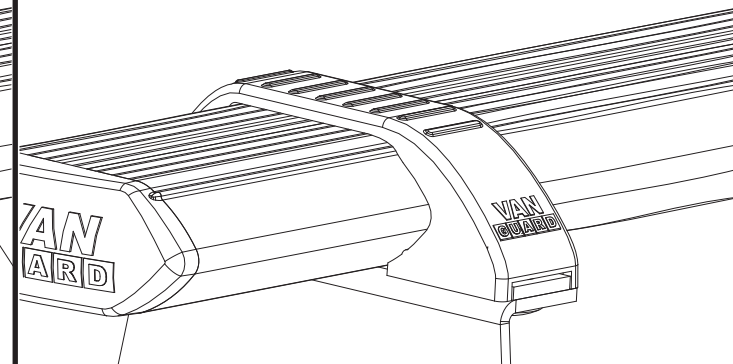

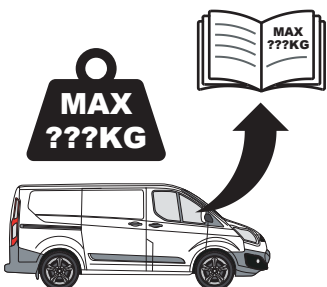

ULTI Bar Trade
(Steel)


MAX 60KG

X1

ULTI Bar+
(Aluminium)

MAX 80KG

X1

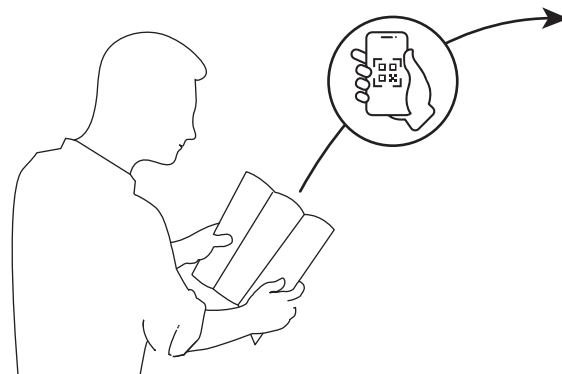

EN - SAFETY AND PRODUCT INFORMATION
DE - SICHERHEITS- UND PRODUKTINFORMATIONEN
FR - INFORMATIONS DE SÉCURITÉ ET DU PRODUIT
NL - VEILIGHEIDS- EN PRODUCTINFORMATIE
ES - INFORMACIÓN DE SEGURIDAD Y DEL PRODUCTO
IT - INFORMAZIONI SULLA SICUREZZA E SUL PRODOTTO

SV - SÄKERHETS- OCH PRODUKTINFORMATION
DA - SIKKERHEDS- OG PRODUKTINFORMATION
NO - SIKKERHETS- OG PRODUKTINFORMASJON
PL - INFORMACJE O BEZPIECZENSTWIE I PRODUKCIE
CS - INFORMACE O BEZPEČNOSTI A PRODUKTU