
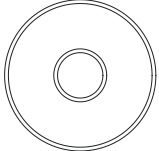
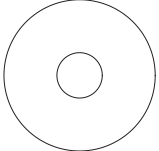


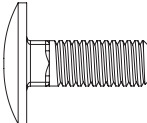


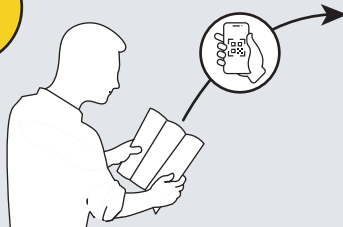


IN8139

ULTI Bars - X3

FX4010 X6 (M6) 	FX4013 X6 (M6) 	FX4014 X6 (RUBBER) 	FX4016 X12 (M6) 	FX4021 X6 (M6X25) 	FX4042 X12 (M6X16) 	MA6023 X6 	MA6065 X6 
ME0203 X6 	ME0791 X1 	ME0792 X1 					

TOOLS REQUIRED

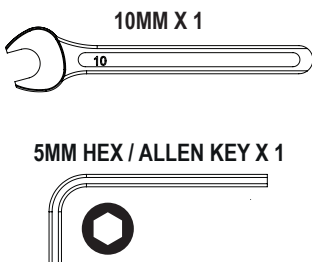


EN - SAFETY AND PRODUCT INFORMATION
 DE - SICHERHEITS- UND PRODUKTINFORMATIONEN
 FR - INFORMATIONS DE SÉCURITÉ ET DU PRODUIT
 NL - VEILIGHEIDS- EN PRODUCTINFORMATIE
 ES - INFORMACIÓN DE SEGURIDAD Y DEL PRODUCTO
 IT - INFORMAZIONI SULLA SICUREZZA E SUL PRODOTTO


SV - SÄKERHETS- OCH PRODUKTINFORMATION
 DA - SIKKERHEDS- OG PRODUKTINFORMATION
 NO - SIKKERHETS- OG PRODUKTINFORMASJON
 PL - INFORMACJE O BEZPIECZENSTWIE I PRODUKCIE
 CS - INFORMACE O BEZPEČNOSTI A PRODUKTU



Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351

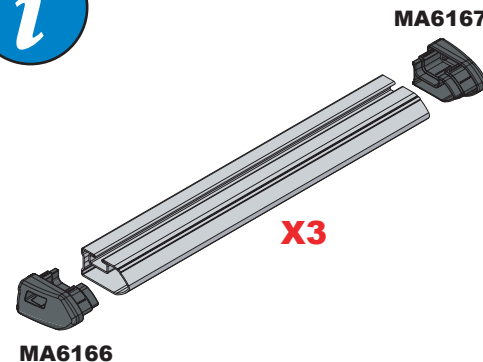

ULTI Bar Trade
(Steel)

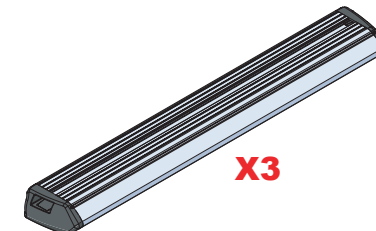


ULTI Bar+
(Aluminium)


This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
 IN8139_E (CN:00183)

Van Guard Accessories Ltd
 Fair Oak Close, Exeter Airport Business Park,
 Exeter, Devon, EX5 2UL
www.van-guard.co.uk

313-3

Vehicle:
Ford Transit Courier: 2014-2024
Wheel Base: Standard (L1)
Roof Height: Standard (H1)
Rear Doors: Twin / Tailgate

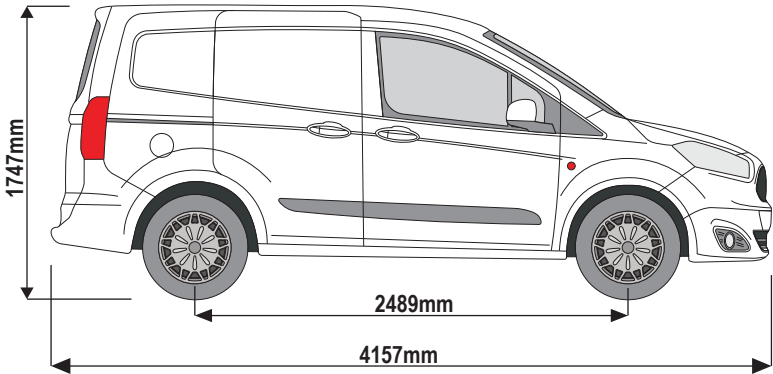


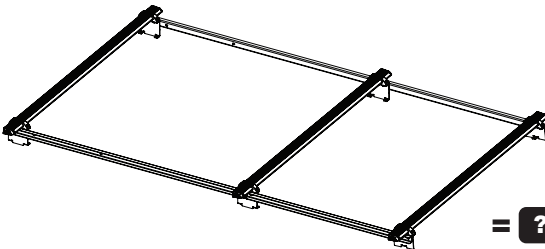


= **???KG**

ULTI Bar Trade (Steel) =	15.6KG
ULTI Bar+ (Aluminium) =	11.3KG


- 1** The side rails are handed to suit both sides of the vehicle. The front (F) foot of the side rail has 1 fixing slot and the rear (R) foot has 2 fixing slots.

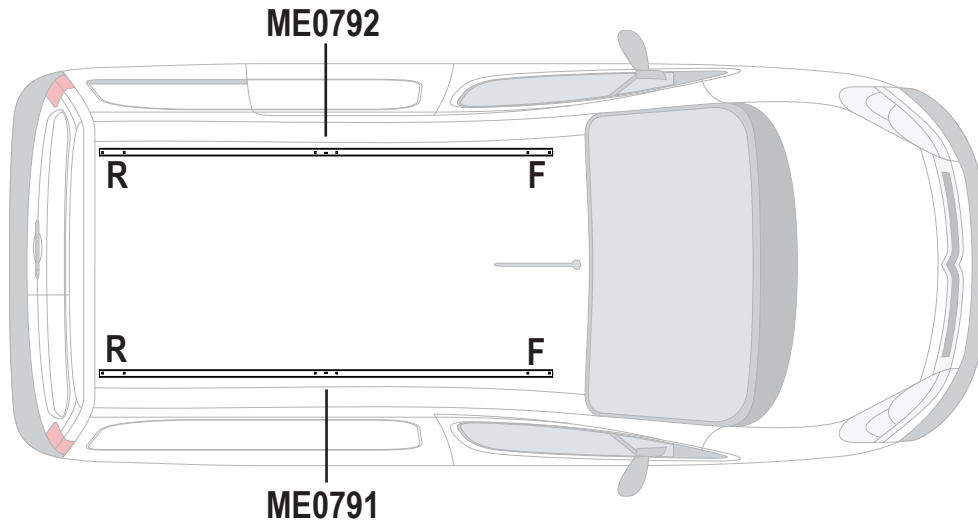


ME0791

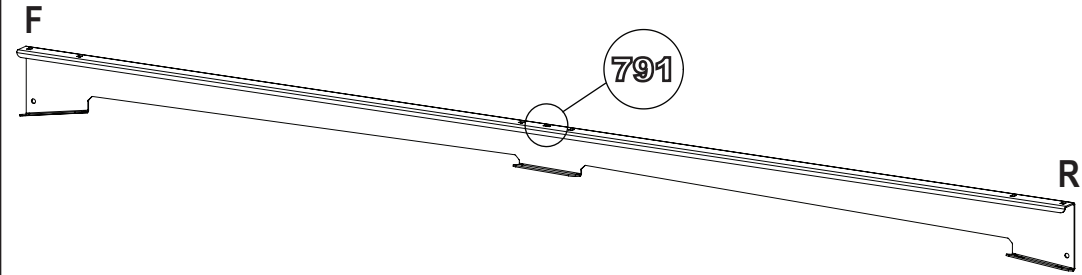


ME0792

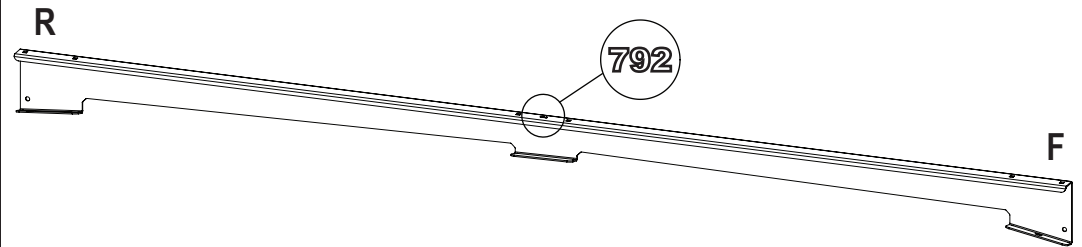


- 2** Stick rubber pads to the underside of the side rail feet. **Please note, the middle foot of the side rail is for support only and is not secured to the vehicle.**

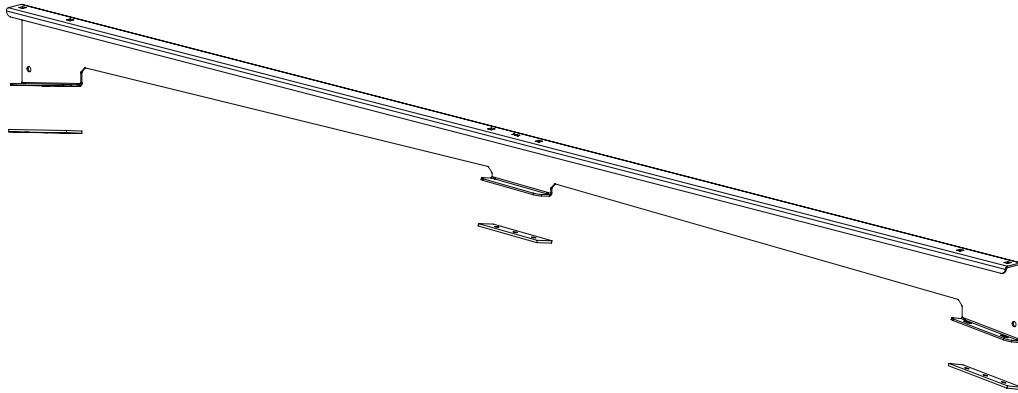


- 3** Remove roof plugs to reveal the vehicles fixing points. **Do not remove the front most roof plug as this is not used to fit this product.**

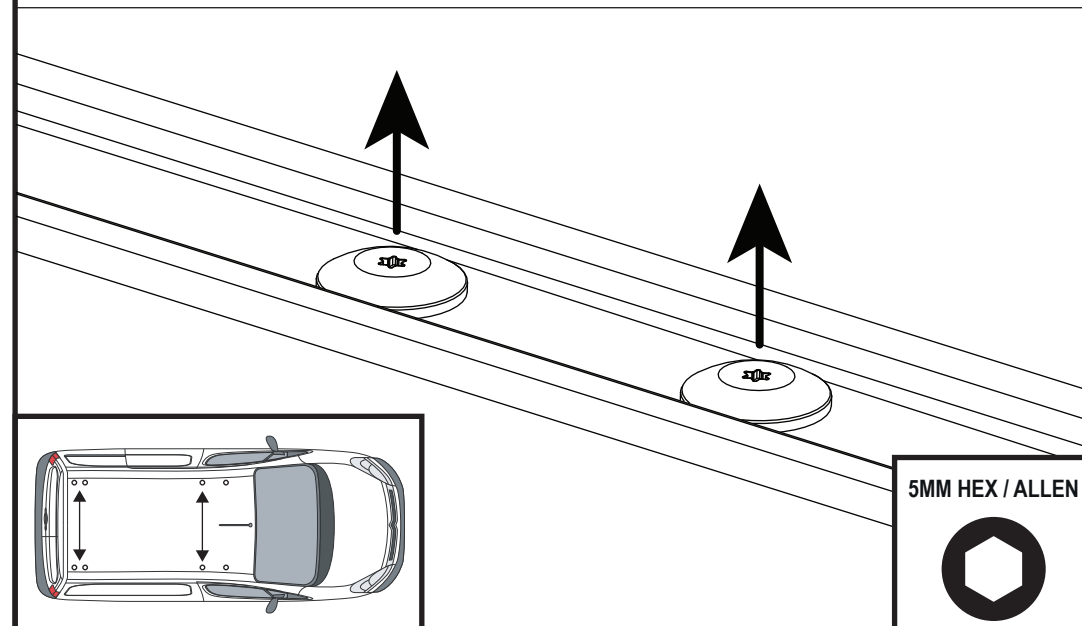


- 4** Secure the side rails to the vehicles fixing points using M6x25 hex bolts, M6 shakeproofs, M6x20 washers & rubber washers. Ensure that the top hat flange is facing inwards.

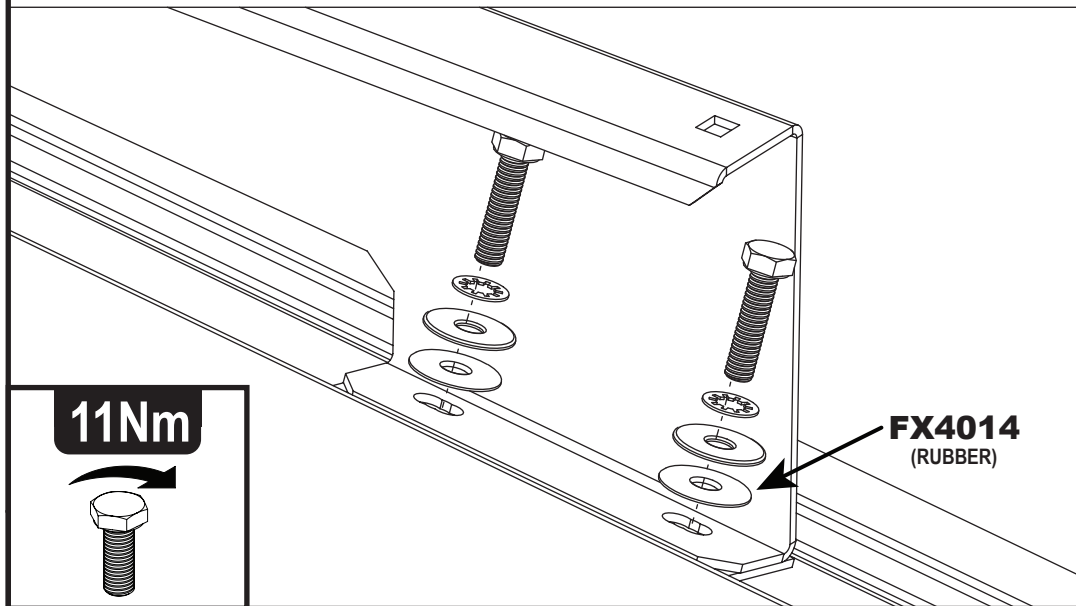


- 5** Place roof bars onto the side rails with the t-track facing upwards and loosely secure using top hat brackets, M6x16 coach bolts & M6 serrated nuts.

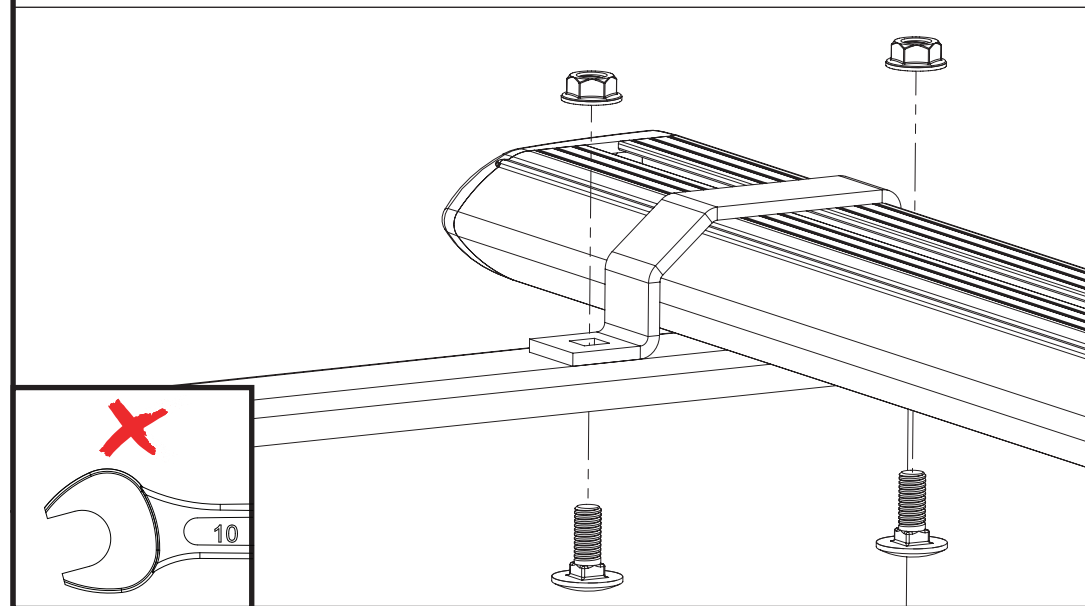


- 6** Adjust the roof bars to ensure that they are evenly spaced on the vehicle.

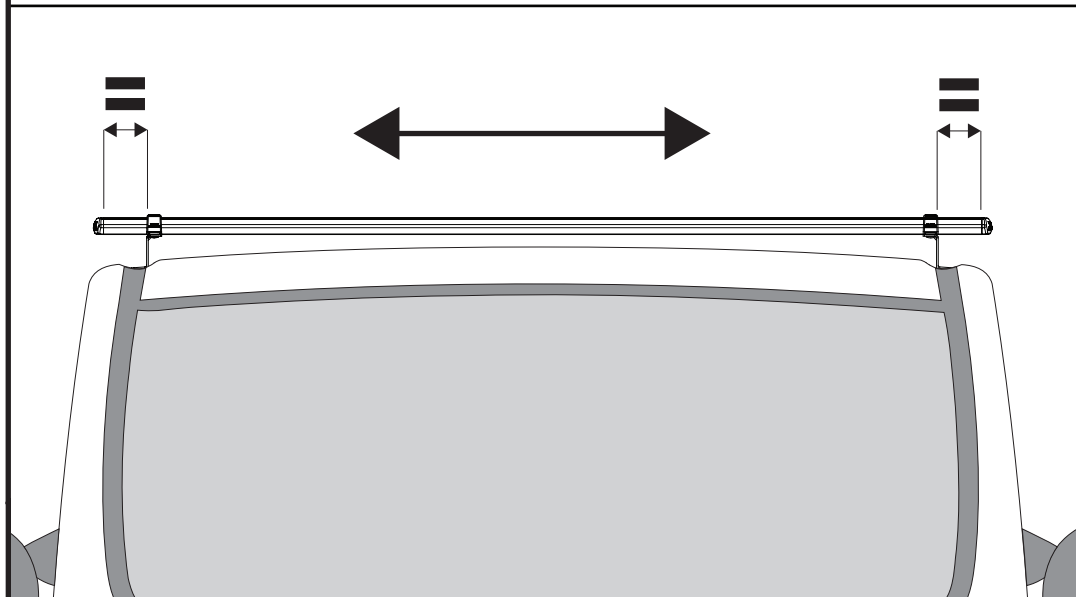


- 7** Tighten the roof bar fixings to 8Nm.

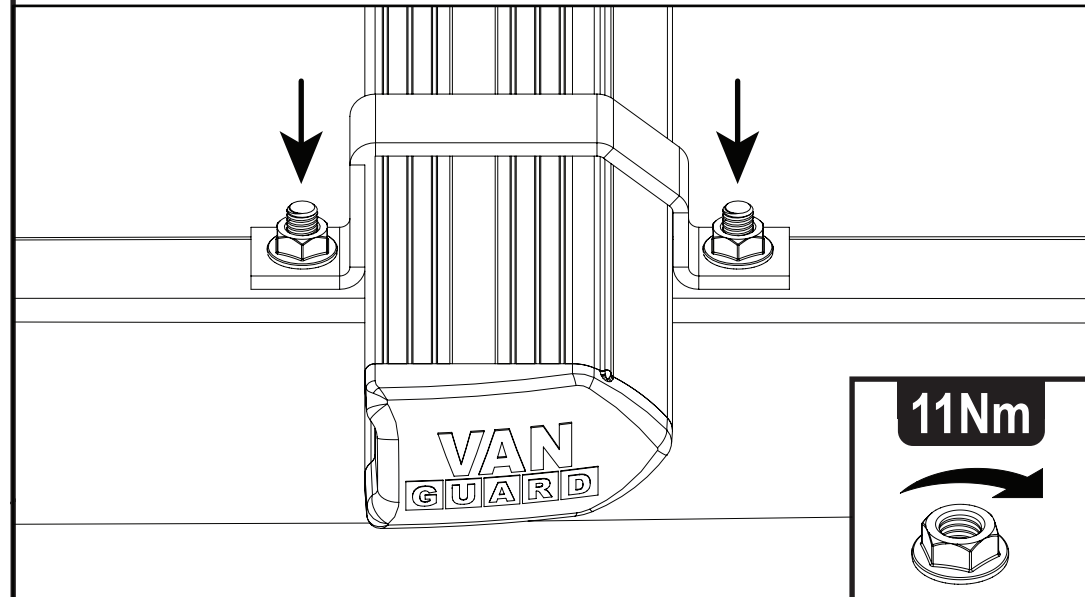




1.

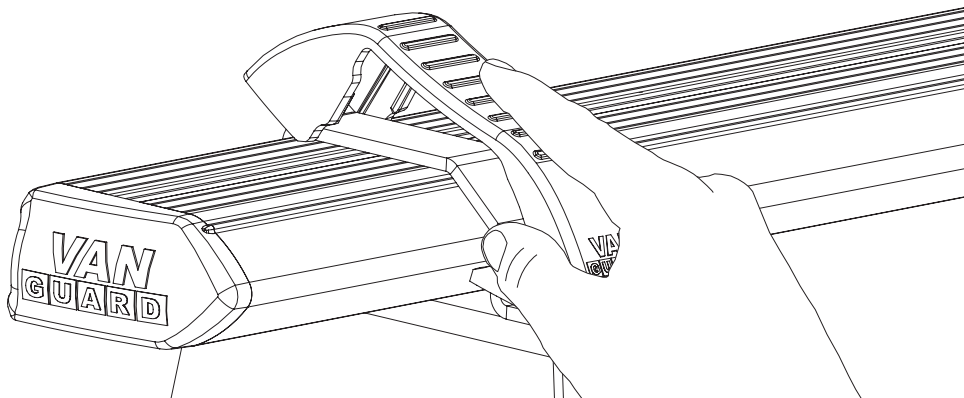

2.

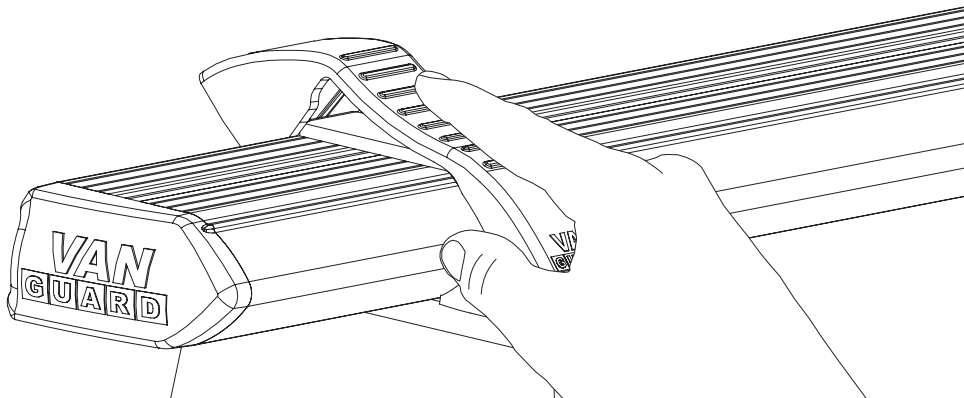

3.

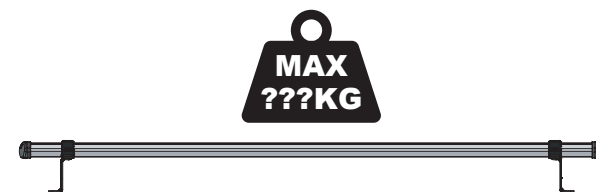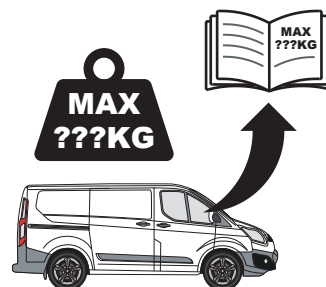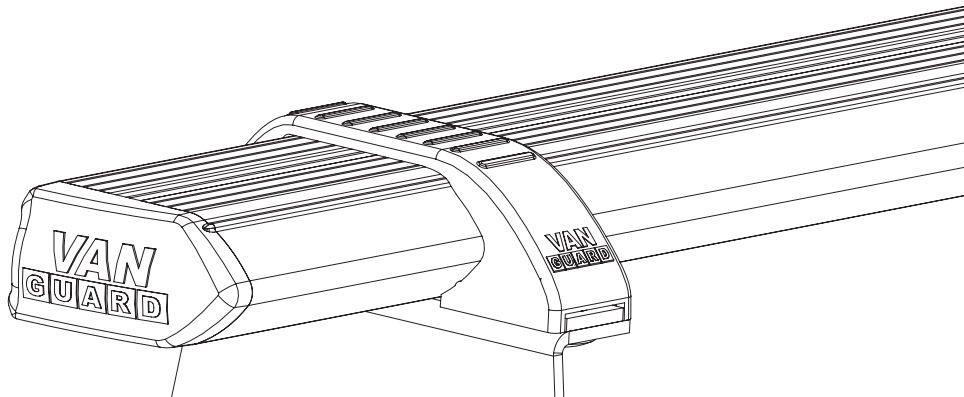


ULTI Bar Trade
(Steel)

**MAX
60KG**



ULTI Bar+
(Aluminium)

**MAX
80KG**

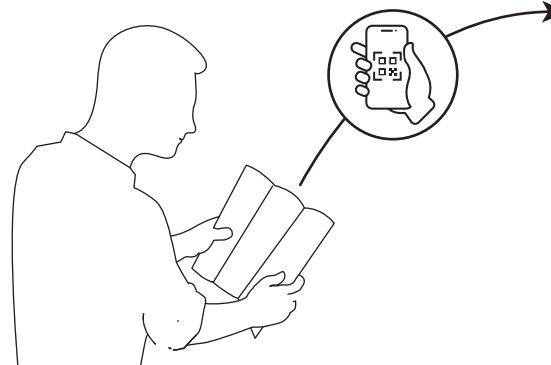

EN - SAFETY AND PRODUCT INFORMATION
DE - SICHERHEITS- UND PRODUKTINFORMATIONEN
FR - INFORMATIONS DE SÉCURITÉ ET DU PRODUIT
NL - VEILIGHEIDS- EN PRODUCTINFORMATIE
ES - INFORMACIÓN DE SEGURIDAD Y DEL PRODUCTO
IT - INFORMAZIONI SULLA SICUREZZA E SUL PRODOTTO

SV - SÄKERHETS- OCH PRODUKTINFORMATION
DA - SIKKERHEDS- OG PRODUKTINFORMATION
NO - SIKKERHETS- OG PRODUKTINFORMASJON
PL - INFORMACJE O BEZPIECZENSTWIE I PRODUKCIE
CS - INFORMACE O BEZPEČNOSTI A PRODUKTU