


IN8141

ULTI Bars - X3

FX4010 X4
(M6)




FX4016 X12
(M6)




FX4017 X4
(M6)



FX4042 X12
(M6X16)

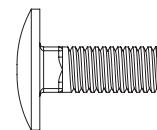

FX4094 X4
(M6X20)




MA6076 X2
(100MM X 40MM)




MA6079 X4
(75MM X 30MM)



MA6065 X6



ME0203 X6




ME0828 X1




ME0829 X1



ME0830 X4



TOOLS REQUIRED

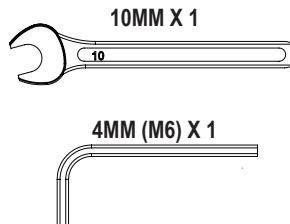


EN - SAFETY AND PRODUCT INFORMATION
DE - SICHERHEITS- UND PRODUKTINFORMATIONEN
FR - INFORMATIONS DE SÉCURITÉ ET DU PRODUIT
NL - VEILIGHEIDS- EN PRODUCTINFORMATIE
ES - INFORMACIÓN DE SEGURIDAD Y DEL PRODUCTO
IT - INFORMAZIONI SULLA SICUREZZA E SUL PRODOTTO

SV - SÄKERHETS- OCH PRODUKTINFORMATION
DA - SIKKERHEDS- OG PRODUKTINFORMATION
NO - SIKKERTS- OG PRODUKTINFORMASJON
PL - INFORMACJE O BEZPIECZENSTWIE I PRODUKCIE
CS - INFORMACE O BEZPEČNOSTI A PRODUKTU



Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351

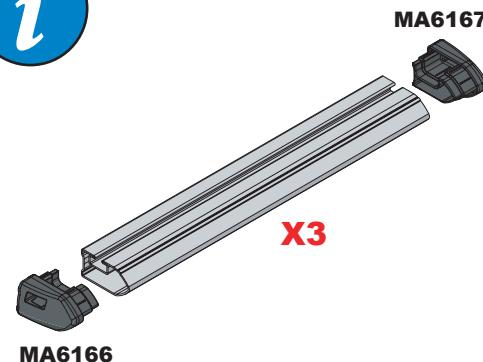

MA6166

ULTI Bar Trade
(Steel)



ULTI Bar+
(Aluminium)



This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.

IN8141_D (CN:00183)


Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

1


The side rails are handed to suit both sides of the vehicle.

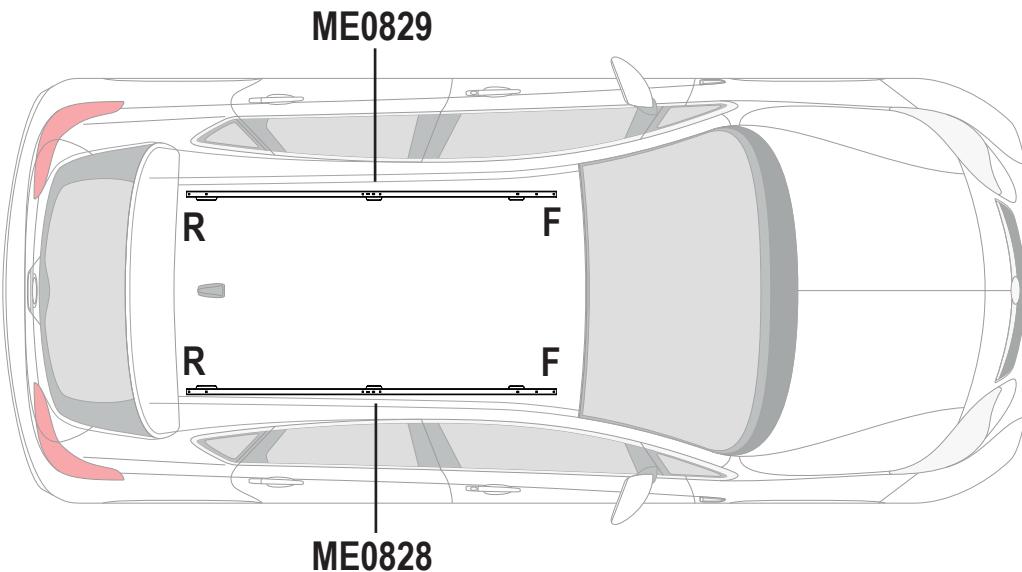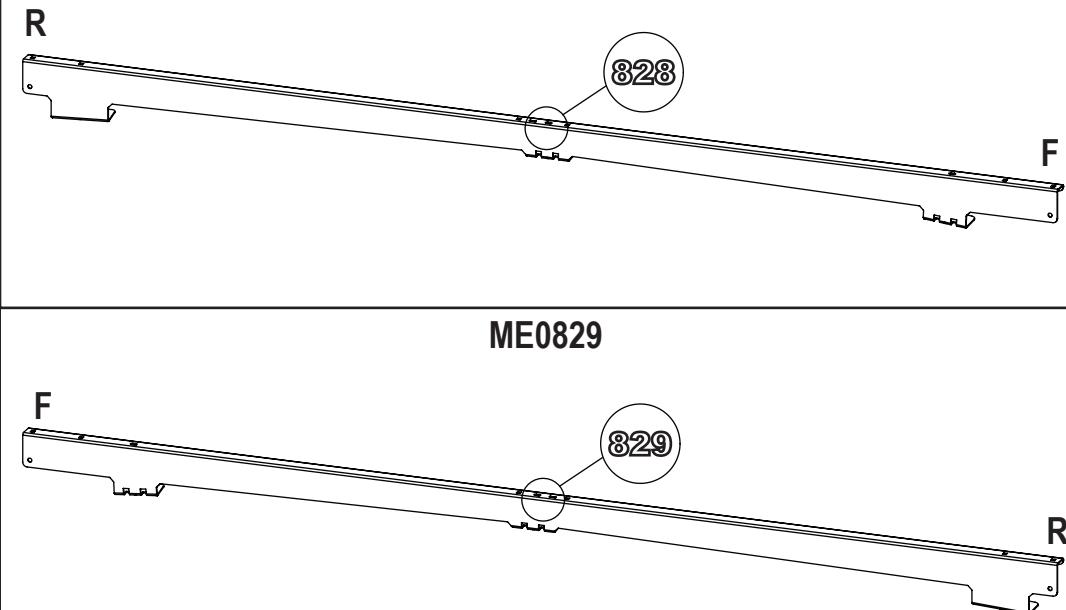**ME0828****2**


Stick rubber pads to the underside of the side rail feet.

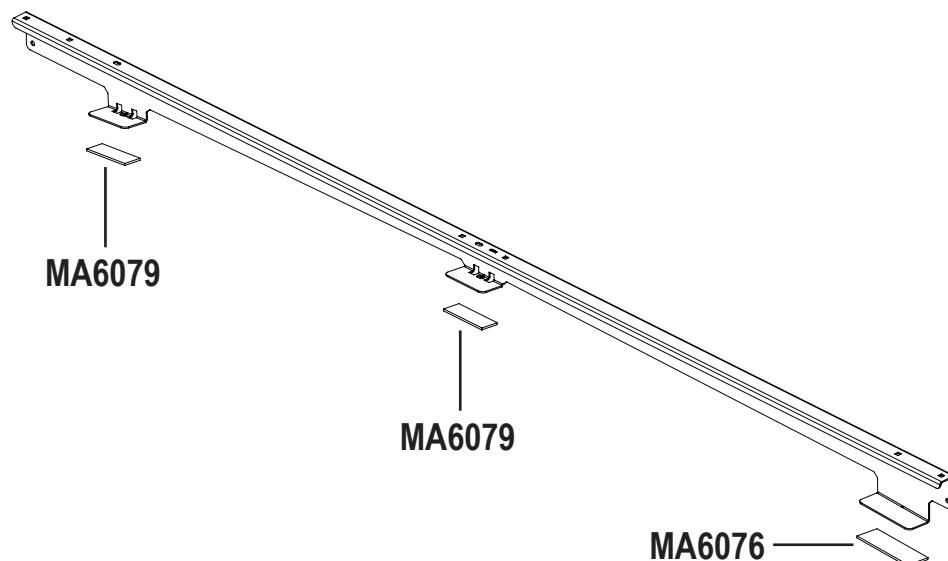**3**


Lift the vehicle roof fixing point covers and insert the 'U' brace plates over the threaded inserts. Please note there is no fixing for the rear foot of the side rail, this therefore rests on the roof as a support foot.

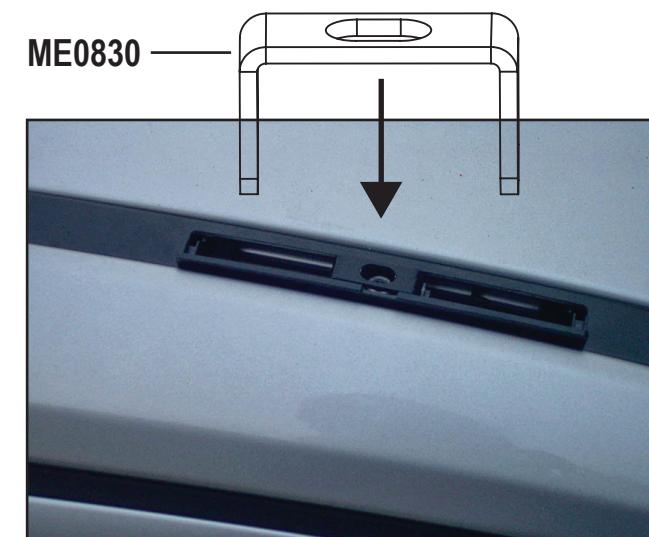


4 Secure the side rails to the fixing points using M6x20 allen bolts, M6 shakeproofs & M6 washers. Ensure that the top hat flange is facing inwards.

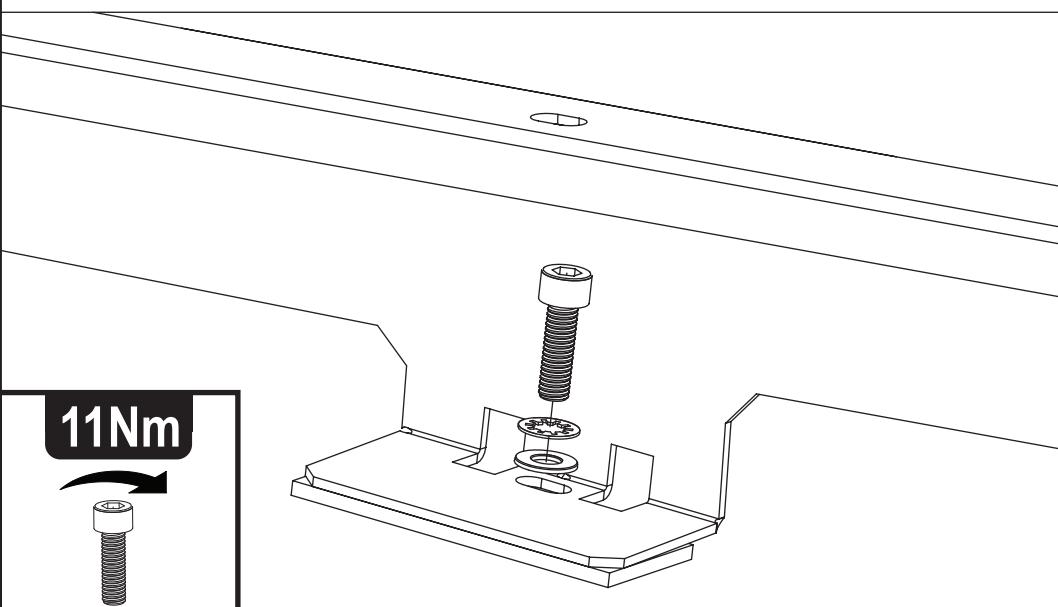


5 Place roof bars onto the side rails with the t-track facing upwards and loosely secure using top hat brackets, M6x16 coach bolts & M6 serrated nuts.

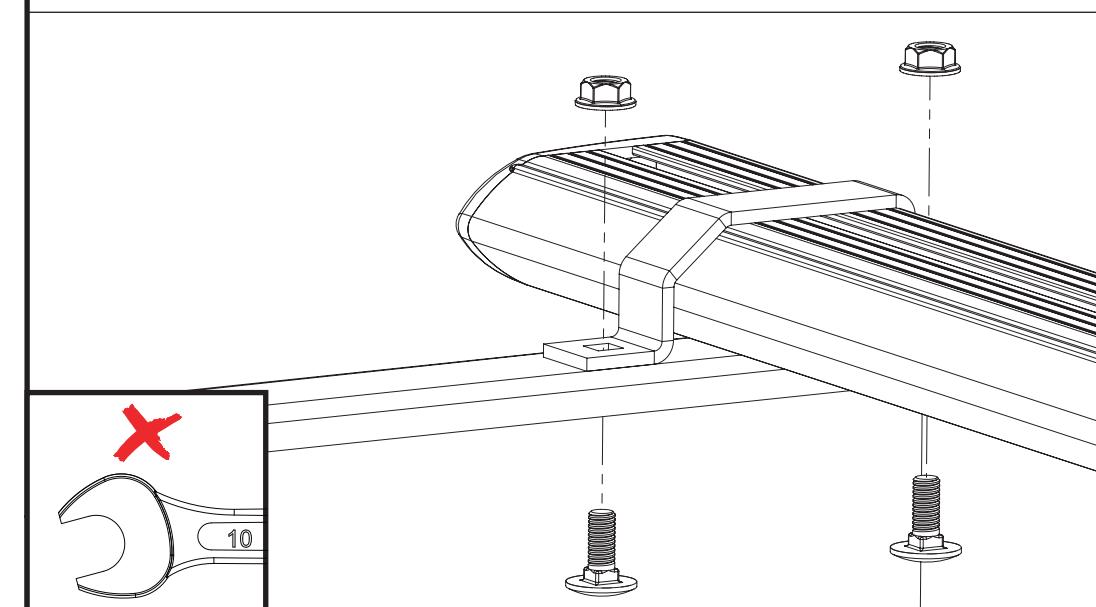


6 Adjust the roof bars to ensure that they are evenly spaced on the vehicle.

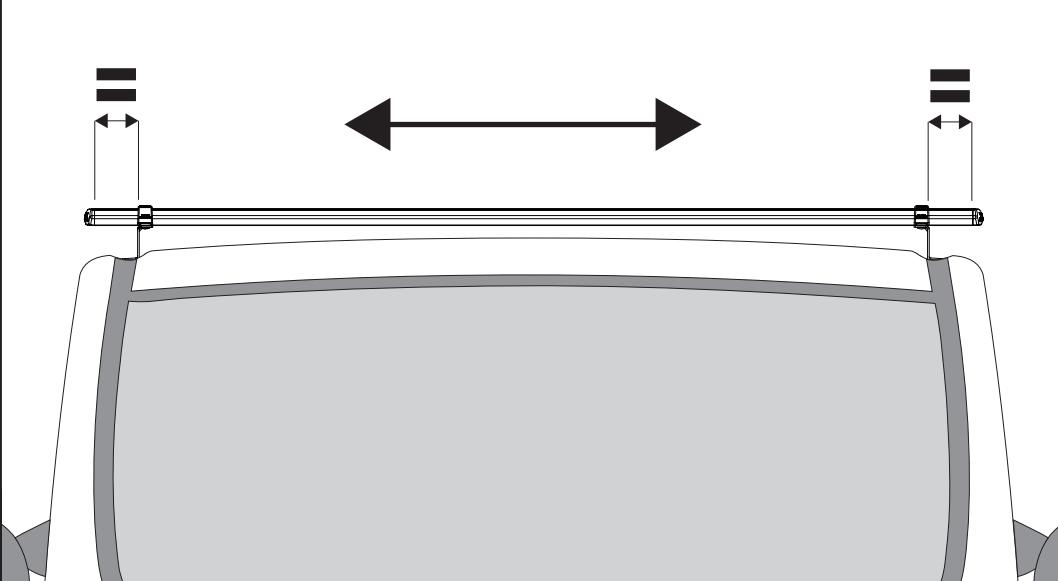


7 Tighten the roof bar fixings to 11Nm.

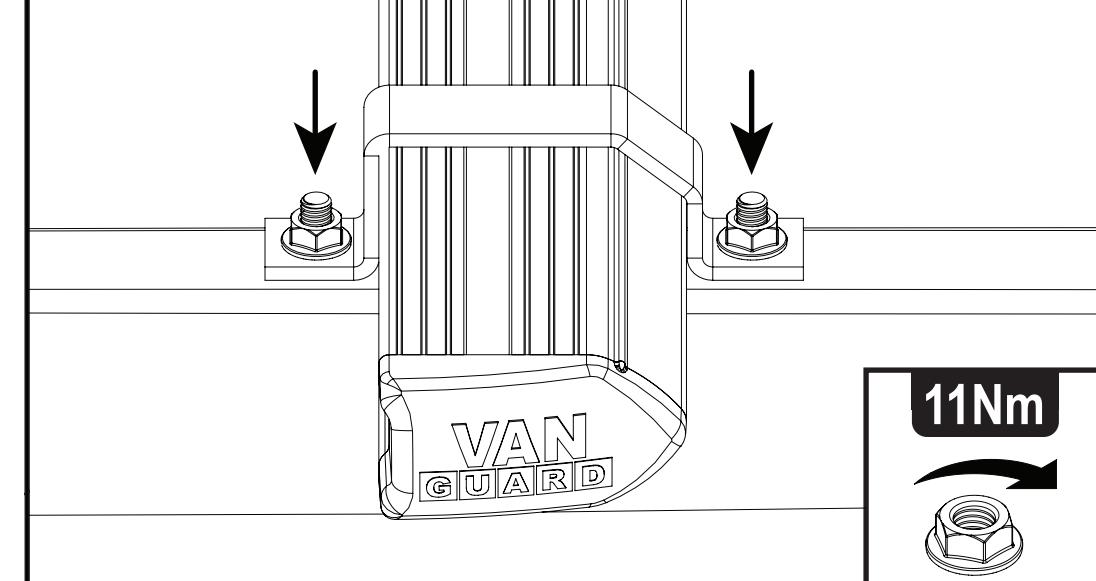



1.

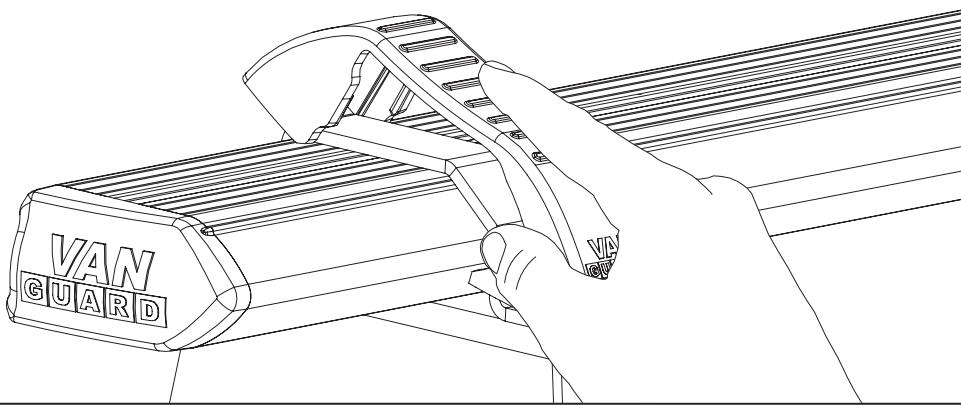

2.

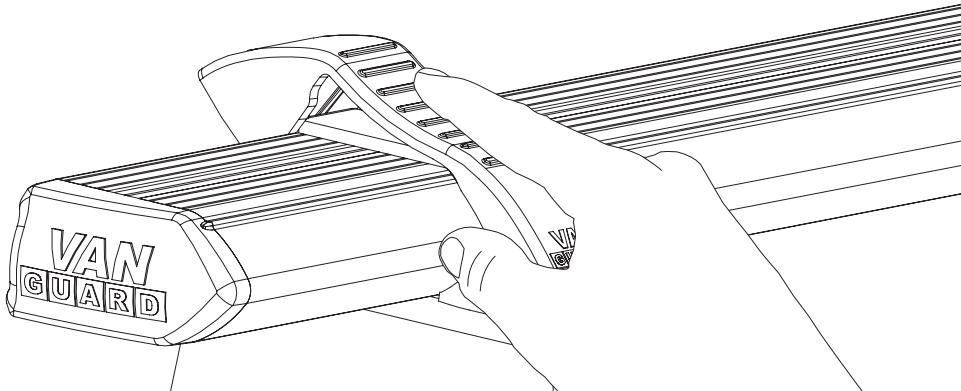


3.

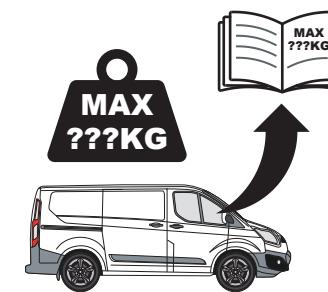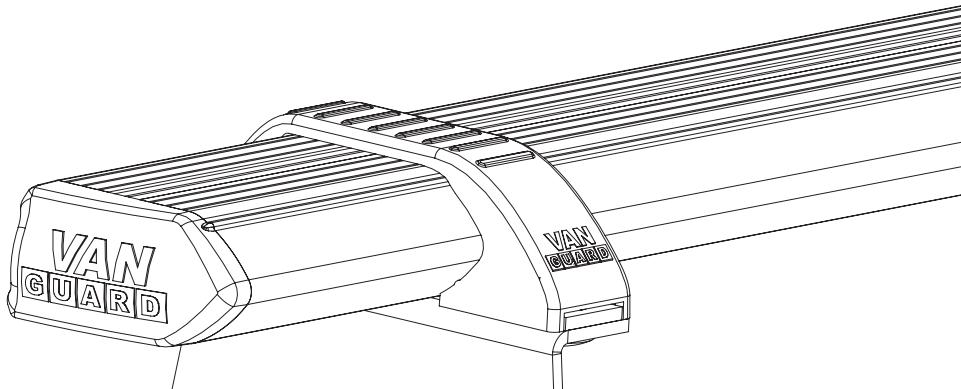

ULTI Bar Trade
(Steel)



ULTI Bar+
(Aluminum)

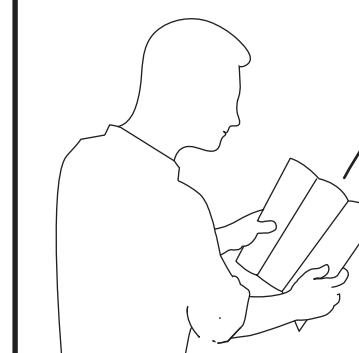

EN - SAFETY AND PRODUCT INFORMATION

DE - SICHERHEITS- UND PRODUKTINFORMATIONEN

FR - INFORMATIONS DE SÉCURITÉ ET DU PRODUIT

NL - VEILIGHEIDS- EN PRODUCTINFORMATIE

ES - INFORMACIÓN DE SEGURIDAD Y DEL PRODUCTO

IT - INFORMAZIONI SULLA SICUREZZA E SUL PRODOTTO

SV - SÄKERHETS- OCH PRODUKTINFORMATION

DA - SIKKERHEDS- OG PRODUKTINFORMATION

NO - SIKKERHETS- OG PRODUKTINFORMASJON

PL - INFORMACJE O BEZPIECZEŃSTWIE I PRODUKCIE

CS - INFORMACE O BEZPEČNOSTI A PRODUKTU