


# IN8265

## Tailgate Grille / Blank


### KIT CONTENTS

**FX4090 X6**  
(No8x1/2" SELF-TAP SCREW)




### TOOLS REQUIRED


PH SCREW DRIVER X 1



PLIERS X 1



DRILL (Ø3.2MM) X 1

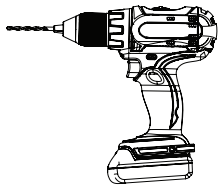

### CAUTION



**It is important that care is taken when drilling and fixing to your vehicle.**

You should note that it is the responsibility of the installer/s to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that there is no possibility of causing damage to the vehicle. Whilst every effort has been made to ensure our products can be safely fitted, changes to vehicles sometimes occurs so it's always necessary to check before drilling. Always wear safety glasses when drilling.

**If in doubt refer to the vehicle manufacturer's dealership.**

### INSTRUCTIONS

1. Carefully unclip and remove the top centre section of the window trim.
2. There is one screw at the top of each of the remaining 2 trim sections that fit to each of the side trim panels which need to be removed so that these trim sections can be removed. Remove screw and then carefully remove the trim. **The bottom section of the trim is not removed.**
3. Place the grille / blank into position and carefully secure in place using the self-tap screws provided. **When screwing the top two tabs, ensure that the pipe for the rear window washer does not get pinched.** The bottom two tabs are secured into the plastic trim only.
4. Carefully re-fit all tailgate trim.

### IMAGES



This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.

IN8265\_A

Van Guard Accessories Ltd  
Fair Oak Close, Exeter Airport Business Park,  
Exeter, Devon, EX5 2UL  
[www.van-guard.co.uk](http://www.van-guard.co.uk)