

IN8403

**ULTI Ladder**

2

**VAN  
GUARD**



1



+


2




**THIS INSTRUCTION COVERS THE FOLLOWING MODELS  
CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING**

**VGL5-05**

Ford Transit Custom: 2012-2023  
H1 - Twin Rear Doors

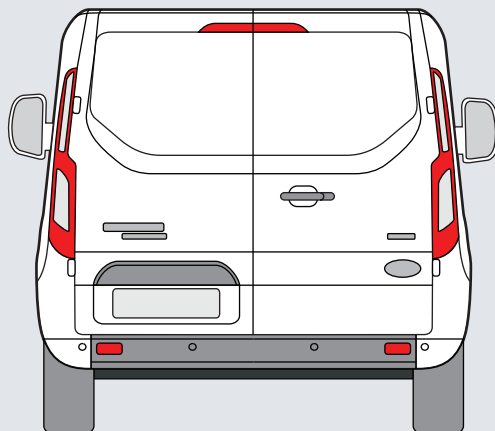

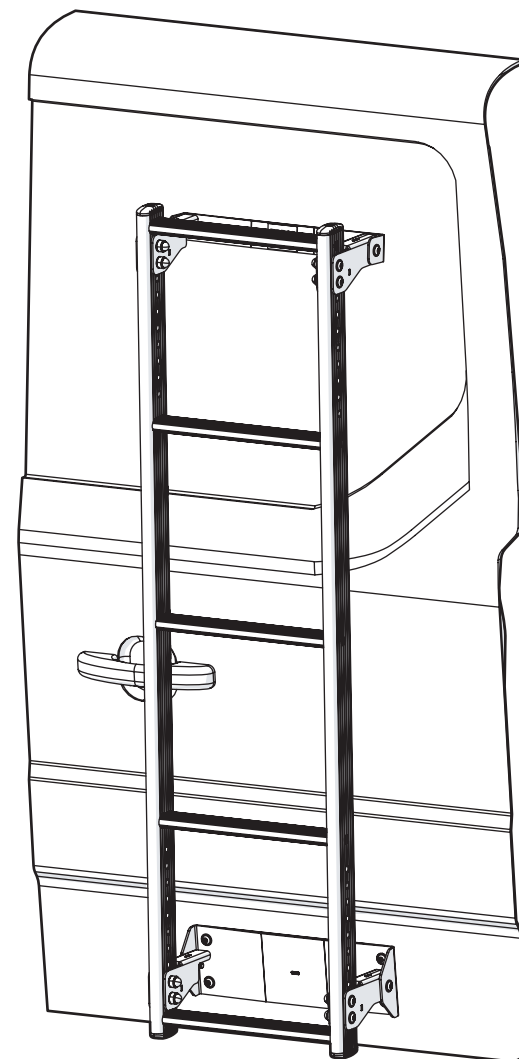



**Customercare@van-guard.co.uk**  
**UK +44 (0) 1392 368 351**
















This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.  
IN8403\_C (CN:00140)


Van Guard Accessories Ltd  
Fair Oak Close, Exeter Airport Business Park,  
Exeter, Devon, EX5 2UL  
[www.van-guard.co.uk](http://www.van-guard.co.uk)

SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING

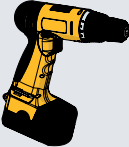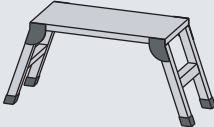
TOOLS REQUIRED	
13MM X1	
4MM X1	
9MM X1	
	
	

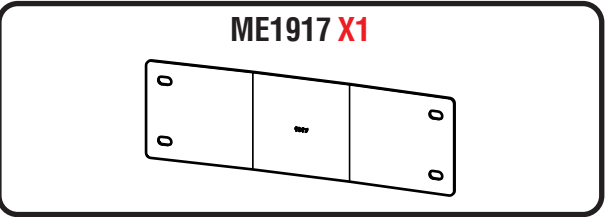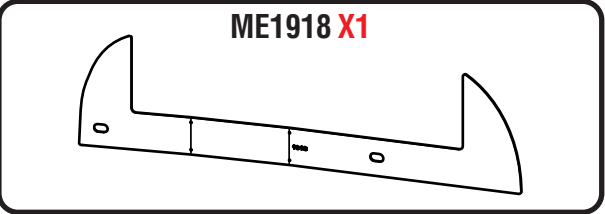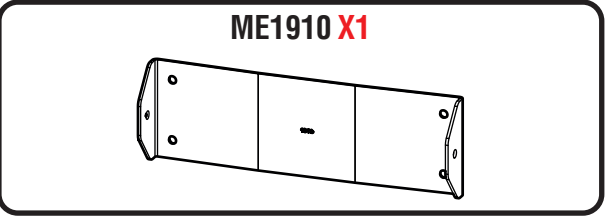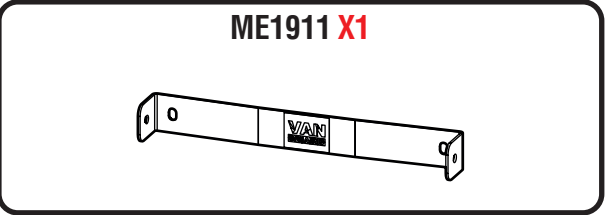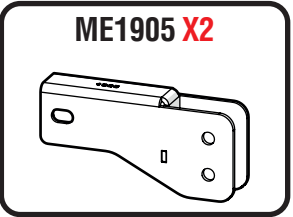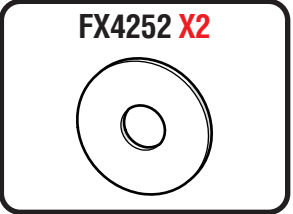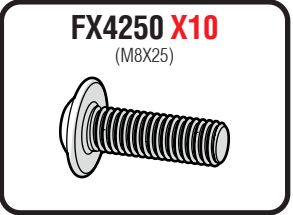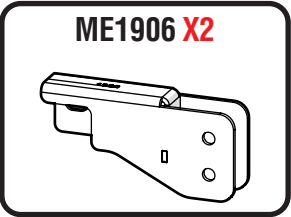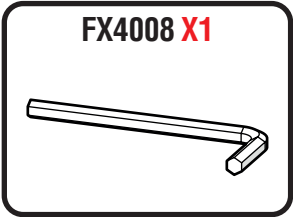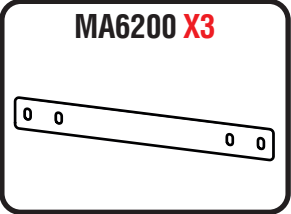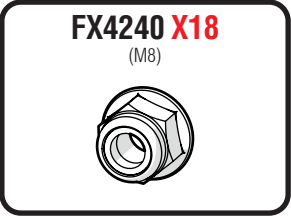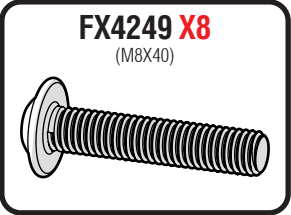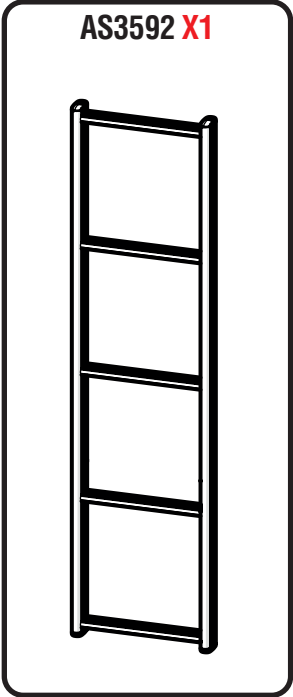


01

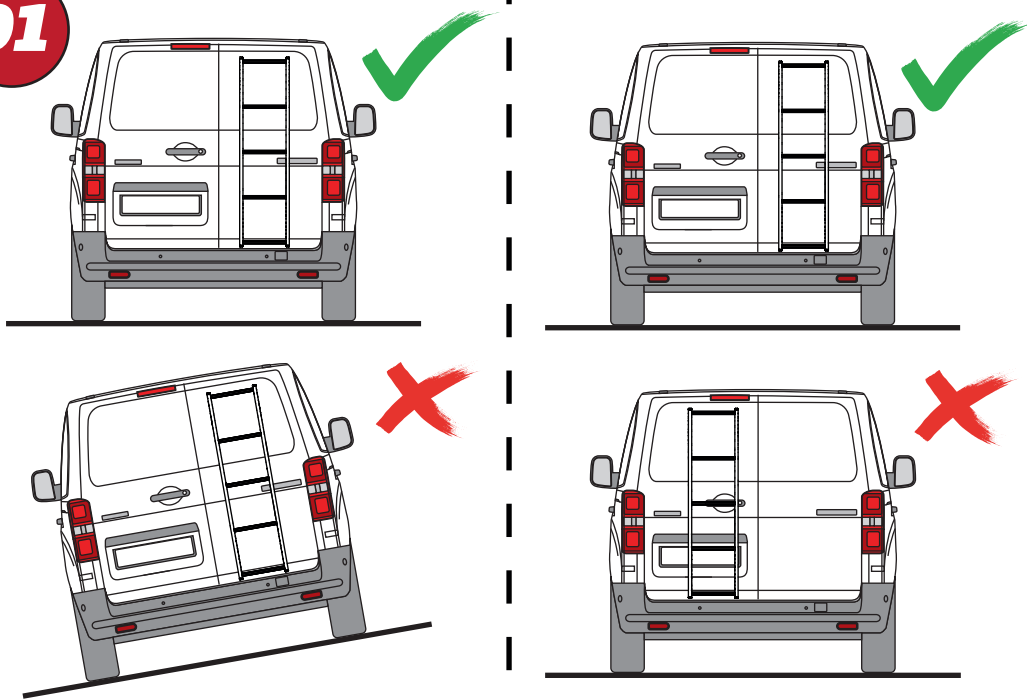


02

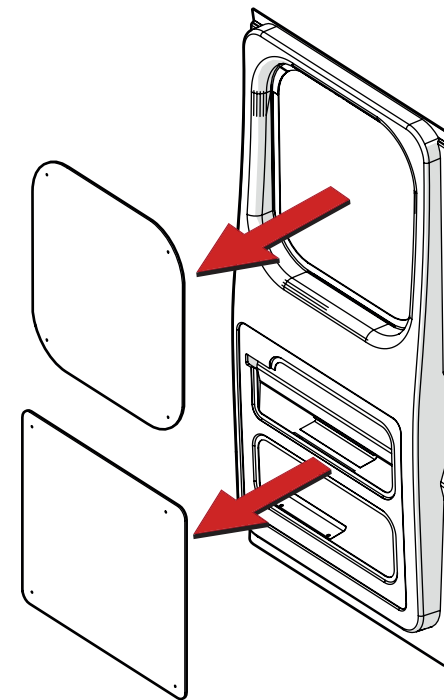

03

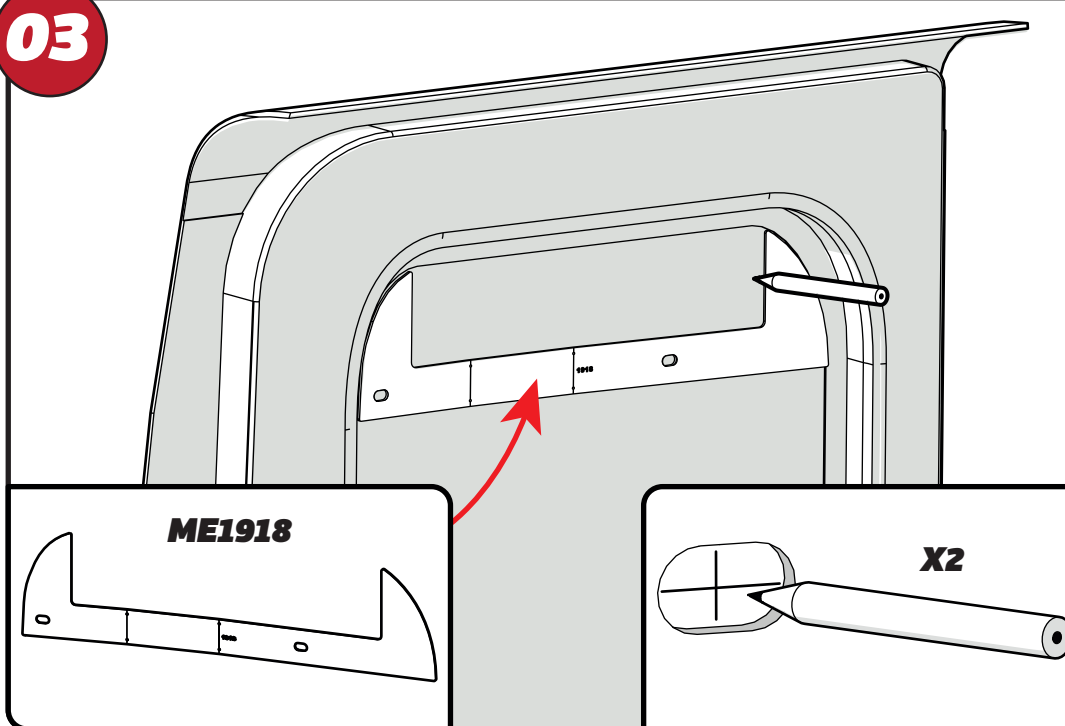


04

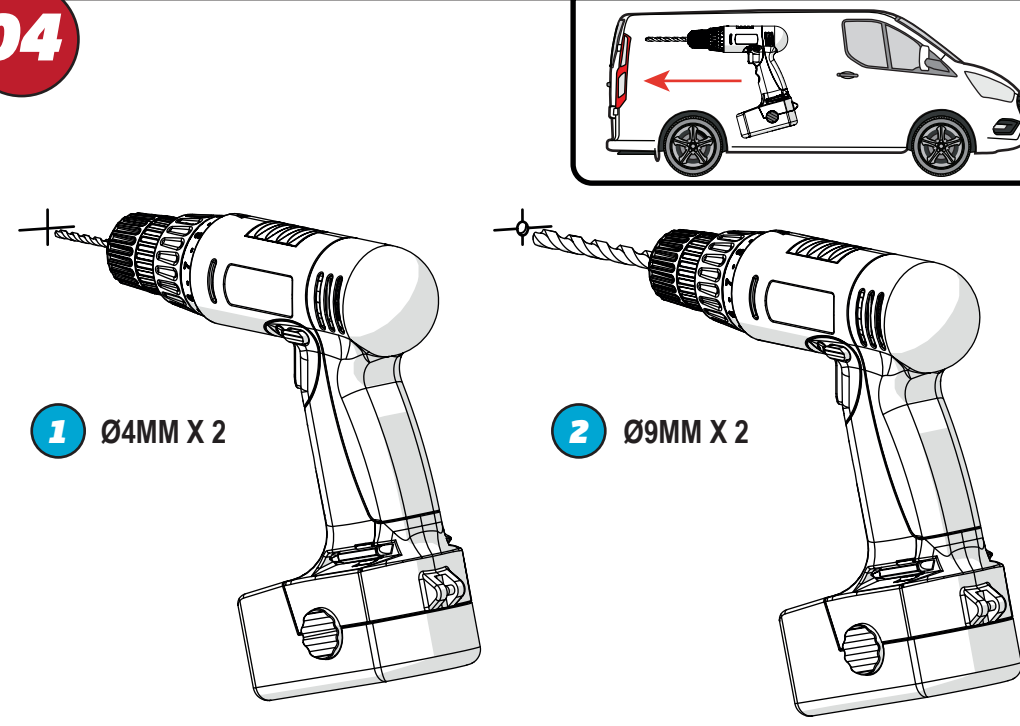

05


MA6200

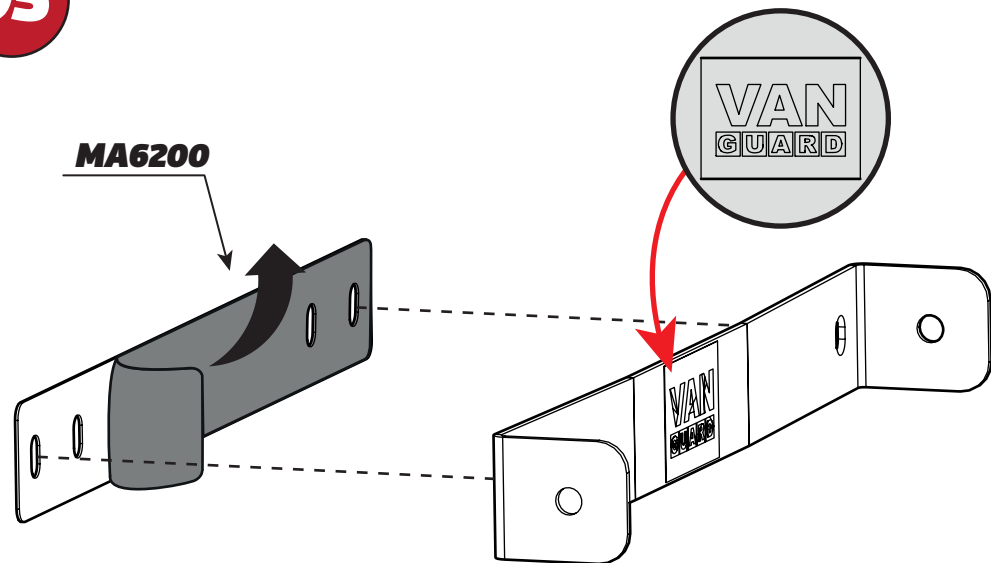

06


FX4250

FX4252

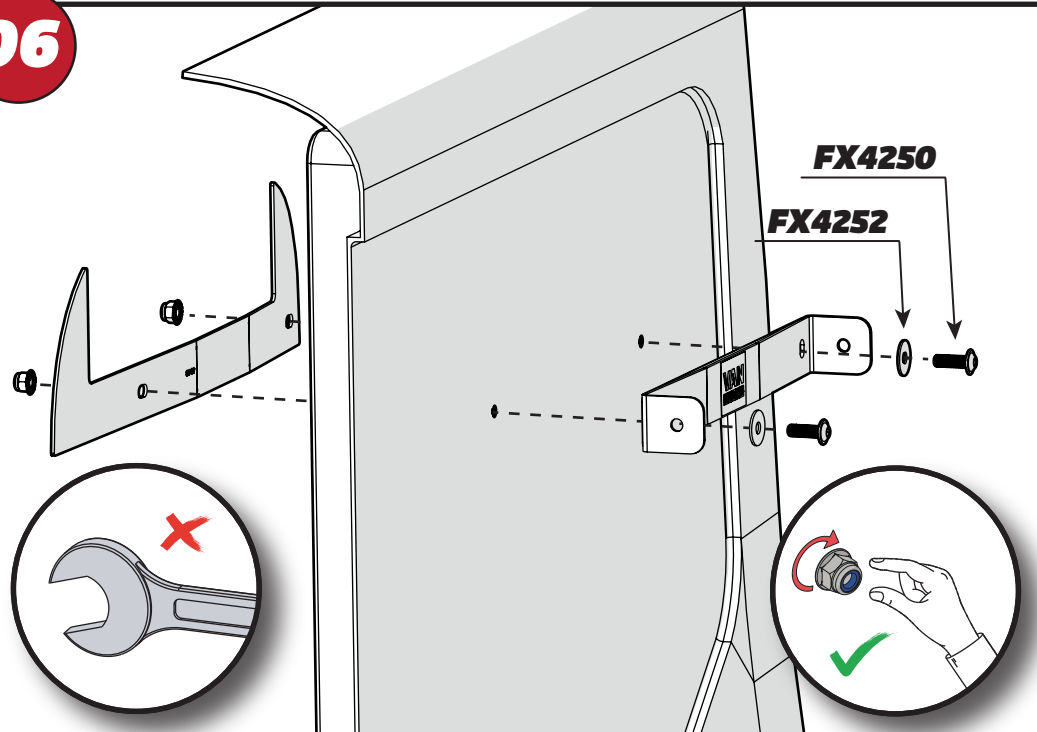


07

MA6200


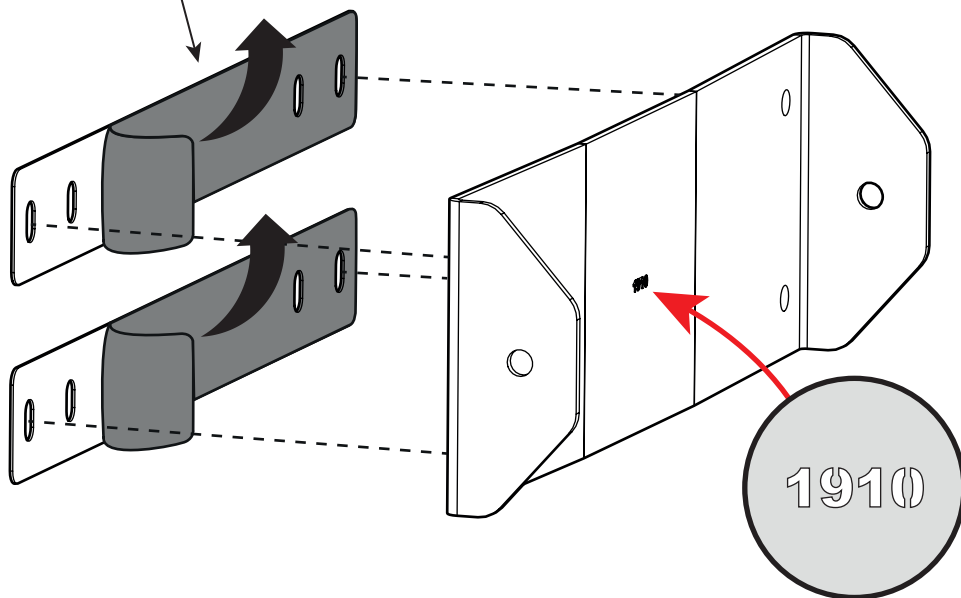


08

1910


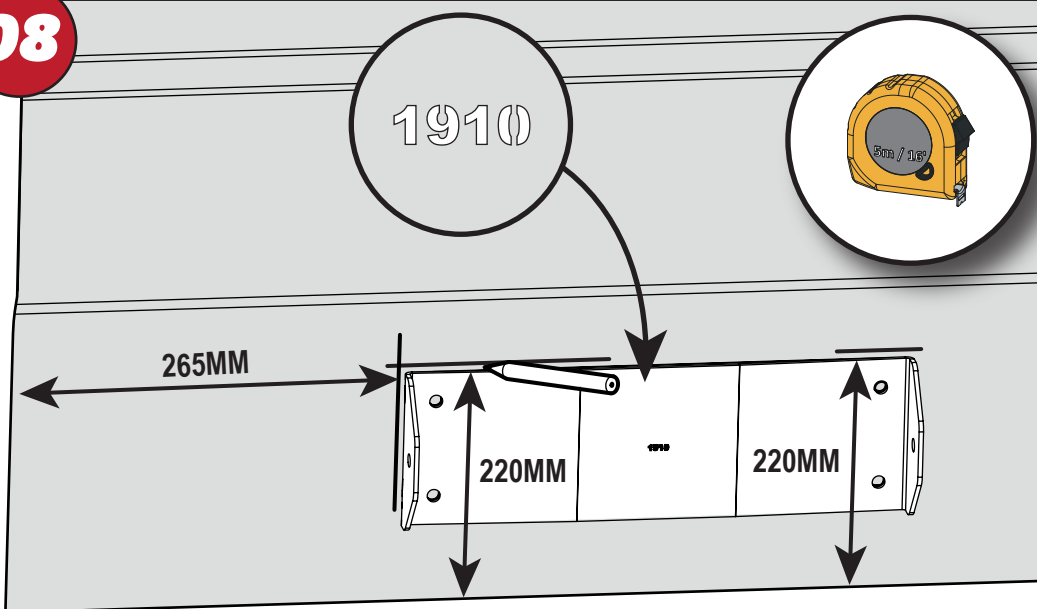


09

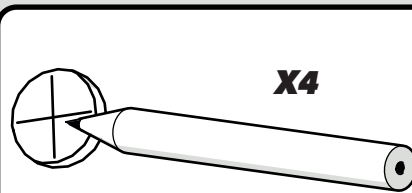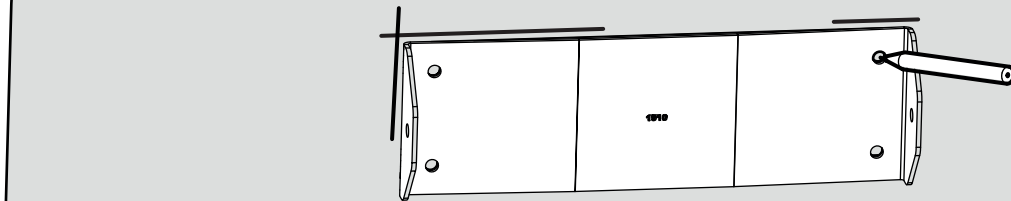


X4

10

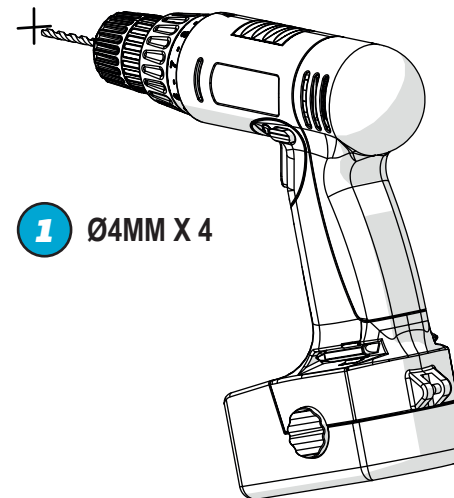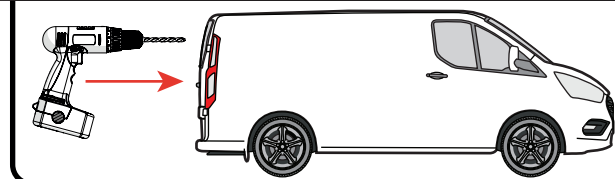


1 Ø4MM X 4

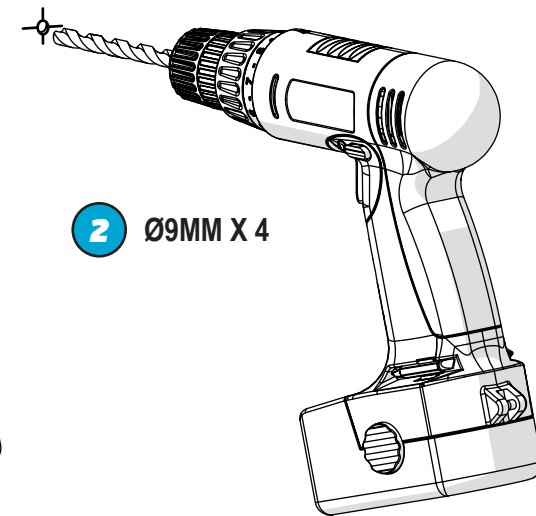

2 Ø9MM X 4

11

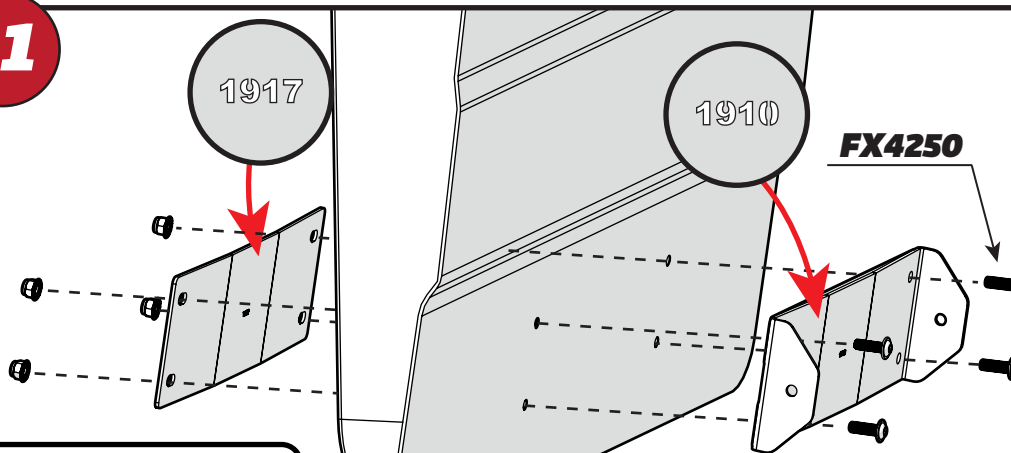

1917

1910


FX4250

FX4008



12Nm


12

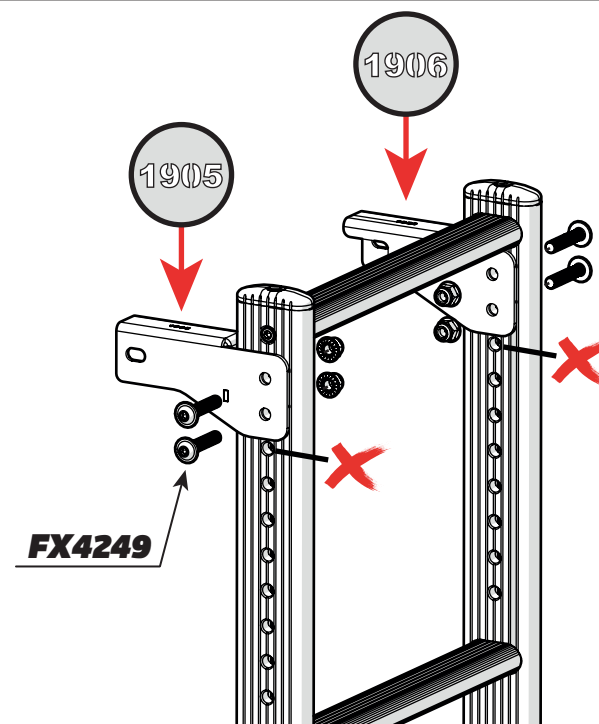


1906

1905


FX4249

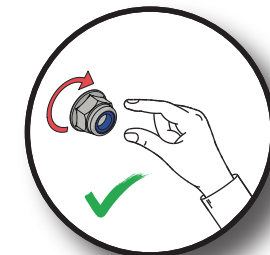


13

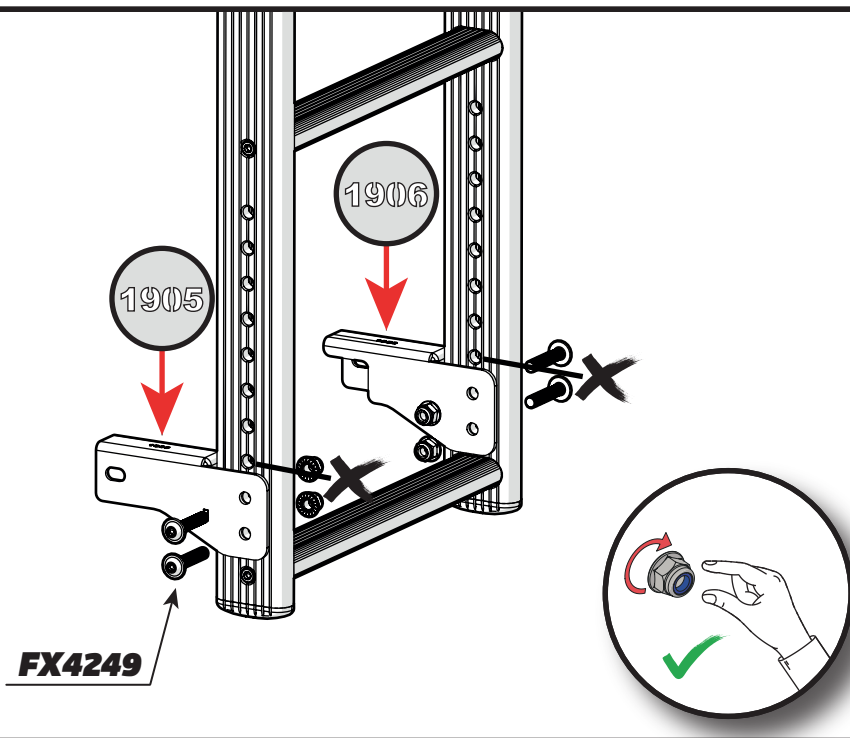


14

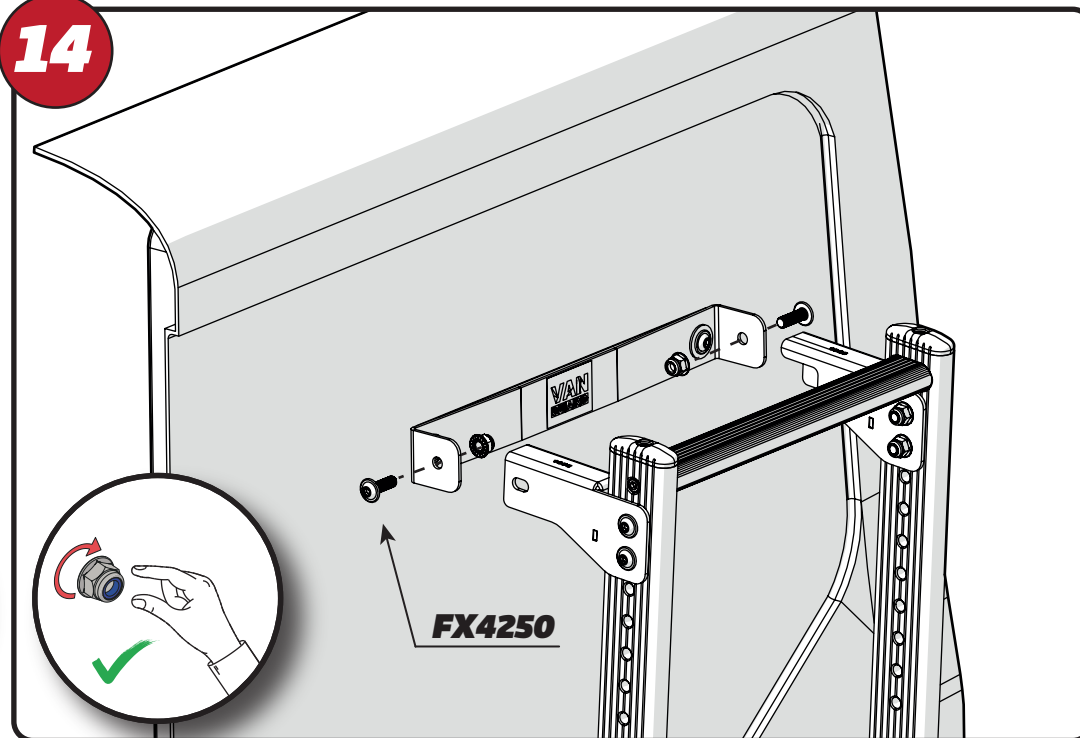


15

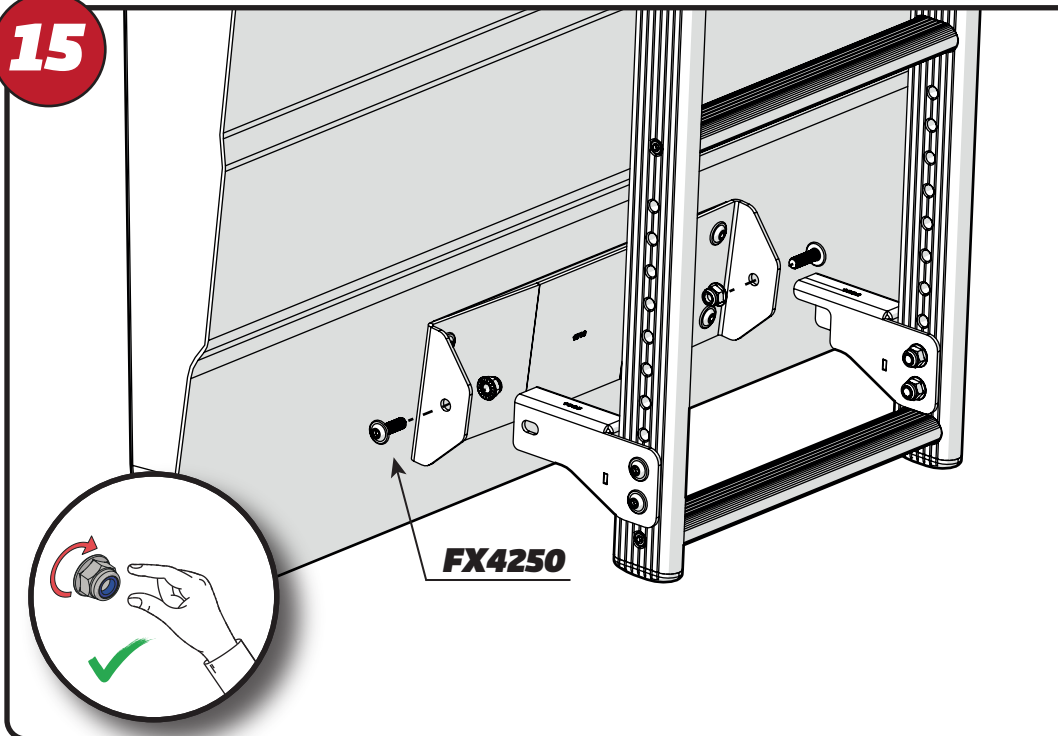


16

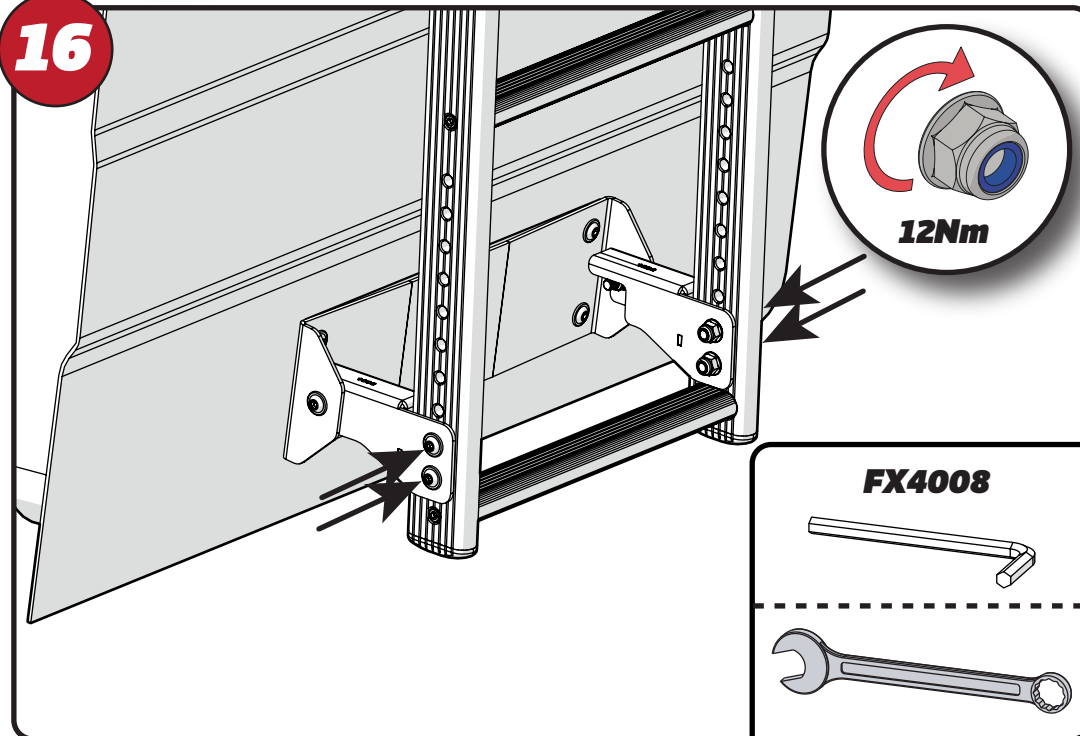


17

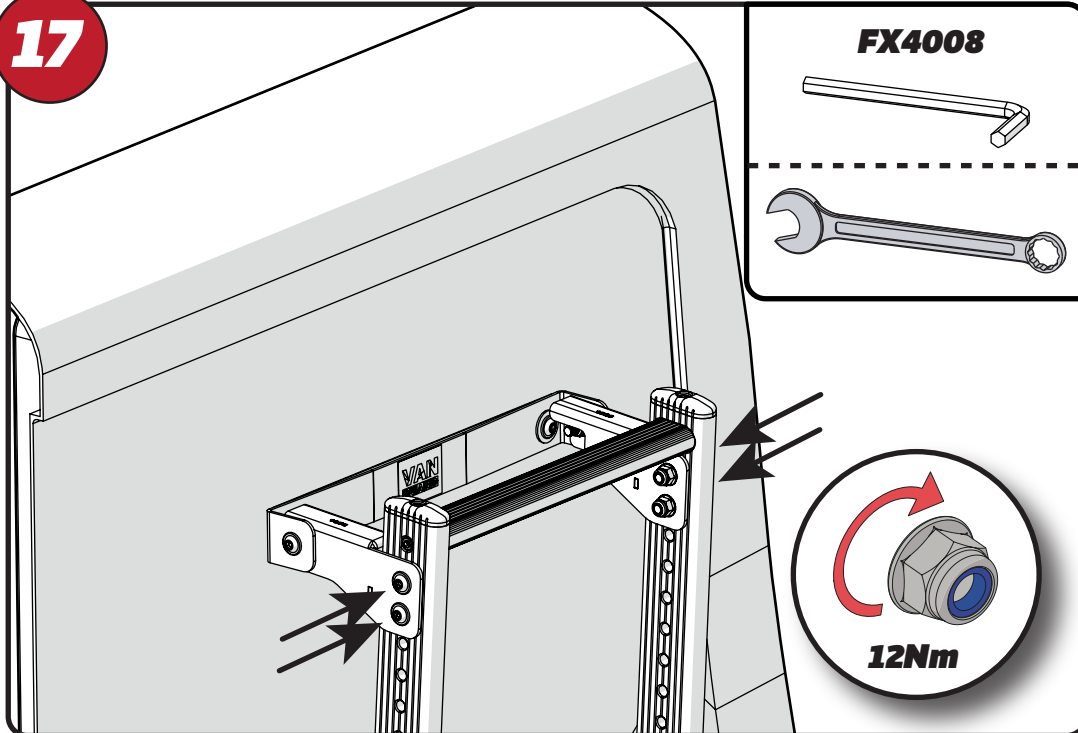


18

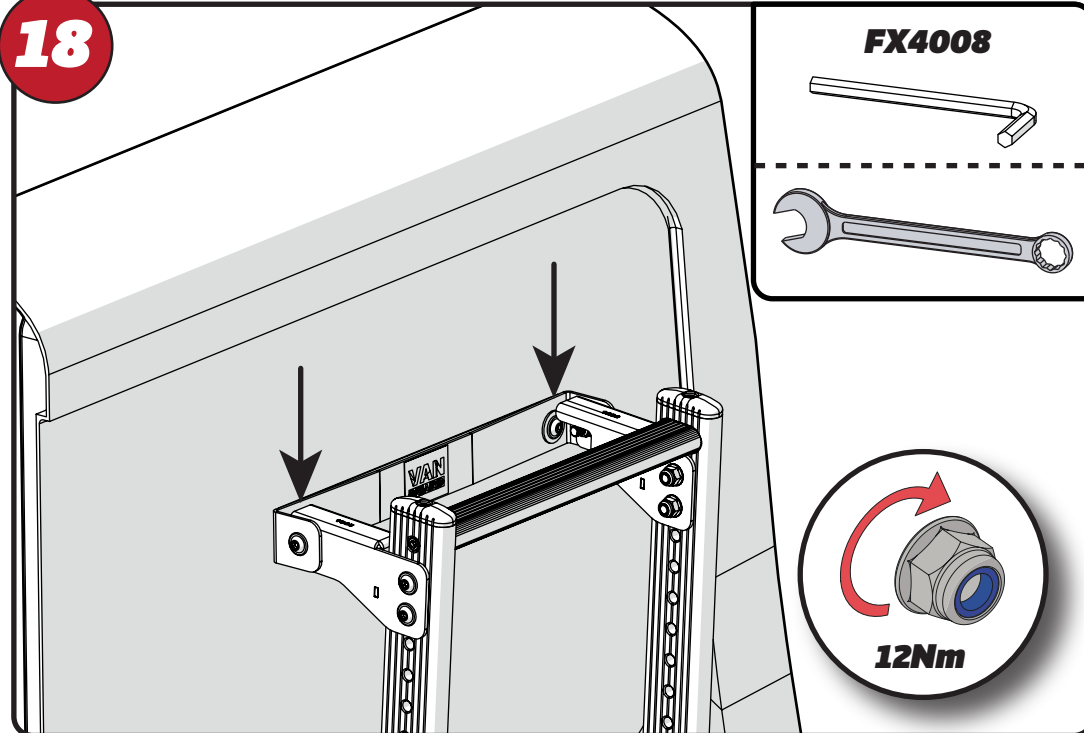


19

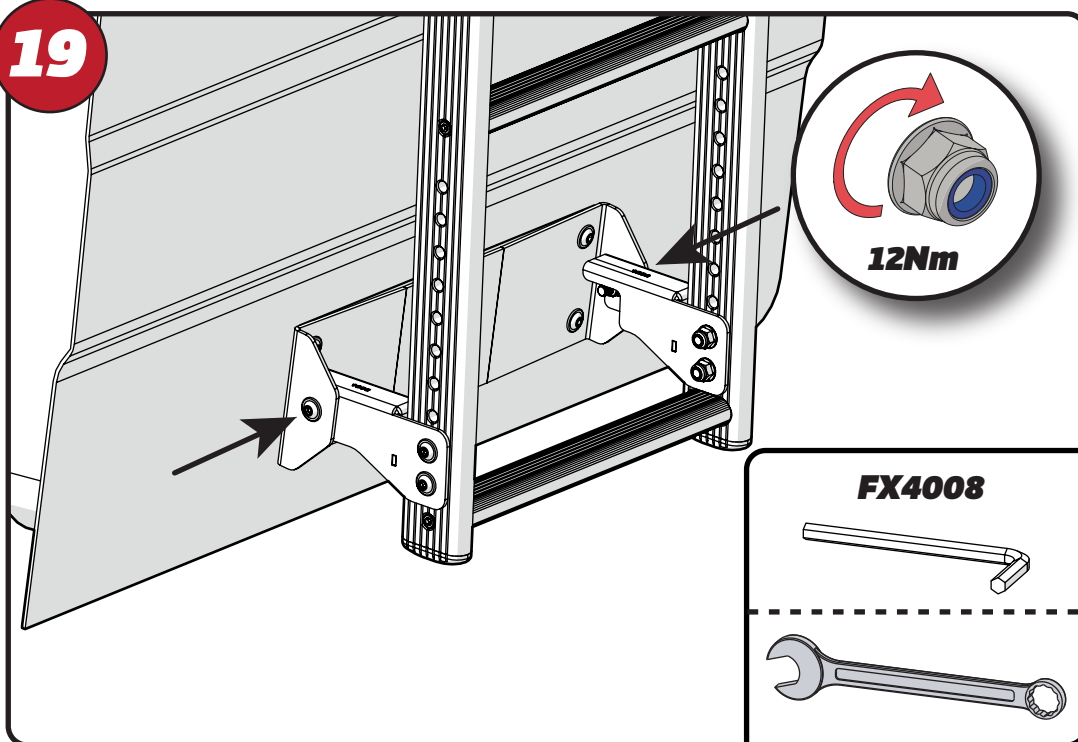


20

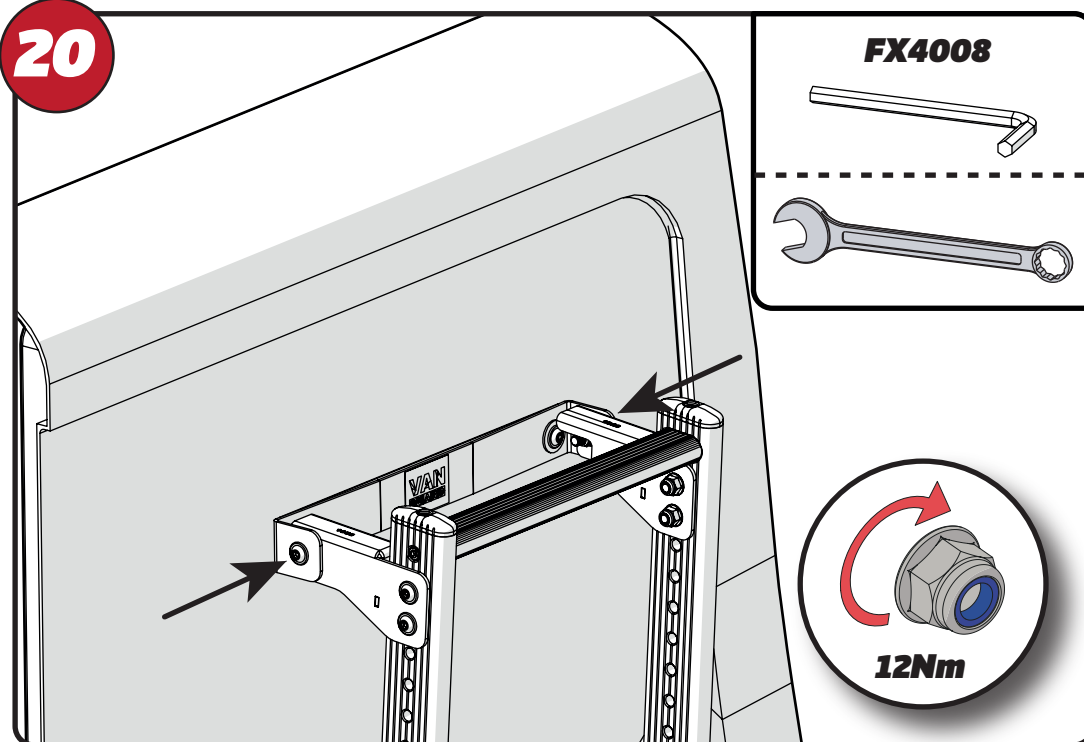

21

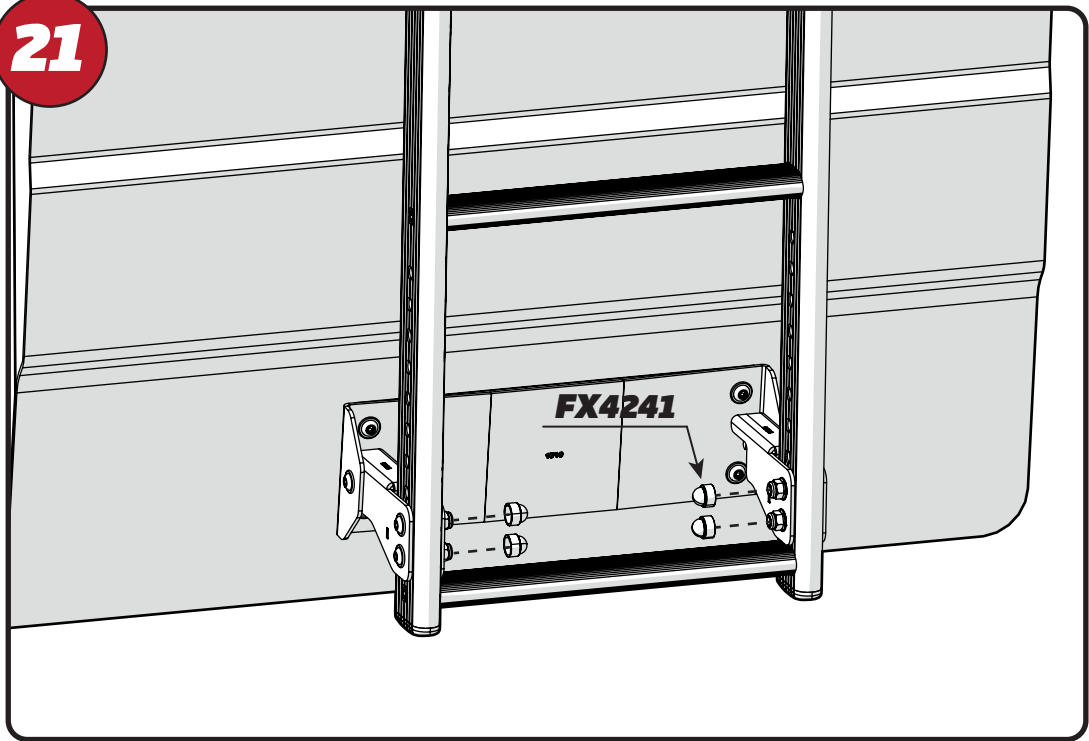

22

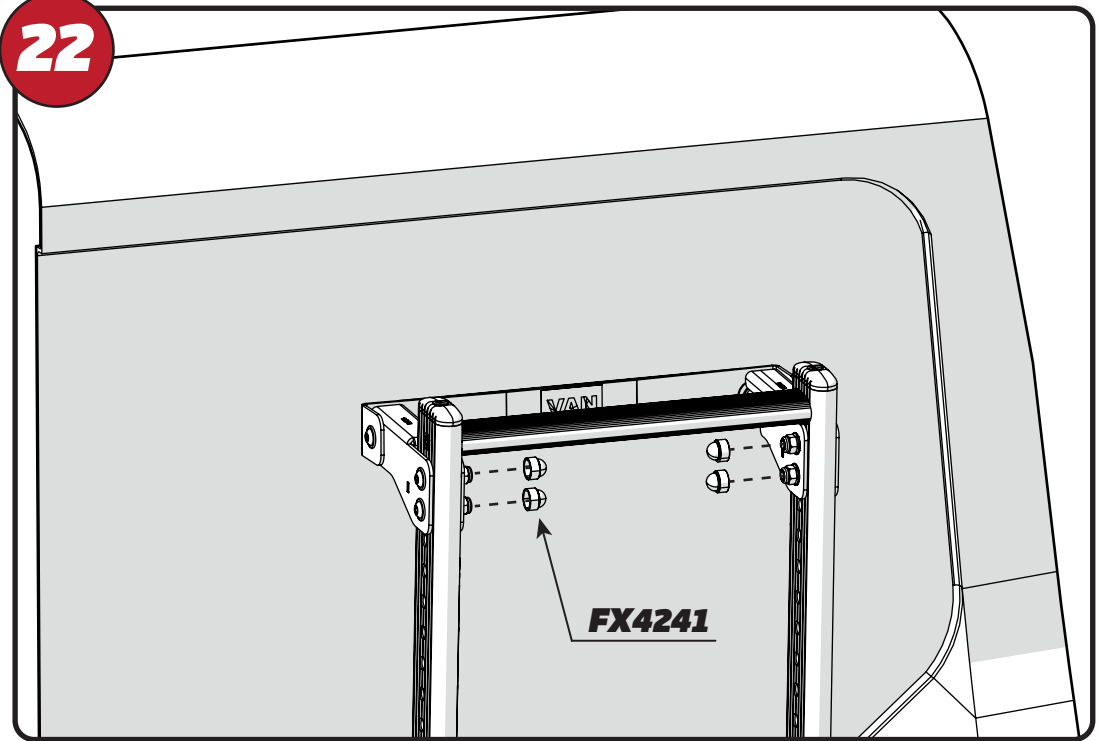

23

