


IN8404


ULTI Ladder

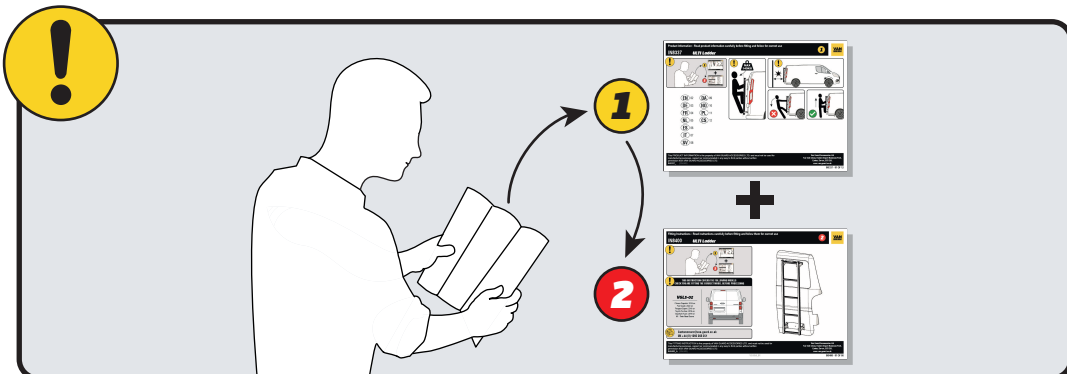


**THIS INSTRUCTION COVERS THE FOLLOWING MODELS
CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING**

VGL5-06

Volkswagen T5: 2002-2015
Volkswagen T6: 2015 on
H1 - Twin Rear Doors

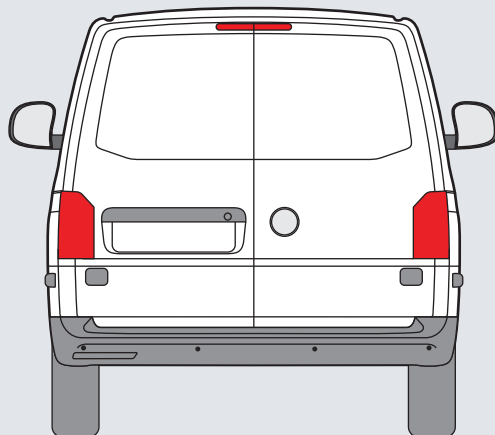


Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351

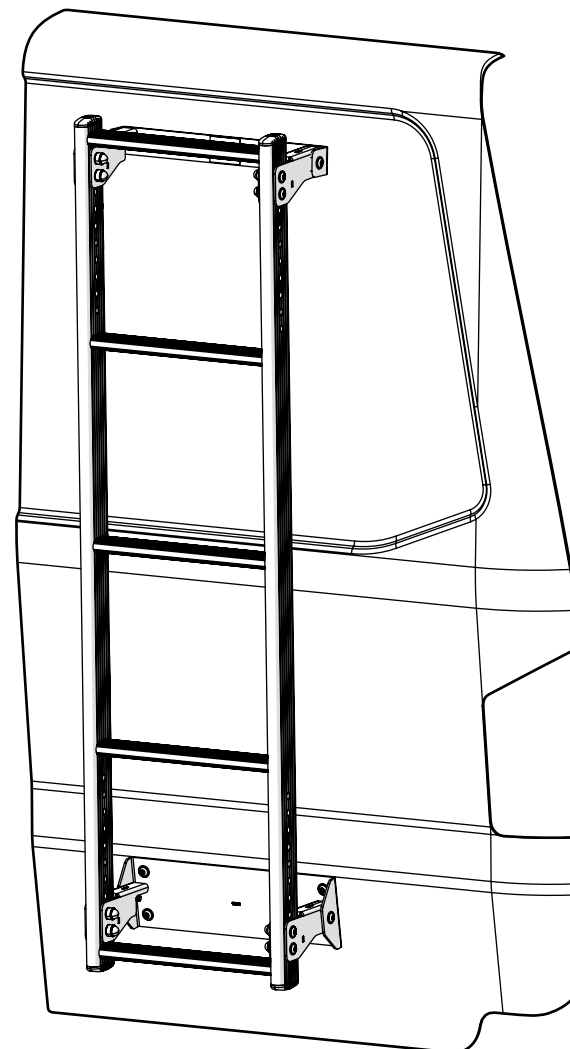


SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING

TOOLS REQUIRED


13MM X1

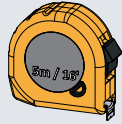

4MM X1

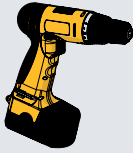


9MM X1

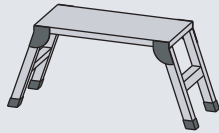


X1




AS3592 X1

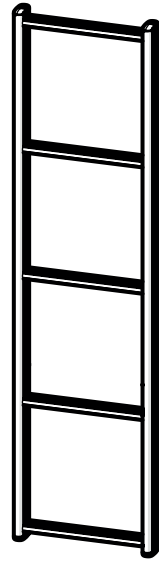


FX4249 X8
(M8X40)



FX4250 X10
(M8X25)




ME1944 X1




FX4240 X18
(M8)




FX4241 X8




ME1920 X1

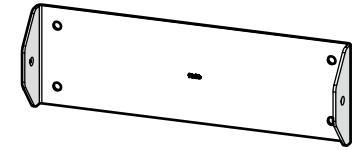


MA6200 X3



FX4252 X2

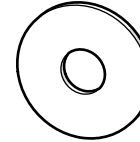


ME1927 X1




FX4008 X1




ME1906 X2

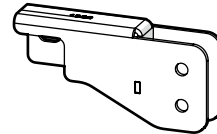


ME1905 X2

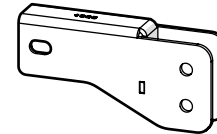


ME1924 X1

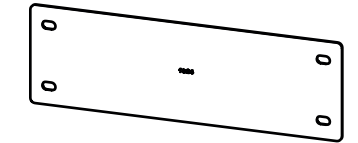


01

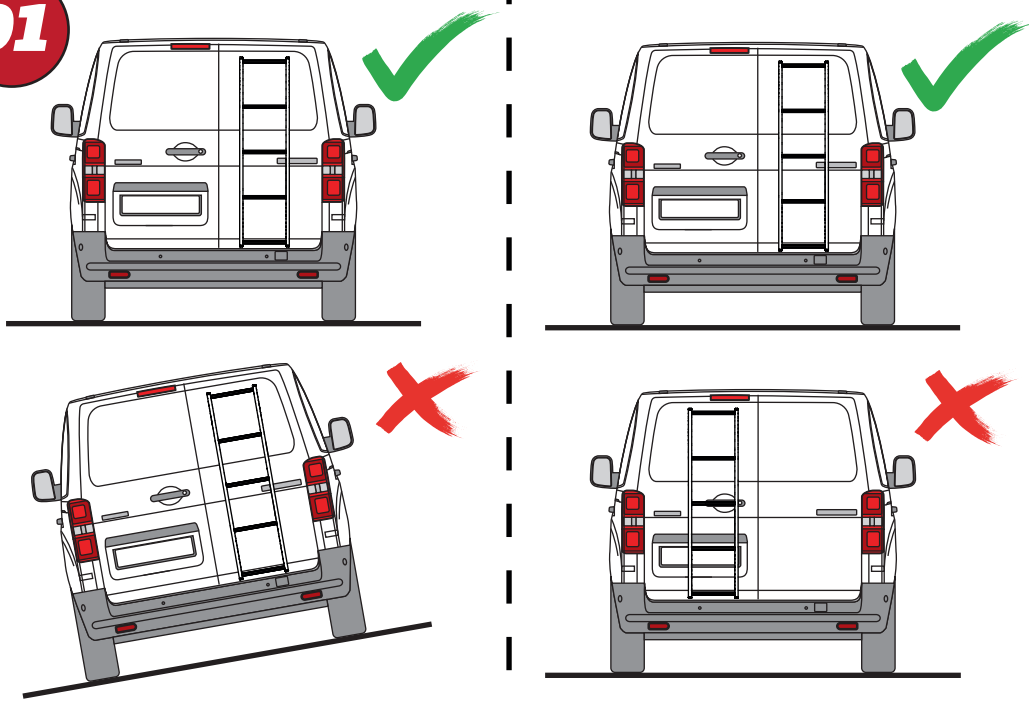


02

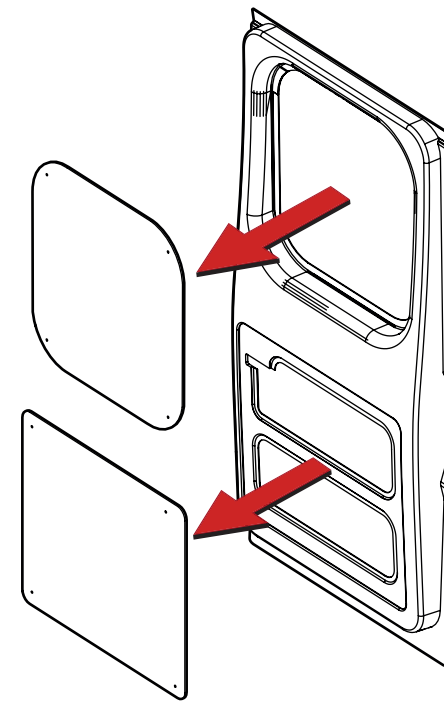

03

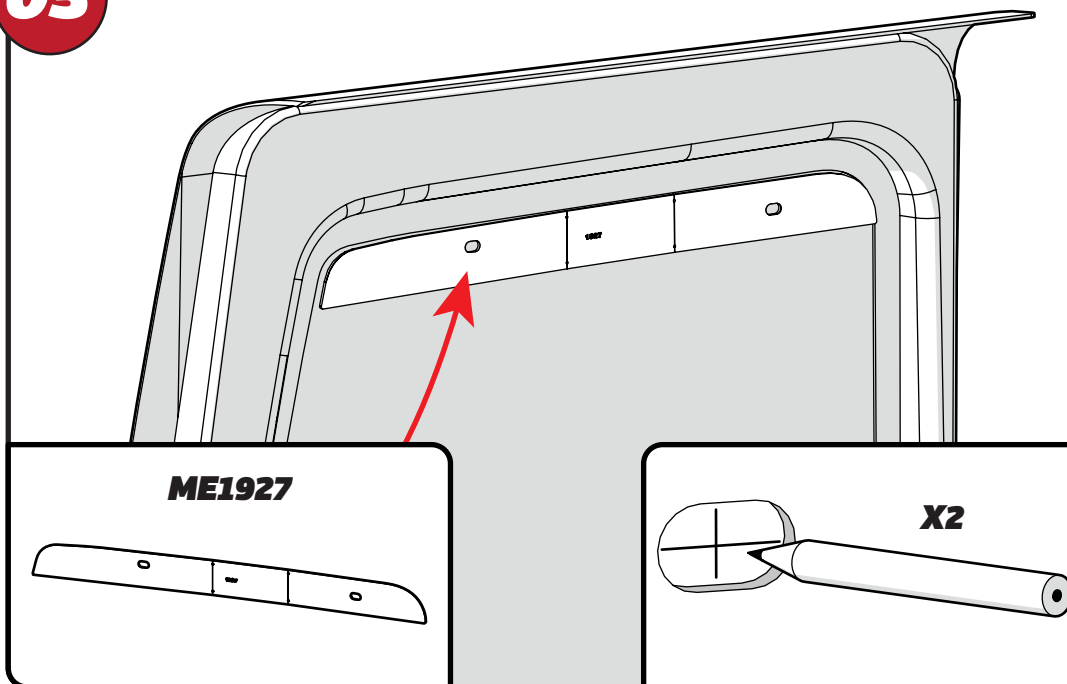


04

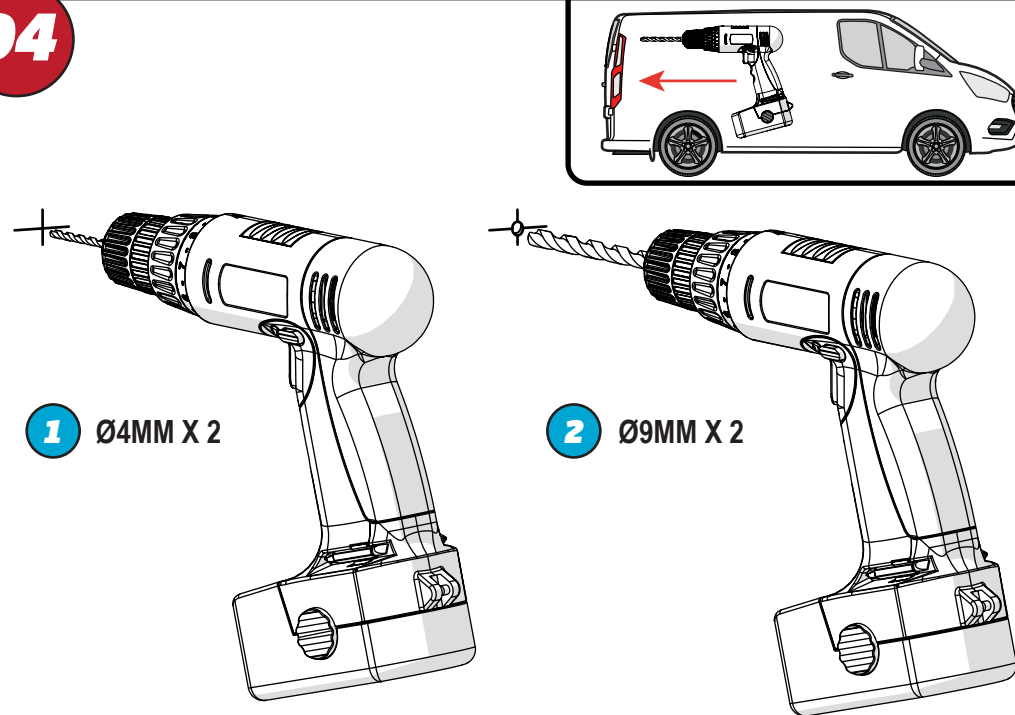

05


MA6200

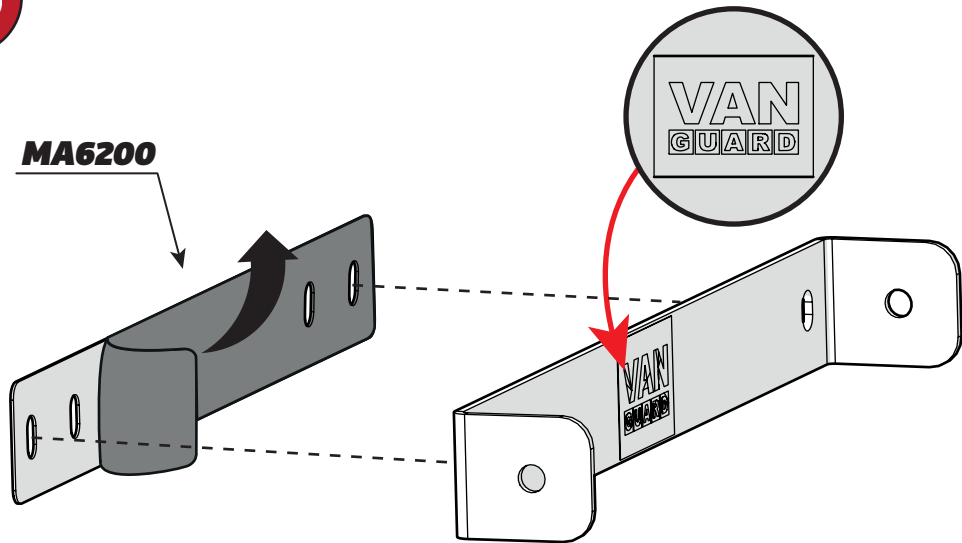

06


FX4250

FX4252

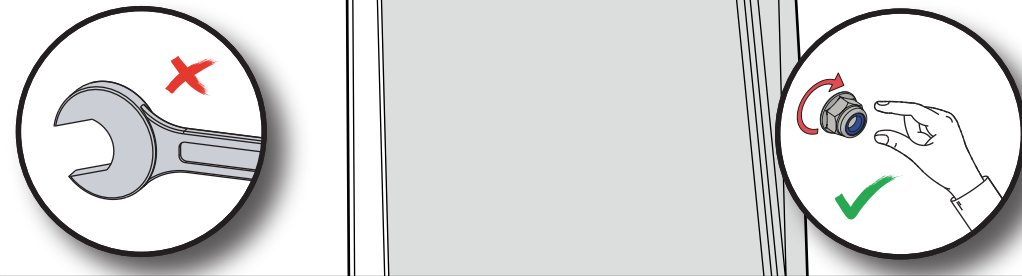


07

MA6200

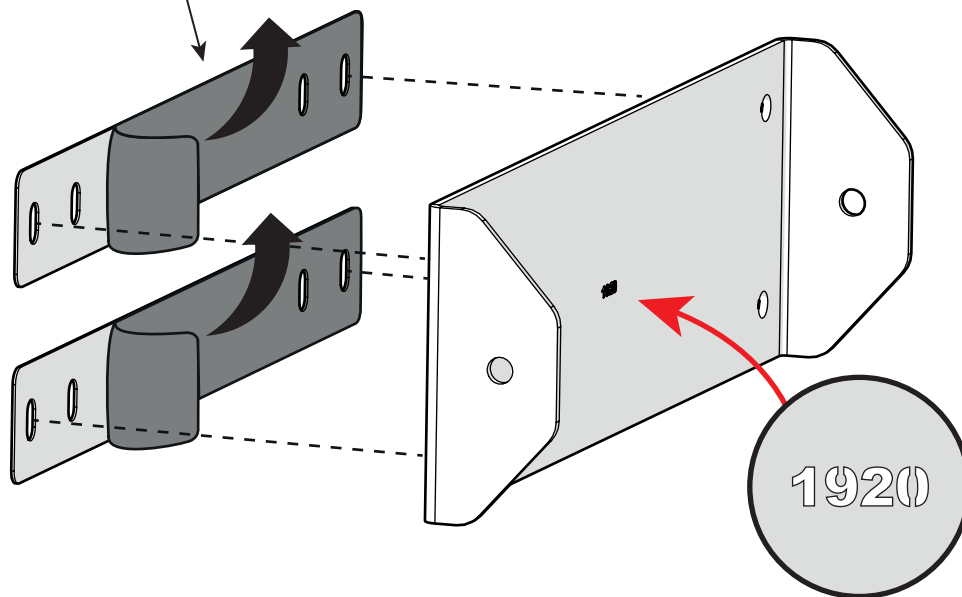


08




1920

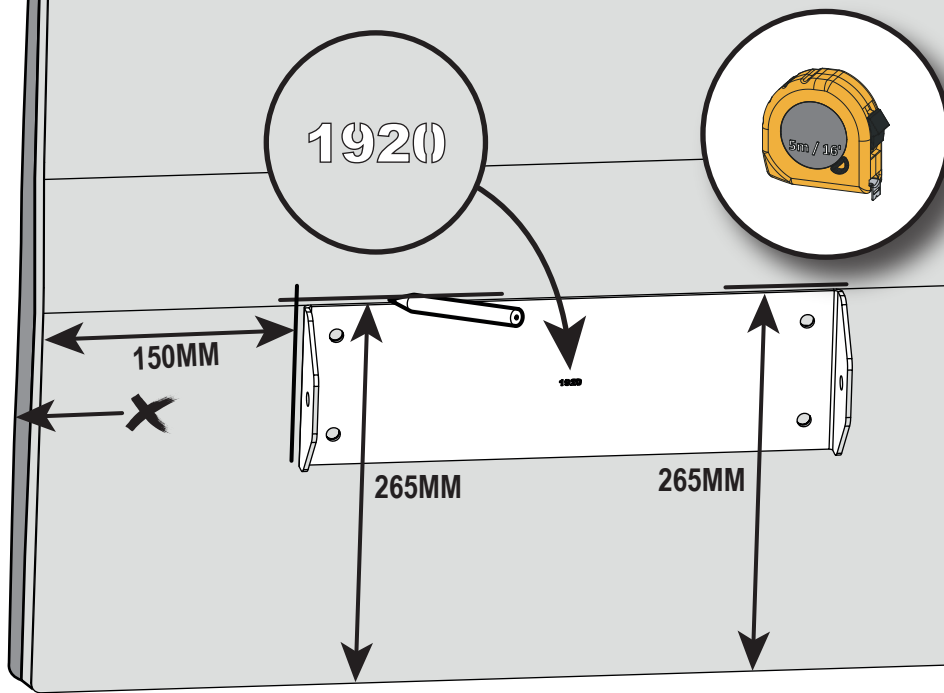


09

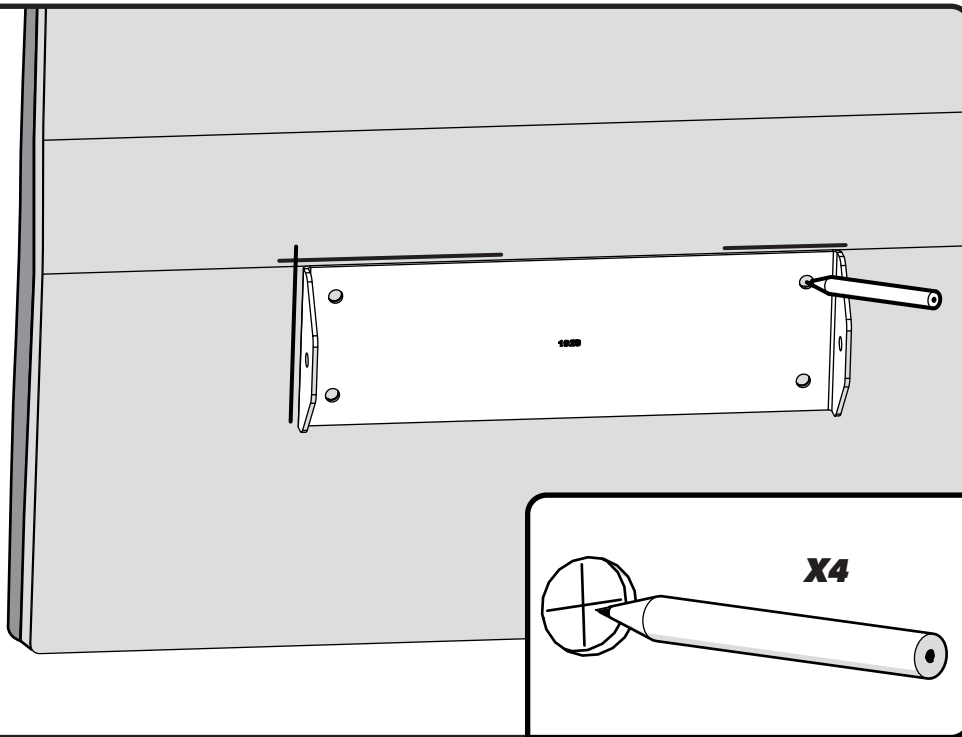


10

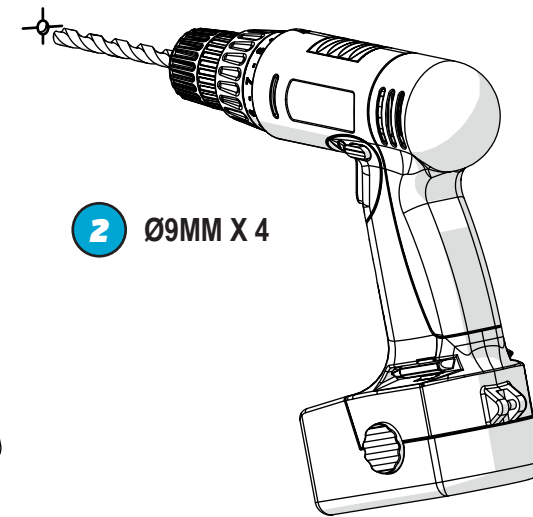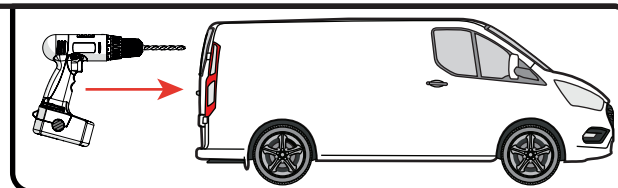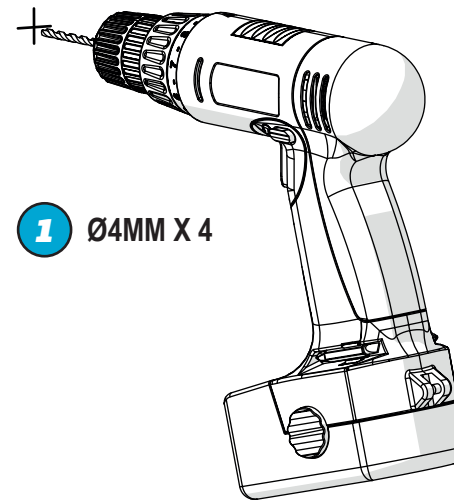


11

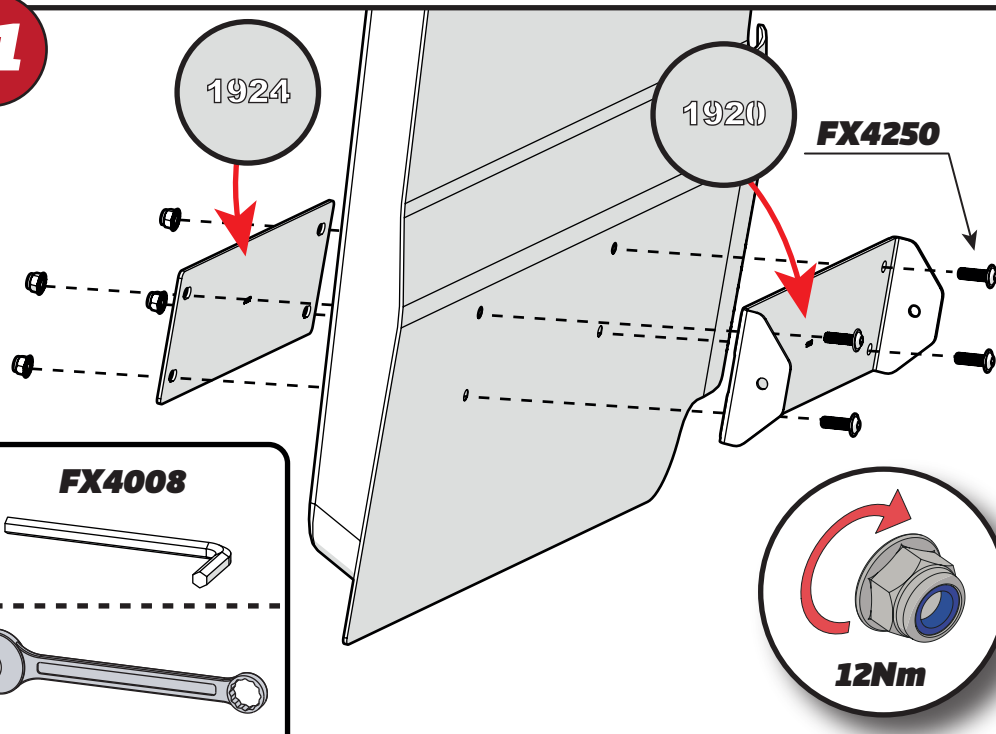


12

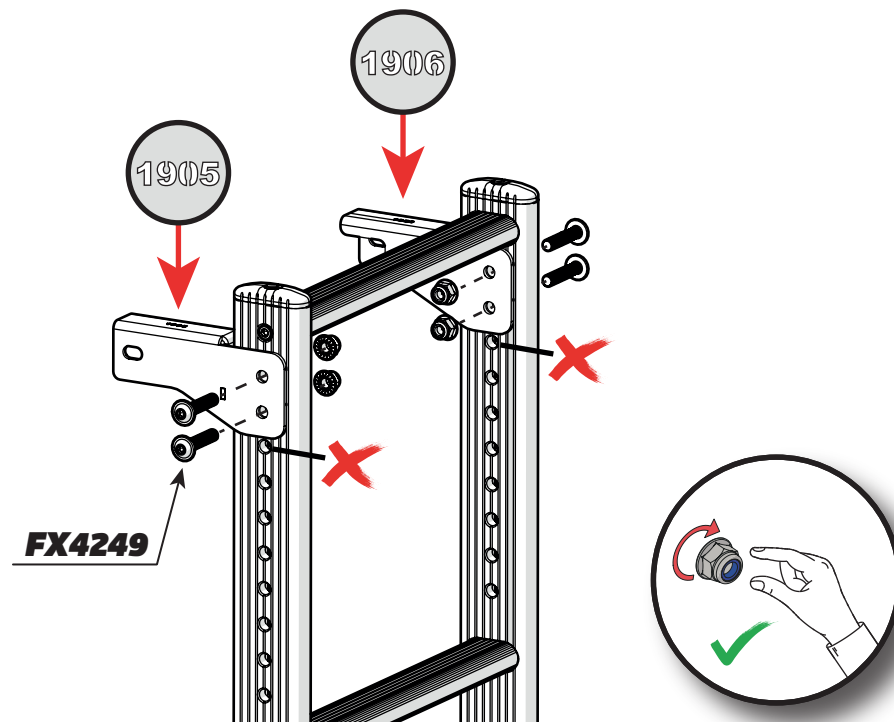


13

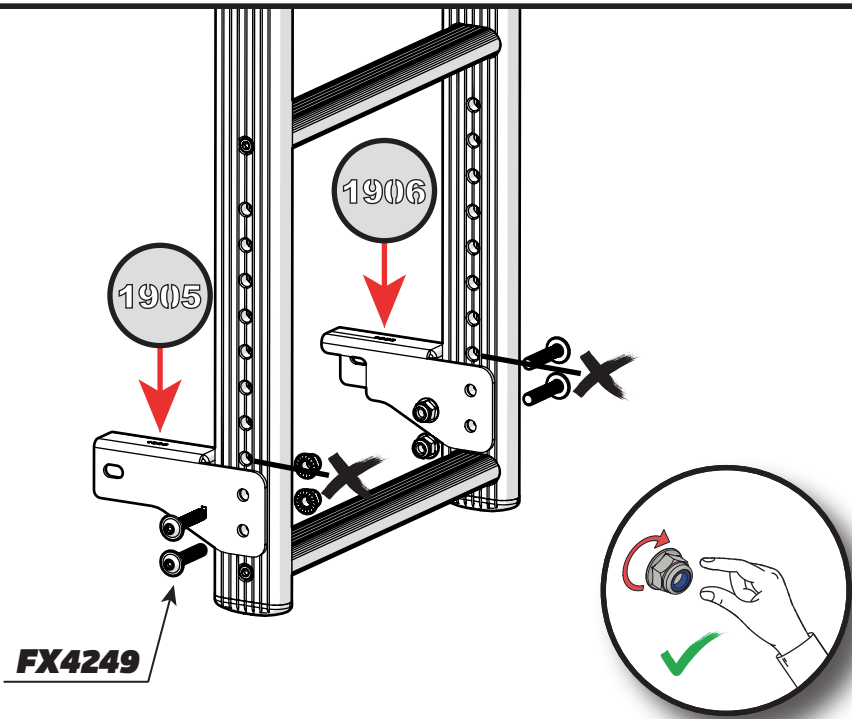


14

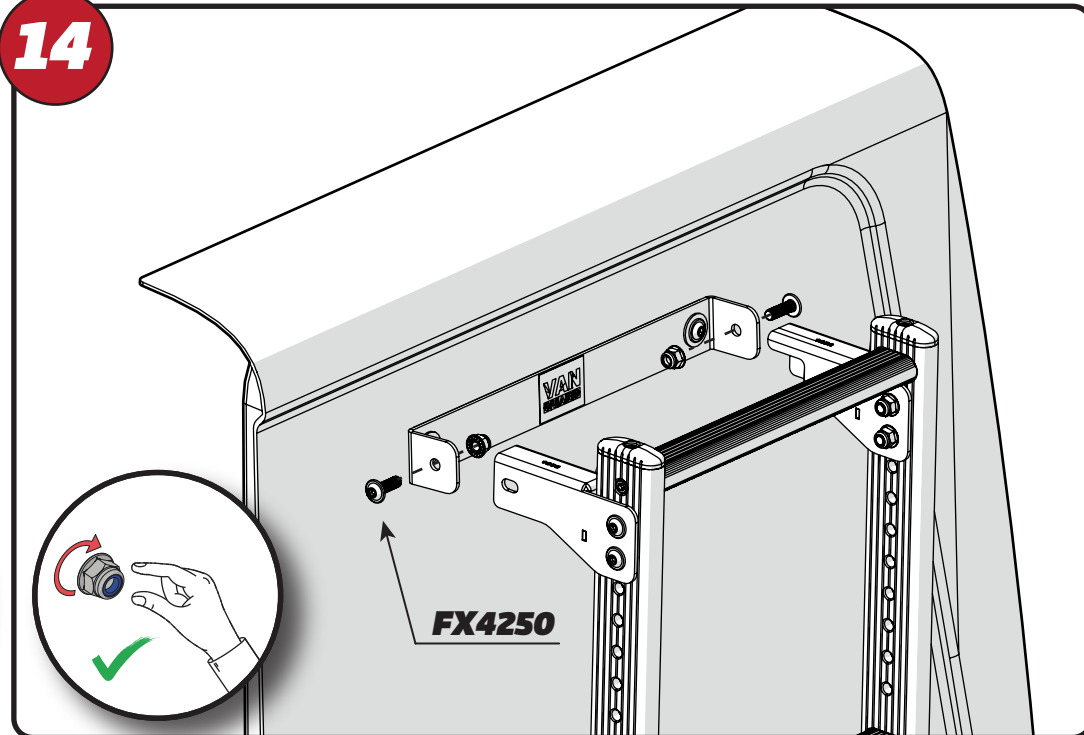




15

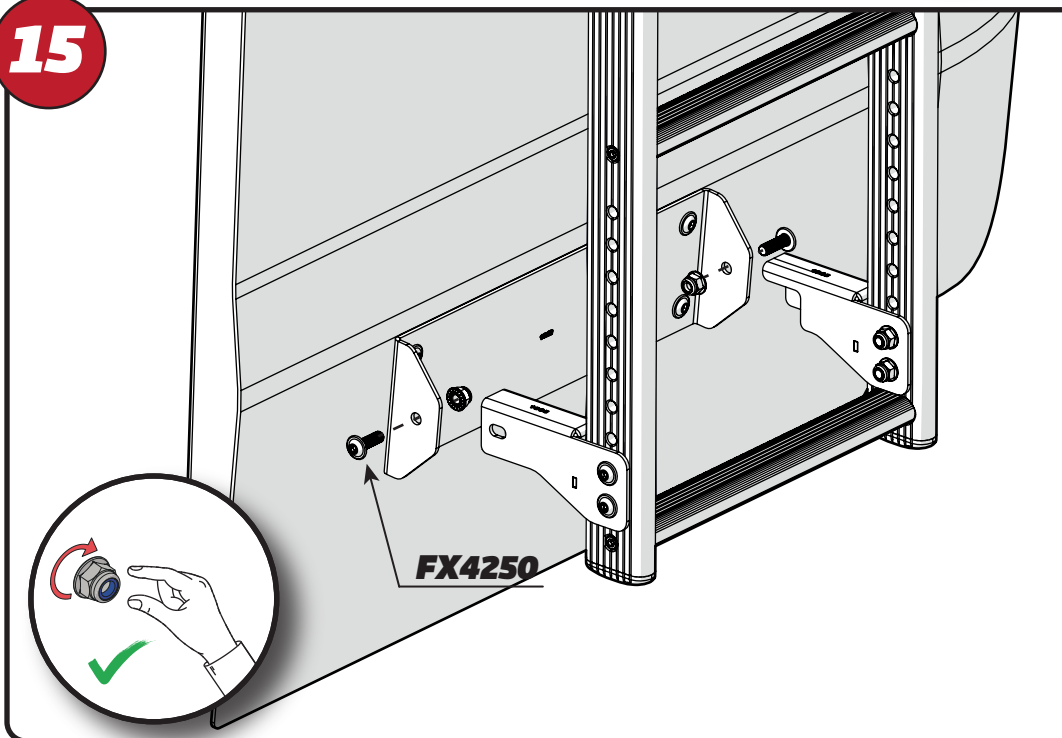




16

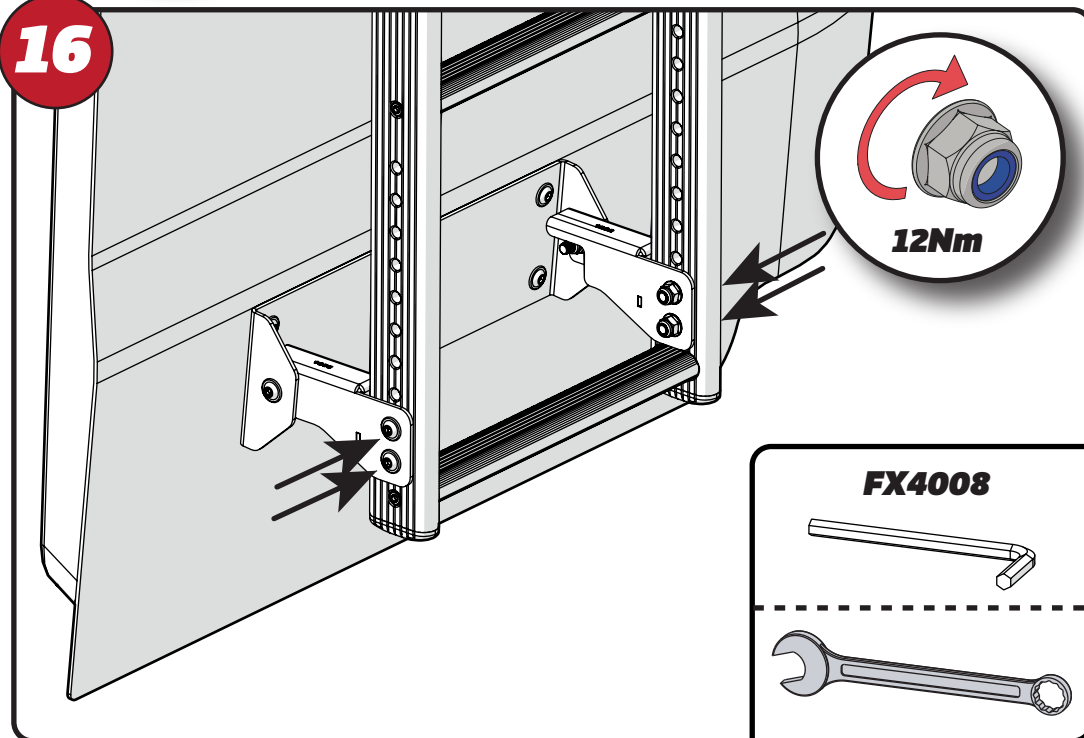




17

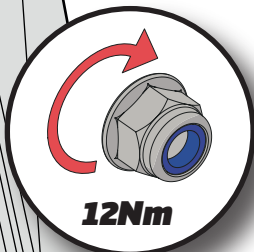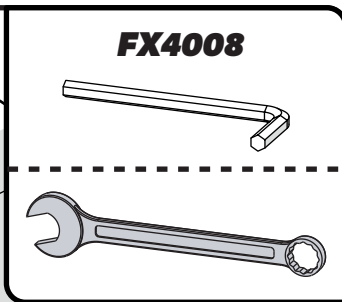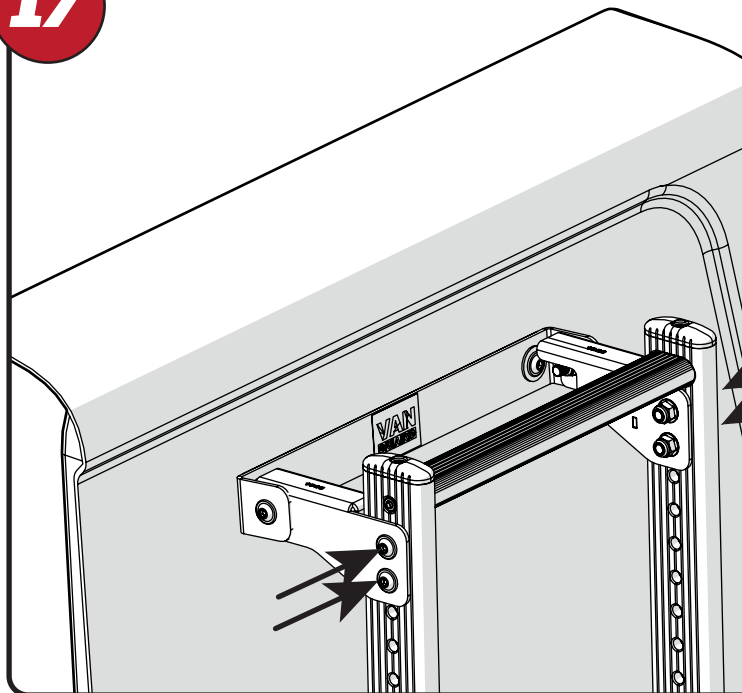




18

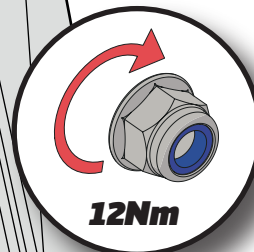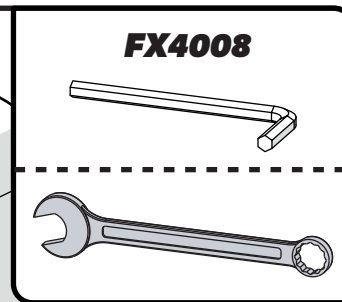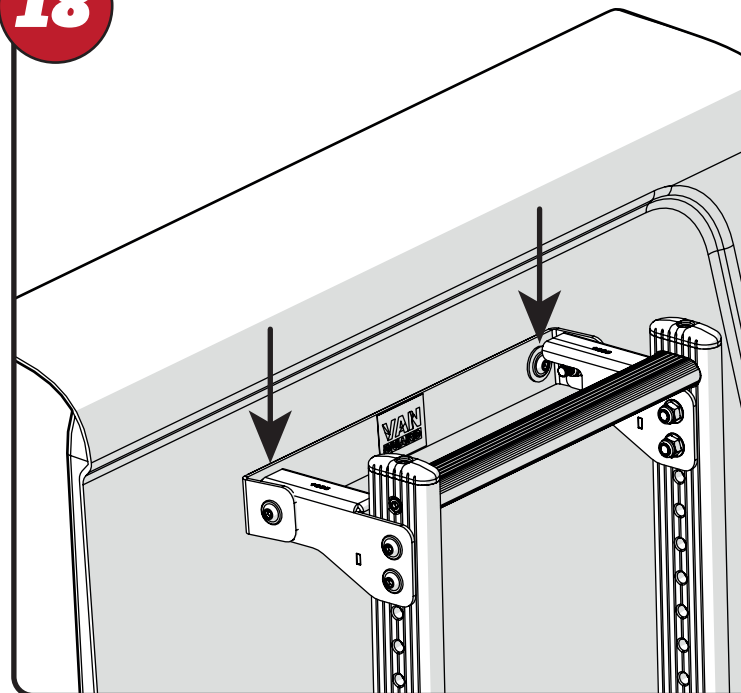


19

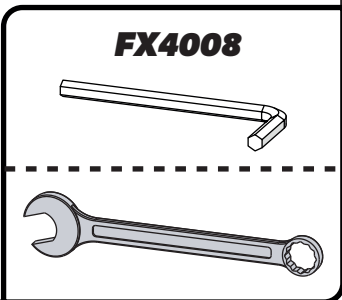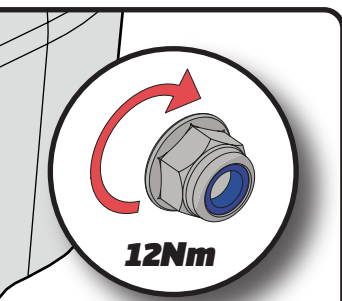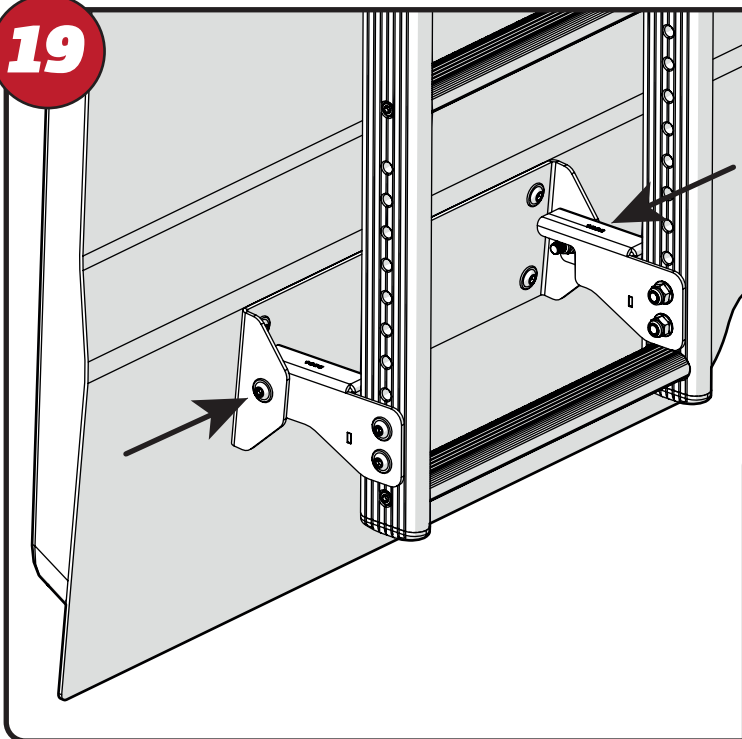


20

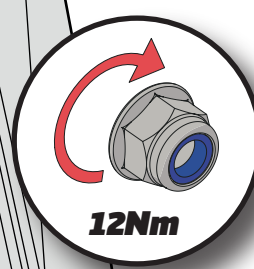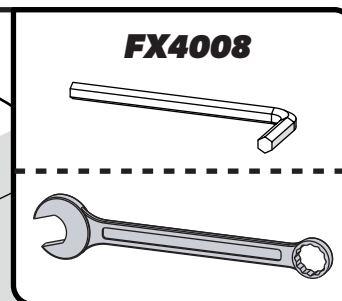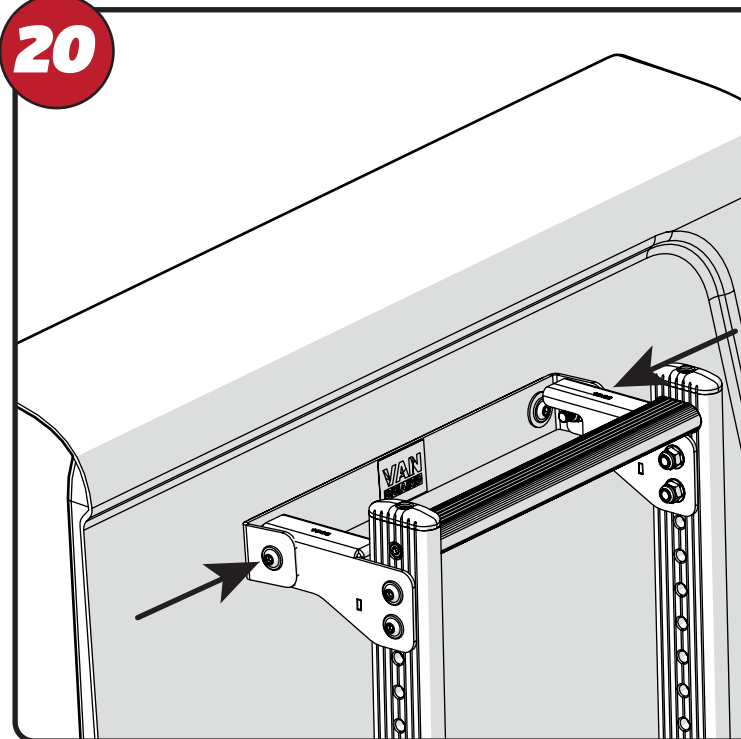

21

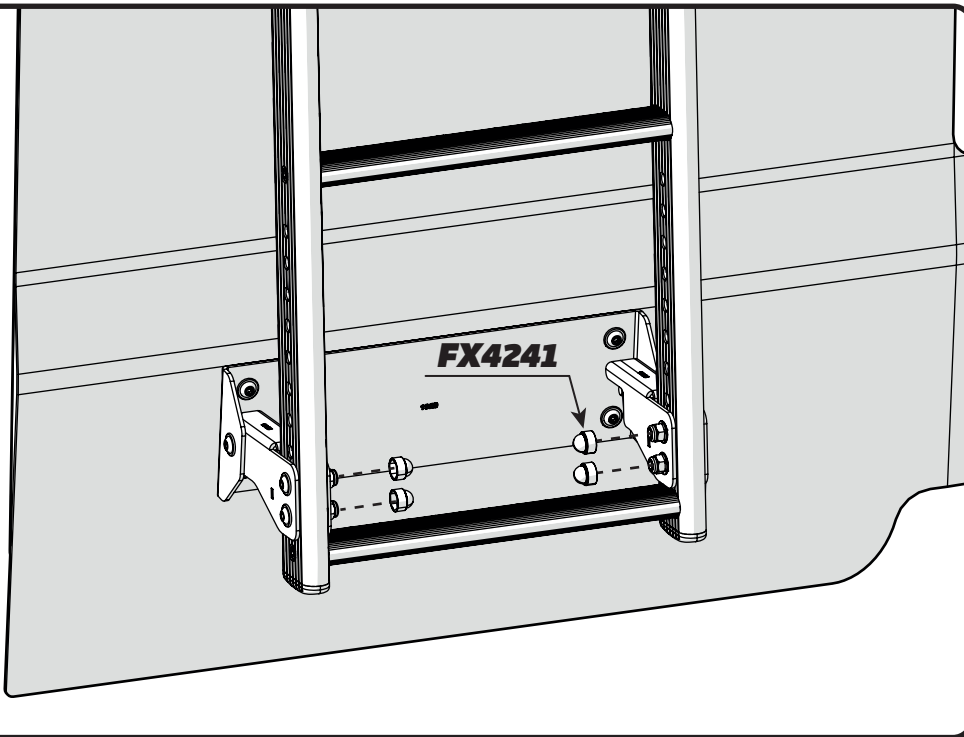

22

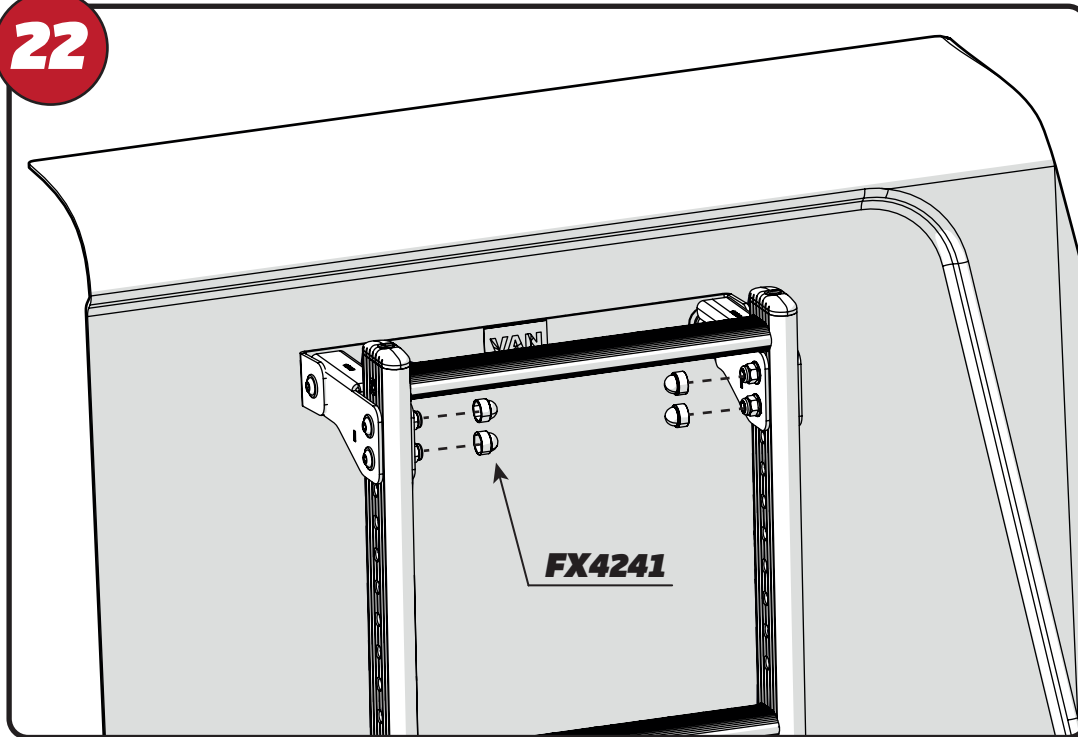

23

