


IN8405

ULTI Ladder

2


**VAN
GUARD**

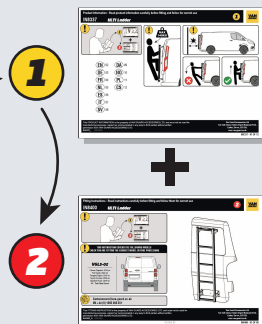


**THIS INSTRUCTION COVERS THE FOLLOWING MODELS
CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING**

VGL5-07

Iveco Daily: 2014 on
H1 - Twin Rear Doors

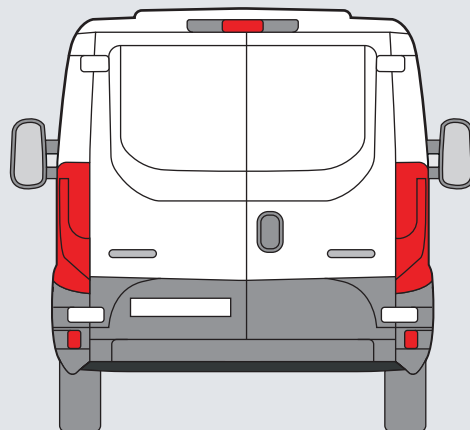

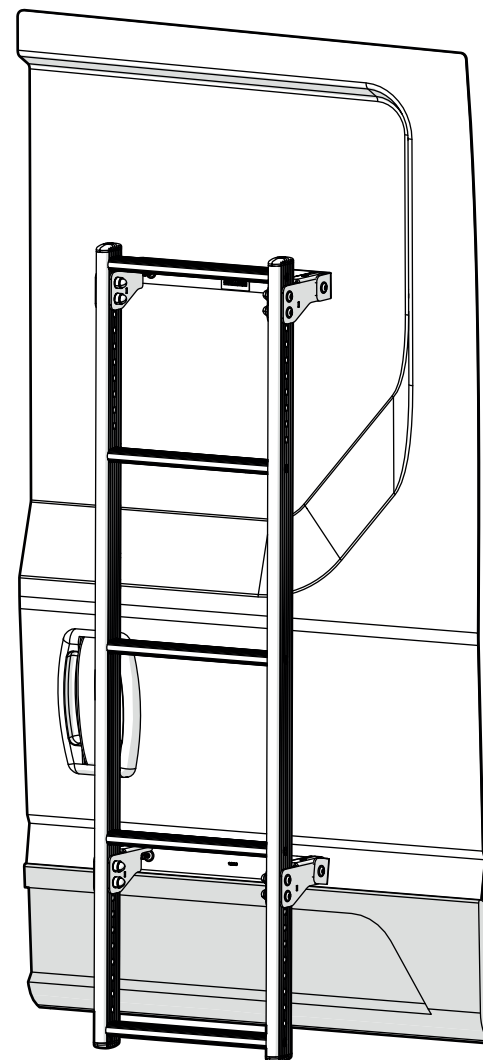


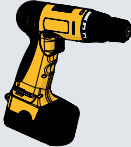
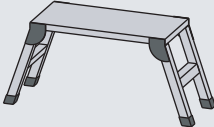
Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351















This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8405_A (CN:NR)


Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING


TOOLS REQUIRED	
13MM X1	
4MM X1	
9MM X1	
	
	

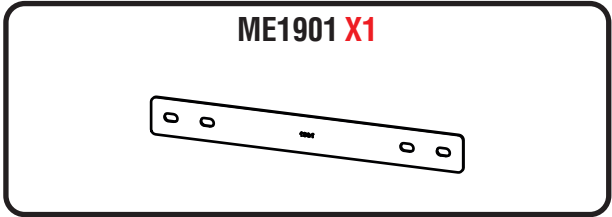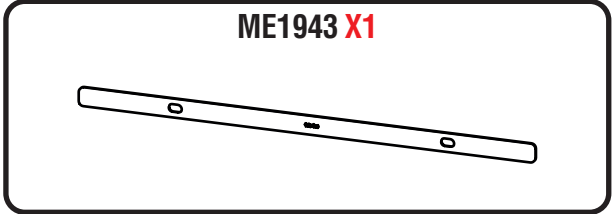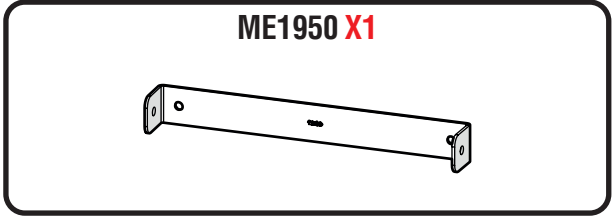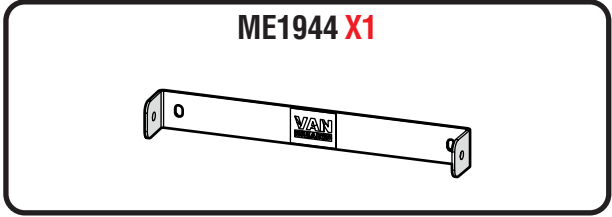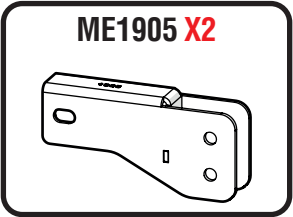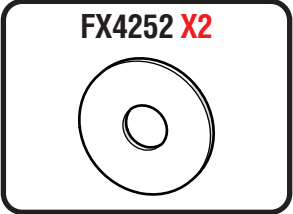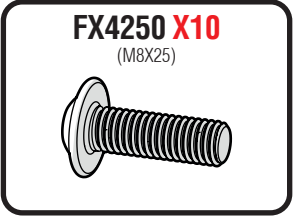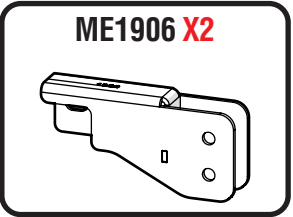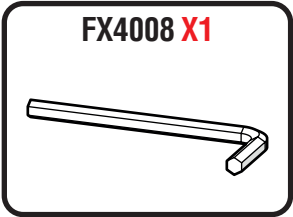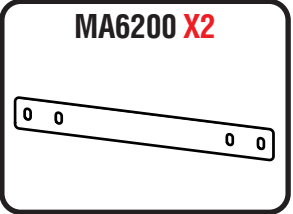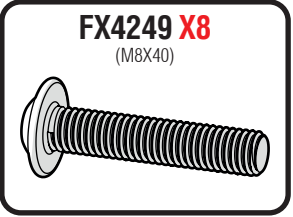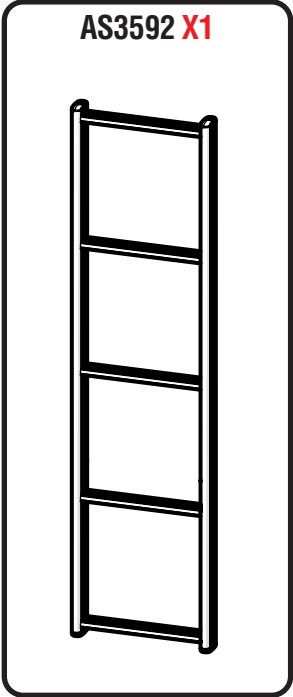


01

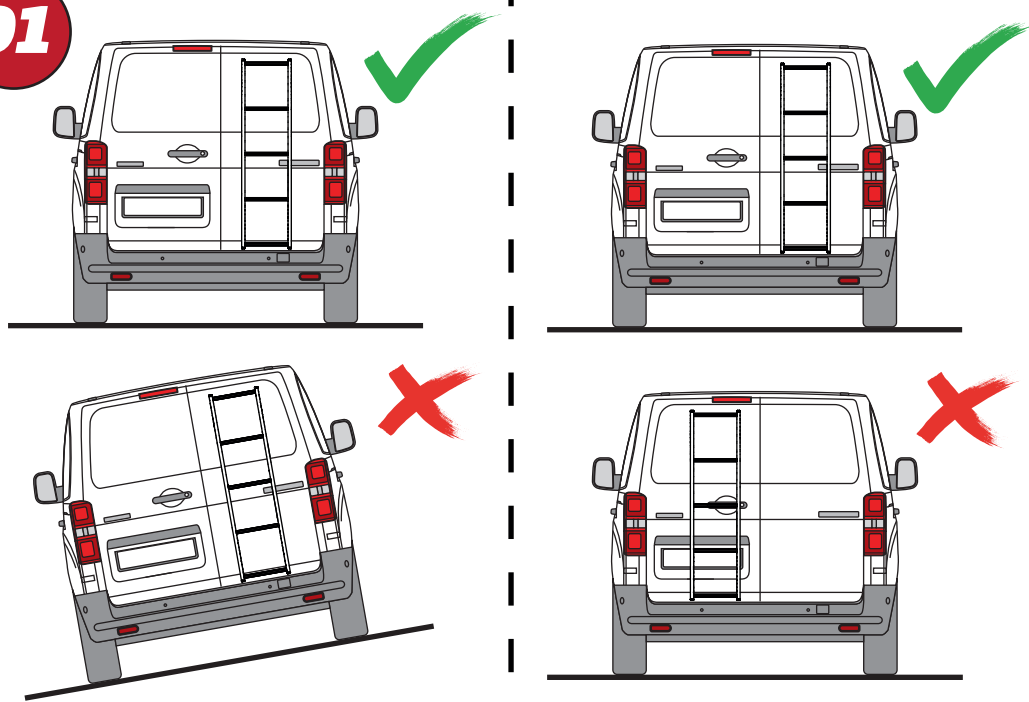


02

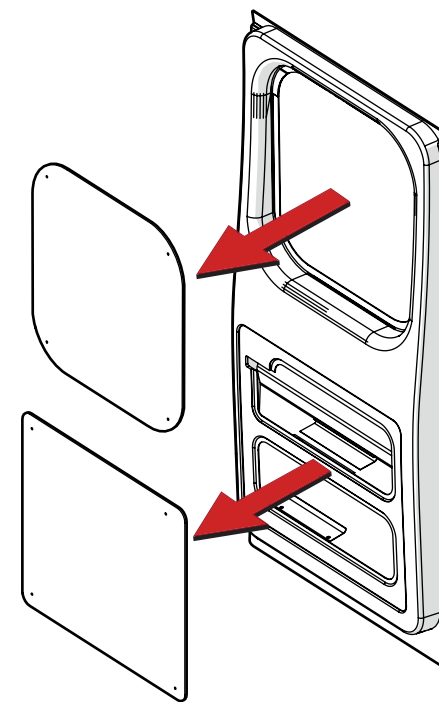


03

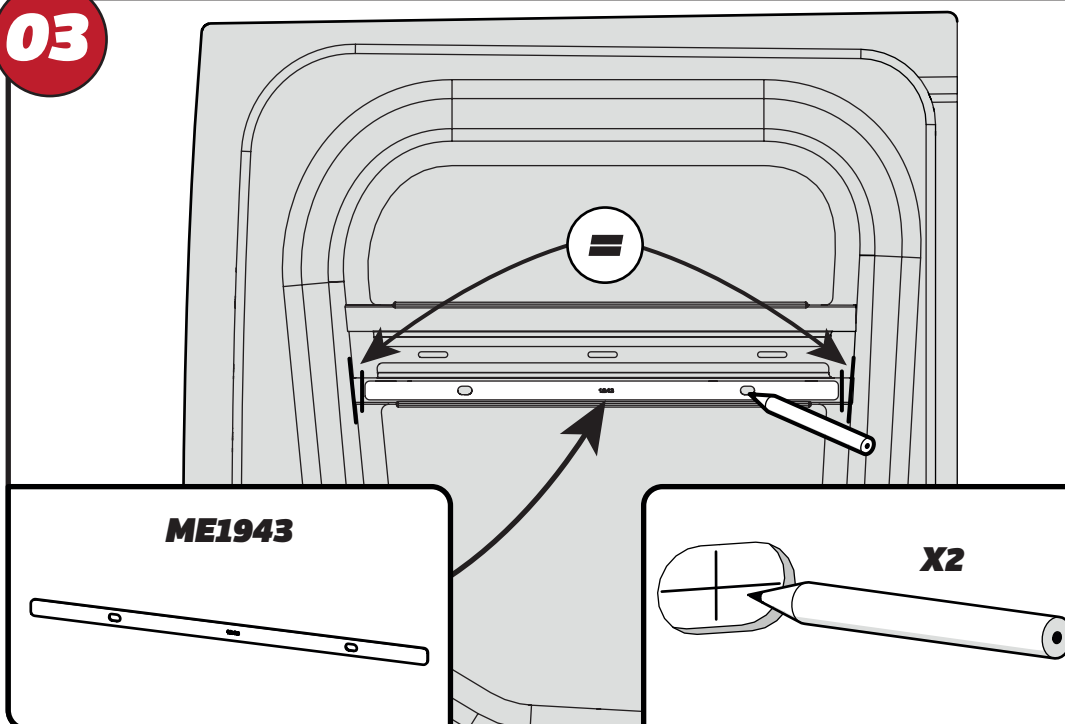



04

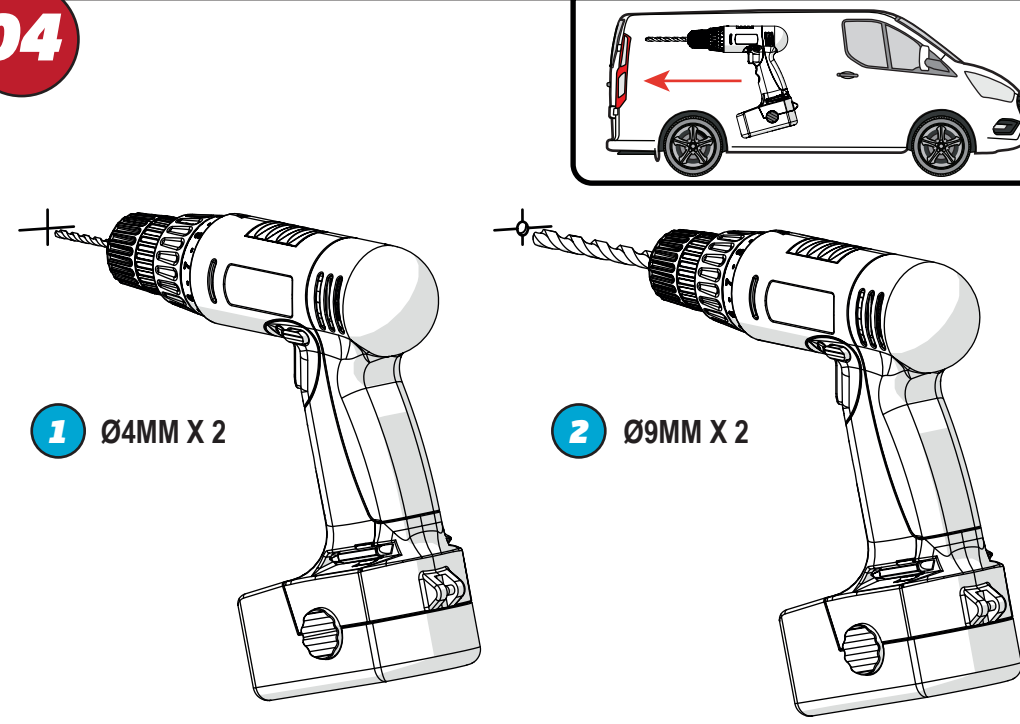


05

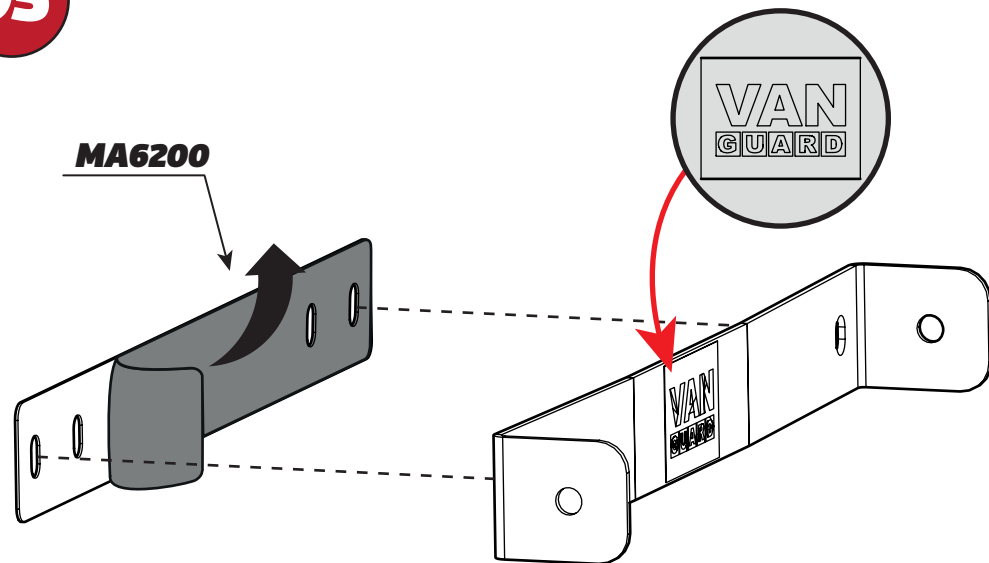


06

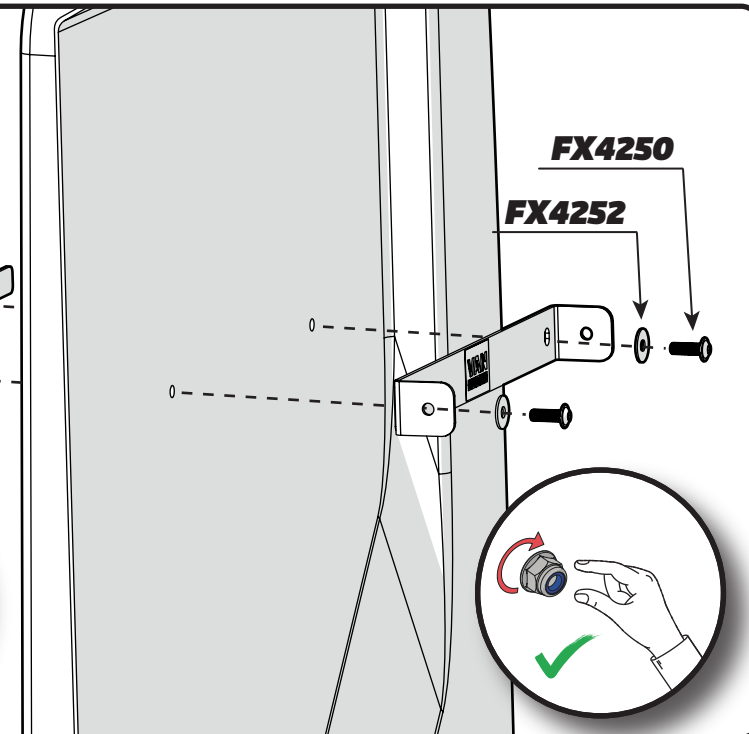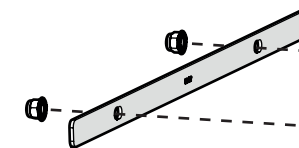


07

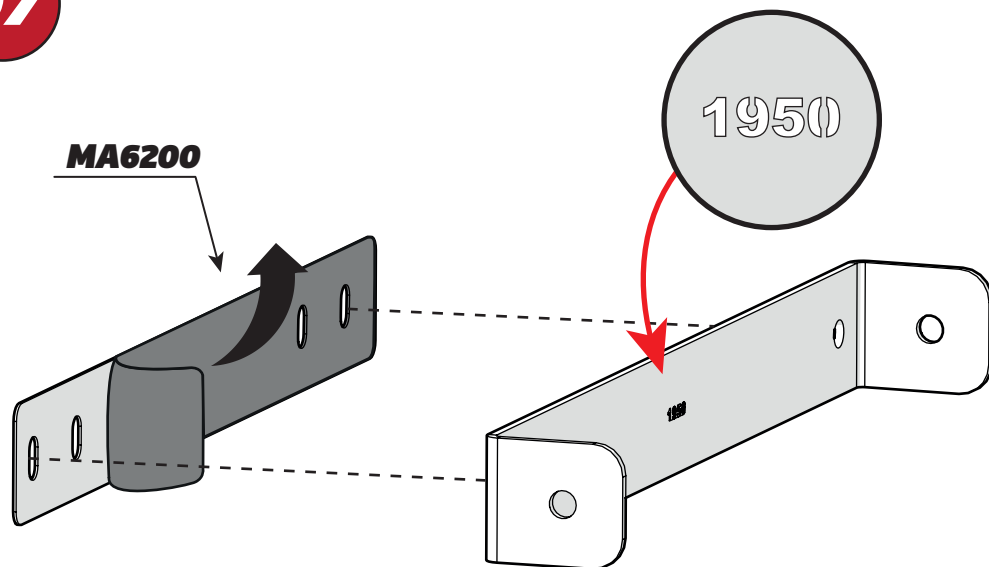


08

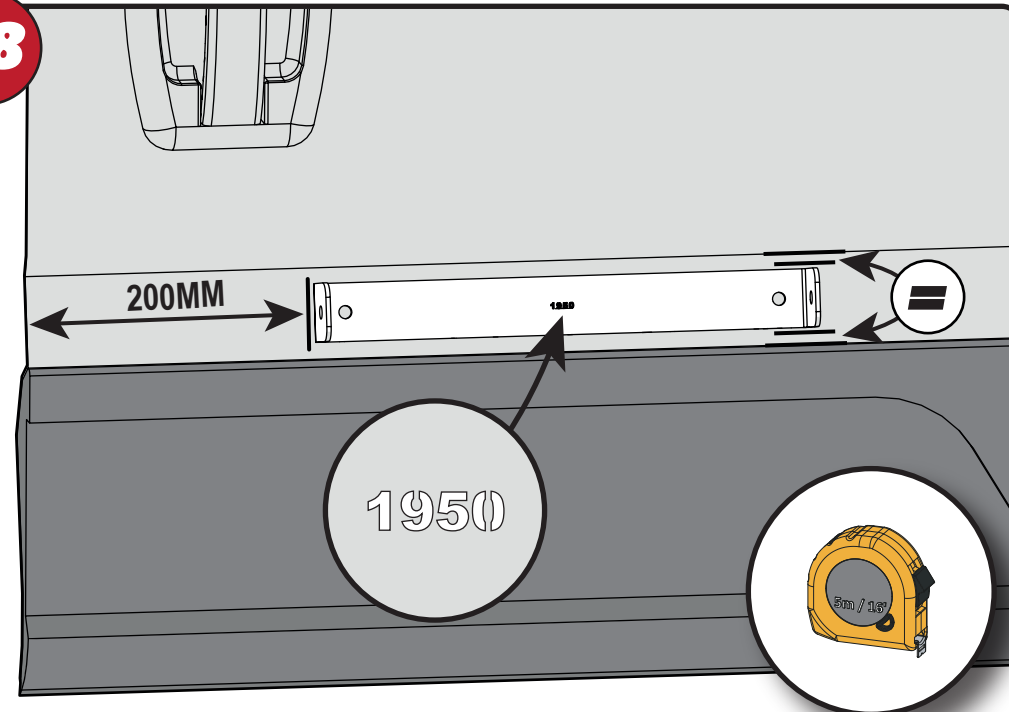


09

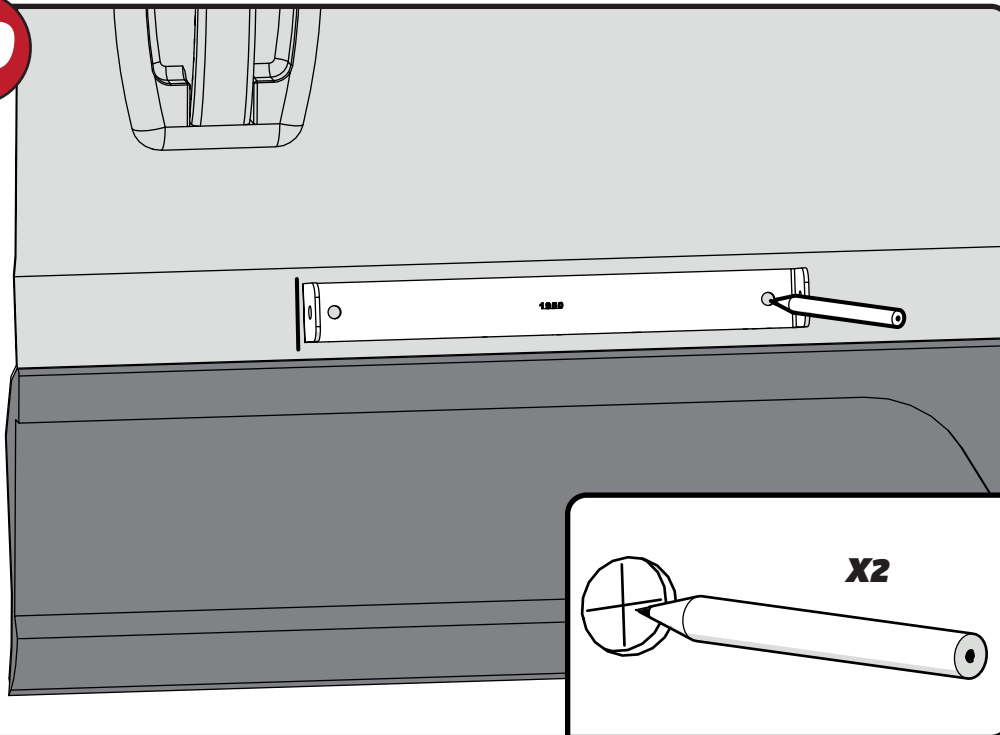


10

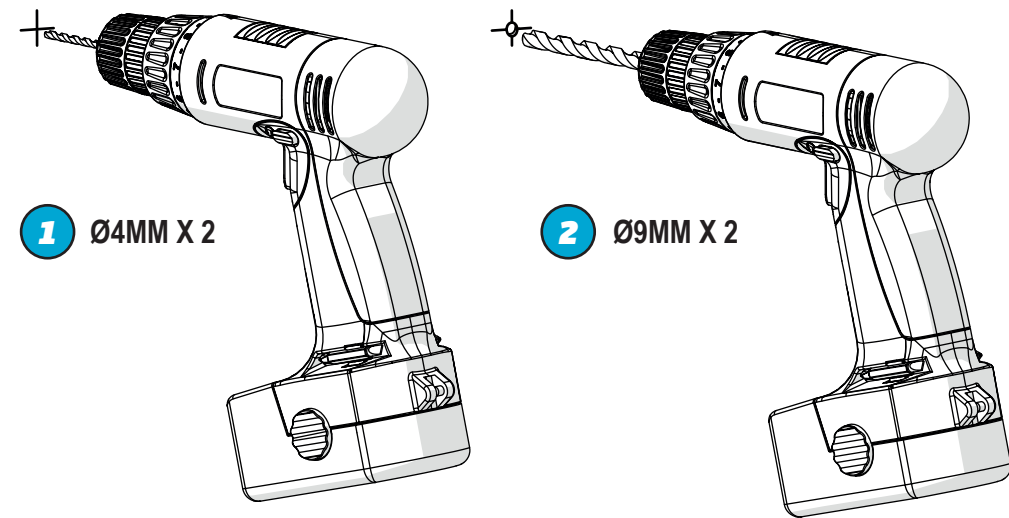


11

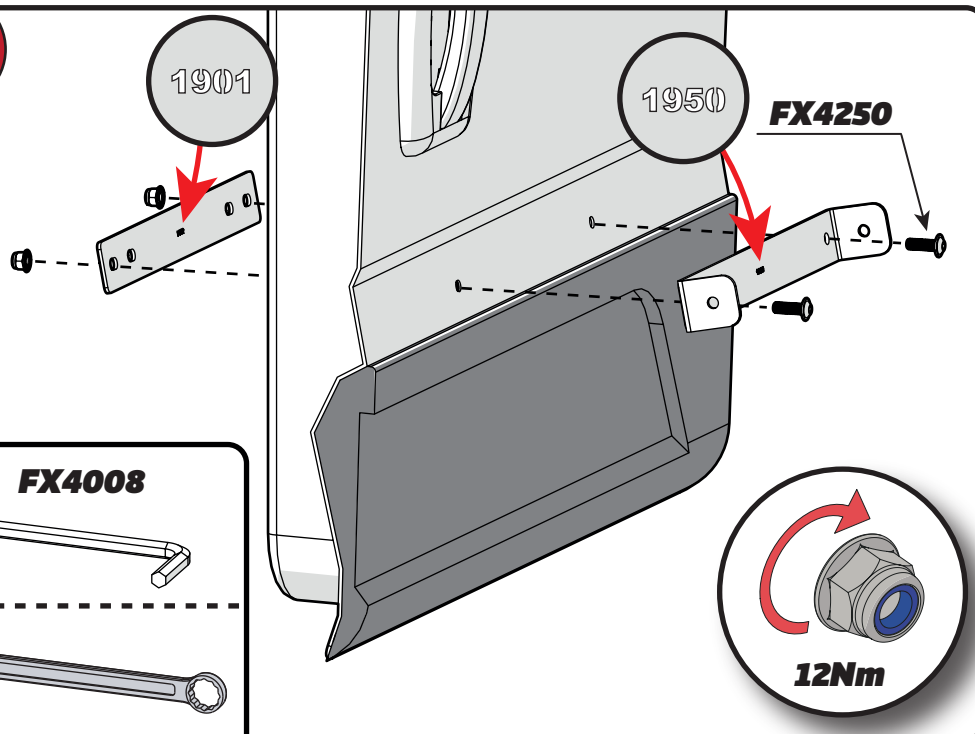


12

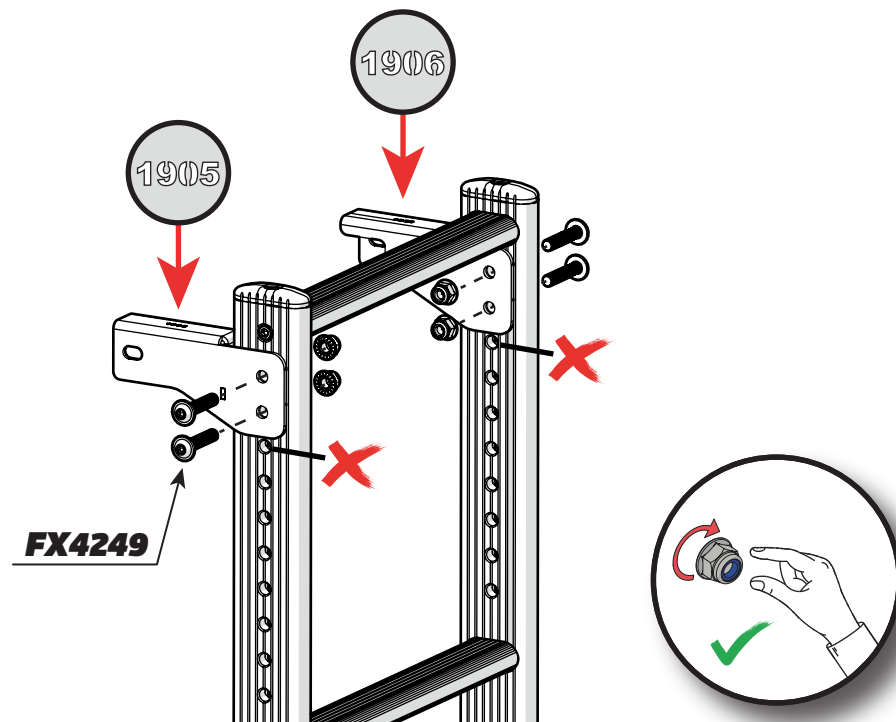


13

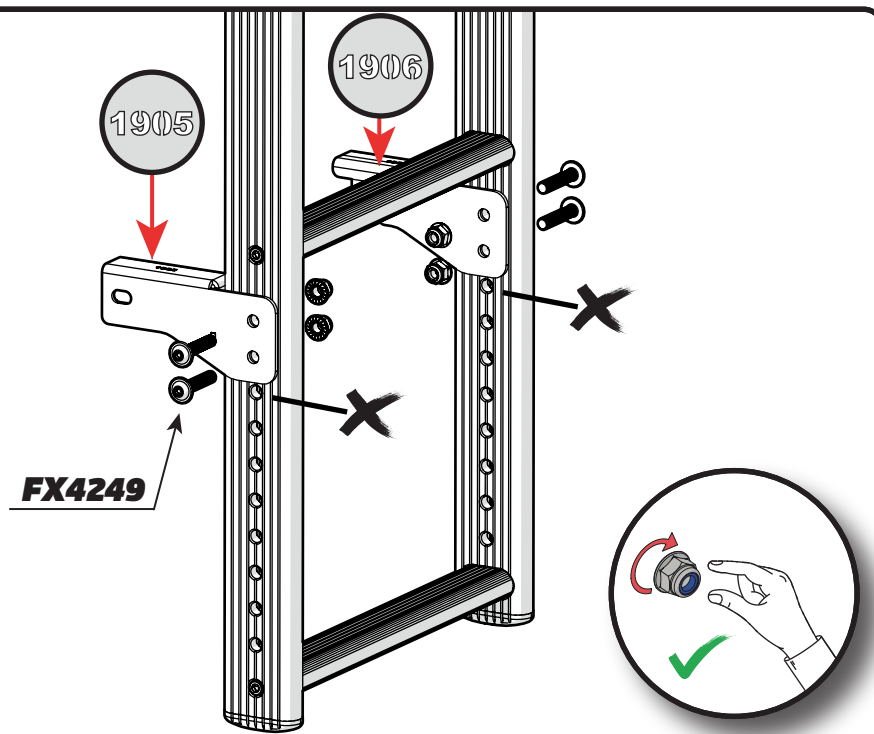


14

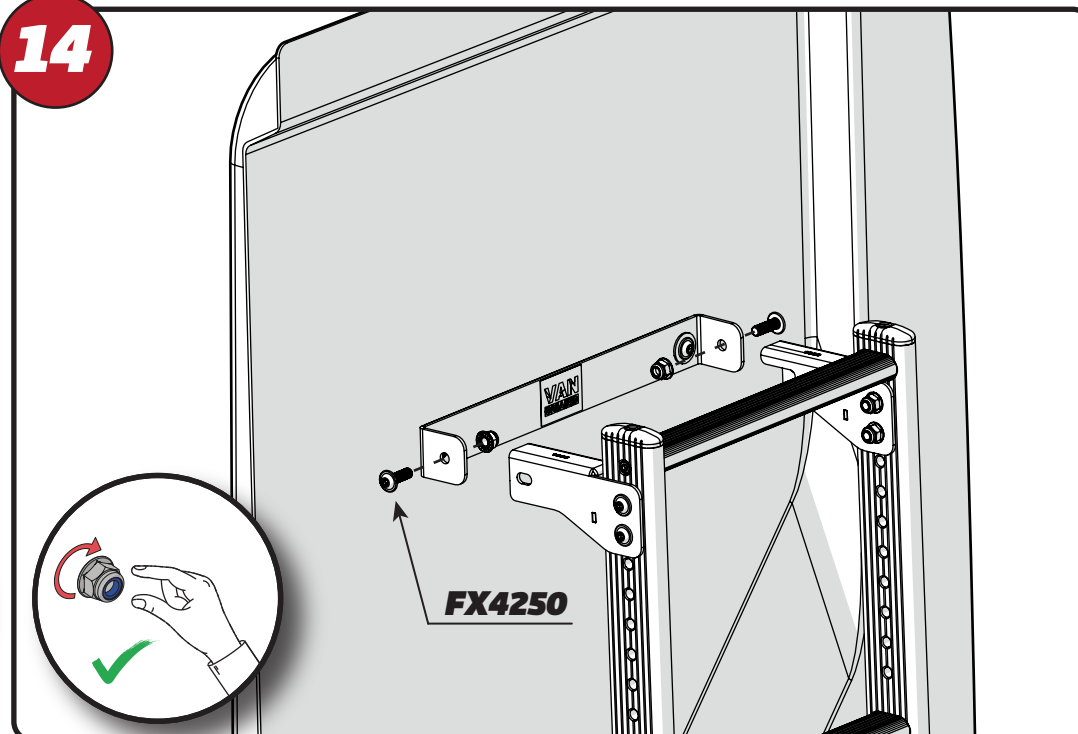


15

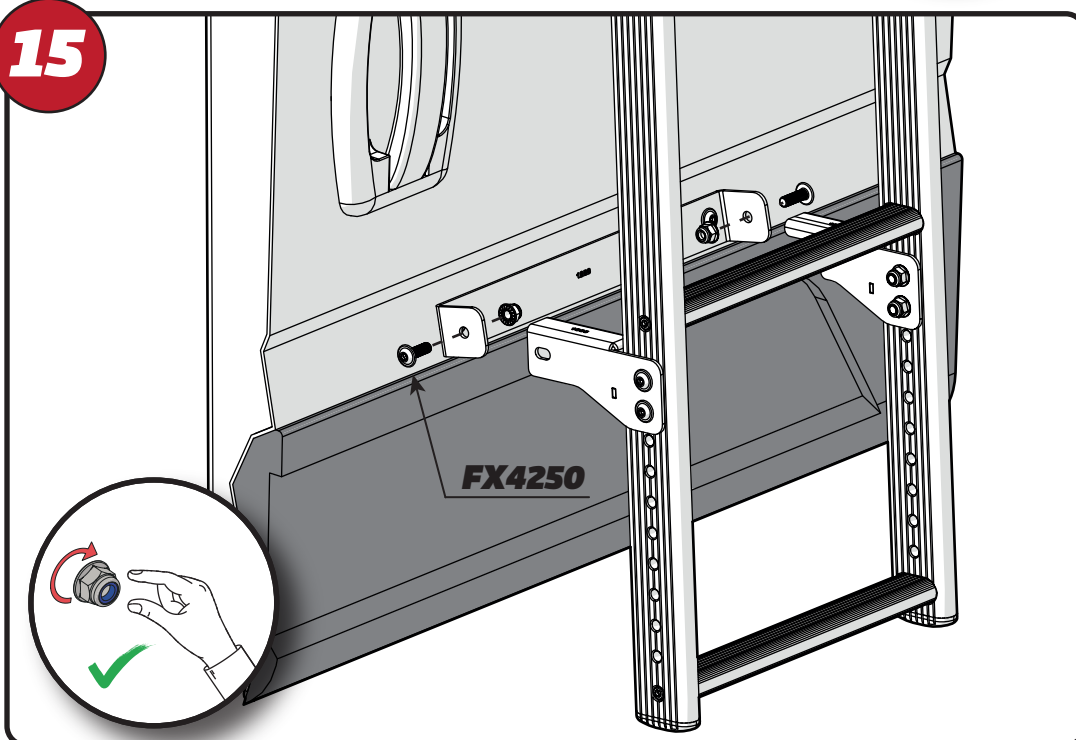


16

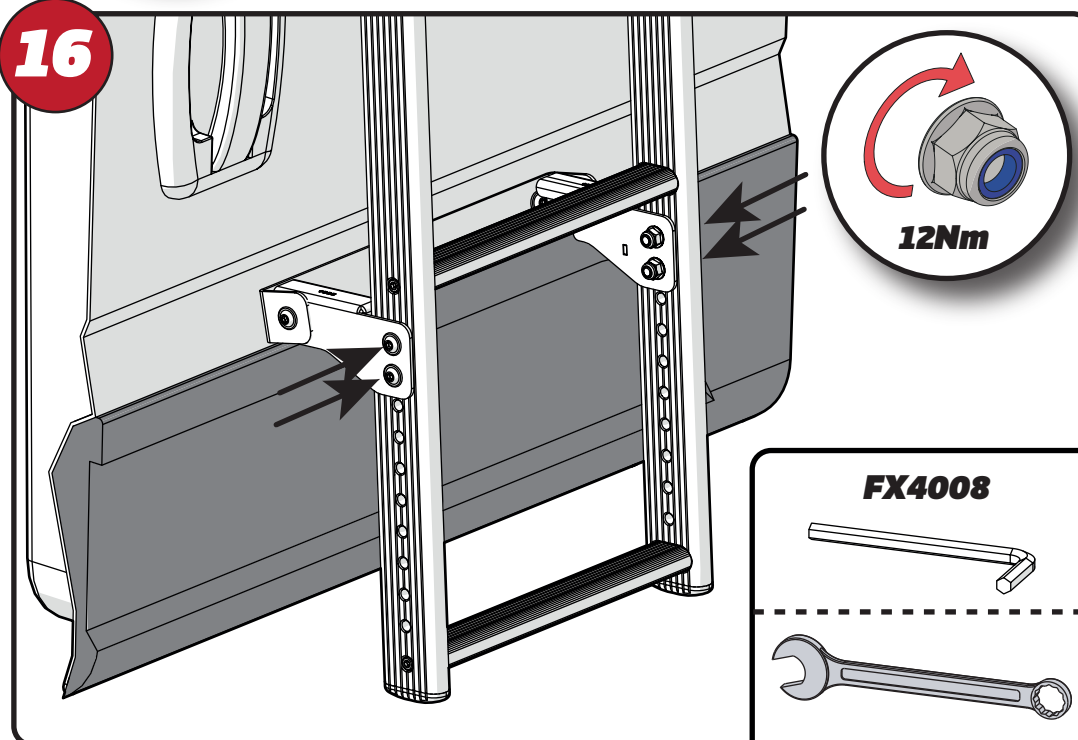


17

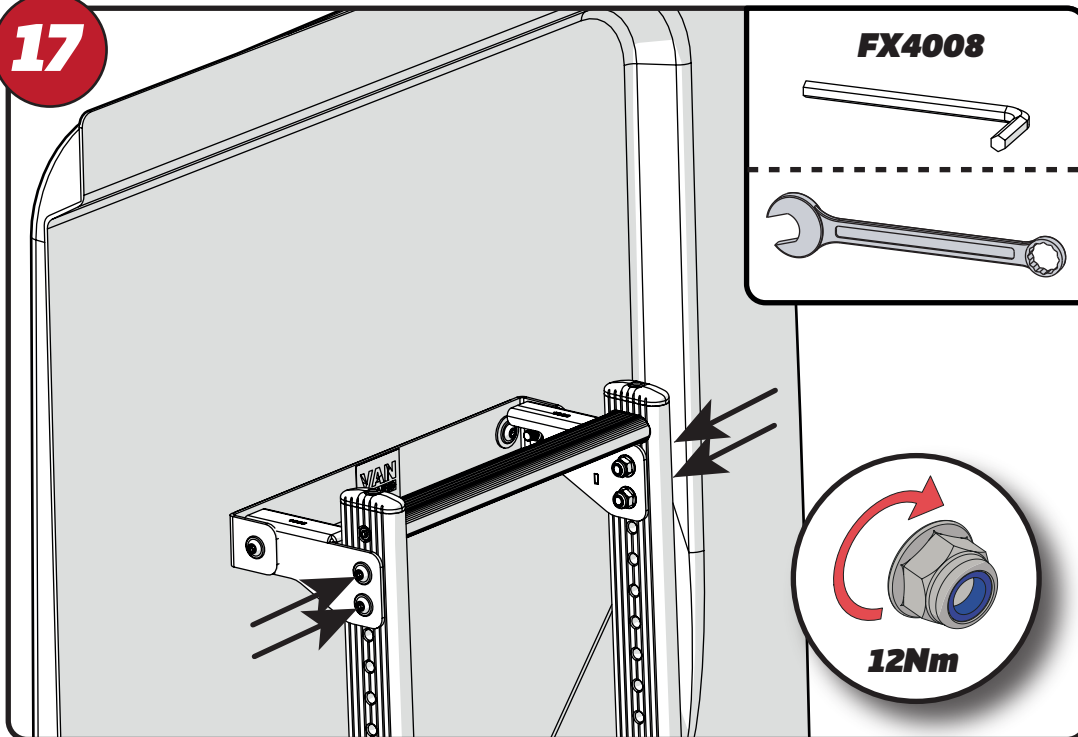


18

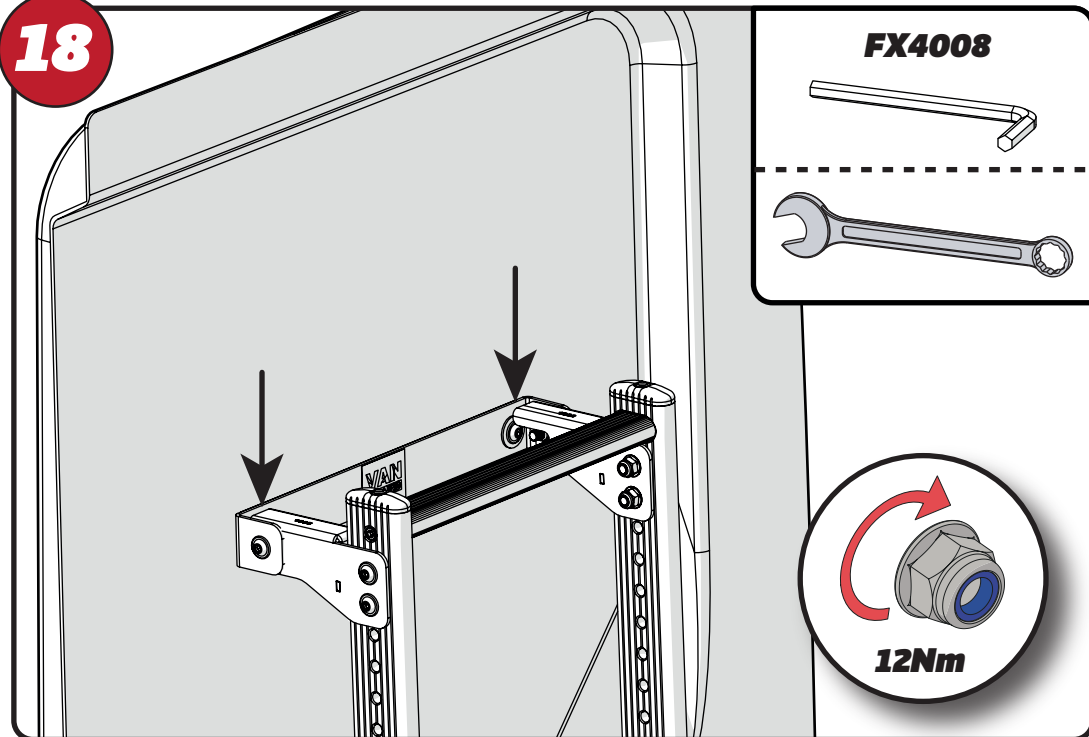


19

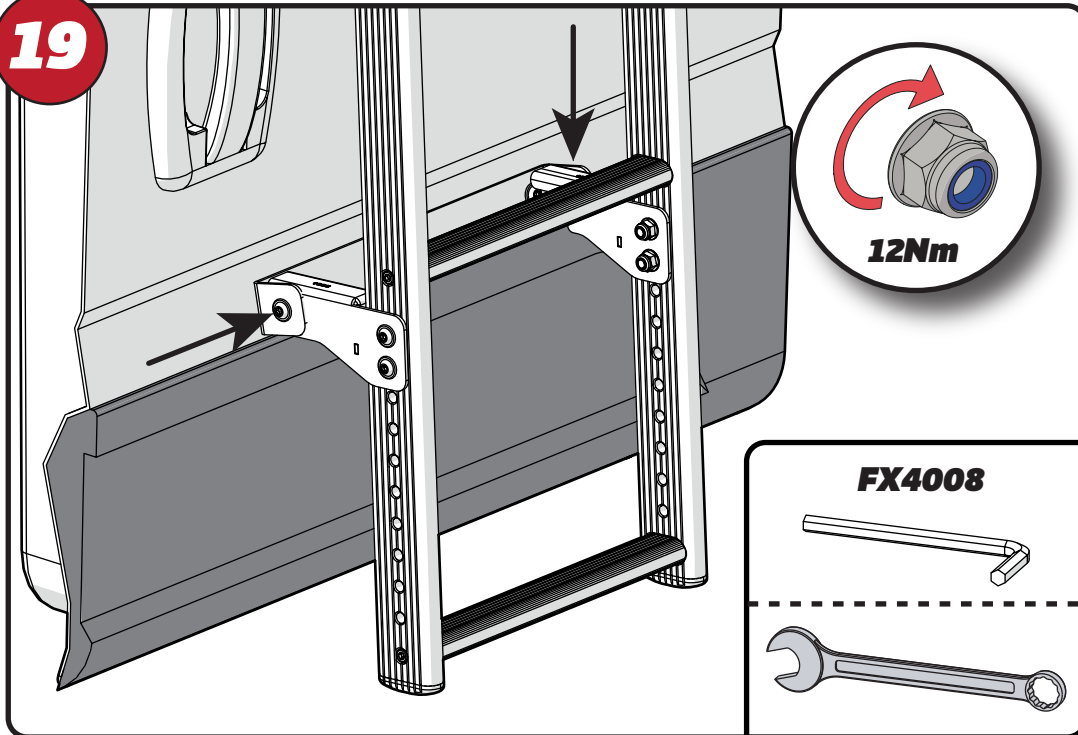


20

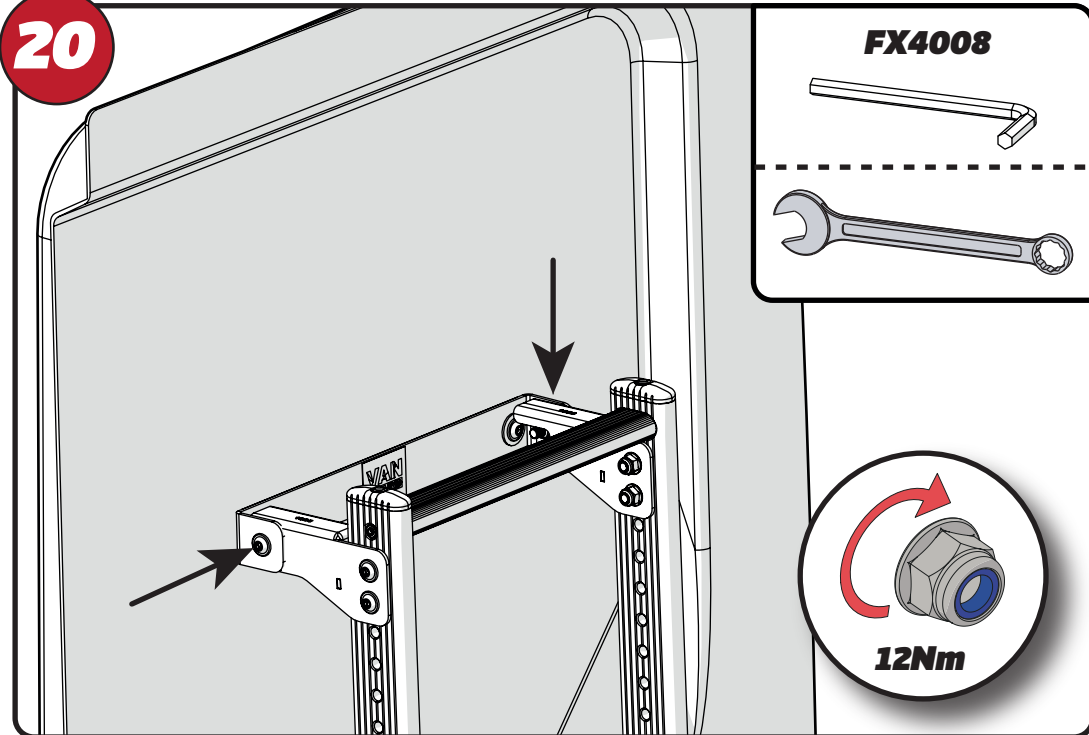

21

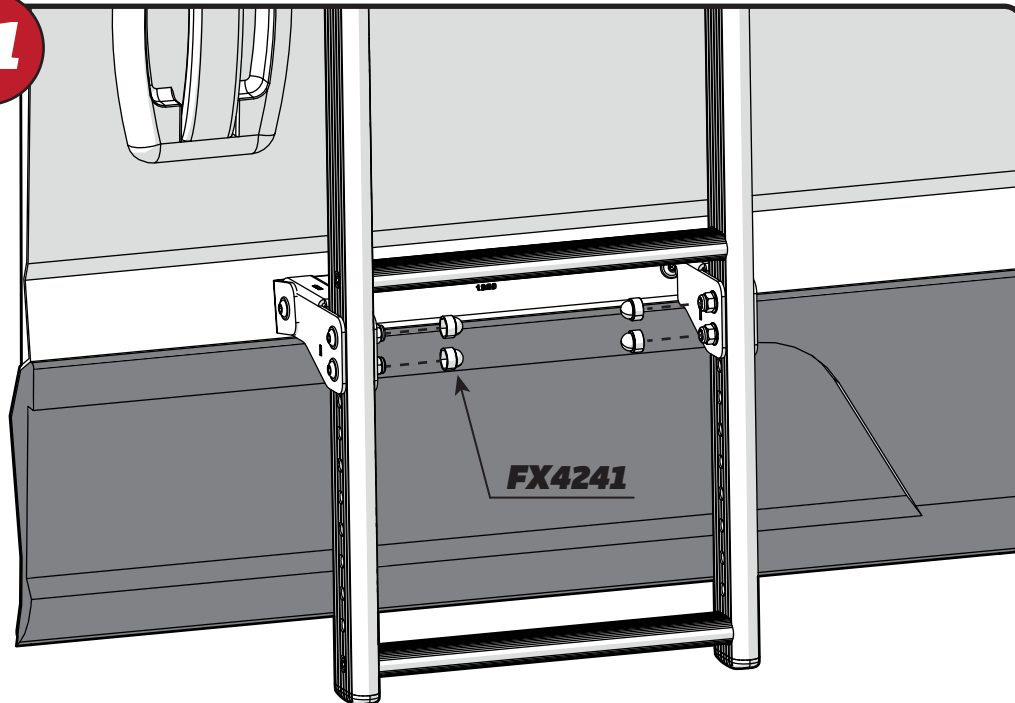

22

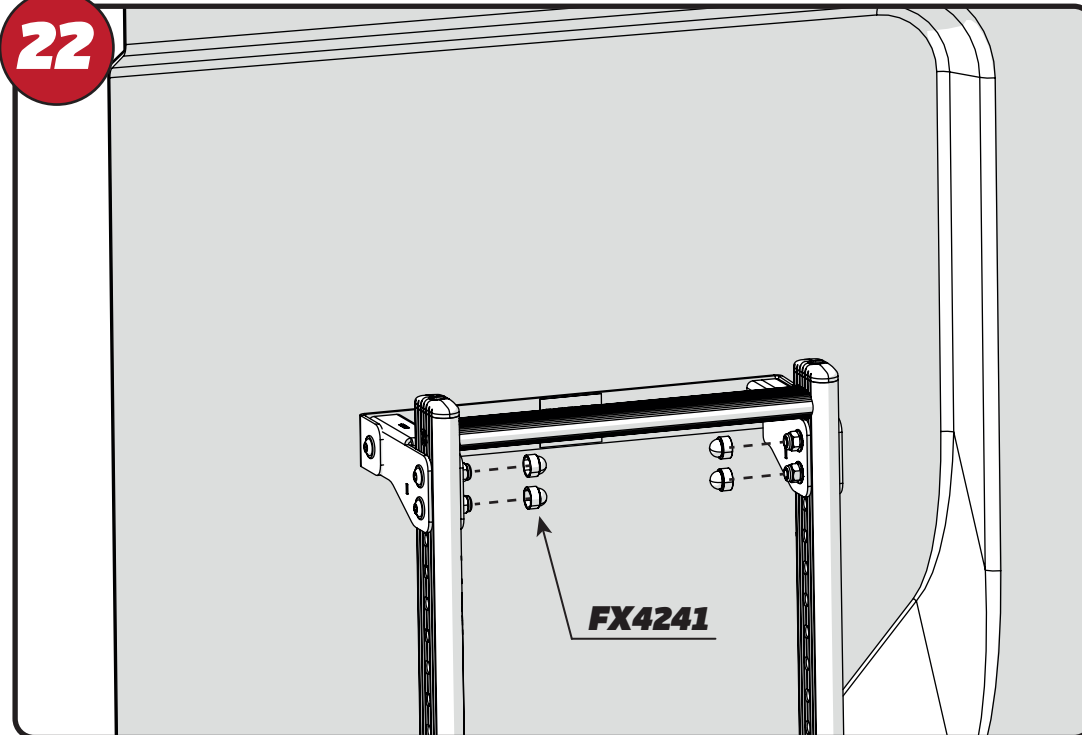

23

