


IN8407


ULTI Ladder

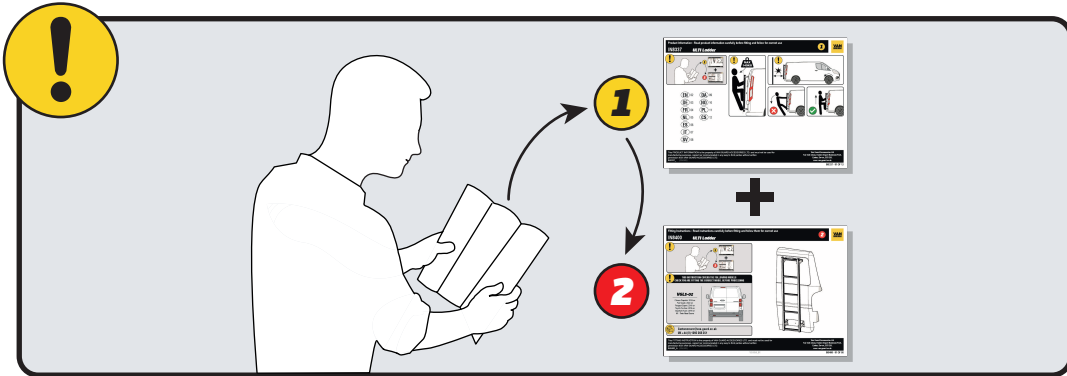


**! THIS INSTRUCTION COVERS THE FOLLOWING MODELS
CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING**

VGL6-03

Ford Transit: 2000-2014
H2 - Twin Rear Doors

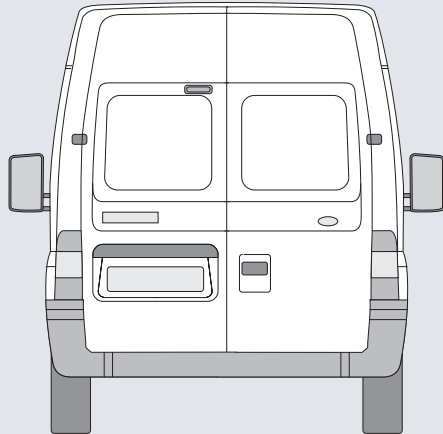


**? Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351**

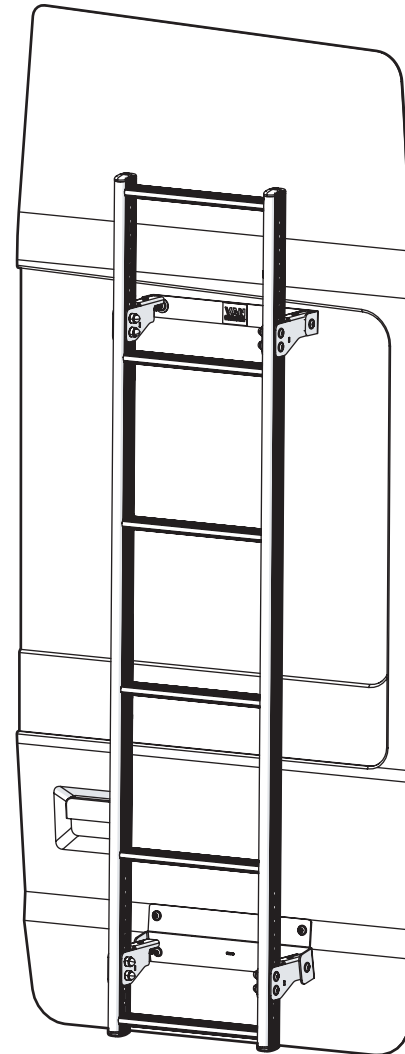


SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING

TOOLS REQUIRED


13MM X1

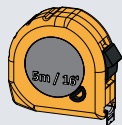

4MM X1

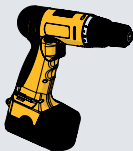


9MM X1

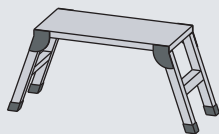

X1




AS3593 X1

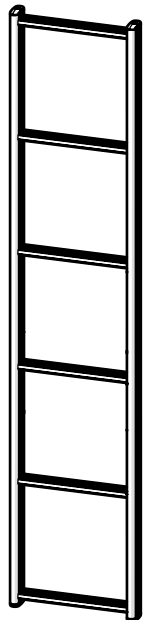


FX4249 X8

(M8X40)



FX4250 X10

(M8X25)



ME1944 X1




FX4240 X18


(M8)




FX4241 X8




ME1929 X1

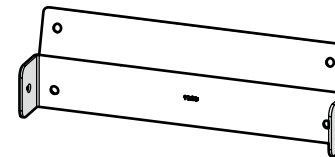


MA6200 X3



FX4252 X2

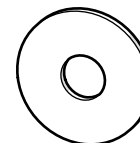


ME1901 X1




FX4008 X1




ME1906 X2

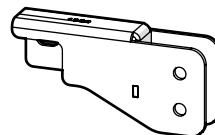


ME1905 X2

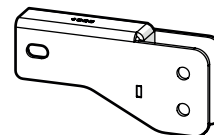


ME1930 X1

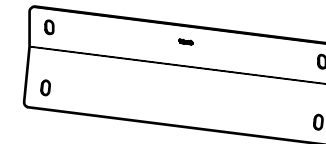


01

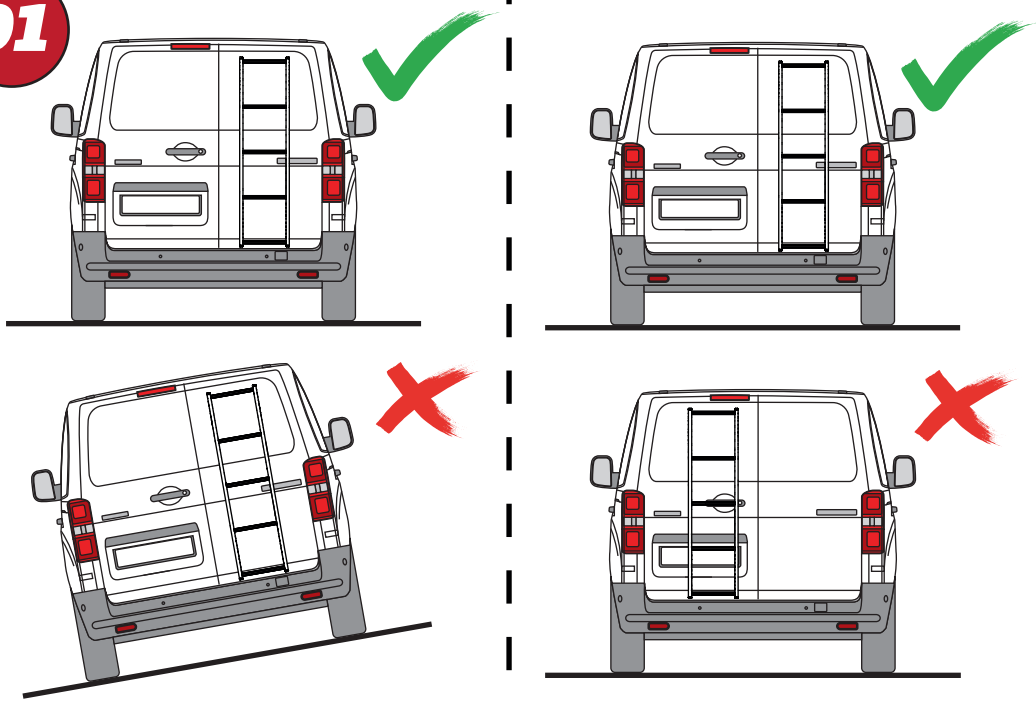


02

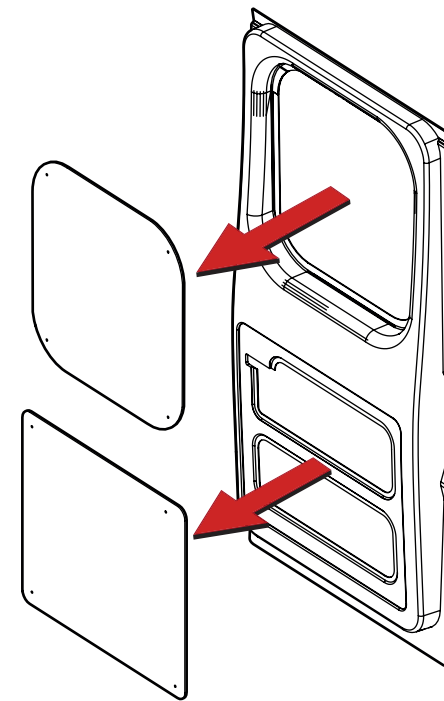


03

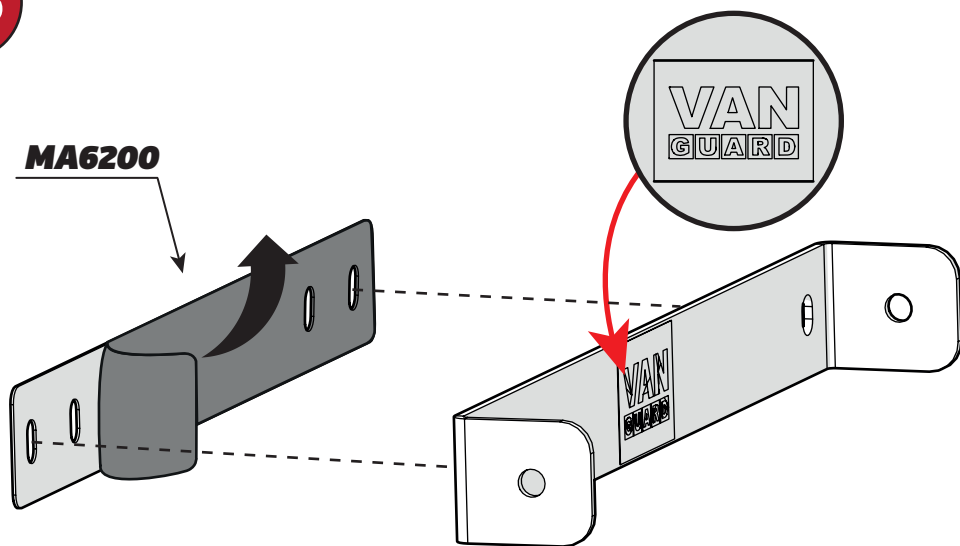


04

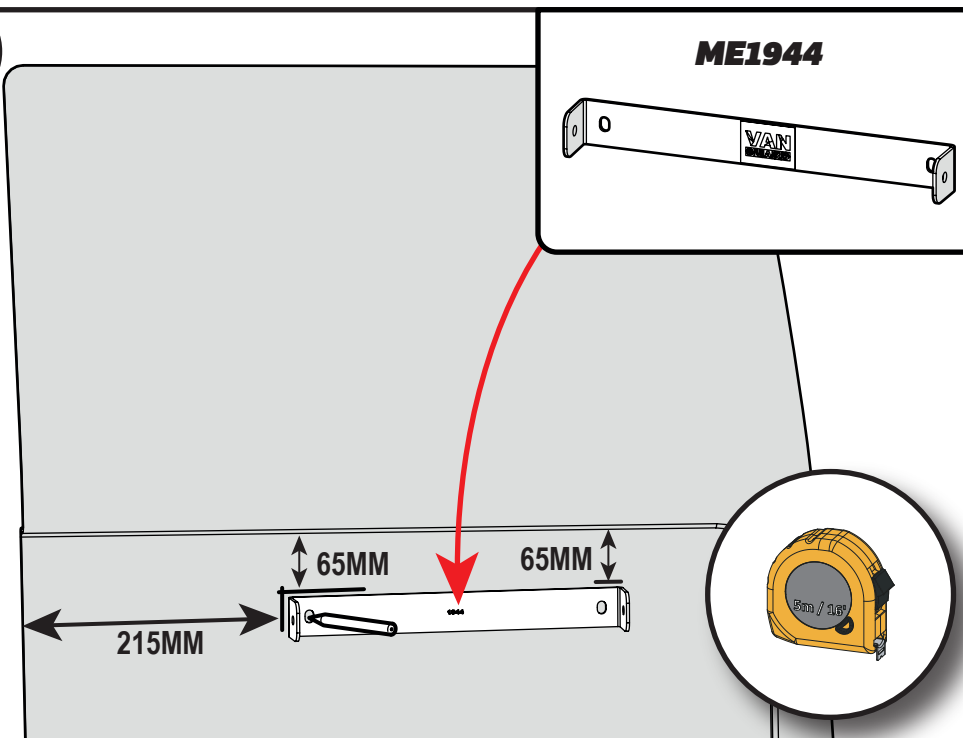


05

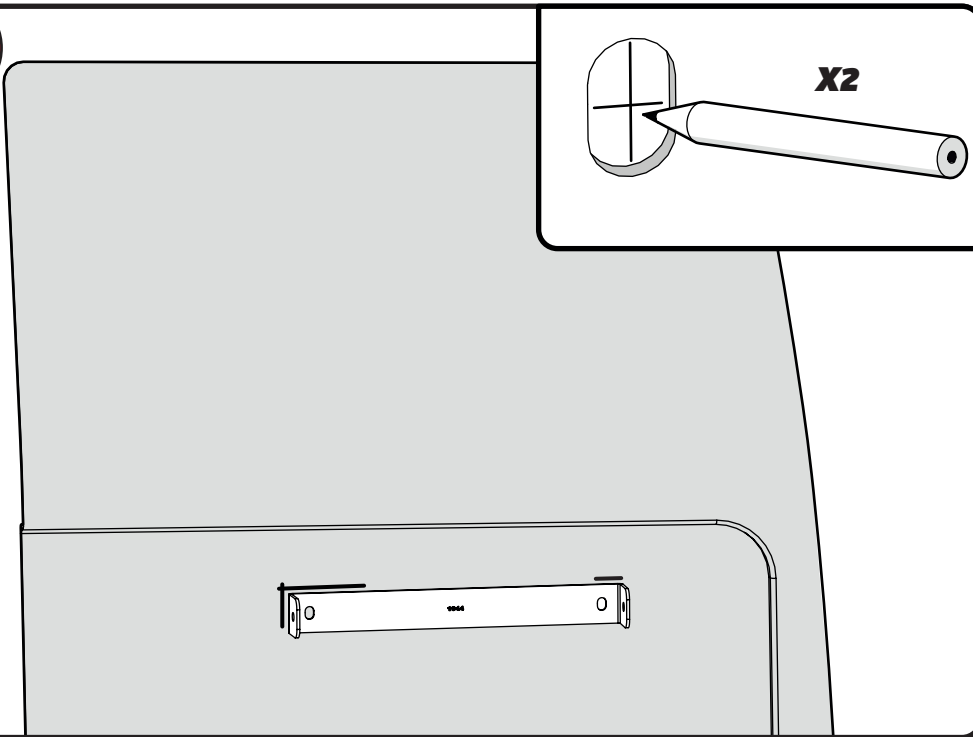


06

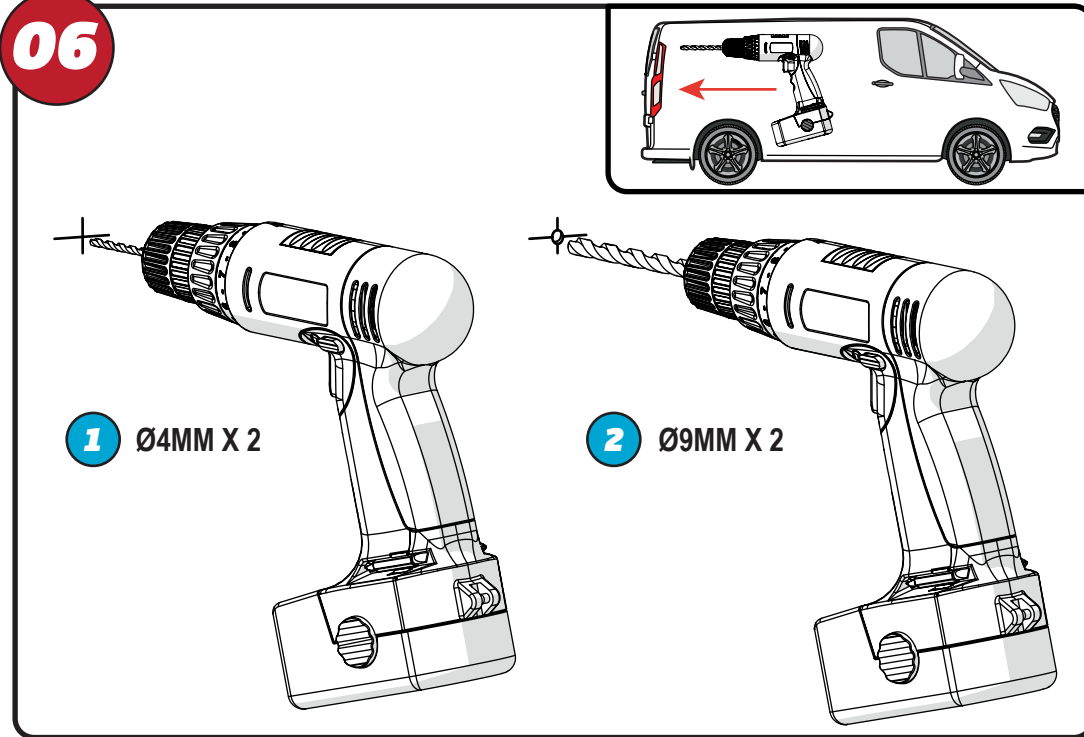


07

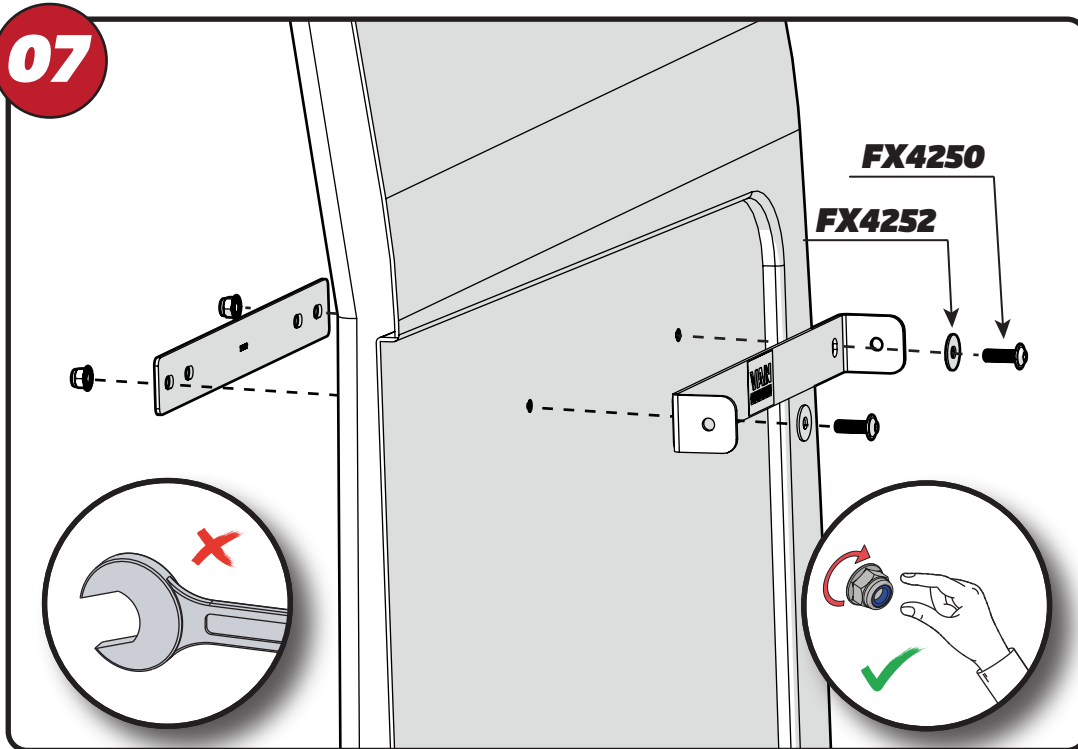


08

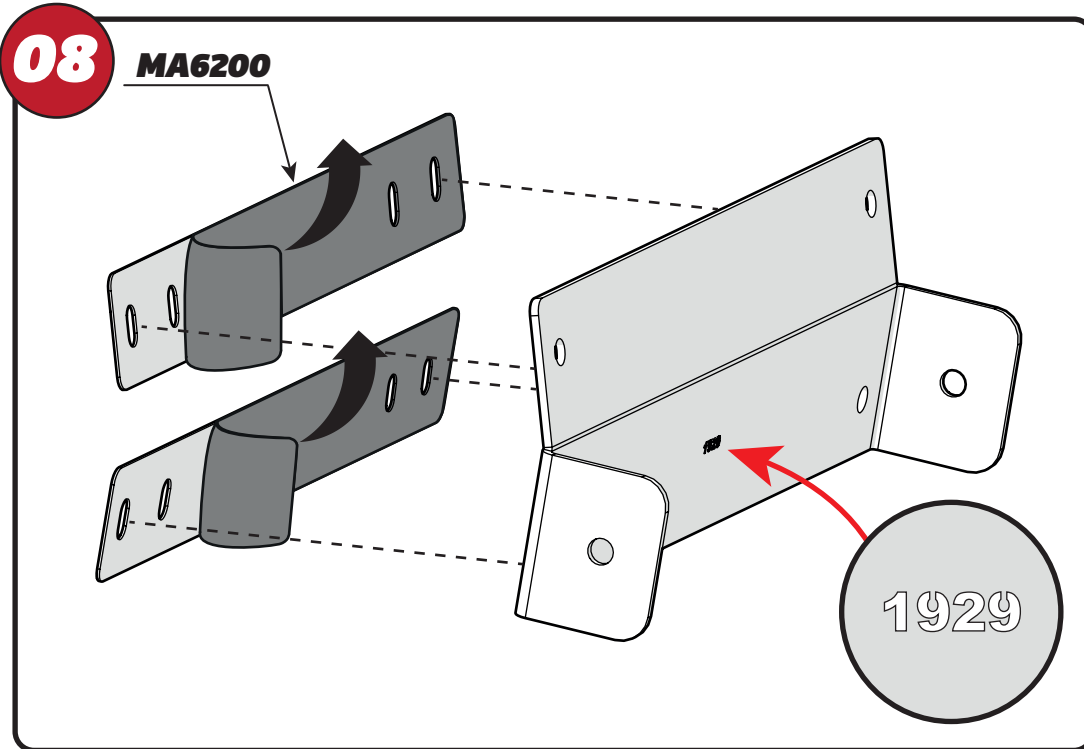


09

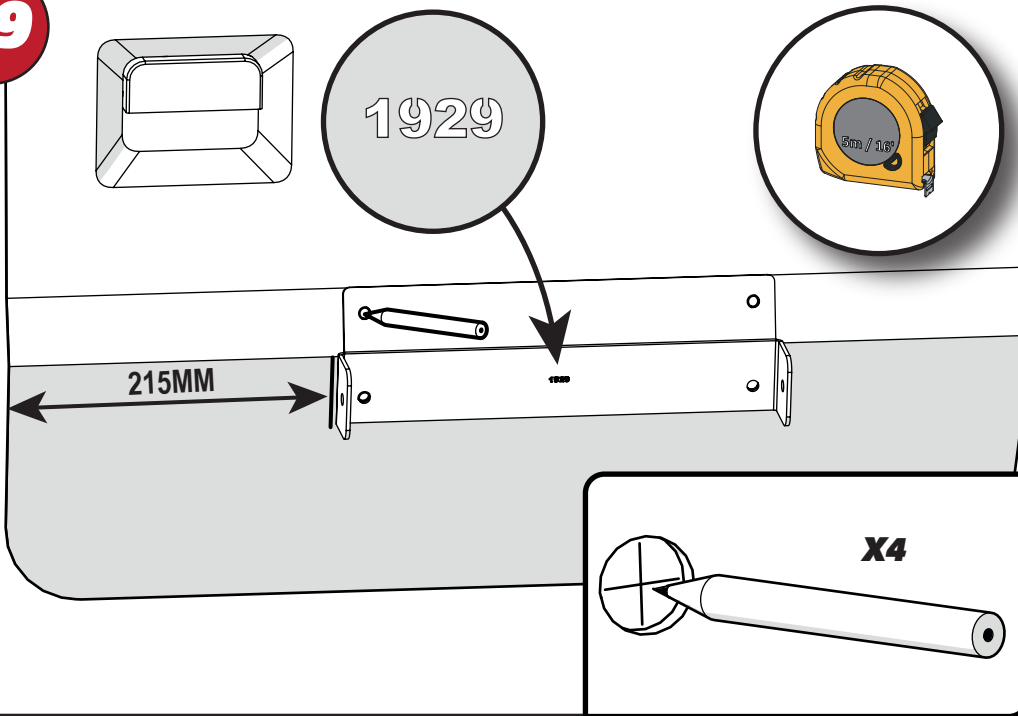


10

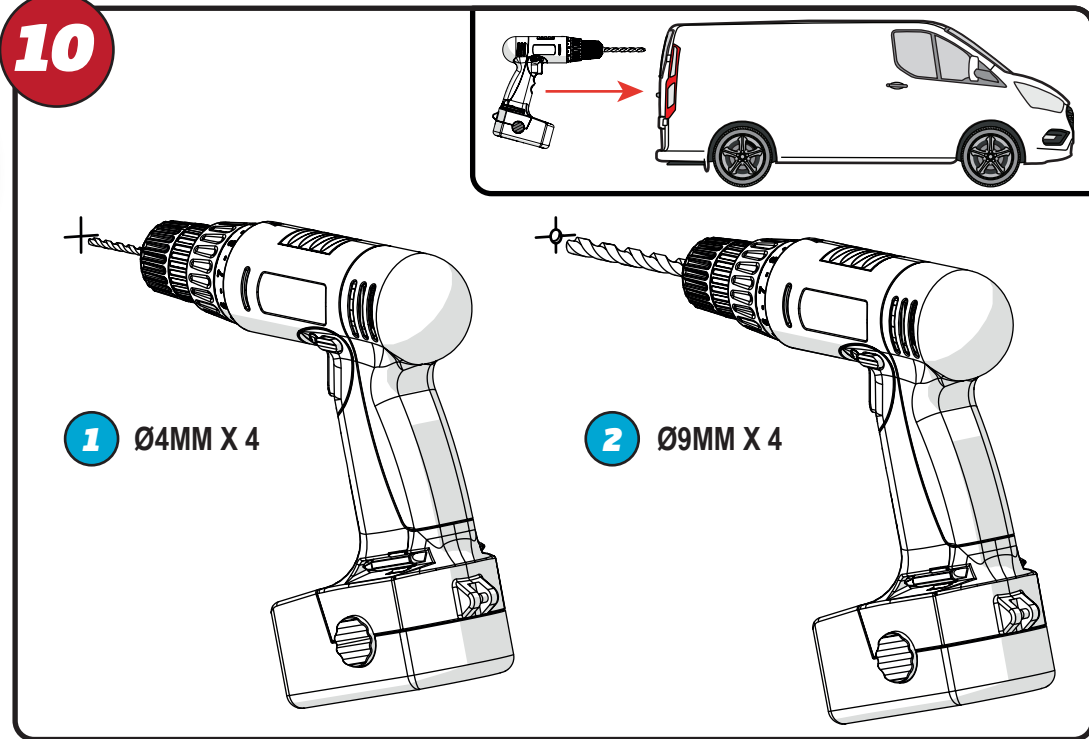


11

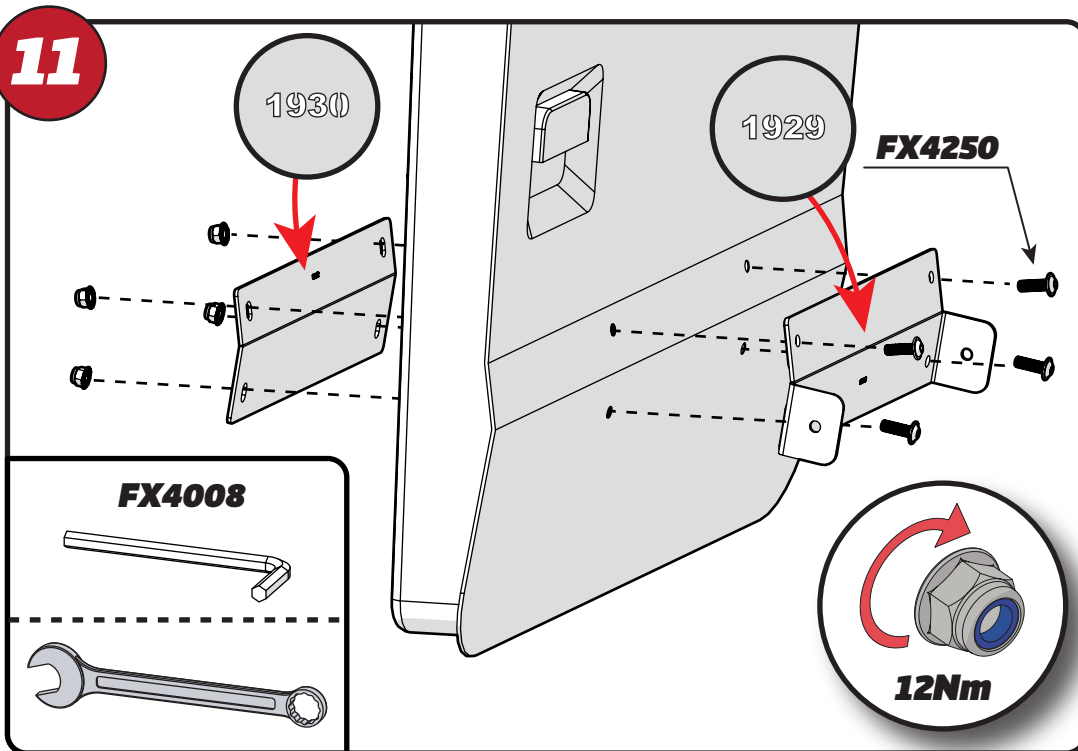


12

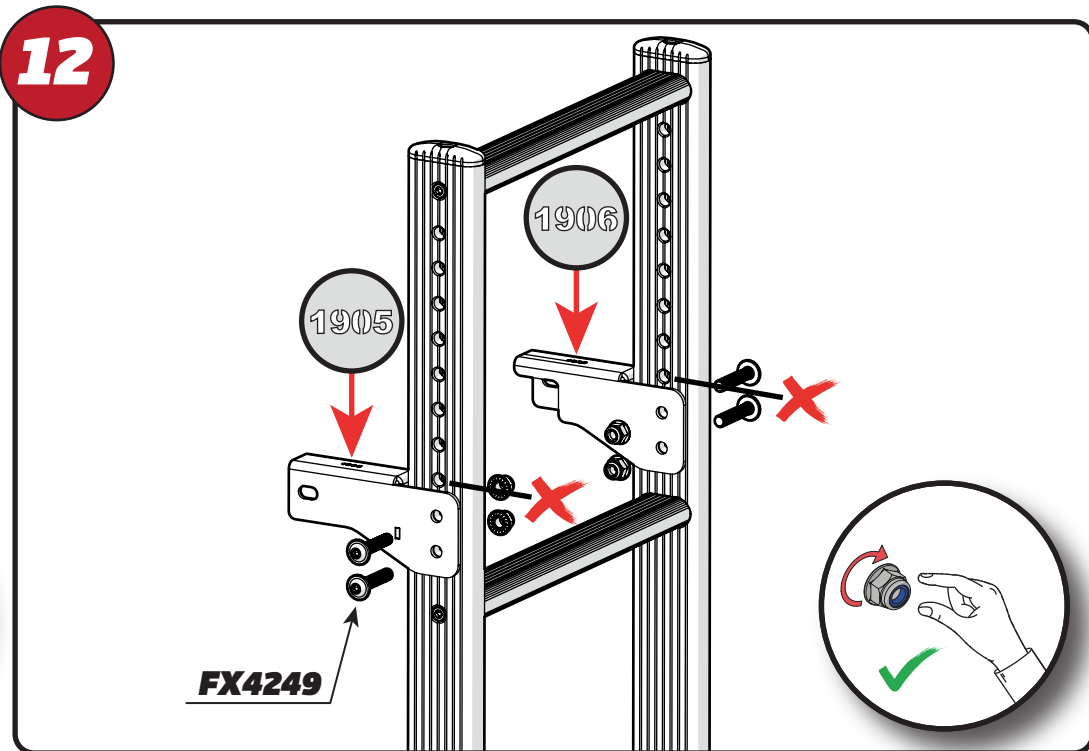


13

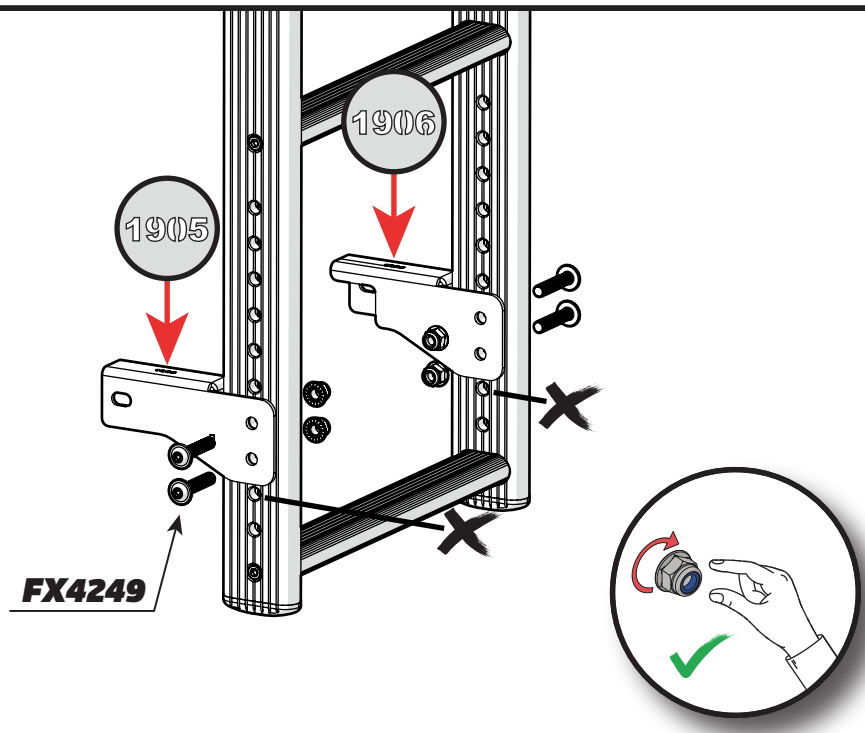


14

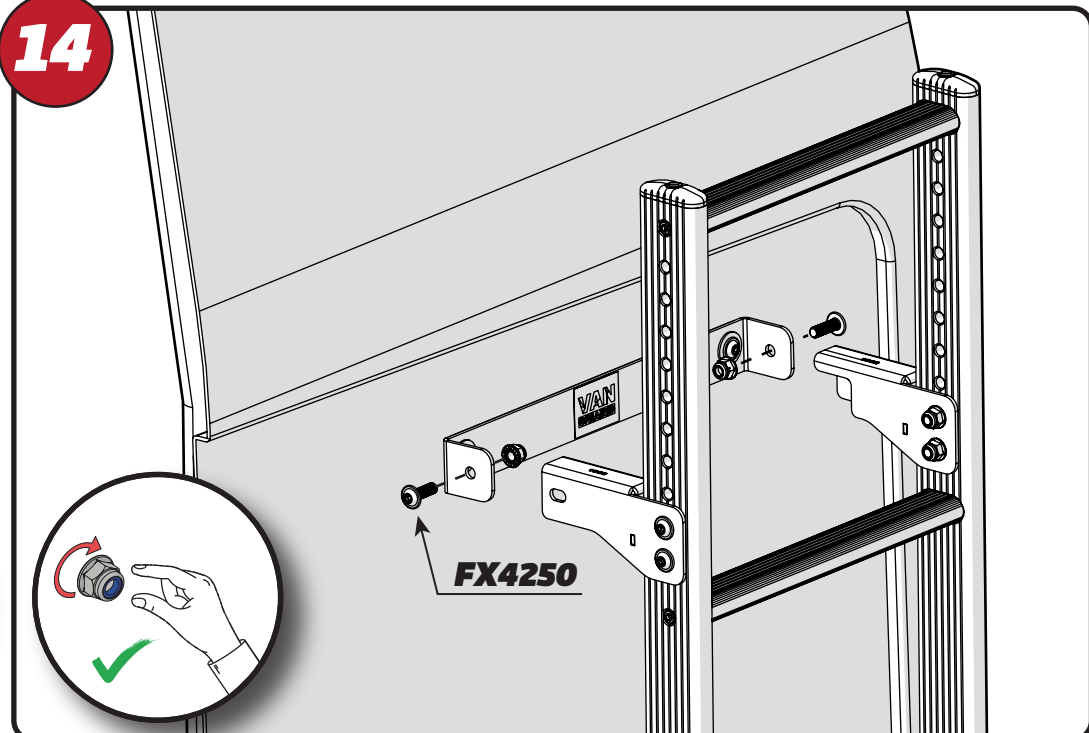


15

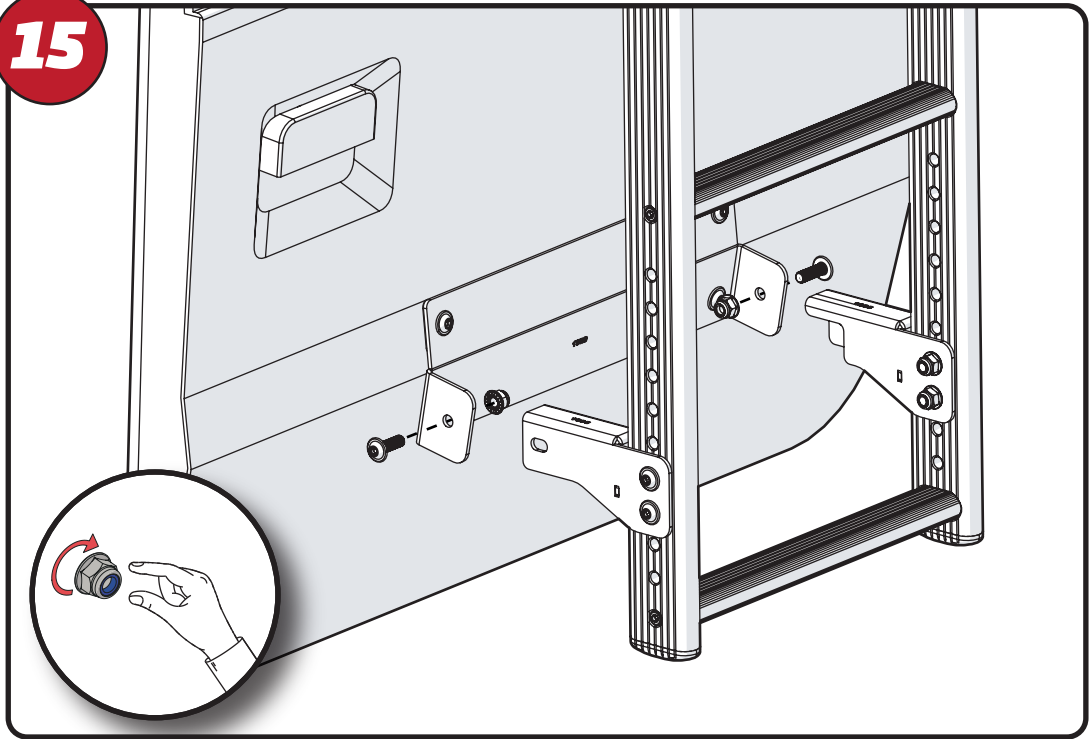


16

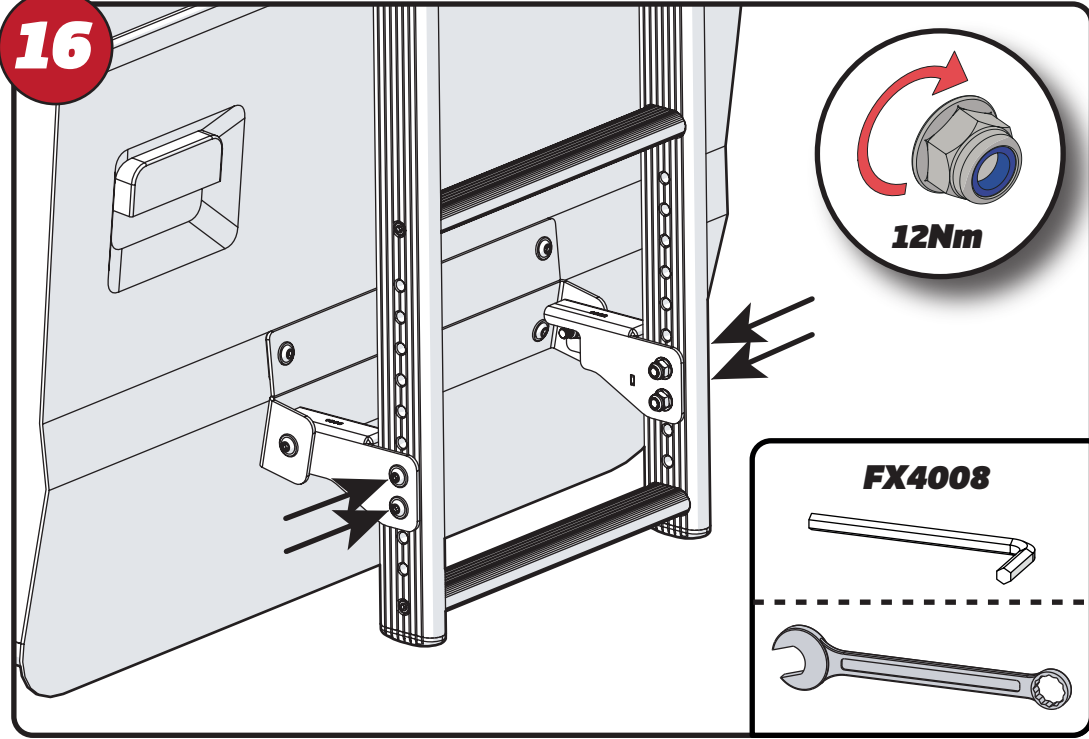


17

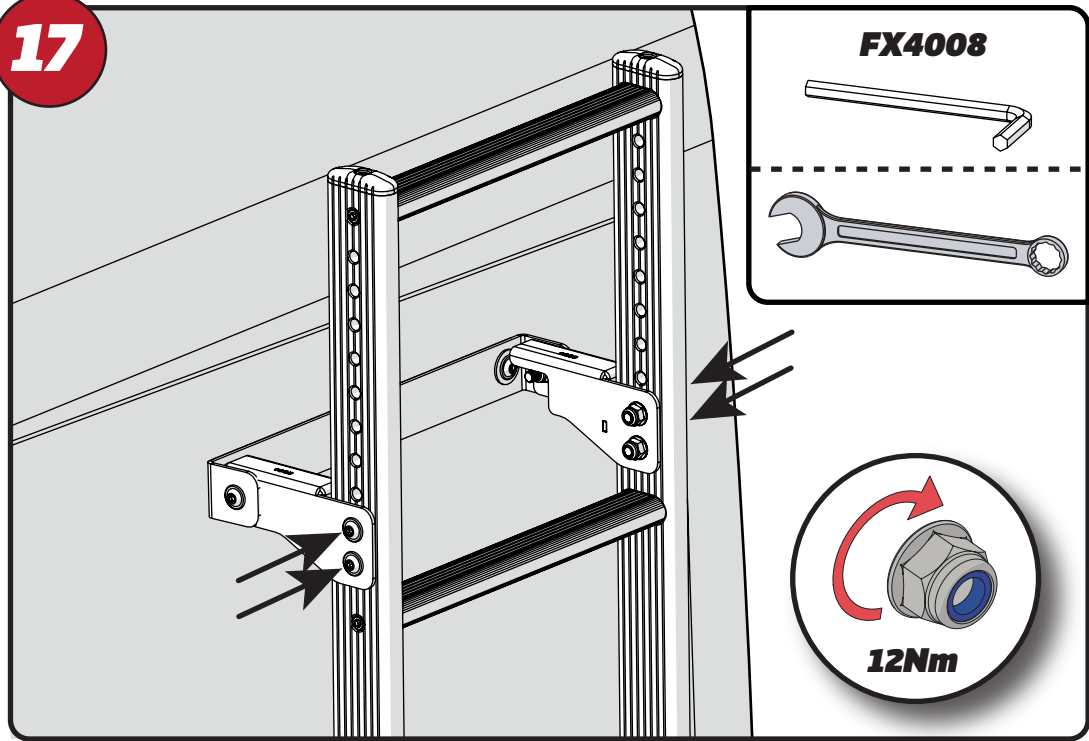


18

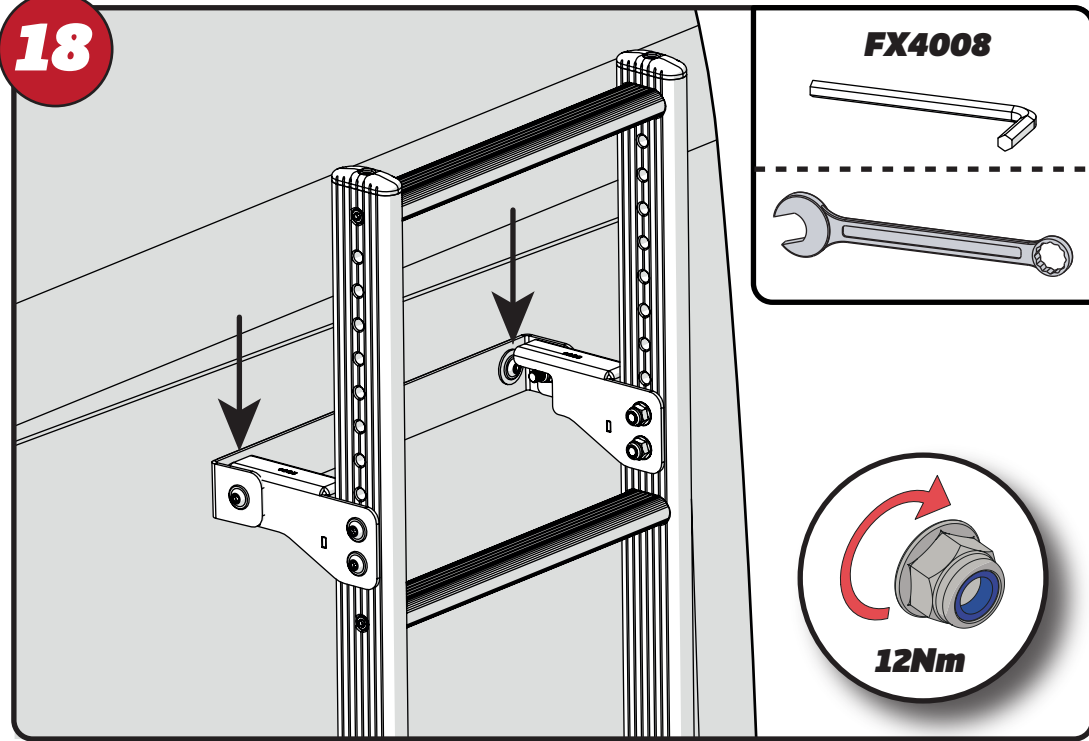


19

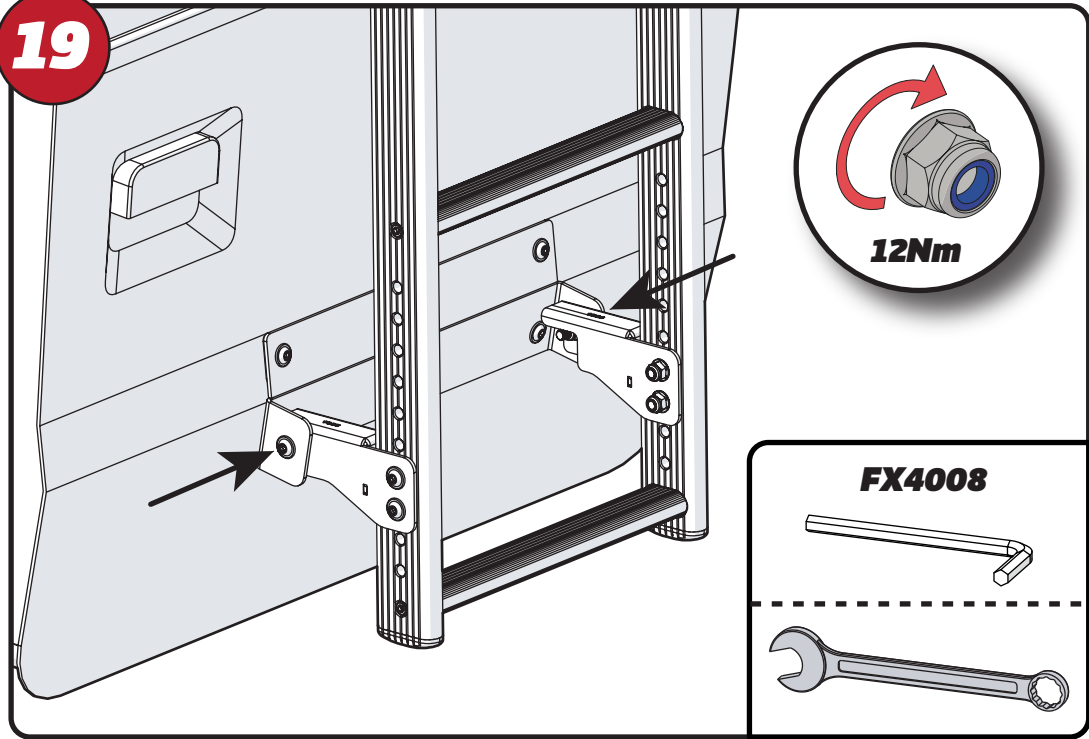


20

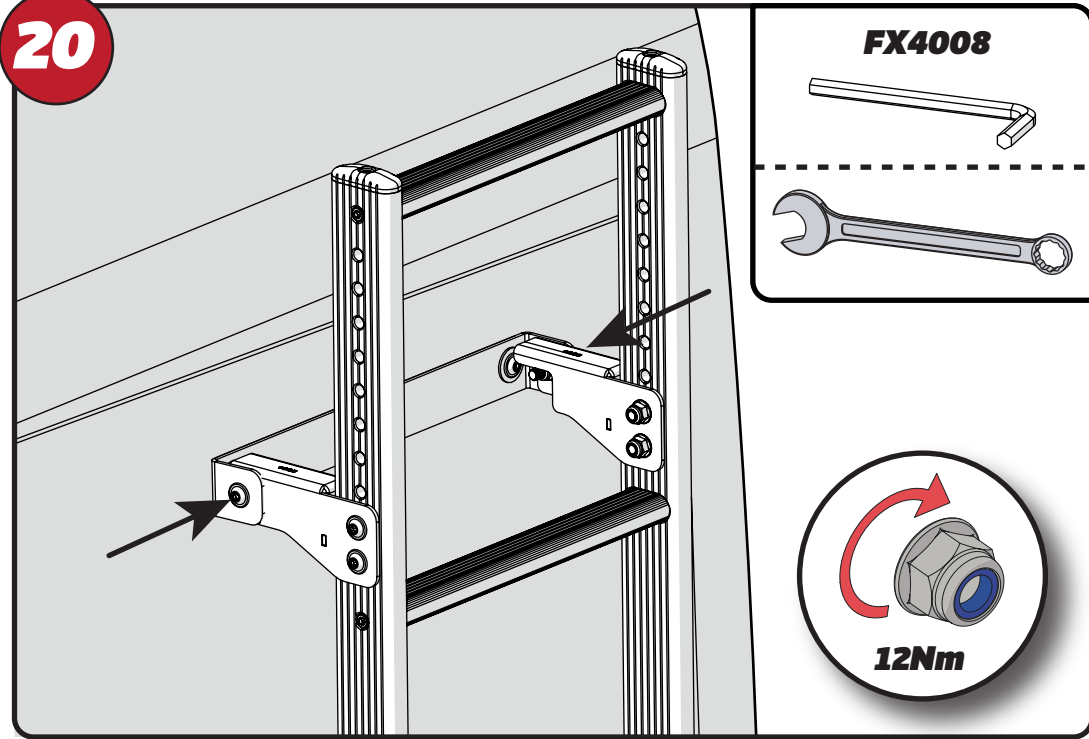

21

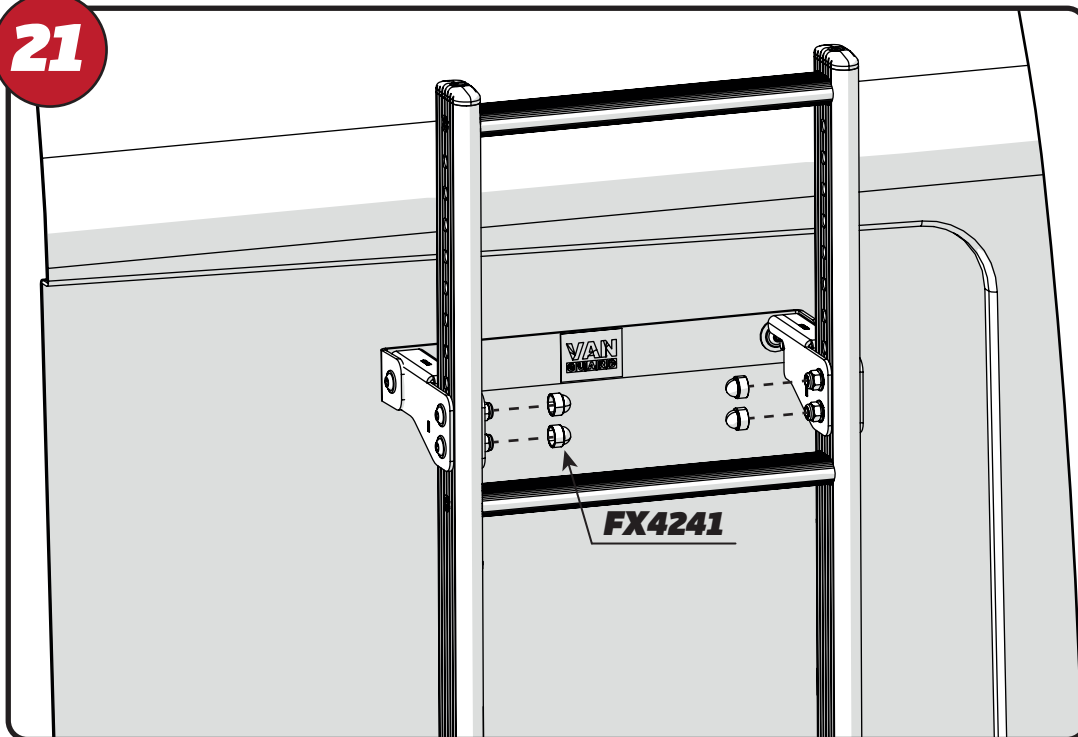

22

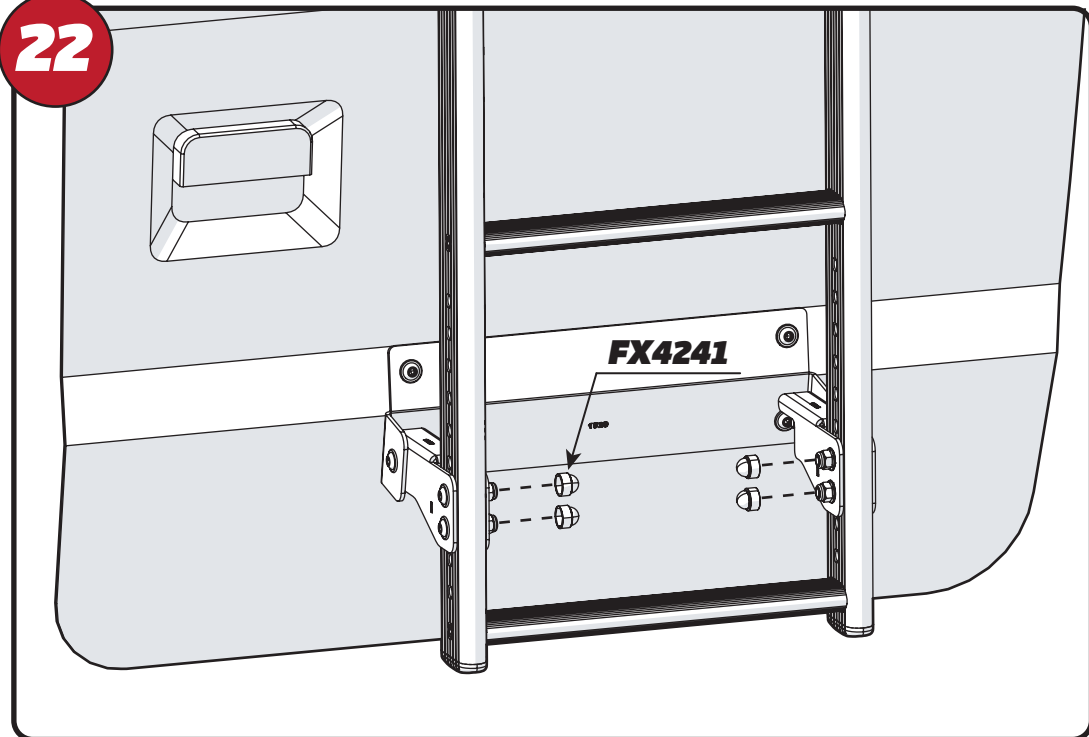

23

