

**IN9290**

**Hooklock - Sliding Door**

**THANK YOU FOR PURCHASING A VAN GUARD HOOKLOCK**



**SUITS THE FOLLOWING MODELS**

**Vehicle:**

Vauxhall Vivaro 2014 - 2019  
Renault Trafic 2014 onwards  
Nissan NV300 2016 - 2021  
Nissan Primastar 2022 onwards  
Fiat Talento 2016 - 2020

**Door:**

Sliding - Driver's / Passenger's  
(unglazed)

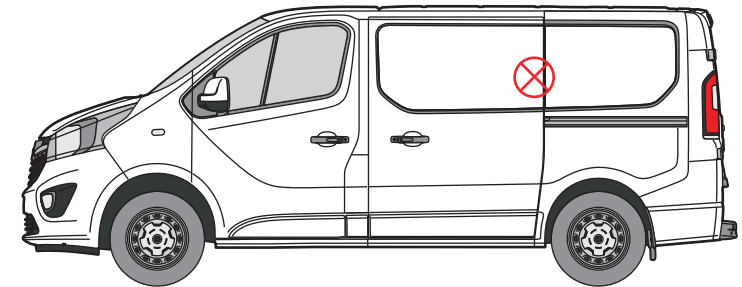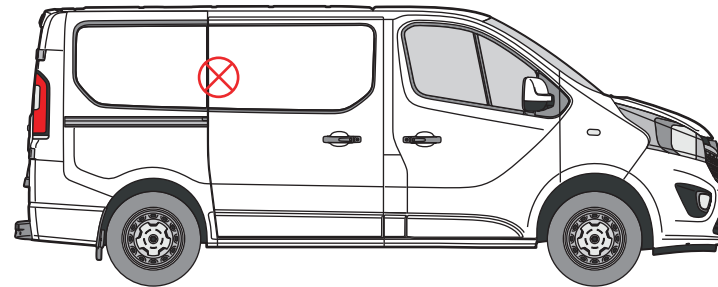

 Indicates approximate placement of lock



**CAUTION**

**PLEASE TAKE THE TIME TO READ THROUGH THE IMPORTANT INFORMATION BELOW BEFORE PROCEEDING TO FIT THIS PRODUCT**



**FAILURE TO TAKE NOTICE OF THE FOLLOWING INFORMATION MAY RESULT IN DAMAGE TO THE VEHICLE.**



**Important:** Follow the instructions and all measurements carefully. Double check measurements before making any cuts. Drawings are for guidance only. Every effort has been made to ensure the accuracy of the instructions provided however Van Guard Accessories Ltd accepts no liability for any inaccuracies of either the drawings provided or vehicle variations. All bare metal should be treated with a manufacturer approved anti-corrosion compound and no liability is accepted for any incorrect installation or corrosion to body panels or within cavities. It is the sole responsibility of the installer to ensure the suitability of both the vehicle and of the supplied parts before installation is started. No liability is accepted for the fitting of the products.

This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.  
IN9290\_G (CN:00151)


Van Guard Accessories Ltd  
Fair Oak Close, Exeter Airport Business Park,  
Exeter, Devon, EX5 2UL  
[www.van-guard.co.uk](http://www.van-guard.co.uk)

# SUPPLIED COMPONENTS


**AS3520 X1**  
(LOCK CASE)



**MC9014 X1**  
(CYLINDER)



**FX4152 X7**  
(COUNTERSUNK STEEL RIVET - 4.8 X 18)

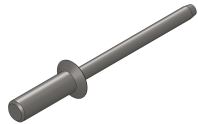

**ME3502 X1**  
(STRIKE PLATE - 1.5MM)




**FX4155 X2**  
(ALUMINIUM RIVET - 3.2 X 6)



**ME3354 X1**  
(STRIKE PLATE - 3MM)



**FX4159 X1**  
(COUNTERSUNK SCREW - M5 X 35)

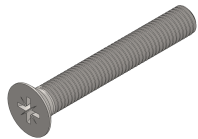

**MA6114 X1**  
(LOCK CASE GASKET)



**MA6121 X1**  
(ESCUTCHEON)



Please note that for some products you may have excess components supplied that are not needed for the installation process due to our kitting process.



**FAILURE TO TAKE NOTICE OF THE FOLLOWING INFORMATION MAY RESULT IN DAMAGE TO THE VEHICLE.**

1. Follow the instructions and all measurements carefully. Double check measurements before making any cuts. Drawings are for guidance only. Every effort has been made to ensure the accuracy of the instructions provided however Van Guard Accessories Ltd accepts no liability for any inaccuracies of either the drawings provided or vehicle variations.
2. All bare metal should be treated with a manufacturer approved anti-corrosion compound and no liability is accepted for any incorrect installation or corrosion to body panels or within cavities.
3. It is the sole responsibility of the installer to ensure the suitability of both the vehicle and of the supplied parts before installation is started. No liability is accepted for the fitting of the products.



Wear the appropriate protective equipment (safety glasses & gloves) while fitting this product.





Dispose of packaging materials responsibly - Do not dispose until you have checked all parts and fixings are present.

# 1. FITTING THE LOCK CASE

Cut required aperture for lock case using below measurements. **TREAT ALL BARE METAL with a manufacturer approved anti-corrosion compound.** Use a vernier gauge flat against the outside of the sliding door to ensure the correct placement of the lock case aperture is achieved. **Note - Images / illustrations show nearside (passengers) sliding door, mirror if fitting to a offside (drivers) sliding door.**



**CHECK THE CLEARANCE BETWEEN THE LOCK CASE FACE AND THE STRIKE PLATE BEFORE FITTING. USE MASKING TAPE TO HOLD THE CASE AND STRIKE PLATE INTO POSITION RATHER THAN SCREWS, TO AVOID THE SCREW HEADS FOULING AND HOLDING THE DOOR SHUT. IF NECESSARY, DO NOT FIT THE PLASTIC GASKET TO THE LOCK CASE.**

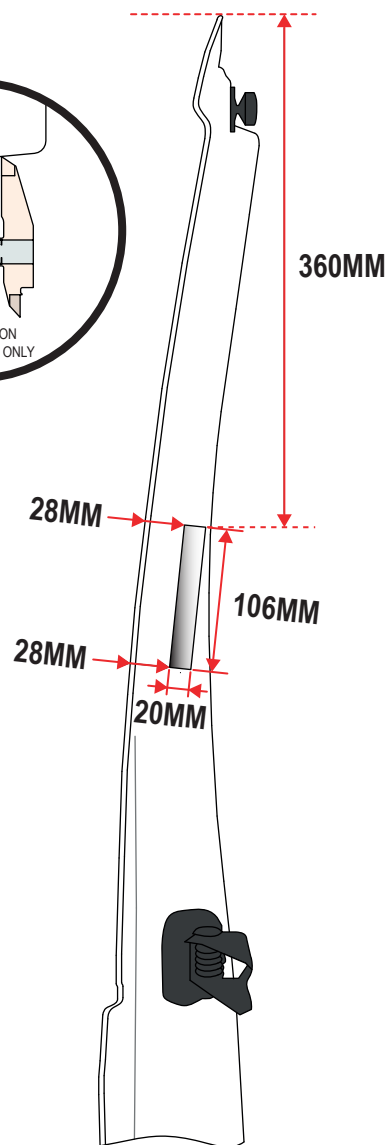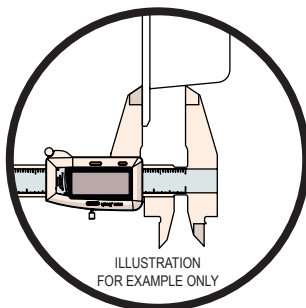


# 2. CYLINDER ORIENTATION

**Important** - Cylinders are handed by the orientation of the cam, ensure the cylinder used in the installation is labelled as follows.





Driver sliding door = A

Passenger sliding door = B

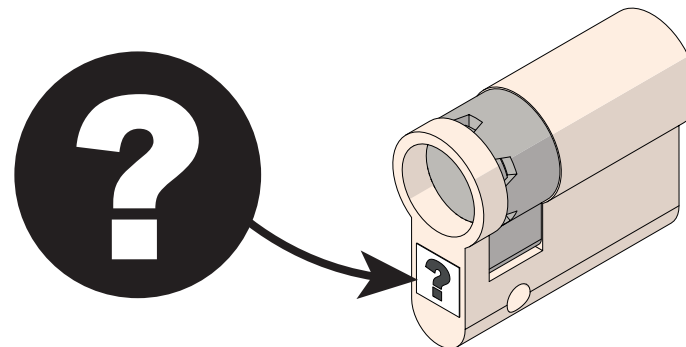

**DRIVER SLIDING DOOR = A**


**PASSENGER SLIDING DOOR = B**

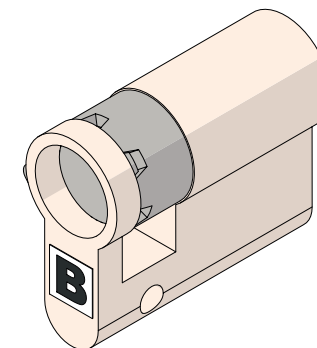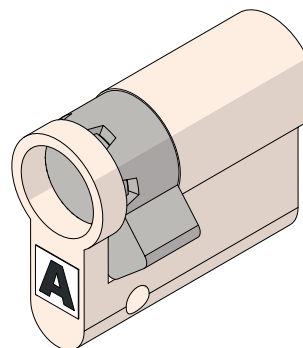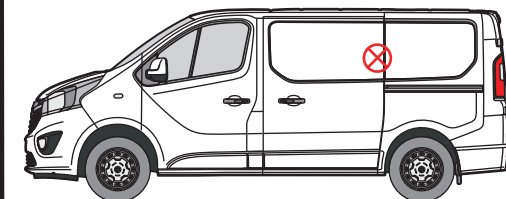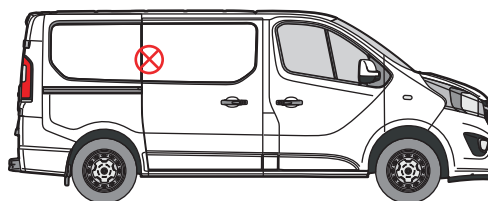

### 3. CYLINDER POSITION

Use below measurements for placement of lock cylinder and cut aperture accordingly. Ensure cylinder locates with lock case fully and operation is smooth. Do not fully fix in place until clearance of the strike plate bracket has been checked (next stage).

**Tip:** Utilise escutcheon as a template for lock cylinder aperture

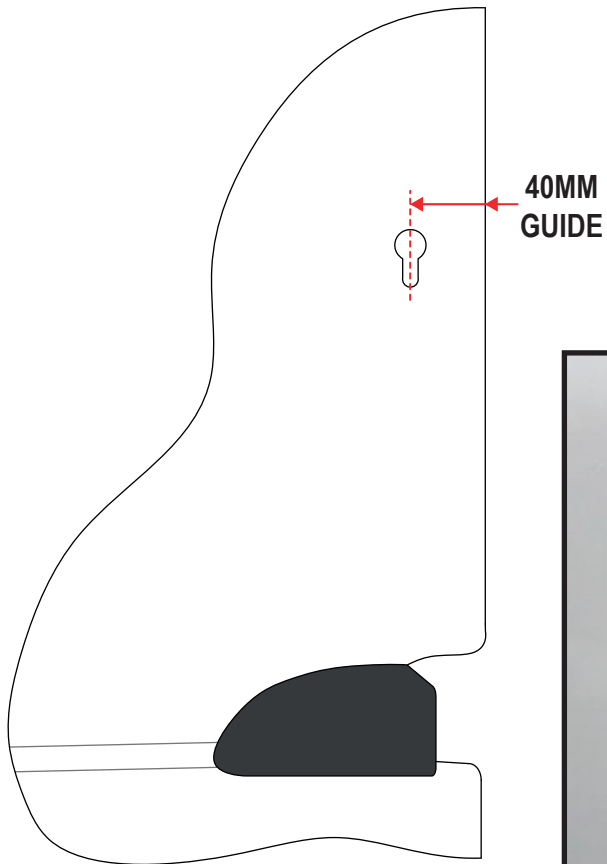

### 4. FITTING THE STRIKE PLATE

With the lock case and cylinder in place, mark the hooklock bolt with grease (or similar). Close the door and actuate the lock. The grease will leave a mark on the receiving body panel guiding where the strike plate bracket is to be fitted.

Once strike plate position is confirmed, use it as a template to mark the aperture which needs cutting. After cutting is complete, hold the strike plate in place with masking tape or similar close the door and actuate the lock again to ensure placement is correct. Move its position if needed. When happy with strike plate position, attach with the supplied fixings.

**Tip:** Test again holding bracket in place with screws



TWO STRIKE PLATES ARE SUPPLIED WITH THIS KIT (ONE MEASURING 1.5MM THICK AND ONE MEASURING 3MM THICK). TRY TO USE THE 3MM STRIKE PLATE FIRST AND IF IT FOULS WITH THE LOCK CASE, USE THE 1.5MM STRIKE PLATE.



THERE IS A DOUBLE SKIN. TAKE CARE WHEN CUTTING.



## 5. FULLY ATTACH LOCK CASE & ESCUTCHEON

Use supplied fixings to fully fix lock case into position.

Place escutcheon over lock cylinder, mark holes, remove and drill. Secure in place using supplied fixings.



### **BEST FITTING MAINTENANCE**

TREAT ALL BARE METAL with a manufacturer approved anti-corrosion compound.

### **LOCK MAINTENANCE**

Regular maintenance of the locks should take place. Using a suitable lubricant will help keep the key and the lock mechanism working smoothly.

### **COMPLETED NOTE**

Depending on the door, the completed lock cylinder and escutcheon may well protrude at an angle. This is normal.