
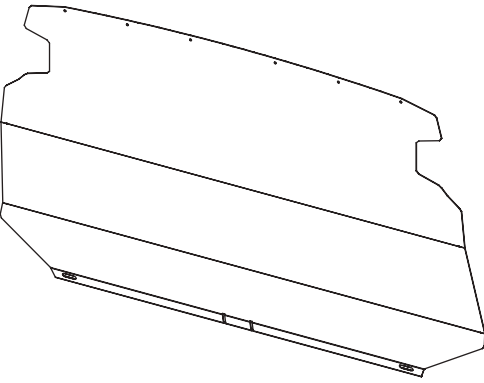
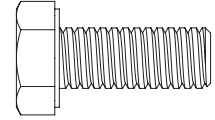
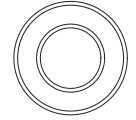
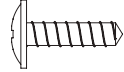


IN8162

Bulkhead - VG185S / VG185P

<p>VG185S = ME0367 X1 VG185P = ME0368 X1</p> 	<p>FX4018 X2 (M8X20)</p> 	<p>FX4020 X2 (M8)</p> 	<p>FX4090 X6 (No8 x 1/2")</p> 	<p>MA6030 X2 (RUBBER EDGING 1000MM)</p> 	
------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------	--

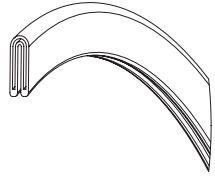

CAUTION - IMPORTANT NOTES



1. You should note that it is the responsibility of the installer/s to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that the fuel line, tyres, fuel tank, wiring loom, exhaust, bodywork and brake lines etc. are not damaged. Whilst every effort has been made to ensure our products can be safely fitted, changes to vehicles sometimes occur so it's always necessary to check before drilling.

If in doubt refer to the vehicle manufacturer's dealership.

2. When drilling, use as short a drill bit as possible to prevent damage to the vehicle. Use corrosion protection when drilling the vehicle.

3. Wear the appropriate protective equipment (safety glasses & gloves) while fitting this product.

4. Regularly inspect all fixings and parts. Any damaged or worn parts should be immediately removed the vehicle and replaced.


5. Retain instructions for future use. It is important that the end user receives this document.

TOOLS REQUIRED

SPANNER (13MM) X1



PH SCREW DRIVER X1



DRILL (Ø3.2MM) X1




This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.

IN8162_B

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

1 Please read the important notes on page 1 before fitting this product. Fit the rubber edging (MA6030) along both sides of the bulkhead.

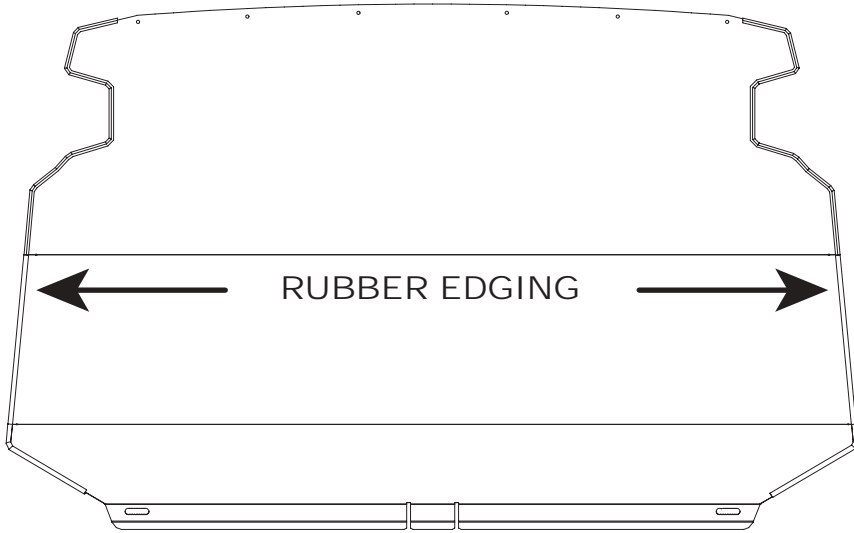

2 Position the bulkhead in the vehicle with the bottom lip resting on the vehicles factory fitted bottom bulkhead.

A simple line drawing showing the vertical profile of the bulkhead. A vertical line separates the drawing into two sections. The left section is labeled "CAB AREA" and the right section is labeled "LOAD AREA".

3 Secure the bulkhead to the vehicle by bolting into the existing bolt holes on the lower bulkhead using M8x20 hex bolts and M8 washers (2 positions).



4 Carefully drill 3.2mm through the holes along the top of the bulkhead and secure using No8x1/2" self-tap screws (6 fixing positions in total).

