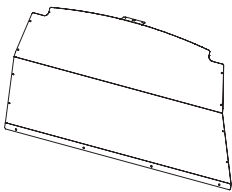
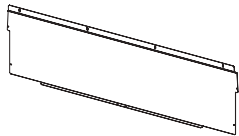








AS3309 X1 (TOP) 	ME0361 X1 (BOTTOM) 	AS3289 X1 (SIDE - RIGHT) 	AS3290 X1 (SIDE - LEFT) 	FX4009 X12 (M6X10) 	FX4010 X12 (M6) 	FX4087 X6 (No14 x 1/2") 
FX4091 X4 (No8 x 3/4") 						

CAUTION - IMPORTANT NOTES

1. You should note that it is the responsibility of the installer/s to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that the fuel line, tyres, fuel tank, wiring loom, exhaust, bodywork and brake lines etc. are not damaged. Whilst every effort has been made to ensure our products can be safely fitted, changes to vehicles sometimes occur so it's always necessary to check before drilling.

If in doubt refer to the vehicle manufacturer's dealership.

2. When drilling, use as short a drill bit as possible to prevent damage to the vehicle. Use corrosion protection when drilling the vehicle.

3. Wear the appropriate protective equipment (safety glasses & gloves) while fitting this product.

4. Regularly inspect all fixings and parts. Any damaged or worn parts should be immediately removed the vehicle and replaced.

5. Retain instructions for future use. It is important that the end user receives this document.

TOOLS REQUIRED


SPANNER (10MM) X1



PH SCREW DRIVER X1




DRILL (Ø3.2MM & Ø4.5MM) X1

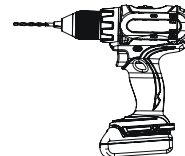


- 1** Please read the important notes on page 1 before fitting this product. Lift the bottom section into the vehicle with the bottom return facing into the load area.


Once happy with the position of the bulkhead, drill 4.5mm through the bulkhead holes and into the skin of the door pillars and floor. Secure in place using No14x1/2" (FX4087) self-tap screws. When drilling be sure to only drill through the single skin of the vehicle and no further.

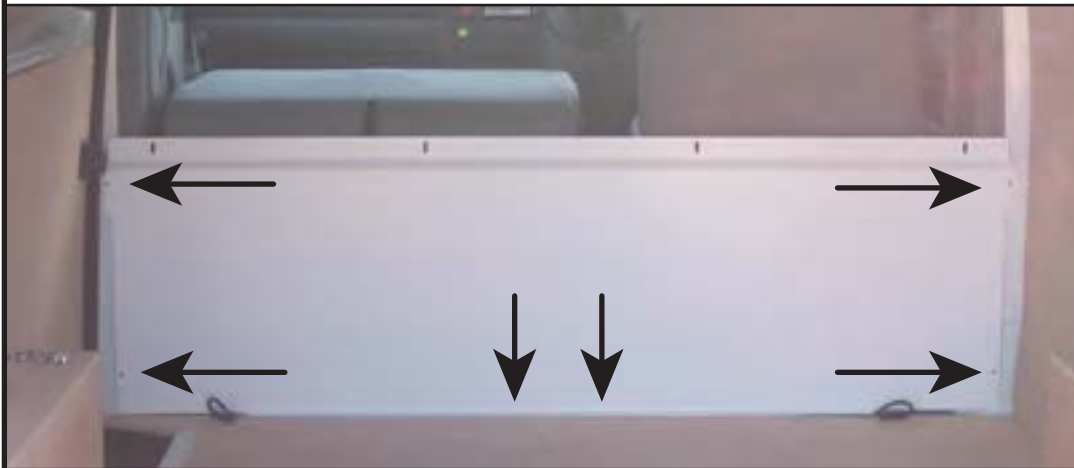

- 2** Remove the cross members pull out trim to reveal the vehicles top fixing positions.

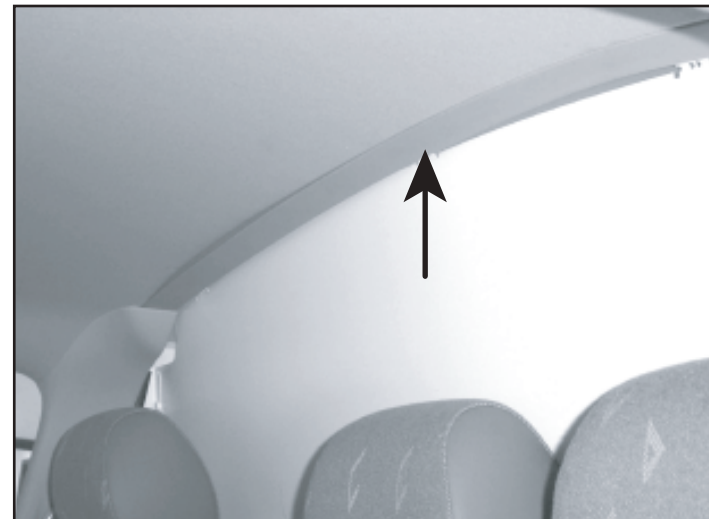

- 3** Assemble the top and sides together using M6x10 hex bolts (FX4009) and M6 shakeproof washers (FX4010). The sides are handed to suit both sides of the bulkhead.

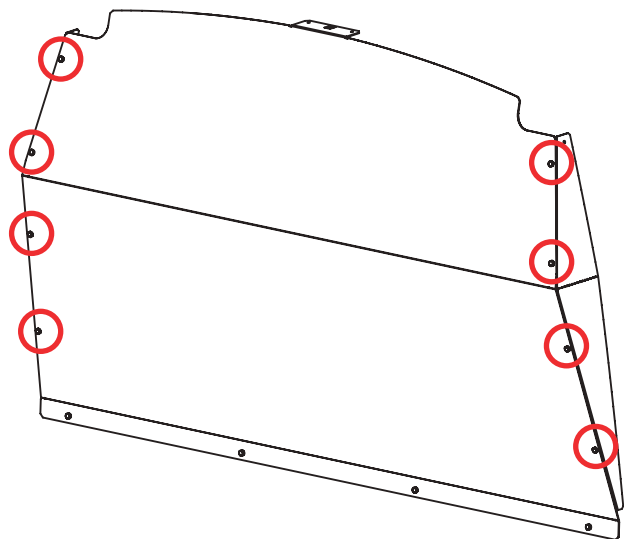


- 4** Lift the top bulkhead assembly into the vehicle and secure to the bottom section using M6x10 hex bolts (FX4009) and M6 shakeproof washers (FX4010). Ensure that the top section sits in behind the bottom as shown.




5 Pull the top section of the bulkhead forward so as the two sides are against the vehicles pillar, hold in position and carefully drill 3.2mm through the two holes on the centre return and one at the top of each side.

Secure in place using No8x3/4" self-tap screws (FX4091).

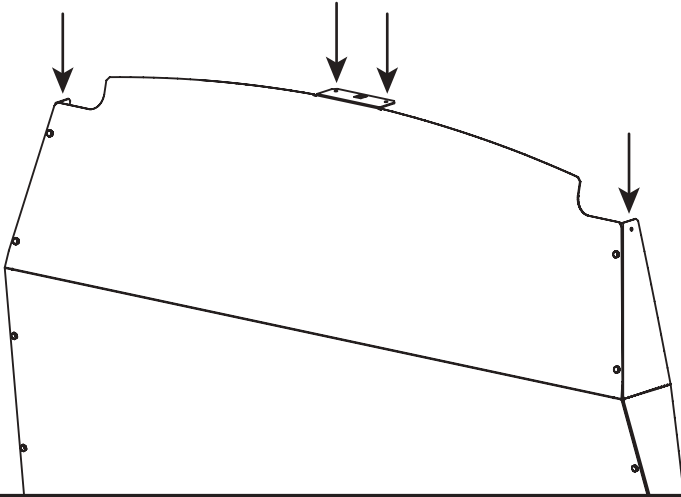

6 Refit the pull out cross member trim removed in step 2.

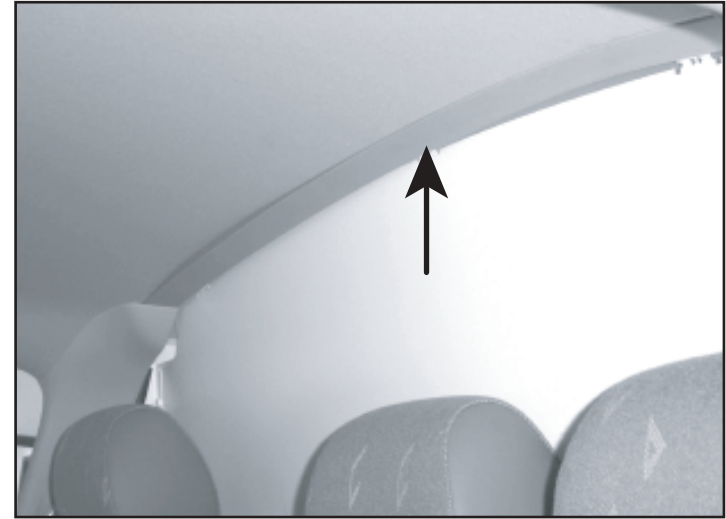

EXAMPLE IMAGE



EXAMPLE IMAGE

