


**KIT CONTENTS**

FX4075 X7  
(No8x1/2" PLASTIC TRIM SCREW)




**TOOLS REQUIRED**


PH SCREW DRIVER X 1



PLIERS X 1



DRILL (Ø3.2MM) X 1

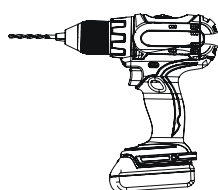

**CAUTION**



It is important that care is taken when drilling  
**and fixing to your vehicle.**

You should note that it is the responsibility of the installer/s to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that there is no possibility of causing damage to the vehicle. Whilst every effort has been made to ensure our products can be safely fitted, changes to vehicles sometimes occurs so it's always necessary to check before drilling. Always wear safety glasses when drilling.

**If in doubt refer to the vehicle manufacturer's dealership.**

**INSTRUCTIONS**

1. Do not remove the plastic trim.
2. Place the tailgate grille / blank into the window aperture as shown in the image to the right with the three unbent tabs towards the bottom of the tailgate.
3. Use pliers to bend the four perforated tabs to suit the window aperture.
4. Once happy with the position of the grille / blank carefully drill 3.2mm through the tabs and into the plastic trim. Take care not to catch any wires.
5. Secure in place using the plastic trim screws provided. Regularly inspect all fixings and parts. Any damaged or worn parts should be immediately removed from the vehicle and replaced.

**EXAMPLE IMAGES**

BOTTOM OF THE TAILGATE



TOP OF THE TAILGATE



This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.  
IN8064\_B

Van Guard Accessories Ltd  
Fair Oak Close, Exeter Airport Business Park,  
Exeter, Devon, EX5 2UL  
[www.van-guard.co.uk](http://www.van-guard.co.uk)