


IN8170

Bulkhead - VG240S / VG240P


VG240S = MEO382 **X1**
VG240P = MEO383 **X1**
(BULKHEAD)

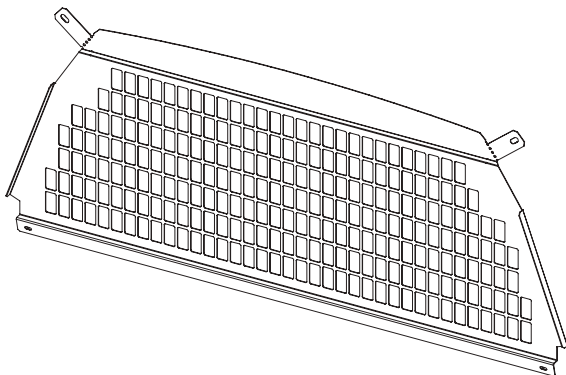


FX4016 **X2**
(M6)




FX4018 **X2**
(M8X20)

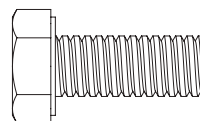


FX4019 **X2**
(M8)



FX4109 **X2**
(M6)

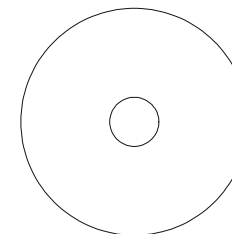

FX4046 **X2**
(M6X45)

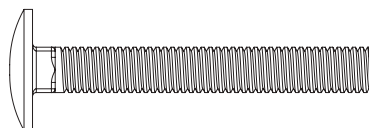

! CAUTION - IMPORTANT NOTES !

Please read these notes carefully before attempting to fit this product.

1. Regularly inspect all fixings and parts. Any damaged or worn parts should be immediately removed the vehicle and replaced.
2. Retain instructions for future use.
3. It is important that the end user receives this document.

TOOLS REQUIRED

SPANNER (10MM) X1



SPANNER (13MM) X1



This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8170_B

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

- 1.1** Bend the two side tabs up (the same way as the side end returns). Take care to weaken the tabs by bending them the wrong way.

CAB AREA


LOAD AREA



- 1.2** Position the bulkhead into the vehicle and rest on the vehicles existing bottom bulkhead. Ensure that the bulkheads returns are facing into the load area as shown in step 1.1.



- 2** Loosely secure the bulkheads side tabs to the vehicles fixing points using M8x20 hex bolts (FX4018) and M8 shakeproof washers (FX4019).

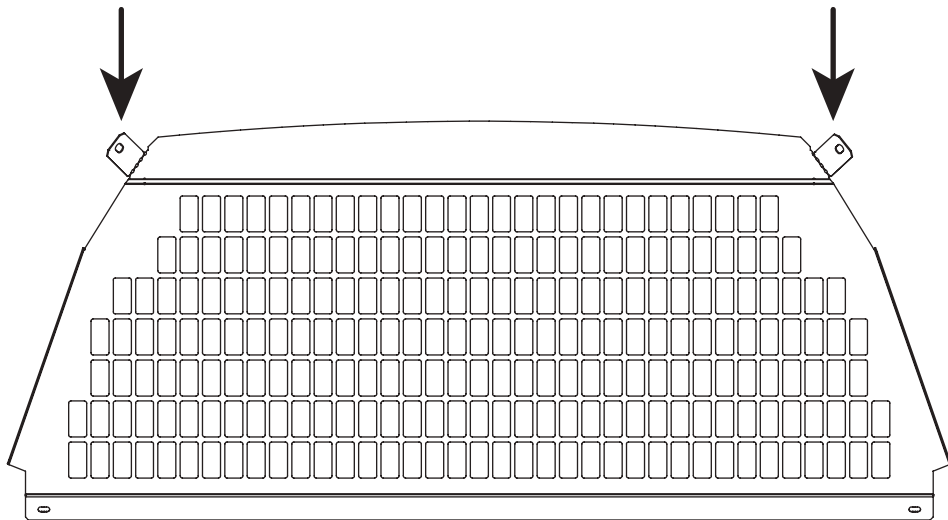

- 3** Insert M6x45 coach bolts (FX4046) through the slots into the cab area (bottom of the bulkhead) and secure M6 washers (FX4109) and M6 flange nuts (FX4016). Once in position tighten all fixings.

