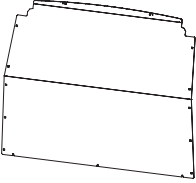
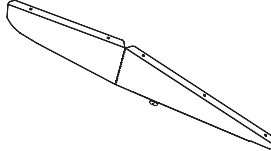
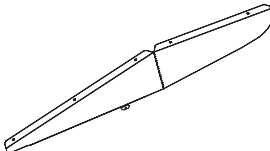
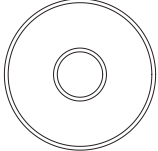
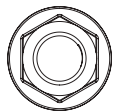
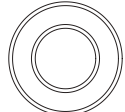
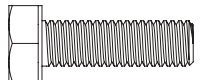
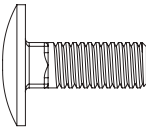
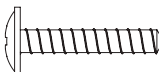


IN8172

Bulkhead - VG246S

<p>ME0217 X1 (BULKHEAD)</p> 	<p>ME0218 X1 (SIDE - RIGHT)</p> 	<p>ME0219 X1 (SIDE - LEFT)</p> 	<p>FX4013 X5 (M6)</p> 	<p>FX4016 X10 (M6)</p> 	<p>FX4020 X10 (M8)</p> 	<p>FX4026 X5 (M6X20)</p> 
<p>FX4042 X10 (M6X16)</p> 	<p>FX4091 X3 (No8 x 3/4")</p> 					

CAUTION - IMPORTANT NOTES

1. You should note that it is the responsibility of the installer/s to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that the fuel line, tyres, fuel tank, wiring loom, exhaust, bodywork and brake lines etc. are not damaged. Whilst every effort has been made to ensure our products can be safely fitted, changes to vehicles sometimes occur so it's always necessary to check before drilling.

If in doubt refer to the vehicle manufacturer's dealership.

2. When drilling, use as short a drill bit as possible to prevent damage to the vehicle. Use corrosion protection when drilling the vehicle.

3. Wear the appropriate protective equipment (safety glasses & gloves) while fitting this product.

4. Regularly inspect all fixings and parts. Any damaged or worn parts should be immediately removed the vehicle and replaced.

5. Retain instructions for future use. It is important that the end user receives this document.

TOOLS REQUIRED



SPANNER (10MM) X1



PH SCREW DRIVER X1



DRILL (Ø3.2MM) X1

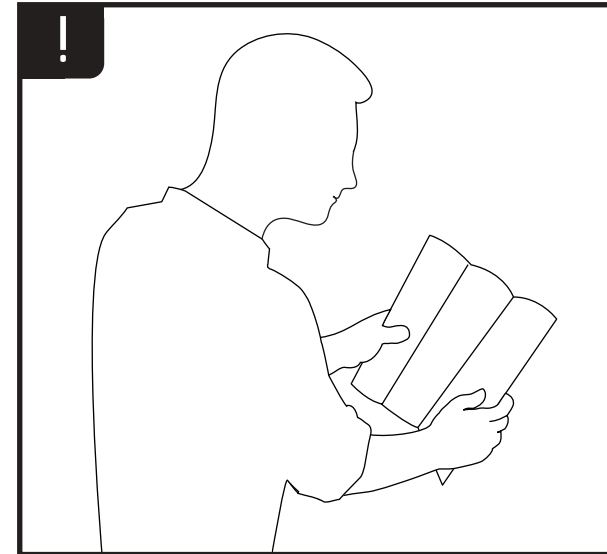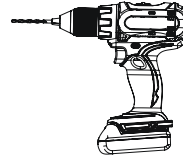


1 Please read the important notes on page 1 before fitting this product.


Remove the vehicles existing drivers seat tubular frame.



2 Assemble the bulkhead and sides together outside of the vehicle as shown below using M6x16 coach bolts (FX4042), M8 washers (FX4020) and M6 flange nuts (FX4016). The sides are handed to suit both sides of the vehicle.

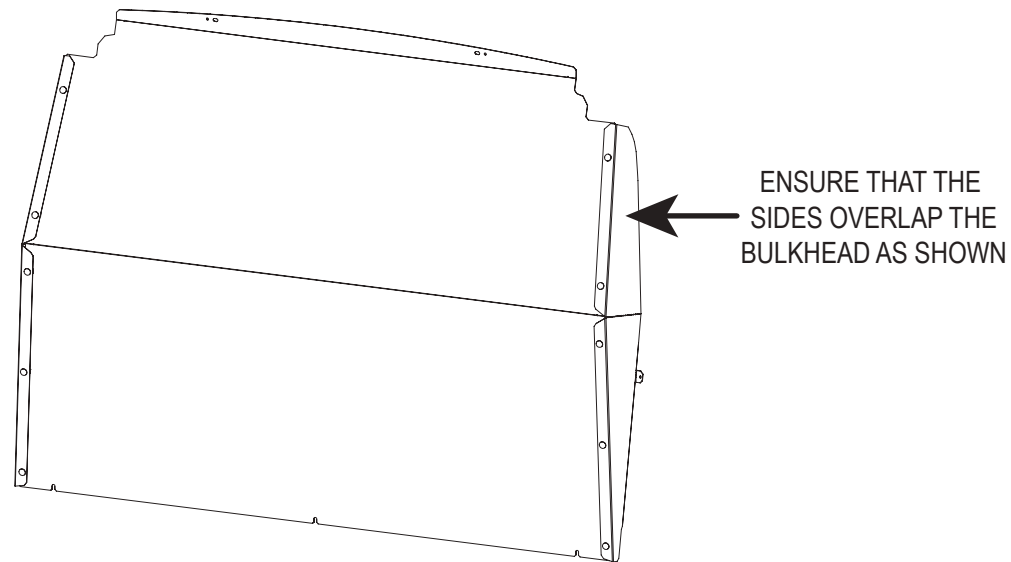


3 Loosely screw M6x20 hex bolts (FX4026) with M6 washers (FX4013) into the 3 bottom staging threaded holes and then lift the bulkhead into position (two man lift), the bottom section of the bulkhead has 3 slots which fit to the M6x20 hex bolts.

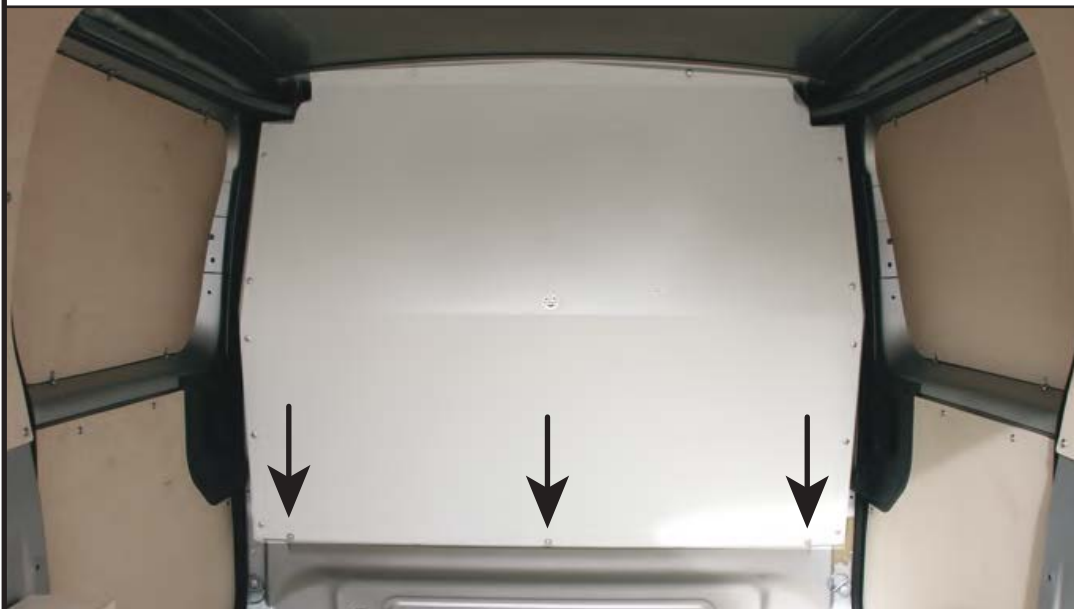


4 Secure the bulkhead to the two threaded holes along the vehicles top frame using M6x20 hex bolts (FX4026) and M6 washers (FX4013).

If the nearside (A) top thread is missing, carefully drill 3.2mm through the hole beside the slot and secure in position using a No8x3/4" self-tap screw (FX4091).

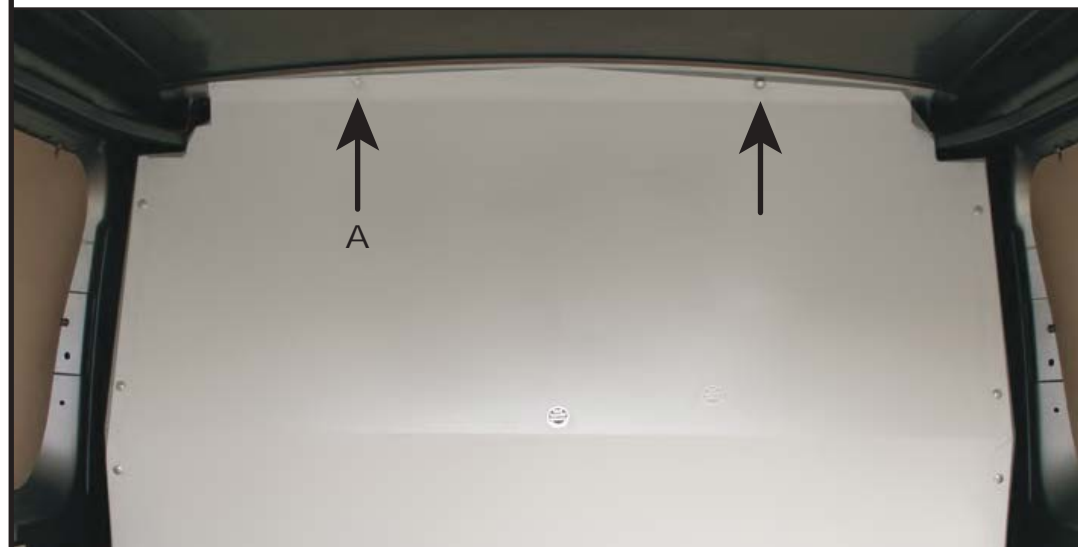

5 Carefully drill 3.2mm through the side tabs into the vehicles pillar and secure in place using No8x3/4" self-tap screws (FX4091). Once the sides are secured in position tighten all fixings.

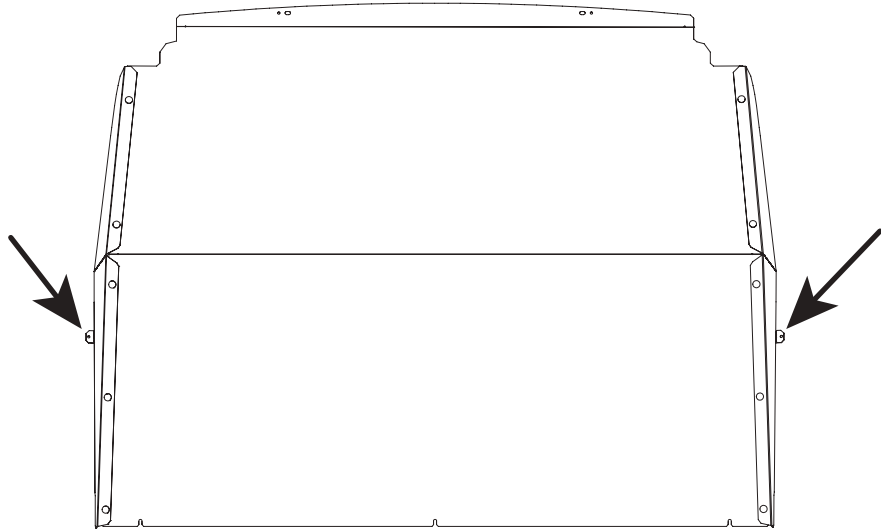

EXAMPLE IMAGE



EXAMPLE IMAGE

