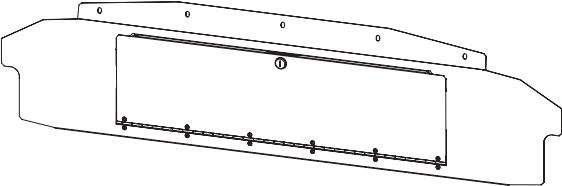

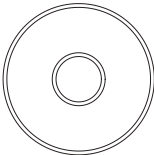




IN8185

Parcel shelf cover - VG312

<p>AS3284 X1 (PARCEL SHELF COVER ASSEMBLY)</p> 	<p>FX4010 X5 (M6)</p> 	<p>FX4013 X5 (M6)</p> 	<p>FX4026 X5 (M6X20)</p> 	<p>FX4090 X3 (No8 x 1/2")</p> 	

CAUTION - IMPORTANT NOTES

1. You should note that it is the responsibility of the installer/s to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that the fuel line, tyres, fuel tank, wiring loom, exhaust, bodywork and brake lines etc. are not damaged. Whilst every effort has been made to ensure our products can be safely fitted, changes to vehicles sometimes occur so it's always necessary to check before drilling.

If in doubt refer to the vehicle manufacturer's dealership.

2. When drilling, use as short a drill bit as possible to prevent damage to the vehicle. Use corrosion protection when drilling the vehicle.

3. Wear the appropriate protective equipment (safety glasses & gloves) while fitting this product.

4. Regularly inspect all fixings and parts. Any damaged or worn parts should be immediately removed the vehicle and replaced.


5. Retain instructions for future use. It is important that the end user receives this document.

TOOLS REQUIRED


SPANNER (10MM) X1



PH SCREW DRIVER X1



DRILL (Ø3.2MM) X1

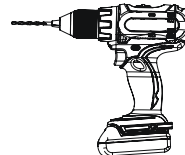


This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.

IN8185_B

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

1 Please read the important notes on page 1 before fitting this product.


Place the parcel shelf cover in position and loosely secure to the vehicles five threaded inserts using M6x20 hex bolts (FX4026), M6 washers (FX4013) and M6 shakeproof washers (FX4010).

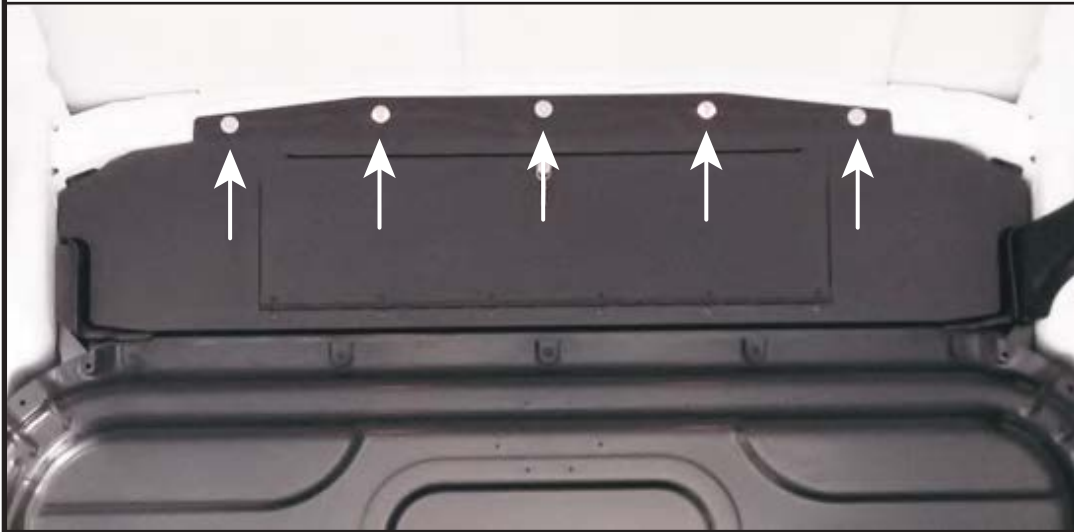

EXAMPLE IMAGE



2 Open the parcel shelf door and carefully drill 3.2mm through the three holes along the bottom flange. Secure to the vehicles pillar using No8x1/2" self-tap screws (FX4090). Once secure tighten the M6 fixings from step one.

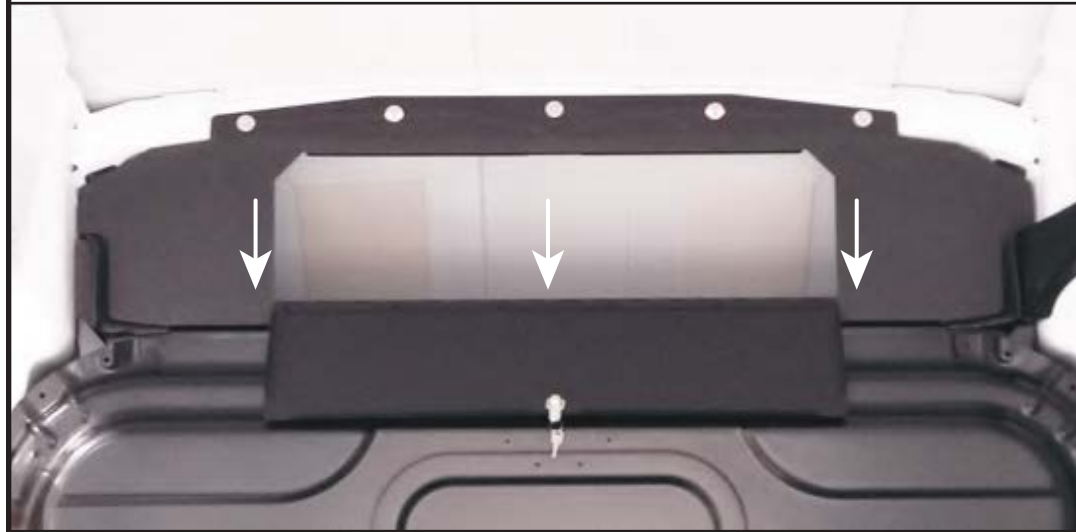

EXAMPLE IMAGE

