


IN8219

Window Grilles / Blanks

KIT CONTENTS

FX4090 X16
(No8x1/2" SELF-TAP SCREW)

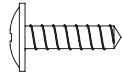

CAUTION



It is important that care is taken when drilling and fixing to your vehicle.

You should note that it is the responsibility of the installer/s to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that there is no possibility of causing damage to the vehicle. Whilst every effort has been made to ensure our products can be safely fitted, changes to vehicles sometimes occurs so it's always necessary to check before drilling. Always wear safety glasses when drilling.


If in doubt refer to the vehicle manufacturer's dealership.

EXAMPLE IMAGES




TOOLS REQUIRED


PH SCREW DRIVER X 1

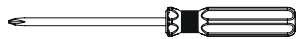

PLIERS X 1

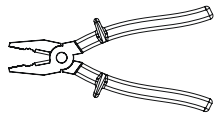

DRILL (Ø3.2MM) X 1

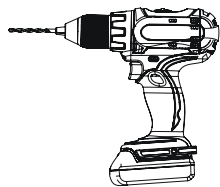

INSTRUCTIONS

1. Carefully unclip and remove the plastic trim surrounding the wiper motor. This can be re-fitted once the grilles / blanks have been secured.
2. Disconnect the cables for the heated rear windows and pass the cable through one of the cut outs.
3. Place the window grille / blank into the window aperture. Use pliers to bend the perforated tabs to suit the window aperture. Once happy with the position of the grille / blank carefully drill 3.2mm holes for the self-tapping screws. Take care not to catch any wires.
4. Secure in place using the self-tap screws provided and re-fit the wiper motor trim. **Please note that the trim may need to be trimmed to fit back on.** Regularly inspect all fixings and parts. Any damaged or worn parts should be immediately removed from the vehicle and replaced.

This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8219_B

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk